IGNITION INSTRUCTIONS

1. CHECK VALVES

▲ Ensure gas is OFF before checking appliance valves.

STEP 01 Turn all knobs to the 1 OFF position.

STEP 02 Open hood/ lid prior to lighting, as applicable.

STEP 03 Push in knob(s) and release. Knob(s) should spring back. If knob(s) DO NOT spring back, replace valve assembly before using appliance.

 
STEP 04 Rotate knob(s) to LOW then turn back to OFF. Knob(s) should turn smoothly.

STEP 05 Connect and turn ON the gas, as applicable.

2. BATTERY POWERED IGNITION

STEP 01 Insert one (1) AA battery under the ignitor button.


Screw the button into place over the positive terminal.




Clean the battery and appliance contacts prior to battery installation.

STEP 02

- 2 Push and hold the ignitor button.
- 3 Push and turn the control knob counter-clockwise to HIGH. (Release the ignitor button when the burner lights.)
- Adjust the temperature to desired level.

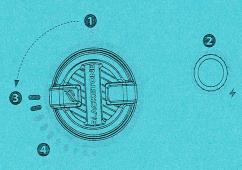

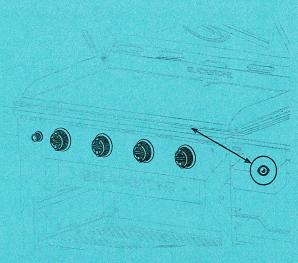


FLAME BEFORE USE

Viewing distance: no closer than 18 in (46 cm).

HEALTHY FLAME PATTERN



 YELLOW OR IRREGULAR



- a Flickers of yellow.
 b Dark blue.
 Vibrant blue.
- · When the temperature is set to HIGH, flames should be la when the temperature is set to LOW.
- · If flames are yellow, irregular, or in an unexpected locatic appliance OFF and turn to the Troubleshooting chapter.

A WARNING


If burner does not ignite with open gas supply valve, will continue to flow out of burner and could accider inadvertently ignite with risk of injury.

If ignition does not occur in 5 seconds:

- 1. Turn the appliance OFF.
- 2. Wait 5 minutes.
- 3. Repeat the lighting procedure.

If burner does not ignite, turn the appliance OFF and the Troubleshooting chapter.

If your appliance has a hood/lid, leaving it closed v burners at a low setting for more than 10 minutes n over-heating and burns. The cover/ lid/ hood MUST when the appliance is in use.

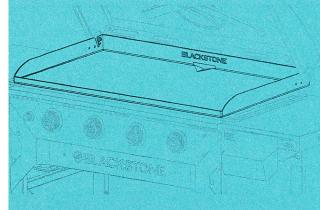

ASHING YOUR GRIDDLE TOP BEFORE FIRST USE

NOTICE

Soap will ruin a seasoned priddle. This is the only time ou should use soap on the priddle cooking surface.

STEP 01 Wash the griddle cooking surface with hot, soapy water.

STEP 02 Rinse and dry completely.

RIDDLE SEASONING INSTRUCTIONS

 


 
VIDEO TUTORIAL

How to Season a New Blackstone Griddle

■ youtube.com/watch?v=VspmDVnj2pl&t=3s

EP 01 Wipe any debris off ddle top.





en seasoning your griddle top, nember to use a thin and even layer oil—the thinner the layer of oil, the sier it will be to burn it off.

EP 04 The griddle top is ready another layer of oil when it ops smoking. Repeat STEP 03 4 times, or until the griddle rface is black.









NOTICE

DO NOT store any items within 3 in (8 cm) of the griddle top while in use.

WHAT OIL IS BEST TO USE?

- Blackstone Seasoning and Cast Iron Conditioner.
- Any plant-based cooking oil.
- Rendered animal fat with no additives.



Properly dispose of the rags/ towels used to spread oil on your griddle top to prevent fires that might occur due to spontaneous combustion.

Under the right conditions, residual oil on rags or towels can oxidize long after being removed from a heat source. The oxidation process itself produces heat which, if not dissipated, can build up and may cause the rags/towels and surrounding material to ignite.

SEASONING TROUBLESHOOTING

THERE IS A BROWNISH RESIDUE ON THE GRIDDLE SURFACE:

POSSIBLE CAUSES

SOLUTION

- · Too much oil was used.
- You turned off the heat too soon.

STEP 01 Turn your griddle on high and let it heat for 10-15 minutes.

STEP 02 Scrape off as much of the thickened and partially cooked oil as you can.

STEP 03 Re-season with a very thin layer of oil.

THE EDGES OF THE GRIDDLE SURFACE ARE NOT BLACK:

After using your griddle for multiple cooks, the seasoning will even out and improve.

PREVENTING RUST

Use your griddle frequently. Every time you cook, you are adding to the seasoning, which makes rust less likely.

NOTICE

If you live in a humid or coastal climate, your griddle may require more frequent seasonings between uses.

If rust appears on the griddle surface, rub it off with steel wool, low grit sandpaper or the **Blackstone Pumice Stone** and re-season the surface.



VIDEO TUTORIAL

Recovering your Blackstone Griddle Top

youtube.com/watch?v=thPE2IgnSil

This appliance will be hot during and after use. Use longhandled utensils and oven mitts/ protective gloves when handling potentially hot parts, including handles close to the appliance body, to protect against burns and splatters.

IECIPES AND COOKING TIPS

- BlackstoneProducts.com/recipes
- youtube.com/BlackstoneGriddles
- 2 @ @blackstoneproducts



CLEANING YOUR GRIDDLE

Clean griddle top after each use, while still warm.

- DO NOT use soap on the griddle top. This will destroy the griddle's seasoning.



VIDEO TUTORIAL

How to Clean your Blackstone Griddle youtube.com/watch?v=-ledu9z6NPY

 
STEP 01 Push loose food debris into the grease cup with spatula or straight metal scraper.



STEP 02 Wipe down griddle top with a paper towel or a Blackstone Scrub Pad.



STEP 03 Apply a few tablespoons of water to the griddle surface. then scrape the water and debris into the grease cup.





STEP 04 Wipe again with a paper towel and dry completely.



STEP 05 Apply thin coat of cooking oil to maintain seasoning and protect the griddle top.



EMPTY YOUR GREASE CUP

The grease cup must be removed and emptied after each use. Note: Making sure your griddle is on level ground will allow grease and water to drain towards the rear grease cutout.

Grease cup will be hot during and after use. DO NOT remove the grease cup until the griddle has completely cooled.