


# Cartridge *Hyper*

**ink.** When you need it

# HP 305XL High Yield Black Ink Cartridge Operation Guide

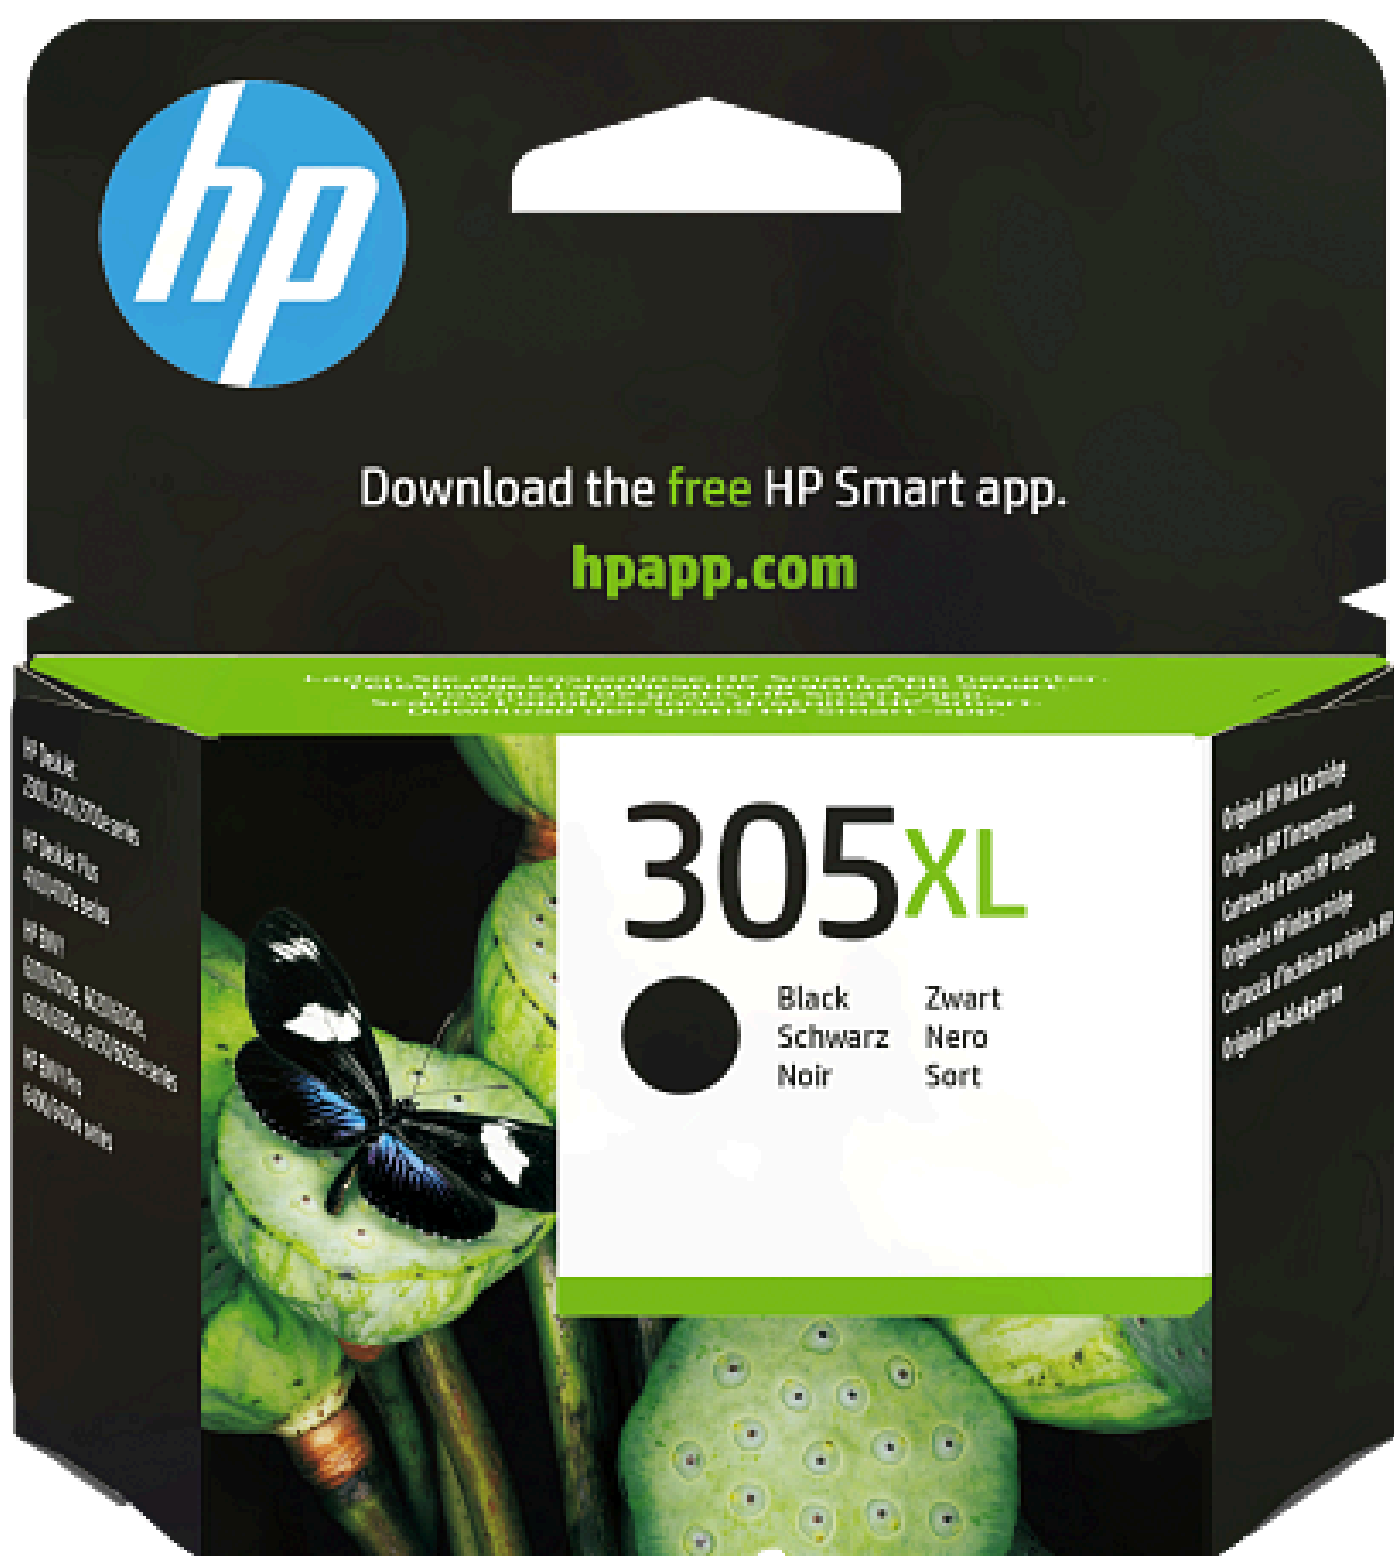

# **Product Overview**

The HP 305XL High Yield Black Ink Cartridge is designed for crisp text and sharp black-and-white prints. It offers more pages than the standard HP 305 cartridge, making it cost-effective and reliable for everyday printing.

## **Installation Instructions**

Turn On Your Printer – Make sure the printer is plugged in and powered up.

Open Cartridge Access Door – Wait until the carriage moves to the center.

Remove Old Cartridge – Press down gently and pull out.

Prepare New Cartridge – Remove all protective plastic and the orange pull tab without touching the copper contacts.

Insert Cartridge – Slide the HP 305XL into the black cartridge slot until it clicks into place.

Close Access Door – The printer may run an alignment process automatically.

# Usage Tips

Print regularly to avoid ink drying.

Keep spare cartridges in a cool, dry place.

Use HP printer maintenance tools (available in the printer software) to clean and align cartridges when needed

## Troubleshooting Guide

### Problem 1:

Cartridge Not Recognized

Remove and reinstall the cartridge.

Wipe copper contacts gently with a lint-free cloth.

Ensure you are using the correct cartridge model (HP 305XL).

### Problem 2:

Poor Print Quality (Streaks, Faded, Missing Ink) Run “Clean Printhead” from your printer’s software. Make sure you’re using recommended paper.

If ink is still faint, replace the cartridge.

Keep spare cartridges in a cool, dry place.

Use HP printer maintenance tools (available in the printer software) to clean and align cartridges when needed

### **Problem 3:**

Cartridge Leaking or Jammed

Power off the printer and carefully remove the cartridge.

Clean any spilled ink with a damp, lint-free cloth.

Install a new cartridge if the leak is severe.

### **Problem 4:**

Low Ink Warning

The HP 305XL is high-yield; sometimes the printer may show early warnings. Continue printing until quality drops.

Replace with a new cartridge when prints are consistently faded.

## **5. Storage & Handling**

Store unopened cartridges in original packaging until use.

Do not expose to direct sunlight or extreme heat.

If removed temporarily, place the cartridge in a sealed plastic bag to prevent drying.