

USER GUIDE

LiFePO4 Battery System for Households

LiFePO4 Battery System for Households



Contents

1 ABOUT THIS MANUAL	1
1.1 Purpose	1
1.2 Scope	1
1.3 Safety Instructions	1
2 INTRODUCTION	2
2.1 Features.....	2
2.2 Product Overview	2
2.3 Specifications	3
2.4 Recommended Settings	3
3. INSTALLATION	4
3.1 Unpacking and Inspection	4
3.2 Mounting the Unit	4
3.3 Connection for Parallel Mode	5
4. OPERATION	6
4.1 Switch On/Off.....	6
4.2 LCD Display Icons.....	7
4.3 BMS information Page.....	7
4.4 Fault Code Table.....	8
4.5 DIP switch SW1-SW4 Description.....	9
5. EMERGENCY SITUATIONS	10
5.1 Fire	10
5.2 Leaking Batteries	10
5.3 Wet Batteries	10
5.4 Damaged Batteries	10
5.5 Warranty	10

1 ABOUT THIS MANUAL

1.1 Purpose

This manual describes the introduction, installation, operation and emergency situations of the battery bank. Please read this manual carefully before installations and operations. Keep this manual for future reference.

1.2 Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

1.3 Safety Instructions



WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

1. Before using the unit, read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
2. CAUTION ---- To reduce risk of injury, damage, even burst, please use it following using manual. In case of causing personal
3. Do not disassemble the battery. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of fire.
4. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
5. CAUTION – Only qualified personnel can install this device with inverter.
6. For optimum operation of this battery, please follow required spec to select appropriate cable size.
7. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion or fire.
8. Please strictly follow installation procedure.
9. **GROUNDING INSTRUCTIONS** - This System should be connected to a permanent grounded wiring system. Be sure to comply with local requirements.
10. NEVER cause AC output and DC input short circuited. Do not connect to the mains when DC input short circuits.
11. Warning!! Only qualified service persons are able to service this device.
12. Battery should be installed indoor and kept away from water, high temperature mechanical force and flames.
13. Do not install the battery in any environment of temperature below 0°C or over 55°C, and humidity over 80%.
14. Do not put any heavy objects on the battery.

1.4 Can be connected in parallel

1. The batteries can be connected in parallel. Series connection is not allowed.
Use in upright position only.
2. The batteries are not allowed to connected with PWM controller for charging.

Special Attention: Due to the built-in protection board of the lithium battery pack is with over-discharge protection function, it is strongly recommended to stop using the load when the battery pack is over-discharged. The battery pack cannot be repeatedly activated for discharge. Or the battery may be failed to be activated by the AC or PV activation cable (It requires a special charging activation method), so cannot be charged. Therefore, when the battery pack is low power, please charge the battery as soon as possible when main power or solar energy is available.

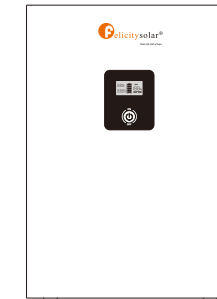
2. INTRODUCTION

The battery system main using Solar power system for Family house. It also have a with to controller the battery easily and protect our Household application timely.


2.1 Features

- LiFePO4: Higher safe performance and longer cycle life.
- Multiple Protection: Built-in smart BMS and Fuse.
- Flexible Installation: Wall-Mounted or Floor-Mounted.
- Wide Compatibility: Compatible with leading inverter brands.
- High Scalability: Capacity up to 30kWh.
- Long Warranty: 5 Years.

2.2 Product OverView



48V Front view

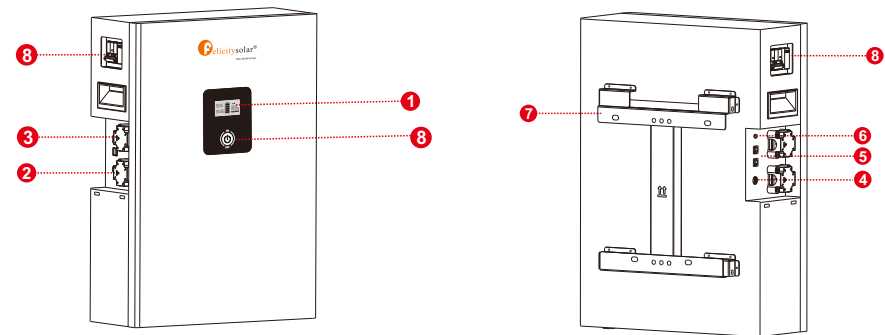

1. LCD display

4. Switch

7. Wall mounted fixing

2. Battery Negative -

5. Communication port

8. Power On/Charging indicator

3. Battery Positive +

6. Earth wire

2.3 Specifications

Model	LPBF48100-H	LPBF48200-H
Capacity	5kWh	10kWh
Battery Type	LiFePO4	LiFePO4
Nominal Voltage	51.2V	51.2V
Operating Voltage	48-57.6V	48-57.6V
Recommend Charge/Discharge Current[1]	≤50A	≤80A
Recommend Charge/Discharge Power[1]	≤2,500W	≤4,000W
Maximum Charge/Discharge Current(15s)	100A	120A
Maximum Charge/Discharge Power(15s)	5,000W	6,000W
Depth of Discharge(DOD)	≥95%	
Scalability	Up to 6 units in parallel(60kWh)	
Communication	RS485 / CAN	
Protection Level	IP21	
Cycle Life[2]	≥ 6000 Cycles	
Charging Temperature Range	0-55°C	
Discharging Temperature Range	-20-60 °C	
Display	LCD+LED	
Installation	Wall-Mounted / Floor-Mounted	
Protection	Built-in smart BMS, Fuse	
Warranty	5 Years	
Net Weight	63kg	72kg
Gross Weight	76kg	86kg
Product Dimension	575x430x258mm	664x468x213mm
Package Dimension	670x525x415mm	748x556x358mm
[1] Recommend charge/discharge current/power is affected by temperature and SOC.		
[2] Test conditions: 0.2C Charging/Discharging @25°C, 80% DOD.		

2.4 Recommended Settings

Lithium battery pack is not same as lead-acid battery, so for the devices which you connect with the battery pack for charging or discharging, such as inverters, MPPT charger controllers or UPS, please implement pre-settings as recommended settings as below before you launched them.

Setting	LPBF48100-H	LPBF48200-H
Max. Charging Voltage	57.6V	57.6V
Floating charging Voltage	57.6V	57.6V
Max. Charging Current	50A*N	80A*N
Cut-off voltage	48V	48V

Notes: "N" means the number of battery packs connected in parallel.

3. INSTALLATION

3.1 Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package.


NO	NAME	SPECIFICATION	PICTURE
①	Wall mount	Wall mount bracket	
②	RS485 cable	Battery terminal: 5B6A PCS terminal: 5B6A	
③	Communication cable	Used for Communication among batteries	
④	Screw	Mounting screw	
⑤	User manual	User manual	
⑥	Guarantee card	Guarantee card	
⑦	Cables	Used for battery parallel connection	
⑧	Universal communication cable	Flexibly match the communication cable of different inverters	
⑨	Ethernet connector	Ethernet connector	

3.2 Mounting the Unit

Consider the following points before selecting where to install:

- Do not mount the battery on flammable construction materials.
- The ambient temperature should be between 0°C and 45°C to ensure optimal operation.
- The recommended installation position is to be adhered to the wall vertically.
- Be sure to keep other objects and surfaces as shown in the right diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

	LPBF48100-H	LPBF48200-H
A	95	114
B	240	240
C	150	205
D	301	301
E	278	363
F	301	301
G	124	157.5
H	145	164
I	140	140

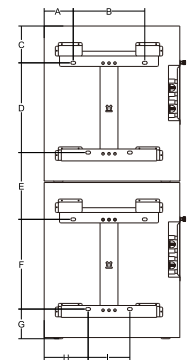


Please follow below steps to implement battery connection:
Assemble battery ring terminal based on recommended battery cable and terminal size.

Note: if you need the battery wake-up when the grid back, connect the battery with grid use power adapter and communication line 1 shown in the package list.

3.3 Connection for Parallel Mode

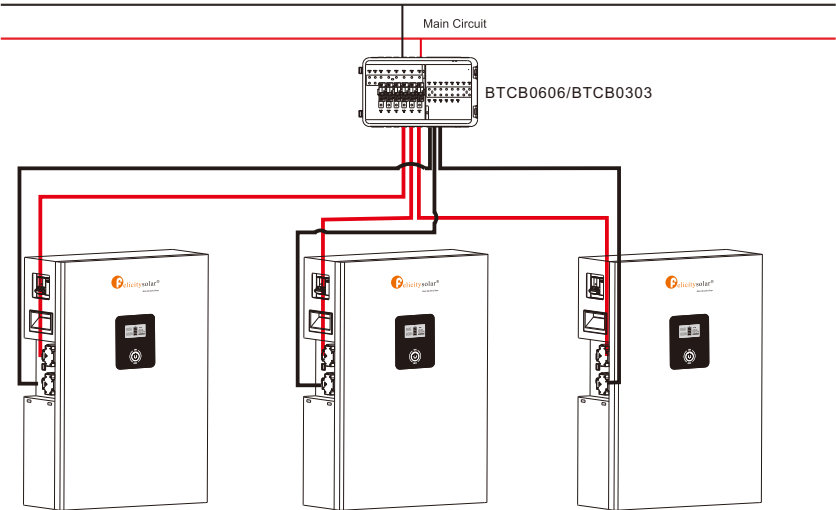
The eStrong LPBF series battery support to be connected in parallel for expansion. If you need one more battery bank work in parallel mode, connect the battery as shown in PIC 2



Step 1: The schematic diagram of the parallel connection of three battery packs is shown in Figure 1.


Note:After completing the above steps, arbitrarily select the positive and negative poles of one of the battery packs to output. After confirming the correct connection of the inverter, controller and battery, you can turn on any of the switches and use the battery group happily.

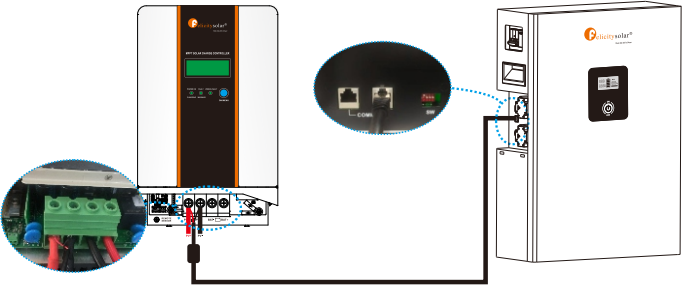For pure off grid system ,the PV awake wire need to be connected with MPPT charge controller if the battery pack is charged by solar panels only . The connection diagram as below :



4. OPERATION

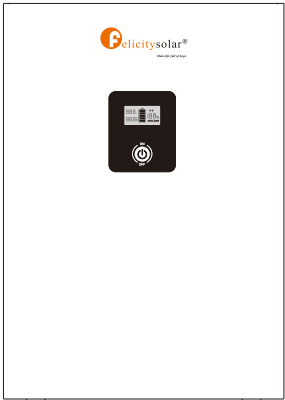
Once the batteries are connected well, simply press On/Off button to enable the output of the battery pack.



Front view


4.1 Switch On / Off

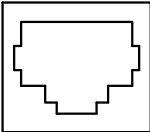- 1.Switch on: press On/Off button to switch on the battery, then the battery will do self-inspection before enable output. The LCD will show the SOC.
 - 2.Switch off: press and hold On/Off button for 1to3 seconds, the battery will shut down directly.
- Description for Communication port

Picture	PIN	Description
	1	Trigger-GND
	2	Trigger-VCC
	3	CANL-PCS
	4	CANH-PCS
	5	RS485-B
	6	RS485-A
	7	CANL
	8	CANH


DIP SWITCH		
	1-4	Communication Address
	5	Termination Resister




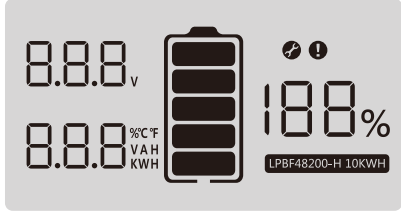
4.2 LCD Display icons

	
Icon	Function Description
Display Information	
8.8.8 _V	Indicates battery voltage.
8.8.8 _A / _{KW}	Indicates battery current or watt Short press the switch button to switch watt and current
188%	Indicate SOC.
Battery Information	
	Indicates battery level by 0-20%,21-40%, 41-60%,61-80%,81-100%.(When charging,this icon is displayed for horse running;When discharging,the icon displays constant).
Fault information	
	Indicates a fault.
set information	
	Indicates settings.

4.3 BMS information Page

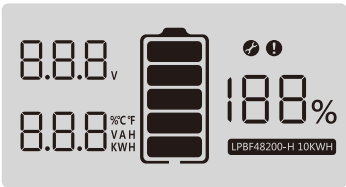The basic information will be displayed in turn after power on.

BMS power on information BMS information is all on. 	BMS version Eg: "521" is the software version ; "500" is the IAP version and temporary version; "02" is the countdown. 
---	---

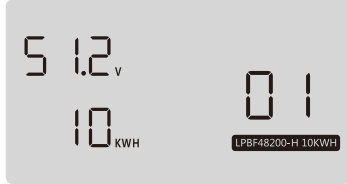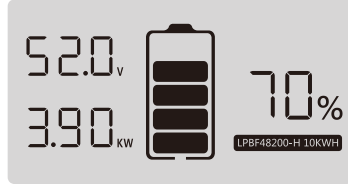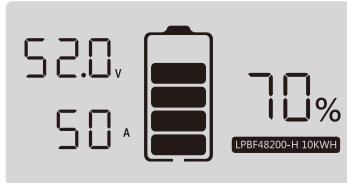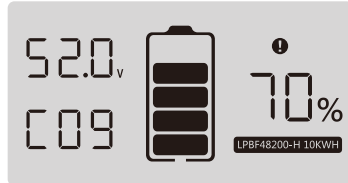BMS type Eg: Rated voltage is "51.2V"; model is "10KWH", "01" is the countdown. 	BMS data Eg: "52.0V" / "3.90KW" / "70%" refers to battery voltage, power and SOC. 
BMS data Eg: "52.0V" / "50A" / "70%" refers to battery voltage, current and SOC. 	BMS fault code / flag Eg: "52.0V" / "C09" / "70%" are battery voltage, fault code and SOC respectively, and Fault icon constant. 

4.4 Fault Code Table

Fault Code	Fault information	Trouble Shooting
C01	Battery overvoltage	Restart the unit, if the error happens again, please return to repair center.
C02	Battery undervoltage	Restart the unit, if the error happens again, please return to repair center.
C03	Single cell overvoltage	Restart the unit, if the error happens again, please return to repair center.
C04	Single cell undervoltage	Restart the unit, if the error happens again, please return to repair center.
C05	Battery charge overcurrent	Restart the unit, if the error happens again, please return to repair center.
C06	Battery discharge overcurrent	Restart the unit, if the error happens again, please return to repair center.
C07	MOS tube overtemperature	1. The inner temperature is over the limitation. 2. Check whether the ambient temperature is too high.
C08	MOS tube undertemperature	1. The internal temperature is lower than the limit range. 2. Check whether the ambient temperature is too low.

C09	Single cell overtemperature	Restart the unit, if the error happens again, please return to repair center.
C10	Single cell undertemperature	Restart the unit, if the error happens again, please return to repair center.
C11	Abnormal current sampling	Restart the unit, if the error happens again, please return to repair center.
C12	Abnormal output impedance	Restart the unit, if the error happens again, please return to repair center.
C13	Parallel failed	1. Please check if single unit is installed to parallel system. 2. If this error happens during parallel installation, please check wires connection. If they are connected correctly, please finish parallel installation first, and then Restart the unit. 3. If the problem remains, please contact your installer.
C14	Output loss	1. Please check whether the circuit breaker is closed; 2. Please check whether the fuse is normal; 3. Restart the unit, If the error happens again, please return to repair center.

4.5 DIP switch SW1-SW4 Description

DIP switch SW1-SW4 Description					DIP switch SW5 Description②			
Sw1	SW2	SW3	SW4	Remarks	SW5	Remarks		
0	0	0	0	means ID=0,communication address is0x00/0x10	1	means connect 120Ω resistor		
1	0	0	0	means ID=1,communication address is0x01				
0	1	0	0	means ID=2,communication address is0x02	0	means disconnect 120Ω resistor		
1	1	0	0	means ID=3,communication address is0x03				
0	0	1	0	means ID=4,communication address is0x04				
1	0	1	0	means ID=5,communication address is0x05				
0	1	1	0	means ID=6,communication address is0x06				
1	1	1	0	means ID=7,communication address is0x07				
0	0	0	1	means ID=8,communication address is0x08				
1	0	0	1	means ID=9,communication address is0x09				
0	1	0	1	means ID=10,communication address is0x0A				
1	1	0	1	means ID=11,communication address is0x0B				
0	0	1	1	means ID=12,communication address is0x0C				
1	0	1	1	means ID=13,communication address is0x0D				
0	1	1	1	means ID=14,communication address is0x0E				
1	1	1	1	means ID=15,communication address is0x0F				
Remark : 1 in SW1-SW5 indicates ON status, and 0 indicates OFF status.								
Remark : When multiple battery packs communicate, the last battery pack SW5 needs to be in the ON status, otherwise the communication may have interference.								
Remark : When the battery pack ID is set to 0, it means stand-alone operation, and it is not necessary to detect whether the parallel condition is satisfied .								
Remark : When the battery pack ID is set to 1-15, it means that the parallel operation is required, and it is necessary to detect whether the parallel condition is satisfied .								
Remark : The parallel condition is that the difference between the battery voltage of the local battery and all the battery pack voltages is <3V, otherwise wait until the condition is satisfied								

5. EMERGENCY SITUATIONS

Felicity cannot guarantee battery absolute safety.

5.1 Fire

In case of fires, make sure that the following equipment is available near the system.

- SCBA (self-contained breathing apparatus) and protective gear in compliance with the Directive on Personal Protective Equipment 89/686/EEC.
- NOVEC 1230, FM-200, or dioxide extinguisher

Batteries may explode when heated above 150°C. KEEP FAR AWAY from the battery if it catches fire.

5.2 Leaking Batteries

If the battery pack leaks electrolyte, avoid contact with the leaking liquid or gas. If one is exposed the leaked substance, immediately perform the actions described below.

- Inhalation: Evacuate the contaminated area, and seek medical attention.
- Contact with eyes: Rinse eyes with running water for 5 minutes, and seek medical attention.
- Contact with skin: Wash the affected area thoroughly with soap and water, and seek medical attention.
- Ingestion: Induce vomiting, and seek medical attention.

5.3 Wet Batteries

If the battery pack is wet or submerged in water, do not let people access it, and contact your supplier for help.

5.4 Damaged Batteries

Damaged batteries are not fit for use and are dangerous and must be handled with the utmost care. It may leak electrolyte or produce flammable gas. If the battery pack seems to be damaged, pack it in its original container, and then return it to your supplier.

5.5 Warranty

Products that are operated strictly in accordance with the user manual are covered by the warranty. Any violation of this manual may void the warranty.

Limitation of Liability

Any product damage or property loss caused by the following conditions, Felicity does not assume any direct or indirect liability.

- Product modified, design changed or parts replaced.
- Changed, or attempted repairs and erasing of series number or seals;
- System design and installation are not in compliance with standards and regulations;
- The product has been improperly stored in end user's premises;
- Transport damage (including painting scratch caused by movement inside packaging during shipping). A claim should be made directly to shipping or insurance company.