

WHIPPS RAMPS

Ramps – Safety Instructions

WARNING

*Ramps must be secured to vehicle/trailer before use. * Never exceed the rated capacity of your ramps. *Never exceed the capacity of a loading surface. *Always use caution, when loading and unloading. *Only load and unload onto a stable, level surface from flat ground. * Ensure no one is in the path of equipment or vehicle when loading or unloading. *Keep all bystanders and children away. * Do not step between rungs. *Use caution when wet, ramp surfaces will have less traction. *Do not use it as a jump, scaffold, bridge, ladder.

LOADING

Pin/secure ramps to vehicle prior to use. Position the vehicle in line ramps. Roll or drive the vehicle, slowly and steadily up the ramp, ensuring that the wheels follow the centre of the ramps. Take extra care in wet conditions to ensure the tyres do not slide on the ramp. Do not stop on the ramps.

UNLOADING

Position the ramps as detailed above, directly behind the rear wheel of the vehicle. Roll or drive the vehicle slowly and steadily down the ramps, ensuring the wheels follow the centre of the ramps. Do not stop on the ramps.

MAINTENANCE

It is the user's responsibility to check the loading ramps and components before every use. If the ramps are damaged, they should NOT be used. Maintain the ramps with regular cleaning.