

Service Manual

NPE Condensing Water Heaters

Getting Service

If your water heater requires service, you have several options for getting service:

- Contact Technical Support at 1-800-519-8794 or on the website: www.navien.com.
- For warranty service, always contact Technical Support first.
- Contact the technician or professional who installed your water heater.
- Contact a licensed professional for the affected system (for example, a plumber or electrician).

When you contact Technical Support, please have the following information at hand:

- Model number
- Serial number
- Date purchased
- Installation location and type
- Error code, if any appears on the front panel display.

Version : 2.22 (Sep 01, 2015)



Navien, Inc.
800.519.8794 | www.Navien.com
20 Goodyear Irvine, CA 92618

Service Manual

NPE Condensing Water Heaters

Model

- NPE-180A
- NPE-210A
- NPE-240A
- NPE-150S
- NPE-180S
- NPE-210S
- NPE-240S



Keep this manual near this water heater for future reference whenever maintenance or service is required.

*The wetted surface of this product contacted by consumable water contains less than one quarter of one percent (0.25%) of lead by weight.



WARNING

If the information in these instructions is not followed exactly, a fire or explosion may result, causing property damage, personal injury or death.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

What to do if you smell gas

- Do not try to light any appliance
- Do not touch any electrical switch; do not use any phone in your building
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.

The installation must conform with local codes or, in the absence of local codes, the National Fuel Gas Code, ANSI Z223.1/NFPA 54 and/or CSA B149.1, Natural Gas and Propane Installation Code.

When applicable, the installation must conform with the Manufactured Home Construction and Safety Standard, Title 24 CFR, Part 3280 and/or CAN/CSA Z240 MH Series, Mobile Homes.

Revisions

[illegible]

2.22 Reviewed by:Albert Choi

Contents

1. Safety Information	8		
1.1 Safety Definitions	8		
1.2 Safety Symbols	8		
1.3 Symbols Used in the Instructions	8		
1.4 Safety Precautions	8		
2. Product Information	12		
2.1 Product Information	12		
2.2 Layout and Key Components	13		
3. Technical Data	16		
3.1 General Specifications	16		
3.2 Dimensions	17		
4. System Details	18		
4.1 Schematic and Flow Diagram	18		
4.2 Operation Flow Chart	20		
4.3 Setting the DIP Switches	21		
4.4 Measuring the Inlet Gas Pressure	24		
4.5 Selecting a Recirculation Mode	27		
4.6 Gas Conversion	29		
4.7 The Front Panel	34		
4.8 Wiring Diagram	52		
4.9 Ladder Diagram	54		
4.10 Electrical Diagnostic Points	56		
4.11 Key Components Description	58		
4.11.1 PCB	58		
4.11.2 High Limit Switch	59		
4.11.3 Thermistor	60		
4.11.4 Fan Motor	61		
4.11.5 Flame Rod Assembly	62		
4.11.6 Ignition Transformer	63		
4.11.7 APS	64		
4.11.8 Main Gas Valve	65		
4.11.9 Burner	66		
4.11.10 Water Adjustment Valve	67		
4.11.11 Flow Sensor	68		
4.11.12 Primary Heat Exchanger	69		
4.11.13 Secondary Heat Exchanger	70		
4.11.14 Buffer Tank ("A" models only)	71		
4.11.15 Circulation Pump ("A" models only)	72		
5. Troubleshooting	73		
5.1 Error Code List	73		
5.1.1 003Error	76	5.1.12 421Error	100
5.1.2 004Error	81	5.1.13 432Error	101
5.1.3 012Error	83	5.1.14 434Error	102
5.1.4 016Error	88	5.1.15 438Error ("A" models only)	105
5.1.5 030Error	91	5.1.16 439Error	107
5.1.6 046Error	93	5.1.17 441Error	110
5.1.7 047Error	93	5.1.18 445Error	110
5.1.8 060Error	94	5.1.19 515Error	113
5.1.9 109Error	96	5.1.20 517Error	114
5.1.10 110Error	98	5.1.21 593Error	114
5.1.11 407Error	99	5.1.22 594Error	115
		5.1.23 615Error	115
		5.1.24 736Error	116
		5.1.25 782Error	116
		5.1.26 740Error	117
		5.1.27 760Error	117
		5.1.28 785Error	117
		5.2 Troubleshooting guide by symptom	118
		6. Replacement of Parts	121
		6.1 Replacement Procedure	121
		6.2 Components Replacement Instructions	121
		7. Components Diagram and Part List	133
		7.1 Case Assembly	133
		7.2 Burner Assembly(NPE-180A/ 210A/ 240A)	135
		7.3 Burner Assembly(NPE-150S/ 180S/ 210S/ 240S)	137
		7.4 Waterway Assembly(NPE-150S/ 180S/ 210S/ 240S)	139
		7.5 Waterway Assembly(NPE-150S/ 180S/ 210S/ 240S)	141
		7.6 Fan(Gas) Assembly	143
		8. Inspection and Maintenance Schedule	145
		8.1 Maintenance	145
		8.2 Annual Servicing	149
		8.3 Inspection Report	150
		8.4 Maintenance Report	150
		9. Common Vent and Outdoor vent Cover Installing	151
		9.1 Installing the Outdoor vent Cover	151
		9.2 Installing Procedure	152
		9.3 Choosing an Installation Location	153
		9.4 Mounting Water Heater	154
		9.5 Ventilation Flow	155
		9.6 Common Venting	156
		10. Installing the ComfortAir⁺	158
		10.1 About the ComfortAir ⁺	158
		10.2 Installing the Device	159
		10.3 Wiring the Device	161
		10.4 Configuring the Device	163
		10.5 Configuring the NPE-180A/240A Water Heater	164
		10.6 Maintenance	170
		10.7 Appendix	170

Navien Warranty

Warranty Period

Navien products come with a limited warranty covering labor, parts and the heat exchanger. The following warranty periods begin to run from the date of original installation. The date of original installation must be provided to Navien, and upon request, proof of the original installation date must also be provided to Navien. When the product is installed in a new construction, the commencement date shall be dated upon which the end-user takes title to the property.

APPLICABLE WARRANTY PERIOD

Product	Labor Warranty	Parts Warranty	Heat Exchanger Warranty
NPE Series Water Heater (Single Family Residential Use)	1 Year	5 years	15 Years
NPE Series Water Heater (Commercial or "Combi" Use*)	1 Year	3 years	8 Years

*"Combi" refers to a combination potable water and space heating application. Water heaters cannot be used in space heating only applications.

Product	Period of Coverage	
ComfortAir ⁺	All other parts and components	3 years

Warranty Claim Procedures

To obtain warranty repair service, the end user or homeowner must contact the original installer of your Navien product. If the original installer cannot be identified, the end user or homeowner may contact Navien's Technical Administration Department at **(800) 519-8794**. Proof of purchase is required to obtain warranty service.

Warranty Service

At its option, Navien will replace the defective component (part(s) or heat exchanger), in accordance with the terms of this Limited Warranty, if it fails in normal use and service during the Applicable Warranty Period identified above. The replacement component must be Navien original factory component. Navien, at its sole discretion, may replace the product with a new or refurbished product of comparable quality and design. The replacement component or product will be warranted only for the unexpired portion of the original component's Applicable Warranty Period. Payment for labor in completing the warranty service is subject to Navien's prior written approval and shall be subject to Navien's schedule of approved labor allowances.

Warranty Exclusions

Navien's Limited Warranty shall be void in the event of an occurrence of any of the following:

- Improper installation, failure to install in strict compliance with the Installation Manual procedures, installed by a non-licensed installer, and installation in violation of applicable rules, laws or building codes.
- Product purchased through the internet, other e-commerce channels, or any installer that obtained the Product from a supplier or distributor not authorized by Navien.
- Failure to perform regular maintenance, misuse, operation at settings other than those recommended or specified, non-compliance with instructions or guidelines set forth in the User's Operation Manual.
- Modification or alteration of the Product in any manner, including but not limited to, removal of any component or part, addition of any non-approved components, relocating or moving the Product from its original installation site, or any accidental or intentional damage to the Product.
- Installation for non-recommended uses.
- Any damage caused by local adverse conditions including but not limited to hard water deposits, lime or mineral build-up, operating in corrosive atmospheric elements.
- Damage or problems caused by gas flow issues, electrical surges, flooding, fire, abnormal external temperature, and any other cause of damage not directly caused by a manufacturing defect.
- Installer's failure to fully comply with the Warranty Service and Return Policy procedures previously provided to Installer and as is available on Navien's website. Such policies include but are not limited to the Installer's failure to first contact Navien Technical Support while in front of the product for purposes of trouble shooting the identified problem or issue.
- Use of the NPE Series Water Heater for space heating only purposes shall void the warranty.
- Heat exchanger failures (leaks) caused by operating the water heater in a corrosive or contaminated atmosphere or damages, malfunctions or failures caused by lime, mineral build-up, or scale will not cover.

- Performance problems caused by improper sizing of the water heater, the gas supply line, the venting connection, combustion air openings, electric service voltage, wiring, fusing or any other components, parts or specifications.
- Improper conversion from natural gas to LP gas or LP gas to natural gas or attempt to operate with a type of gas not specified for the water heater.
- Any damage, malfunction or failure caused by abuse, negligence, alteration, accident, fire, flood, freezing, wind, lightning and other acts of God.
- Operating, using or storing the water heater in a corrosive or contaminated atmosphere or environment.
- Operating the water heater at water temperatures outside the factory calibrated temperature limits and/or exceeding the maximum setting of the high limit control.
- Operating the water heater when it is not supplied with potable water at all times.
- Subjecting the heat exchanger to pressures or firing rates greater or lesser than those shown on the rating plate.
- Installation at any location outside the United States and Canada.
- Removal or alteration of the rating plate.

Other Terms: This Limited Warranty is subject further to the terms and conditions set forth herein and as may be further specified in the Terms and Conditions page located on Navien's website at www.navien.com. WITH THE EXCEPTION OF THIS LIMITED WARRANTY, NAVIEN DISCLAIMS ANY OBLIGATION OR LIABILITY WITH RESPECT TO THE PRODUCTS OR THEIR SALE AND USE, AND NAVIEN NEITHER ASSUMES NOR AUTHORIZES THE ASSUMPTION OF, ANY OBLIGATION OR LIABILITY IN CONNECTION WITH THE PRODUCTS. THIS DISCLAIMER INCLUDES ANY OTHER WARRANTIES, EXPRESS, IMPLIED OR STATUTORY RESPECTING THE PRODUCTS OR ANY PARTS OR COMPONENTS THEREOF, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Navien's total liability for any claim arising hereunder shall not exceed the purchase price which you paid for the Product. NAVIEN SHALL NOT IN ANY EVENT BE LIABLE FOR INDIRECT, SPECIAL, CONSEQUENTIAL OR LIQUIDATED DAMAGES OR PENALTIES, INCLUDING CLAIMS FOR LOST REVENUE, PROFITS OR BUSINESS OPPORTUNITIES, EVEN IF NAVIEN HAD OR SHOULD HAVE HAD ANY KNOWLEDGE, ACTUAL OR CONSTRUCTIVE, OF THE POSSIBILITY OF SUCH DAMAGES.

This Limited Warranty does not cover any product used in an application that uses chemically treated water such as a pool or spa heater.

Abbreviations and Definitions

Abbreviation	Definition
NPE	General name of NPE-180A, NPE-210A, NPE-240A, NPE-150S, NPE-180S, NPE-210S, and NPE-240S
NG	Natural Gas
LP	Propane Gas
AP	Air Pressure
APS	Air Pressure Sensor
DHW	Domestic Hot Water
FM	Fan Motor
GARC	Gas Air Ratio Control
GPM	Gallons Per Minute
GV	Gas Valve : ~~Main and Solenoid~~
MGV	Main Gas Valve
RPM	Revolutions Per Minute
WAV	Water Adjustment Valve
PCB	Printed Circuit Board
EMI	Electromagnetic Interface
HTL	High Temperature Limiter

1. Safety Information

1.1 Safety Definitions

All Safety messages indicate the risk of potential hazards. Follow the instructions precisely to avoid the risk of injury.



This is the safety alert symbol. It is used to alert you of potential personal injury hazards.

Observe all of the safety messages that follow this symbol to avoid possible injury or death.

1.2 Safety Symbols



DANGER

Indicates an imminently hazardous situation which, if not avoided, could result in severe injury or death.



WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in injury or death.



CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

1.3 Symbols Used in the Instructions

The following symbols are used throughout the instructions to bring attention to important information concerning the appliance.



IMPORTANT

Warns of a risk of damage and environmental pollution



NOTE

Indicates additional information that is important but not related to personal injury or property damage.

1.4 Safety Precautions




DANGER

FLAMMABLE MATERIALS

Keep the area around the water heater clear and free from flammable materials.

- DO NOT place flammable liquids such as oils or gasoline, etc. near the water heater.
- DO NOT place combustibles such as newspapers and laundry etc. near the water heater or the venting system.
- DO NOT place or use hair spray, spray paint or any other type of spray can near the water heater or the venting system (including the vent termination).
- DO NOT place anything in or around the vent terminations that could obstruct the air flow in and out of the water heater such as a clothes line.

! DANGER

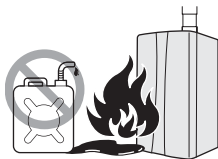

FLAMMABLE VAPORS

Vapors from flammable liquids will explode and catch fire causing death or severe burns.

Do not use or store flammable products such as gasoline, solvents or adhesives in the same room or area near the water heater.

- **Keep flammable products:** far away from the water heater in approved containers, tightly closed, and out of children's reach.
- **Water heater has a main burner flame:** which can come on at any time, and may ignite flammable vapors.
- **Vapors:** cannot be seen, are heavier than air, go a long way on the floor and can be carried from other rooms to the main burner flame by air currents.

! DANGER

COMPROMISED VENTING SYSTEM

- Failure to follow the Venting Section of the installation manual may result in unsafe operation of this water heater. To avoid the risk of fire, explosion or asphyxiation from carbon monoxide, never operate the water heater unless it is properly vented to the outside and has an adequate air supply for proper operation.
- Be sure to inspect the vent termination and the air intake pipe annually to ensure safe operation of the water heater.
- Immediately turn off and do not use the water heater if any of the vent pipes, vent elbows and/or the water heater are:
 - damaged in any way;
 - separated at a joint,
 - cracked or show evidence of corrosion, rusting or melting.

! DANGER

HOT WATER TEMPERATURE SETTING

- Water temperatures at or above 125°F (52°C) can cause severe burns instantly or death from scalds.
- Households with small children, disabled, or elderly persons may require 120 °F (49°C) or lower temperature setting to prevent contact with "HOT" water.

! DANGER

WHAT TO DO IF YOU SMELL GAS

If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

DO NOT OPERATE THE WATER HEATER.

DO NOT OPERATE ANY FAUCETS.

Smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

- Do not smoke.
- Extinguish any open flames and sparks.
- Do not operate light switches or electrical equipment switches.
- Do not use any phone in your building.
- Open the windows and doors.
- Close the gas shutoff valve.
- Keep people away from the danger zone.
- Observe the safety regulations of your local gas supplier, found on the gas meter.
- Immediately call your gas supplier from the outside of the building. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- Notify your plumbing/heating contractor from the outside of the building.

! DANGER



HOT WATER TEMPERATURE SETTING

- Water temperatures at or above 125°F (52°C) can cause severe burns instantly or death from scalds.
- Households with small children, disabled, or elderly persons may require 120°F (49°C) or lower temperature setting to prevent contact with "HOT" water.
- To prevent scalding, check water temperature after servicing.
- If the proposed water heater outlet temperature is at or above 125°F (52°C), a thermostatically controlled mixing valve or temperature limiting valve should be considered to reduce the risk of scalding. Contact a licensed plumber or the local plumbing authority for further information.
- This Navien Water Heater is factory set at 120°F (49°C) for your safety and comfort. Increasing the set temperature increases the risk of accidental scalding. Consult the chart below before you decide to adjust the set temperature.

Water Temperature	Time in which a young child can suffer a full thickness (3rd degree) burn
70 °C (160°F)	Less than 1 second
60 °C (140°F)	1 second
55 °C (130°F)	10 second
49 °C (120°F)	10 minutes
37 °C (110°F)	very low scald risk

! DANGER

IMPORTANT SAFETY PREAUTIONS

- Read and understand this safety information before operating or servicing this Navien Water Heater.
- Confirm the location of the gas shut-off valve. Close the manual shut-off valve if the Navien Water Heater ever becomes subjected to overheating, fire, flood, physical damage or any other such damaging condition during servicing.
- DO NOT turn on the water heater unless water and gas supplies are fully opened.
- DO NOT turn on the water heater if the cold water supply shut-off valve is closed.
- Make certain power to the water heater is "OFF" before removing the front cover for any reason.
- Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.
- Improper adjustment, alteration, service or maintenance can cause property damage, personal injury, or death.
- To prevent scalding, always check the temperature of the hot water after servicing.
- DO NOT attempt to change the water temperature while someone is using the water heater.
- DO NOT use parts other than those specified for this equipment.
- DO NOT operate the water heater if you feel something is wrong with the unit.
- DO NOT allow children to operate or otherwise handle the unit.

! DANGER

INSTALLATION REQUIREMENTS

- Installation conditions may affect how the water heater is serviced. Read all related information in the "Installation Manual".
- The Water Heaters must be installed according to all local and state codes or, in the absence of local and state codes, the most recent edition of the "National Fuel Gas Code (ANSI Z223.1/NFPA 54)" in the USA or the "National Gas and Propane Installation Code (CAN/CSA B 149.1)" in Canada.
- Massachusetts code requires this water heater to be installed in accordance with Massachusetts Plumbing and Fuel Gas Code 248 CMR Section 2.00 and 5.00.



WARNING

GAS TYPE and AC VOLTAGE

This water heater is configured for Natural Gas from the factory. If conversion to Propane Gas is required, the conversion kit supplied with the water heater must be used.

- Be sure to use 120 VAC, 60 Hz, minimum 2 A current. Using abnormally high or low AC voltage may cause abnormal operation, and may reduce the life expectancy of this product.

If the unit does not match requirements, do not service, please contact Navien immediately.



WARNING

GAS CONVERSION

The conversion kit shall be installed by a qualified service agency* in accordance with Navien's instructions and all applicable codes and requirements of the authority having jurisdiction. The information in these instructions must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury or death. The qualified service agency is responsible for the proper installation of this kit. The installation is not proper and complete until the operation of the converted appliance is checked as specified in the manufacturer's instructions supplied with the kit.


*** A qualified service agency is any individual, firm, corporation or company which either in person or through a representative is engaged in and is responsible for the connection, utilization, repair or servicing of gas utilization equipment or accessories; who is experienced in such work, familiar with all precautions required, and has complied with all of the requirements of the authority having jurisdiction.**

In Canada: The conversion shall be carried out in accordance with the requirements of the provincial authorities having jurisdiction and in accordance with the requirements of the CAN/CSA B149.1 and CAN/CSA B149.2 Installation Code.

Navien, Inc. is not liable for any property damage and/or personal injury resulting from unauthorized conversions.



WARNING

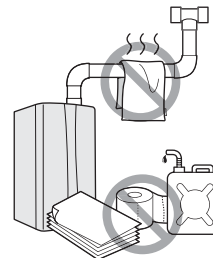

- **Shut off the gas supply if the water heater is damaged.**
Have your installer or plumber show you the location of the gas shut off valve and demonstrate how to close the valve. If the water heater is damaged as a result of overheating, fire, flood, or any other reason, close the manual shut off valve and do not operate the water heater again until it has been inspected by a qualified technician.
- **Do not store or use gasoline or other flammable liquids near this water heater.**
Doing so may result in fire or explosion.
- **Do not place combustibles, such as newspapers or laundry, near the water heater or venting system.**
Doing so may result in a fire.
- **Do not place or use hair sprays, spray paints, or any other compressed gases near the water heater or venting system, including the vent termination.**
Doing so may result in fire or explosion.
- **Do not operate the water heater with the front cover opened.**
Doing so may result in fire or carbon monoxide (CO) poisoning, which may result in property damage, personal injury, or death.
- **Do not operate this water heater without proper venting.**
Doing so may result in fire or carbon monoxide (CO) poisoning, which may result in property damage, personal injury, or death. Inspect the vent termination and air intake supply annually to ensure proper operation of the water heater. Turn off and discontinue use of the water heater if any of the vent pipes, vent elbows, or intake pipes are damaged in any way, separated at a joint, or show evidence of corrosion, rusting, or melting.
- **Do not touch the power cord or internal components of the water heater with wet hands.**
Doing so may result in electric shock.



CAUTION

- **Do not attempt to repair or replace any part of the water heater, unless it is specifically recommended in this manual.**

For all other service, contact an authorized technician or licensed professional. Improper adjustments, alterations, service, or maintenance may lead to property damage, personal injury, or death and will void your warranty.

- **Do not operate the water heater if you feel something is wrong with it.**

Doing so may result in product damage or personal injury.

- **Do not allow children to operate or access the water heater.**

Doing so may result in product damage or personal injury.

- **Do not attempt to change the water temperature while the water heater is being used.**

Doing so may result in personal injury.

- **Do not turn on the water heater unless the water and gas supplies are fully opened.**

Doing so may damage the water heater.

- **Do not turn on the water if the cold water supply shut-off valve is closed.**

Doing so may damage the water heater.

- **Do not use this water heater for anything other than its intended purpose, as described in this manual.**

- **Do not remove the front cover unless the power to the water heater is turned off or disconnected.**

Failure to do so may result in electric shock.

- **When servicing the controls, label all wires prior to disconnecting them.**

Failure to do so may result in wiring errors, which can lead to improper or dangerous operation.

- **Do not use unapproved replacement or accessory parts.**
Doing so may result in improper or dangerous operation and will void the manufacturer's warranty.

- **Do not place anything in or around the vent terminals, such as a clothes line, that could obstruct the air flow in or out of the water heater.**

- **This water heater has been approved for use in the USA and Canada only.**

Using the water heater in any other country will void the manufacturer's warranty.

- **Should overheating occur or the gas supply fail to shut off, turn off the manual gas valve to the appliance.**

- **Do not use this appliance if any part has been under water.**

Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

2. Product Information

2.1 Product Information

Navien features the new NPE "A" Series tankless gas water heater with a built-in Circulation Pump and Mini Buffer Tank (the NPE "S" series tankless gas water heater features a built-in Mixing Valve). Depending on the heat capacity, each model is divided into four types; 150,180,210 and 240.


Items	NPE	
	"A" Models (NPE-180A/210A/240A)	"S" Models (NPE-150S/180S/ 210S/240S)
Intended Use	Residential, Commercial or Combi*	
Features	Built-in Circulation Pump and Mini Buffer Tank	Built-in Mixing Valve
Factory Default Temperature	120 °F (49 °C)	
Gas Type	NG, field-convertible to LP	

See "3.1 General Specifications" for detailed specifications.

*"Combi" refers to a combination potable water and space heating application. These water heaters cannot be used in space heating-only applications.


2.2 Layout and Key Components

The following diagram shows the key components of the water heater. Component assembly diagrams and particular parts lists are included in the Appendix.

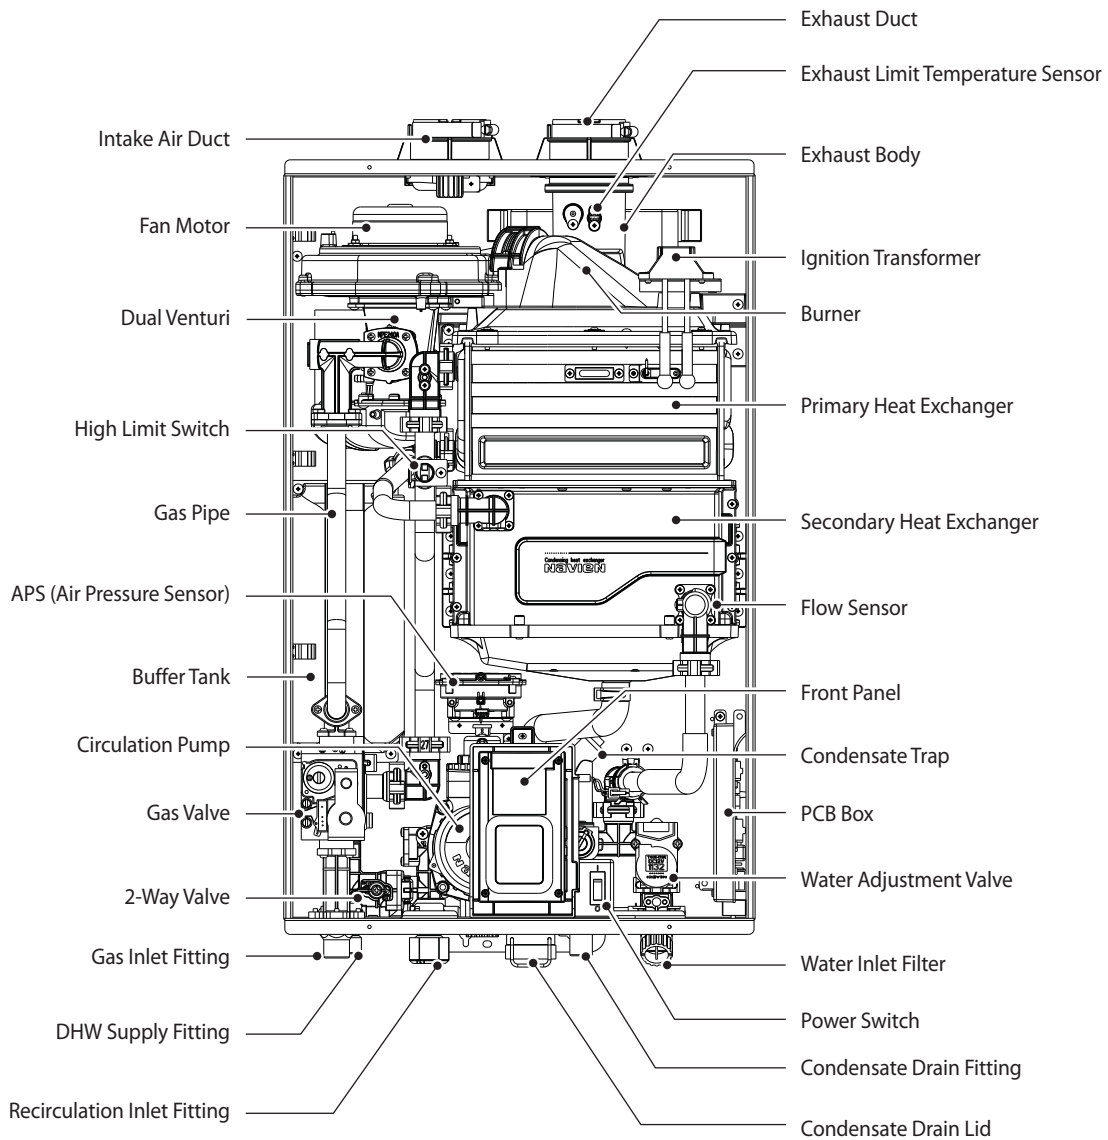


[NPE-180A/ 210A/ 240A]

* Refer to components Diagram and Part List in page 133.

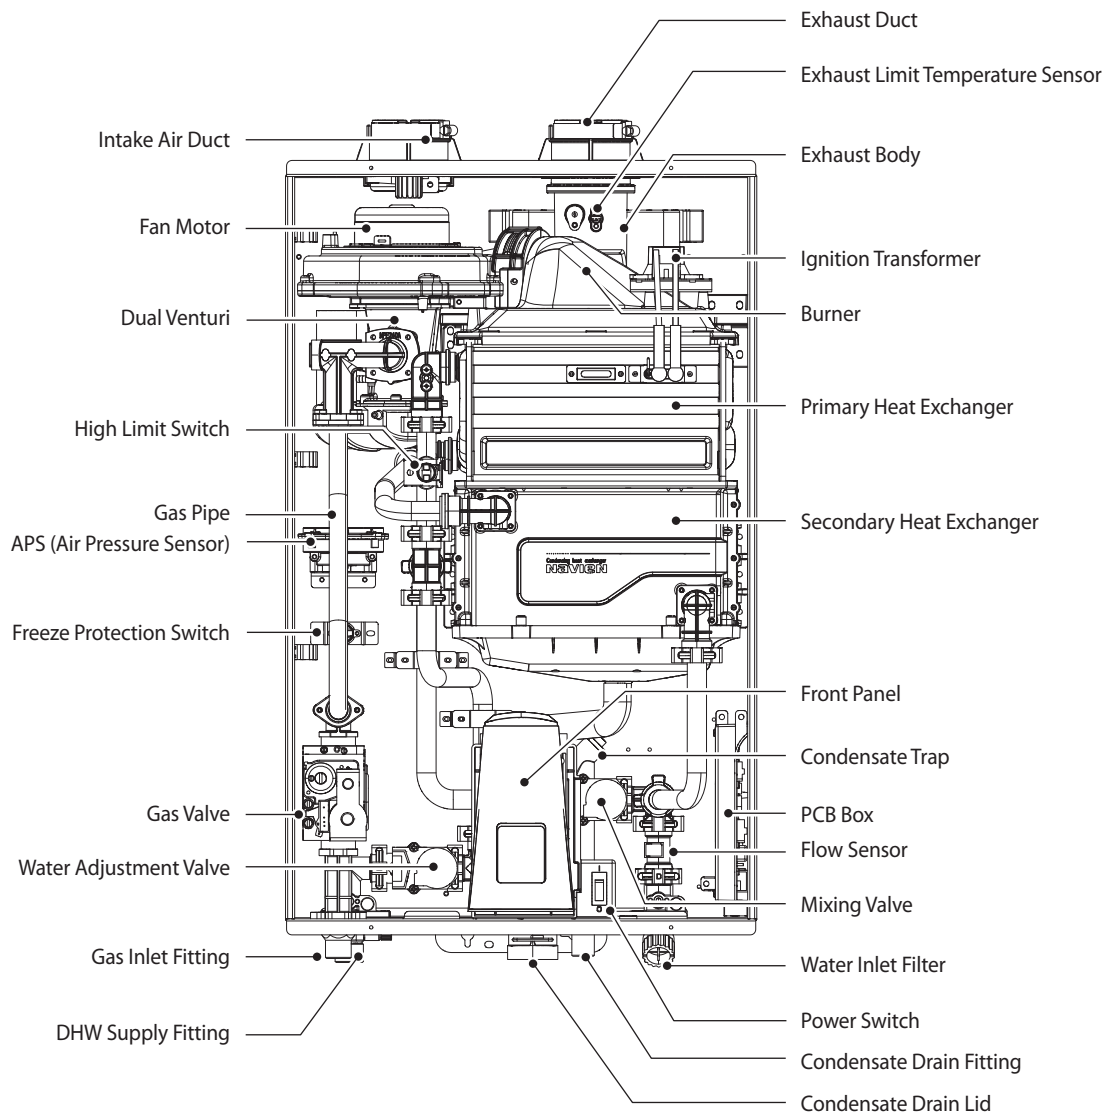

[NPE-180S/ 210S/ 240S]

* Refer to components Diagram and Part List in page 133.

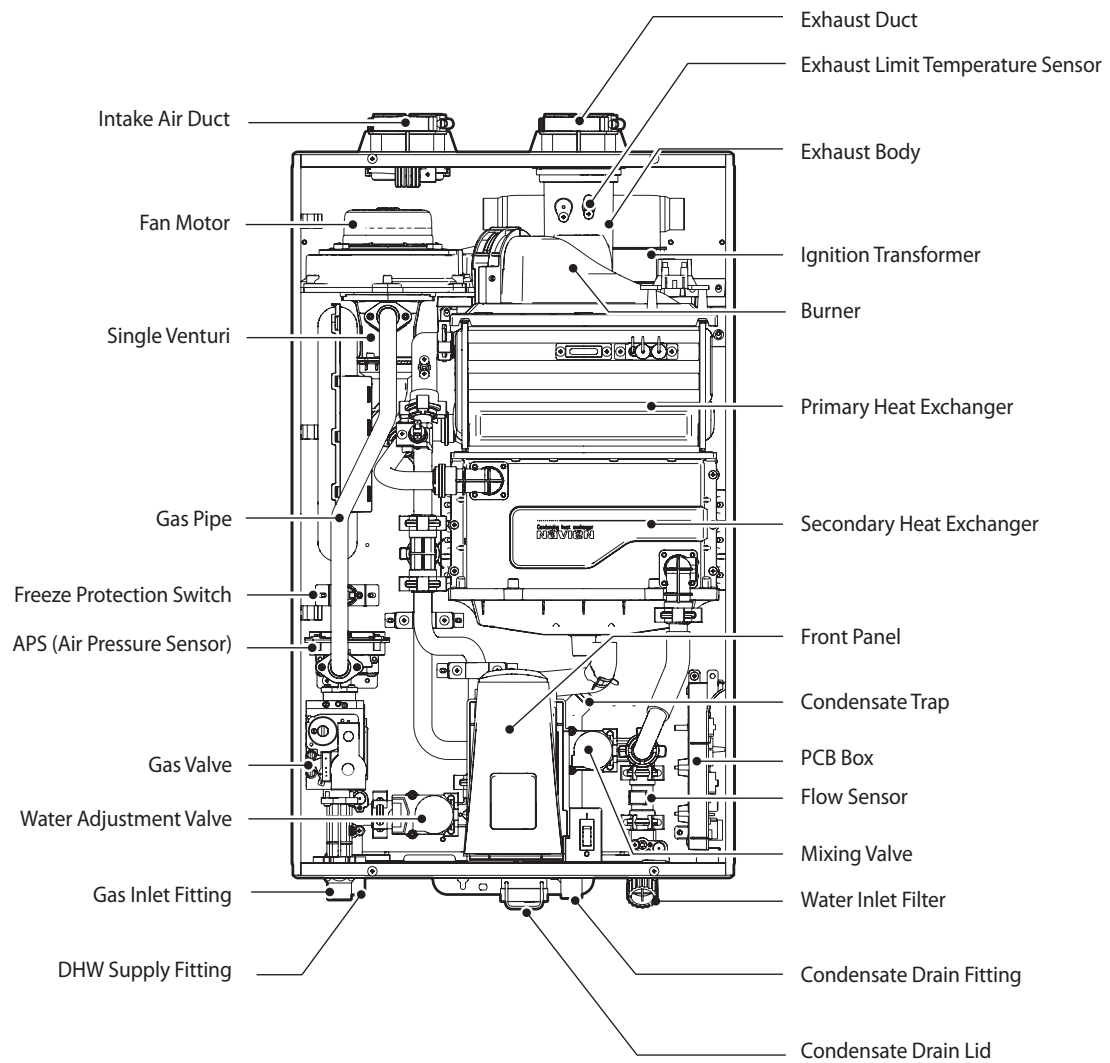

[NPE-150S]

3. Technical Data

3.1 General Specifications


The following table lists the specifications for the water heater. Additional specifications about water, gas, electric, and air supplies (venting) appear in the Installation section.

괄호를 제외하고 표기 예. NPE-180A

Item		NPE-150S	NPE-180(A)	NPE-180S	NPE-210(A)	NPE-210S	NPE-240(A)	NPE-240S
Heat Capacity (Input)	Natural Gas	18,000-120,000 BTU/H	15,000-150,000 BTU/H		19,900-180,000 BTU/H		19,900-199,900 BTU/H	
	Propane Gas		15,000-150,000 BTU/H		19,900-180,000 BTU/H		19,900-199,900 BTU/H	
Energy Factor	UEF (for NG & LP)	0.96	0.96	0.97	0.96	0.97	0.96	0.97
	EF (Canada) (for NG & LP)	0.97	0.97	0.99	0.97	0.99	0.97	0.99
Flow Rate (DHW)	35 °F (19 °C) Temp Rise	6.8 GPM (25.8 L/m)	8.4 GPM (32 L/m)		10.1 GPM (38 L/m)		11.2 GPM (42 L/m)	
	45 °F (25 °C) Temp Rise	5.3 GPM (20 L/m)	6.5 GPM (25 L/m)		7.8 GPM (30 L/m)		8.7 GPM (33 L/m)	
	67 °F (36 °C) Temp Rise	3.2 GPM (12 L/m)	4.3 GPM (16 L/m)	4.2 GPM (16 L/m)	5.0 GPM (19 L/m)	5.2 GPM (20 L/m)	5.6 GPM (21 L/m)	5.7 GPM (22 L/m)
Dimensions		17.3 in (W) x 27.4 in (H) x 13.2 in (D)						
Weight		62 lbs (28 kg)	75 lbs (34 kg)	67 lbs (30 kg)	82 lbs (37 kg)	75 lbs (34 kg)	82 lbs (37 kg)	75 lbs (34 kg)
Installation Type		Indoor or Outdoor Wall-Hung						
Venting Type		Forced Draft Direct Vent						
Ignition		Electronic Ignition						
Water Pressure		15-150 PSI						
Natural Gas Supply Pressure (from source)		3.5 in WC-10.5 in WC						
Propane Gas Supply Pressure (from source)		8 in WC-13in WC						
Natural Gas Manifold Pressure (min-max)		-0.04 in WC - -0.40 in WC	-0.04 in WC - -0.84 in WC		-0.05 in WC - -0.36 in WC		-0.05 in WC - -0.58 in WC	
Propane Gas Manifold Pressure (min-max)		-0.05 in WC - -0.42 in WC	-0.05 in WC - -0.50 in WC		-0.10 in WC - -0.66 in WC		-0.10 in WC - -0.78 in WC	
Minimum Flow Rate		0 GPM (0 L/m) for “A” models / 0.5 GPM (1.9 L/m) for “S” models						
Connection Sizes	Cold Water Inlet	¾ in NPT						
	Hot Water Outlet	¾ in NPT						
	Gas Inlet	¾ in NPT						
Power Supply	Main Supply	120 V AC, 60 Hz						
	Maximum Power Consumption	200 W (max 2 A), 350 W (max 4 A) with external pump connected						
Materials	Casing	Cold Rolled Carbon Steel						
	Heat Exchangers	Primary Heat Exchanger: Stainless Steel Secondary Heat Exchanger: Stainless Steel						
Venting	Exhaust	2 in or 3 in PVC, CPVC, Polypropylene 2 in or 3 in Special Gas Vent Type BH (Class II, A/B/C)						
	Intake	2 in or 3 in PVC, CPVC, Polypropylene 2 in or 3 in Special Gas Vent Type BH (Class II, A/B/C)						
	Vent Clearances	0 in to combustibles						
Safety Devices	Flame Rod, APS, Ignition Operation Detector, Water Temperature High Limit Switch, Exhaust Temperature High Limit Sensor, Power Surge Fuse							

3.2 Dimensions


The following diagrams show the dimensions of the water heater and the table lists the supply connections.

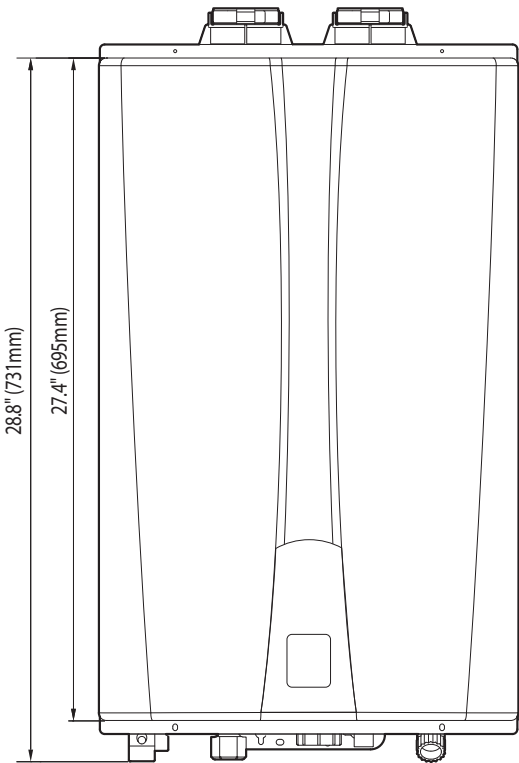


Supply Connections

	Description	Diameter
A	Air Intake	2"
B	Exhaust Gas Vent	2"
C	Hot Water Outlet	3/4"
D	Recirculation Inlet ("A" models only)	3/4"
E	Cold Water Inlet	3/4"
F	Gas Inlet	3/4"
G	Condensate Outlet	1/2"

Overhead View

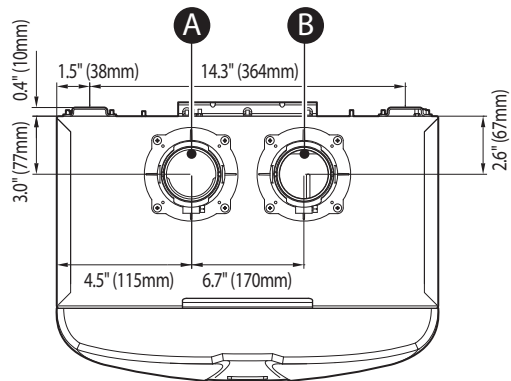


Supply Connections

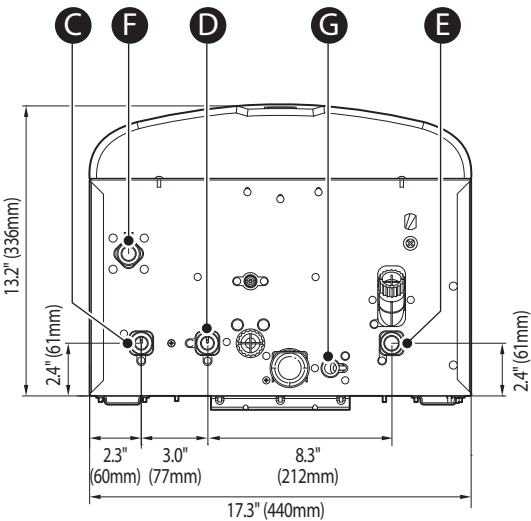


4. System Details


4.1 Schematic and Flow Diagram

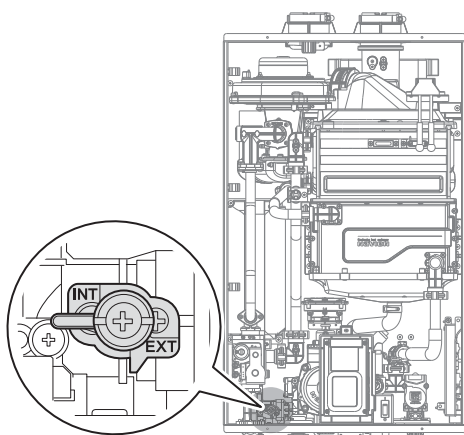


2-way valve open for Internal Recirculation Mode

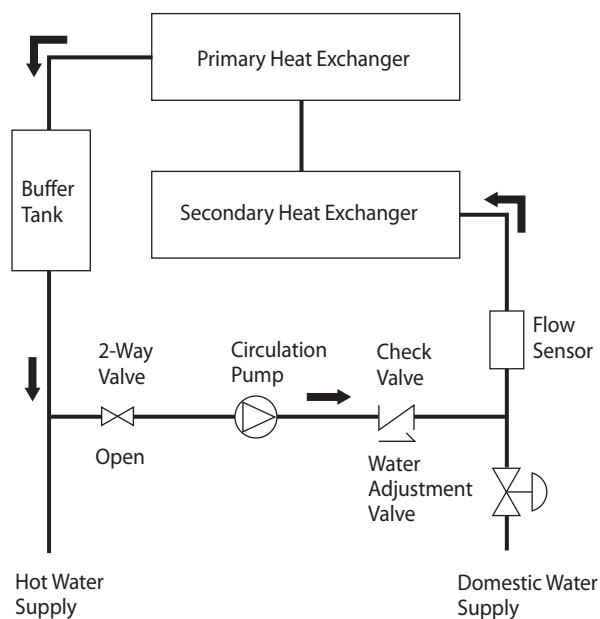

Internal Recirculation Mode


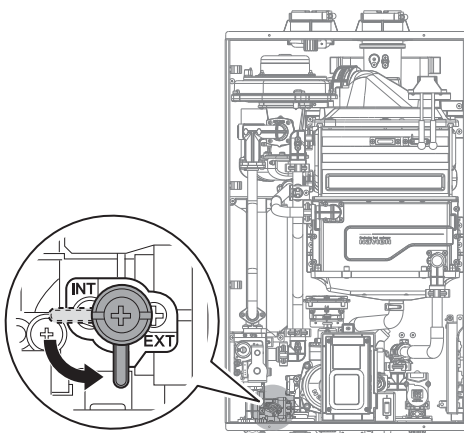


2-way valve closed for External Recirculation Mode

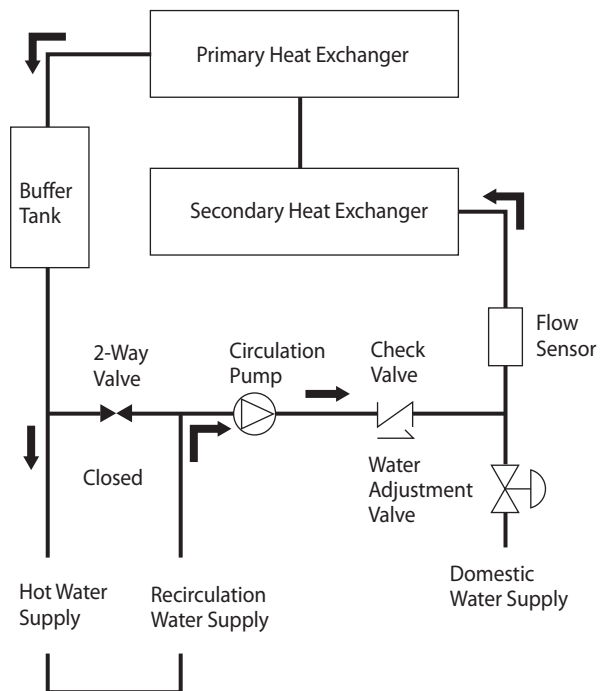


External Recirculation Mode

[NPE-180A/ 210A /240A]

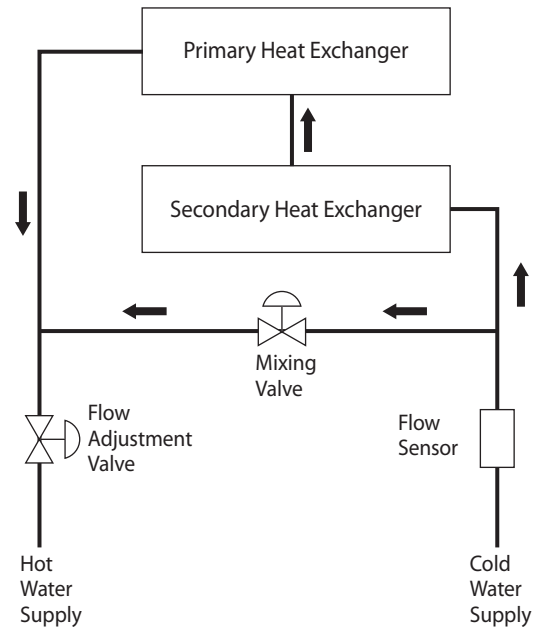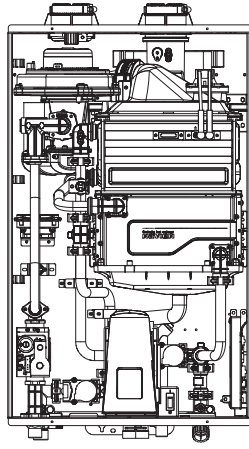

[NPE-150S/ 180S / 210S / 240S]

4.2 Operation Flow Chart

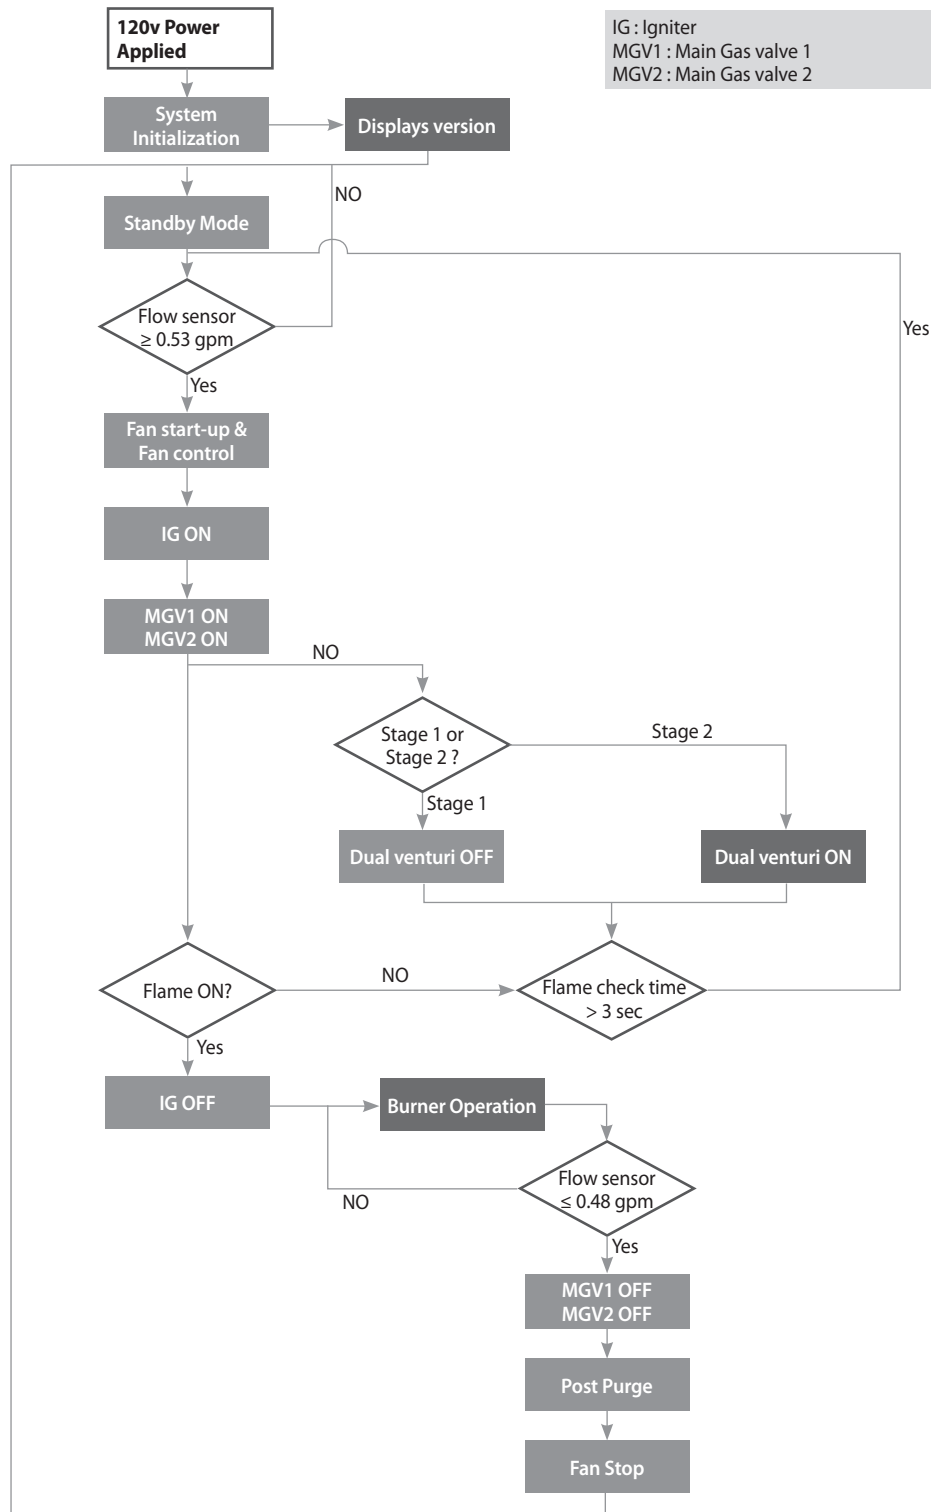

1. Water Flow Begins
 - Water Flow Sensor sends pulses to the PCB when it registers water flow.
 - PCB senses flow greater than 0.53 GPM (approximate).
 - Firing Sequence begins.
2. Firing Sequence
 - PCB monitors Inlet / Outlet water temperature, temperature set point, and water flow rate.
 - Fan Motor activates Purge Cycle in the combustion chamber.
 - Spark igniter begins ignition process.
 - Main Gas control valve opens to minimum fire rate.
 - Flame rod ignition confirms ignition and initial combustion.
 - Spark igniter stops ignition process.
3. Normal Operation
 - PCB monitors flame rod, fan motor frequency, outlet water temperature, PCB temperature set point and water flow rate.
 - Main Gas control valve modulates gas input to required firing rate.
 - Combustion fan speed is adjusted for the required firing rate.
 - Water adjustment valve is adjusted as needed.
4. Shut-down Sequence
 - PCB senses flow rate less than 0.48 GPM (approximate).
 - Main Gas Control valve closes.
 - Water adjustment valve resets to standby position.
 - Fan Motor activates Purge Cycle in the combustion chamber at low speed.
5. Standby Mode
 - PCB monitors water temperature and remote controls.
 - Freeze protection is activated as needed.

4.3 Setting the DIP Switches

The water heater has two DIP switch locations: on the main circuit board (PCB) and on the front panel. Each location has two sets of DIP switches that control the functionality of the water heater. Set the DIP switches appropriately, based on the installation environment and the gas type.

4.3.1 Setting the DIP Switches


The water heater has two DIP switch locations: on the main circuit board (PCB) and on the front panel. Each location has two sets of DIP switches that control the functionality of the water heater. Set the DIP switches appropriately, based on the installation environment.

Circuit Board DIP Switches

The two sets of DIP switches on the circuit board configure the water heater's model settings. These configurations are set at the factory and should not be changed.

Setting the Front Panel DIP Switches

The two sets of DIP switches on the front panel configure the water heater's pump & recirculation, display, well pump, storage tank & solar system, lime alarm, high altitude, Cascade Venting and Gas Type settings. Some of these configurations are set at the factory and should not be changed. The following tables describe the functions of the DIP switches and their settings:

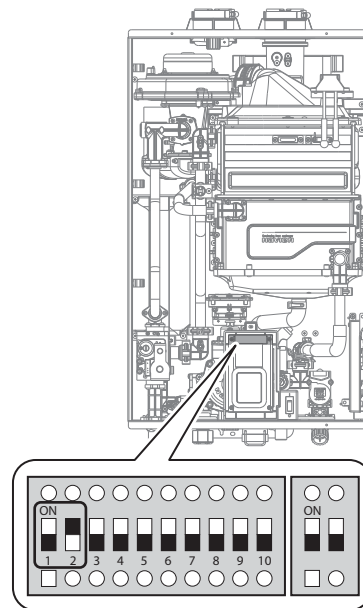

• 10-switch Panel:

Switch	Function	Setting			Remark
		"A" models (NPE-180A/ 210A / 240A)	"S" models (NPE-150S/180S/210S/240S)	DIP switch setting	
1-3	Recirculation Mode- Internal Navien Pump ("A" models only)	No Recirculation		1-OFF; 2-OFF; 3-OFF	*Intelligent Preheating: Learns the user's hot water usage patterns and starts preheating prior to an anticipated draw. - Preheating starts when remote controller is not connected. - When remote controller is connected, preheating starts and operates based on the timer. - Set the timer on the remote controller to use hot water at the time of your choice. - Intelligent preheating does not function in Cascade Mode (Preheating OFF). - Freeze protection is still available with preheating OFF. - When installing an NPE water heater with NR, NP or CH series units for a cascade system, temperatures are displayed in Fahrenheit only. - For NPE "S" models, preheating is not available when using a cascade configuration.
		Internal Recirculation	No Recirculation	1-ON; 2-OFF; 3-OFF	
		External Recirculation	No Recirculation	1-OFF; 2-ON; 3-OFF	
		Intelligent Preheating*	No Recirculation	1-ON; 2-ON; 3-OFF	
	Recirculation Mode- External Pump Connected**	External Pump Only		1-OFF; 2-OFF; 3-ON	
		External Recirculation	External Pump Only	1-ON; 2-OFF; 3-ON	
		External Recirculation	External Pump Only	1-OFF; 2-ON; 3-ON	
		Intelligent Preheating*	Intelligent Preheating* (External Pump Only)	1-ON; 2-ON; 3-ON	
4	Display Temperature Unit	Celsius (with L/M)		4-ON	**External Pump: These settings are to be used when an external pump is wired to the water heater. ***Lime Alarm: Displays a "760" error when the set time period has been reached to indicate a flush or service is necessary. ****High Altitude Above 2,000 ft (610 m), the water heater will de-rate by 4% for each 1,000 ft (305 m) of altitude gain.
		Fahrenheit (with GPM)		4-OFF	
5	Well Pump	Well Pump Operation		5-ON	
		Do Not Use Well Pump		5-OFF	
6	DHW Storage Tank/Solar System	Storage Tank/Solar System Operation		6-ON	
		Do Not Use Storage Tank/Solar System		6-OFF	
7 & 8	Lime Alarm***	Off		7-OFF; 8-OFF	
		6 Months Alert		7-ON; 8-OFF	
		12 Months Alert		7-OFF; 8-ON	
		24 Months Alert		7-ON; 8-ON	
9 & 10	High Altitude **** (Applies to Main PCB version V1.4 (July 11, 2013) or later versions only)	0 ~ 1,999 ft (0 ~ 609 m)		9-OFF, 10-OFF	
		2,000 ~ 5,399 ft (610 ~ 1,645 m)		9-ON, 10-OFF	
		5,400 ~ 7,699 ft (1,646 ~ 2,346 m)		9-OFF, 10-ON	
		7,700 ~ 10,100 ft (2,347 ~ 3,078 m)		9-ON, 10-ON	



NOTE

- To use the water heater at a specific altitude, the DIP switches should be set as described above.
- When configuring a cascade system, all settings other than the high altitude, gas type and preheating settings are controlled by the DIP switch settings on the master unit.
- When installing an NPE water heater with NR, NP, or CH series units, individual unit settings apply to the lime alarm and cascade venting.

- 2-switch Panel:

Switch	Function	Setting	
1	Cascade Vent	Common Vent	1-OFF
		Individual Vent	1-ON
2	Gas Type (Applies to Main PCB & Front panel version V1.4 (July 11, 2013) or later versions only.)	Natural Gas	OFF
		Propane Gas	ON

4.4 Measuring the Inlet Gas Pressure




WARNING

The water heater cannot function properly without sufficient inlet gas pressure. Measuring the inlet gas pressure should be performed by a licensed professional only.

- The inlet gas pressure must be maintained between 3.5" and 10.5" WC for natural gas and between 8.0" and 13" WC for liquefied propane.
- The appliance and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psi (3.5 kPa). The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psi (3.5 kPa).


To measure the inlet gas pressure:

1. Shut off the manual gas valve on the gas supply line.

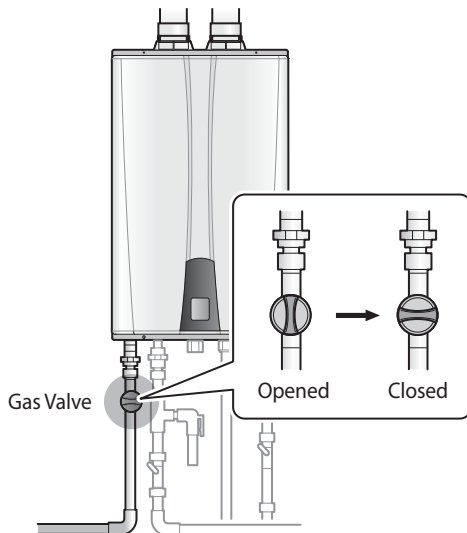


2. Open a hot water faucet. The water heater should turn on and the gas in the gas supply line will be purged.
3. Leave the faucet on until the water heater shuts down due to a lack of gas supply, and then turn off the hot water faucet.


4. Remove the water heater front cover by loosening the 4 Phillips head screws securing it to the case.

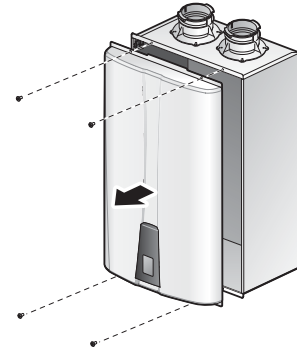

5. Loosen the screw indicated in the figure below and connect a manometer to the pressure port. Reset the manometer to zero before use.

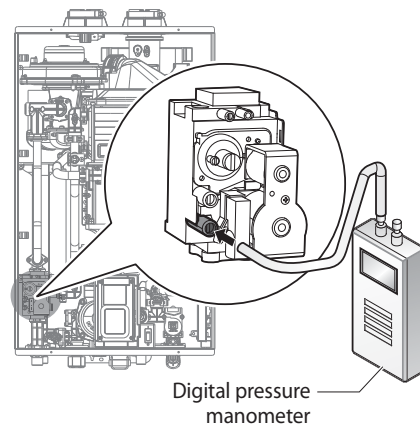

6. Re-open the manual gas valve and check for leaks.
7. Open multiple fixtures that have high flow rates, such as bathtub and shower faucets, to ramp the water heater up to its maximum firing rate.
8. When the water heater reaches its maximum firing rate, check the inlet gas pressure reading on the manometer. The gas pressure must fall within the proper operating range indicated above and in the specifications on page 25.

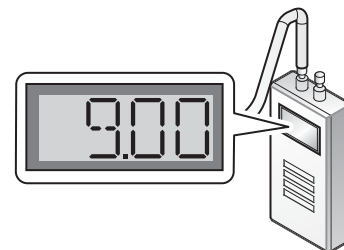

4.4.1 Gas Pipe Sizing Tables (Referenced from 2012 National Fuel Gas Code)

These tables are for reference only. Please consult the gas pipe manufacturer for actual pipe capacities.

Maximum Natural Gas Delivery Capacity

in Cubic Feet (ft³) per Hour (0.60 Specific Gravity; 0.5" WC Pressure Drop). Contact your gas supplier for BTU/ft³ ratings. Use 1,000 BTU/ft³ for simplified calculations. This table is recommended for supply pressures less than 6" WC.

Pipe Size	Length (including fittings)										
	10' (3m)	20' (6m)	30' (9m)	40' (12m)	50' (15m)	60' (18m)	70' (21m)	80' (24m)	90' (27m)	100' (30m)	125' (38m)
3/4"	360	247	199	170	151	137	126	117	110	104	92
1"	678	466	374	320	284	257	237	220	207	195	173
1 1/4"	1,390	957	768	657	583	528	486	452	424	400	355
1 1/2"	2,090	1,430	1,150	985	873	791	728	677	635	600	532
2"	4,020	2,760	2,220	1,900	1,680	1,520	1,400	1,300	1,220	1,160	1,020
2 1/2"	6,400	4,400	3,530	3,020	2,680	2,430	2,230	2,080	1,950	1,840	1,630
3"	11,300	7,780	6,250	5,350	4,740	4,290	3,950	3,670	3,450	3,260	2,890
4"	23,100	15,900	12,700	10,900	9,660	8,760	8,050	7,490	7,030	6,640	5,890

in Cubic Feet (ft³) per Hour (0.60 Specific Gravity; 3.0" WC Pressure Drop). Contact your gas supplier for BTU/ft³ ratings. Use 1,000 BTU/ft³ for simplified calculations. This table is recommended for supply pressures of 6" WC or greater.

Pipe Size	Length (including fittings)										
	10' (3m)	20' (6m)	30' (9m)	40' (12m)	50' (15m)	60' (18m)	70' (21m)	80' (24m)	90' (27m)	100' (30m)	125' (38m)
1/2"	454	312	250	214	190	172	158	147	138	131	116
3/4"	949	652	524	448	397	360	331	308	289	273	242
1"	1,787	1,228	986	844	748	678	624	580	544	514	456
1 1/4"	3,669	2,522	2,025	1,733	1,536	1,392	1,280	1,191	1,118	1,056	936
1 1/2"	5,497	3,778	3,034	2,597	2,302	2,085	1,919	1,785	1,675	1,582	1,402
2"	10,588	7,277	5,844	5,001	4,433	4,016	3,695	3,437	3,225	3,046	2,700
2 1/2"	16,875	11,598	9,314	7,971	7,065	6,401	5,889	5,479	5,140	4,856	4,303
3"	29,832	20,503	16,465	14,092	12,489	11,316	10,411	9,685	9,087	8,584	7,608
4"	43,678	30,020	24,107	20,632	18,286	16,569	15,243	14,181	13,305	12,568	11,139

Maximum Liquefied Propane Delivery Capacity

in Thousands of BTU/H (0.5" WC Pressure Drop)

Pipe Size	Length (including fittings)												
	10' (3m)	20' (6m)	30' (9m)	40' (12m)	50' (15m)	60' (18m)	80' (24m)	100' (30m)	125' (38m)	150' (45m)	175' (53m)	200' (60m)	250' (76m)
1/2"	291	200	160	137	122	110	101	94	89	84	74	67	62
3/4"	608	418	336	287	255	231	212	197	185	175	155	140	129
1"	1,150	787	632	541	480	434	400	372	349	330	292	265	243
1 1/4"	2,350	1,620	1,300	1,110	985	892	821	763	716	677	600	543	500
1 1/2"	3,520	2,420	1,940	1,660	1,480	1,340	1,230	1,140	1,070	1,010	899	814	749
2"	6,790	4,660	3,750	3,210	2,840	2,570	2,370	2,200	2,070	1,950	1,730	1,570	1,440



NOTE

- For installations using CSST (flexible) gas piping, please refer to the sizing charts provided by the manufacturer.
- The use of single-stage regulators are recommended. Dual-stage regulators could cause operational issues with the water heater.

4.5 Selecting a Recirculation Mode

On all "A" model Navien water heaters, you can choose from two pre-heating modes: internal recirculation mode or external recirculation mode. To select a recirculation mode, you must set the DIP switches on the front panel, and set the position of the 2-way valve inside the water heater. By default, the DIP switches are set to OFF.

When you use a recirculation mode, there will be some minor efficiency loss as a result of the water heater maintaining a steady temperature within the circulation loop. Although in many cases, higher gas usage will be made up for by lower water usage.

The recirculation feature of the "A" models has three performance advantages:

- Elimination of any minimum flow rate requirement.
- Elimination of any hot/cold/hot stacking—the "cold water sandwich" effect.
- Quicker hot water delivery to fixtures, which results in less water wasted.



NOTE

When using external recirculation mode with the built-in pump, observe the following maximum recirculation pipe lengths including fittings (3/4" pipe is recommended):

-1/2" Copper Pipe- 100' (30m) of equivalent length


-3/4" Copper Pipe- 500' (150m) of equivalent length

Lengths in excess of these limits will require a properly sized external recirculation pump.


Internal Recirculation Mode

To use the internal recirculation mode:


1. Connect the water supply. Refer to the "Installation Manual (page 19)".
2. Set the 2-way valve inside the water heater to "INT."

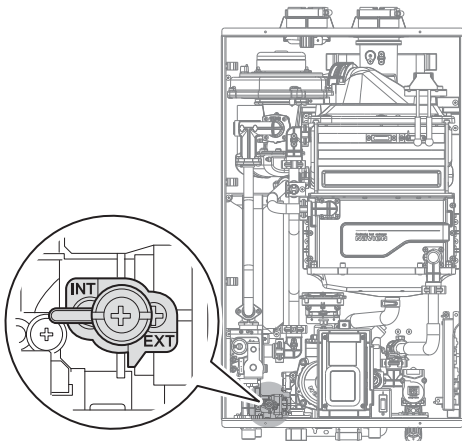

3. Set the front panel DIP switches at the far left (set of ten) to:
1—ON; 2—OFF.

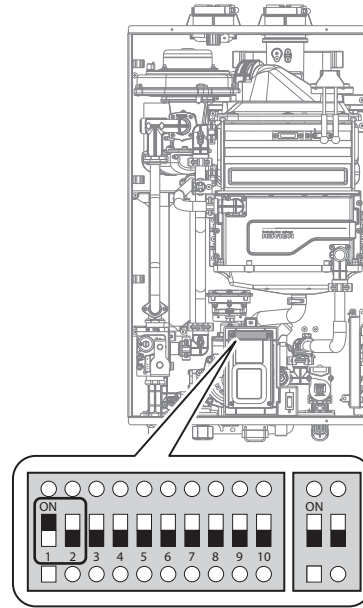


The following diagram shows the internal recirculation flow for pre-heating:

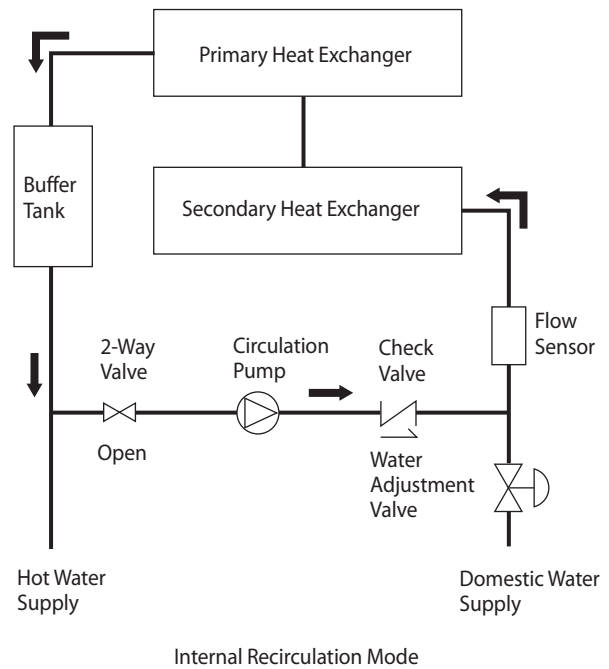


External Recirculation Mode

To use the external recirculation mode:


1. Connect the water supply to support recirculation. Refer to the "Installation Manual (page 20)".
2. Set the 2-way valve inside the water heater to "EXT."

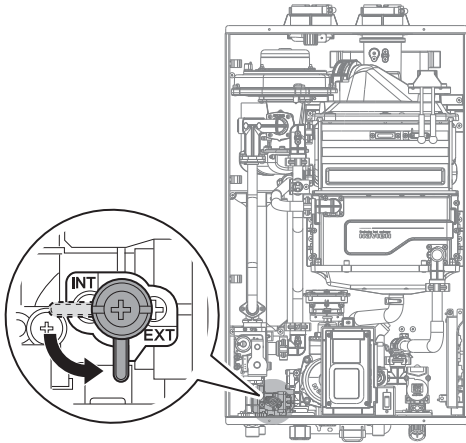

3. Set the front panel DIP switches at the far left (set of ten) to: 1—OFF; 2—ON.

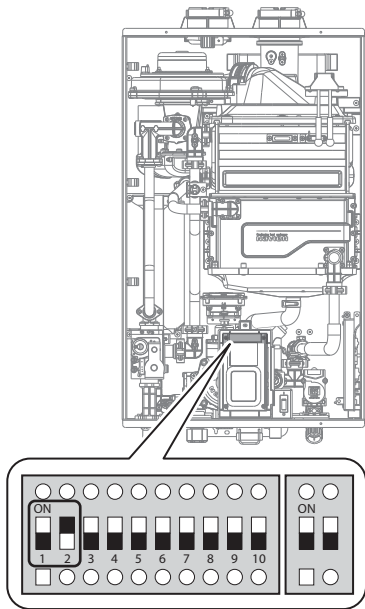

The following diagram shows the external recirculation flow for pre-heating:

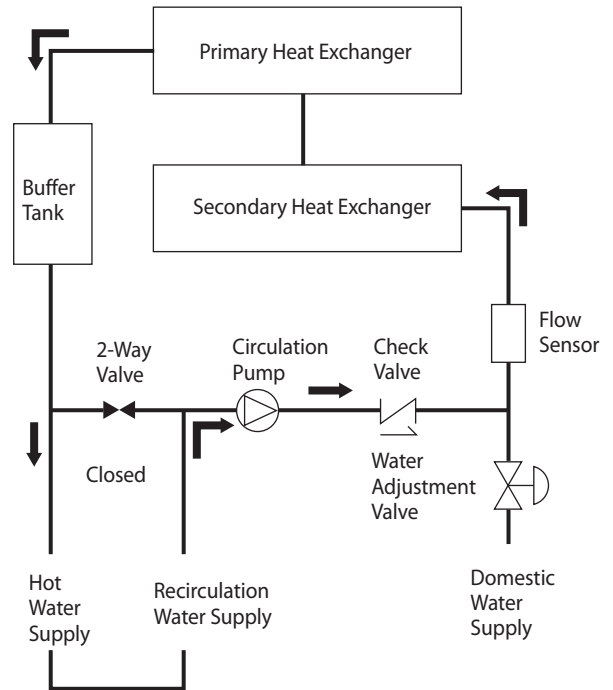

External Recirculation Mode

4.6 Gas Conversion

NPE Series water heaters are configured for Natural Gas from the factory. If conversion to Propane Gas is required, the conversion kit supplied with the water heater must be used.



WARNING

This conversion kit shall be installed by a qualified service agency* in accordance with Navien's instructions and all applicable codes and requirements of the authority having jurisdiction. The information in these instructions must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury or death. The qualified service agency is responsible for the proper installation of this kit. The installation is not proper and complete until the operation of the converted appliance is checked as specified in the manufacturer's instructions supplied with the kit.

* A qualified service agency is any individual, firm, corporation or company which either in person or through a representative is engaged in and is responsible for the connection, utilization, repair or servicing of gas utilization equipment or accessories; who is experienced in such work, familiar with all precautions required, and has complied with all of the requirements of the authority having jurisdiction.

In Canada: The conversion shall be carried out in accordance with the requirements of the provincial authorities having jurisdiction and in accordance with the requirements of the CAN-B149.1 and CAN1-B149.2 Installation Code.

Tools Required:

- Phillips Screwdriver
- Flathead Screwdriver
- 5/32" or 4mm Allen Wrench
- Combustion Analyzer or Dual Port Manometer
- Gas Leak Detector

Included Items:

- Gas Orifice (refer to below table)

Water Heater	NG		LP	
	1STAGE	2STAGE	1STAGE	2STAGE
NPE-180A NPE-180S	Ø4.80	Ø5.95	Ø3.80	Ø4.70
NPE-210A NPE-210S	Ø6.10	Ø6.30	Ø4.50	Ø4.80
NPE-240A NPE-240S	Ø6.10	Ø6.30	Ø4.50	Ø4.80

Table 1. Orifice size

- Gas Pressure and Conversion Kit Number Labels

Water Heater	NG	LP
NPE-150S	Ø6.30	Ø5.10

상단의 테이블과 합쳐서 표기, 또는 주석을 테이블 하단으로 이동.

1. Turn off both gas and water supply to the water heater.
2. Using a Phillips hand screwdriver, remove 4 screws (2 from the top and 2 from the bottom) of the front cover assembly to gain access to the internal components. See Figure 1 for illustration of the front cover on the unit.



Figure 1. NPE Series Front cover

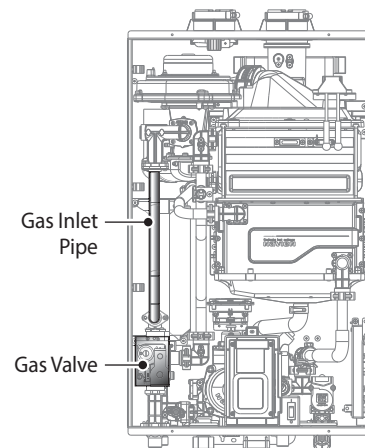


Figure 2. NPE Series Internal Components

3. Once the front cover is removed, place it in a safe location to prevent accidental damage. With the internal components exposed, locate the gas inlet pipe and the Gas Valve near the left side of the unit which are highlighted in Figure 2.
4. Use a Phillips screwdriver to remove the two screws at Location A - the connection below the Gas Valve where it connects to the pipe. See Figure 3 for reference. Once the screws are removed, carefully separate the pipe from the Gas Valve.
5. Once the gas inlet pipe is detached from the Gas Valve, find Location B - the connection above the Gas Valve where it is attached to the Fan Motor Assembly. Carefully remove the four screws by hand using a Phillips screwdriver and pull the Gas Valve away from the Fan Assembly to access the Gas Orifice.

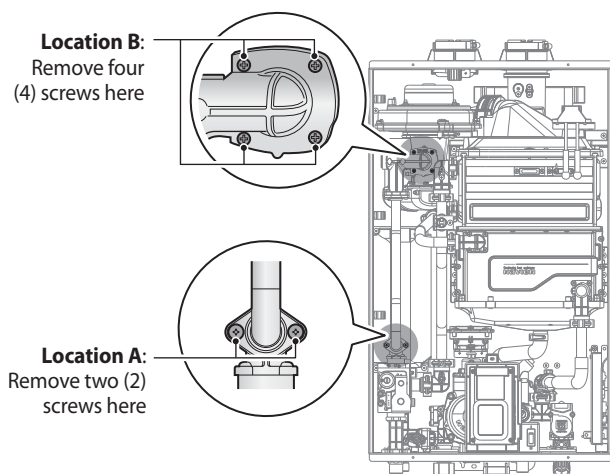


Figure 3. Detaching Gas Valve from Gas Inlet Pipe and Fan Motor Assembly

6. Once the Gas Orifice is exposed, remove the two screws that hold the part in place. Remove the Gas Orifice from its housing and prepare the new Gas Orifice for the LP conversion for installation.

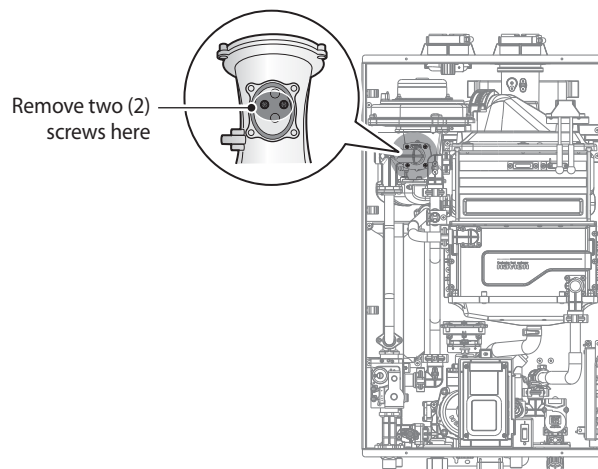


Figure 4. Access to Gas Orifice in Fan Assembly



WARNING

- DO NOT adjust or attempt to measure gas valve outlet pressure. The gas valve is factory-set for the correct outlet pressure. This setting is suitable for natural gas and propane, requiring no field adjustment.
- Attempting to alter or measure the gas valve outlet pressure could result in damage to the valve, causing potential severe personal injury, death or substantial property damage. Navien water heaters are shipped ready to fire natural gas ONLY.


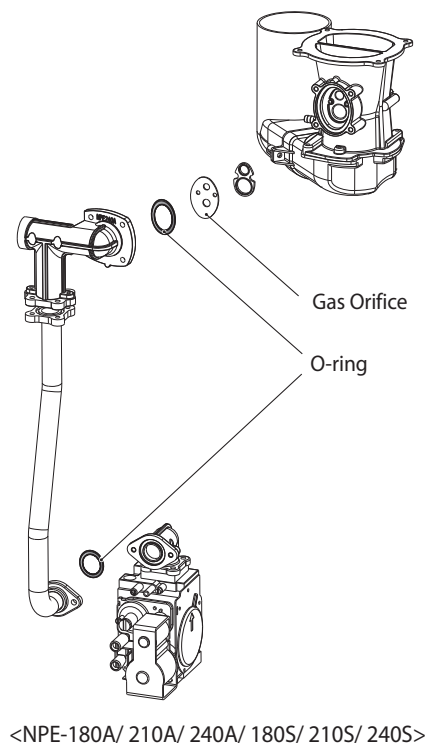


Figure 5. Exploded view of Gas assembly

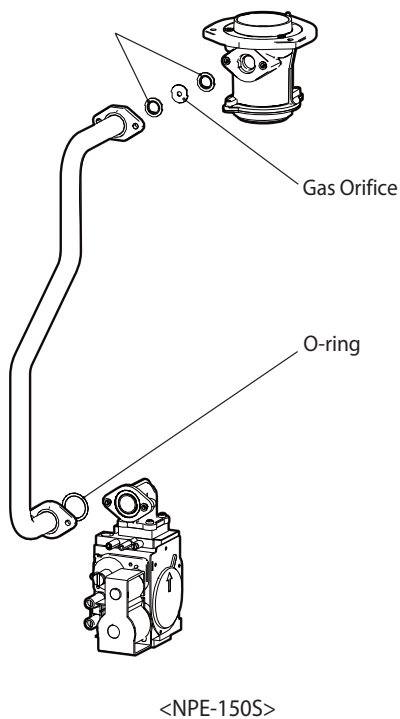

DANGER

See Figure 5. Inspect the O-ring between the gas valve and gas valve inlet adapter whenever they are disassembled. The O-ring must be in good condition and must be installed. Failure to comply will cause a gas leak, resulting in severe personal injury or death.

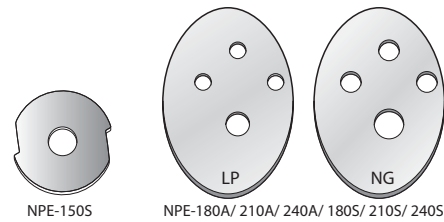


Figure 6. Orifice identification

7. Replace the old Orifice piece with the new part for use with LP gas. Ensure that the Orifice is properly seated inside the port before proceeding to the next step.
8. Replace the gas inlet pipe to its original position and use all screws to secure all connections.

Note

Do not overtighten as this may damage or crack the components.



DANGER


Inspect the O-ring between the gas valve and gas valve inlet adapter whenever they are disassembled. The O-ring must be in good condition and must be installed. Failure to comply will cause a gas leak, resulting in severe personal injury or death.

9. Set the Front Panel Dip switch according to the gas type.



WARNING

Be sure to turn off the power before changing the DIP switch setting.

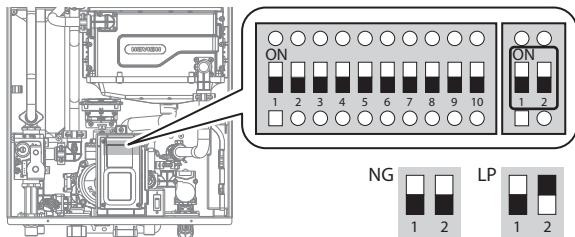

! DANGER

- When conversion is required, be sure to set the Front Panel DIP switches according to the supply gas type.
- Failure to properly set the DIP switches could cause carbon monoxide poisoning, resulting in severe personal injury or death.

10. Turn on the gas and water supply to the water heater.

11. Measure and adjust the gas/air ratio.

Option 1. Using Combustion Analyzer (recommended)

- Loosen the screw, rotate the plate and remove the gasket to access the emissions monitoring port as shown in Figure 7.
- Insert the analyzer into the port (Figure 7).

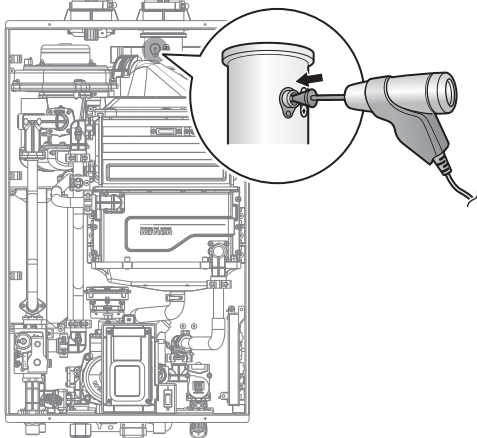


Figure 7

Water Heater	Fuel	High fire	Low fire
		%CO ₂	%CO ₂
NPE-150S	NG	8.9	9.5
	LP	10.2	10.8
NPE-180A NPE-180S	NG	8.9	9.5
	LP	10.2	10.8
NPE-210A NPE-210S	NG	8.9	9.5
	LP	10.2	10.8
NPE-240A NPE-240S	NG	8.9	9.5
	LP	10.2	10.8

Table 2. CO₂ and CO value
(CO₂ values must be within 0.5% of the values listed.)

- Fully open several hot water fixtures and set the water heater to operate at 1-stage MIN mode (refer to page 40). Measure the CO₂ value at low fire. If the CO₂ value is not within 0.5% of the value listed in Table 2, the gas valve set screw will need to be adjusted. If adjustment is necessary, locate the set screw as shown in Figure 8. Using a $\frac{5}{32}$ in or 4 mm Allen wrench, turn the set screw no more than $\frac{1}{4}$ turn clockwise to raise or counterclockwise to lower the CO₂ value.

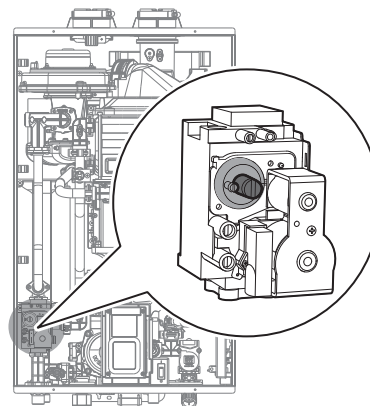


Figure 8. Set Screw Location

Note

The set screw is located behind the screw-on cover. This must be removed first.

- d. Fully open several hot water fixtures and set the water heater to operate at 2-stage MAX mode (refer to page 40). Measure the CO₂ value at high fire. If the CO₂ values do not match Table 2 at high fire, do not adjust the gas valve. Check for the proper Gas Orifice.

! DANGER

Improper gas valve settings can cause severe personal injury, death or substantial property damage.

Option 2. Using Digital Manometer

- a. Open the offset pressure port by loosening the screw two turns as shown in Figure 9.

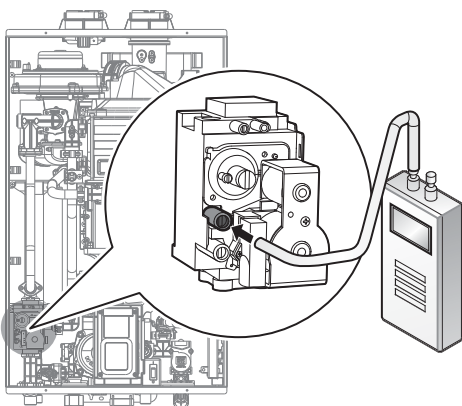


Figure 9

- b. Connect a manometer to the offset pressure port. For dual port manometers, use the positive pressure side.

Model	Kit Part No.	Gas Type	Offset
NPE-150S	NAC-N6	LP	-0.03 in ± 0.01 in
	NAC-L6	NG	-0.04 in ± 0.01 in
NPE-180A NPE-180S	NAC-01	LP	-0.03 in ± 0.01 in
	NAC-100	NG	-0.04 in ± 0.01 in
NPE-210A NPE-210S	NAC-02	LP	-0.02 in ± 0.01 in
	NAC-200	NG	-0.04 in ± 0.01 in
NPE-240A NPE-240S	NAC-03	LP	-0.02 in ± 0.01 in
	NAC-300	NG	-0.04 in ± 0.01 in

Table 3. Offset value for low fire

- c. Fully open a hot water fixture and set the water heater to operate at 1-stage MIN mode (refer to page 40). Measure the offset value at low fire and compare it to the values in Table 3. If the offset value is out of range, the gas valve set screw will need to be adjusted. If adjustment is necessary, locate the set screw as shown in Figure 10. Using a $\frac{5}{32}$ in or 4 mm Allen wrench, turn the set screw no more than $\frac{1}{4}$ turn clockwise to raise or counterclockwise to lower the offset value.

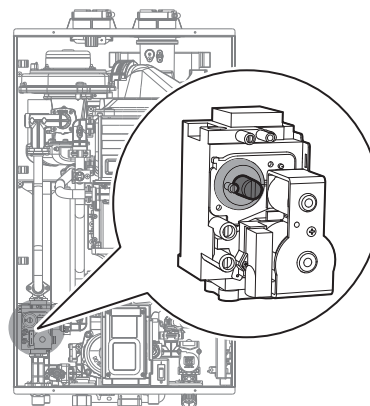


Figure 10

Note

The set screw is located behind the screw-on cover. This must be removed first.

- d. At high fire, do not check the offset value and never adjust the gas valve.

! DANGER

Improper gas valve settings can cause severe personal injury, death or substantial property damage.

12. Once the CO₂ or offset values have been confirmed, apply the included conversion stickers to show that the appliance has been converted to propane gas. Place this labels adjacent to the rating plate as shown in Figure 11.

This unit has been converted to Propane fuel
Cet appareil a été converti au Propane

Orifice Size / Injecteur:
Min. 4.5 mm to Max. 4.8 mm

Inlet Gas Pressure / Pression d'entrée du gaz:
Min. 8.0 to Max. 13.0 inches

Manifold Gas Pressure / Pression à la tubulure d'alimentation:
Min. -0.02 to Max. -0.66 inches WC

BTU Input / Débit calorifique:
Max. 180,000 - Min. 19,900 BTU/h

Conversion Kit No.: NAC-02

This water heater was converted on
____/____/____ to ____ gas

with Kit No. _____


by _____

(name and address of organization making this conversion, who accepts responsibility for the correctness of this conversion)

Figure 11. Proper Placement of Gas Conversion Labels

4.7 The Front Panel

The front panel allows you to adjust the water temperature and view the operating status or error codes. Remove the protective sheet from the front panel before using it.

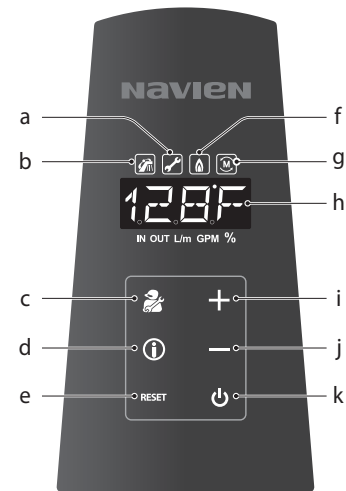

A code will appear on the display



Recirculation Mode



For installers only



Shows basic information



Resets the water heater (When an error occurs)



When the gas burner is on



Cascade operation



Increases the temperature




Decreases the temperature



Turns the water heater on or off

4.7.1 Turning the Water Heater On or Off

To turn the water heater on or off, press the Power button.

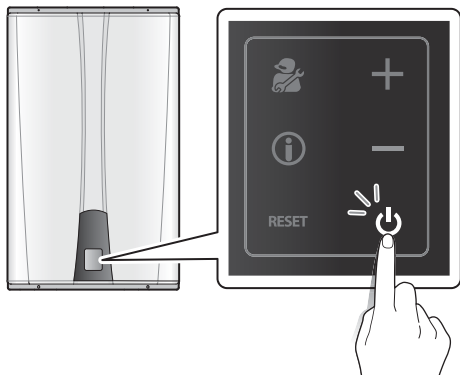

When the power is on, the temperature will appear on the front panel display.



4.7.2 Adjusting the Water Temperature



WARNING

Before adjusting the water temperature, read "HOT WATER TEMPERATURE SETTING" on page 40 carefully. Water temperatures above 120°F can cause instant scalding, severe burns, or death.

The water heater is set to 120°F (49°C) by default. To adjust the water temperature:


1. Make sure that all hot water faucets are closed, and ensure that the internal circulator and any external circulating pumps are off.



NOTE

If a hot water faucet is open, you can adjust the temperature only from 98-110°F (37-43°C).

2. Press the + (Up) or – (Down) buttons until the desired temperature appears on the display. You can adjust the temperature while the display is flashing. Once the display stops flashing, the temperature setting is stored.

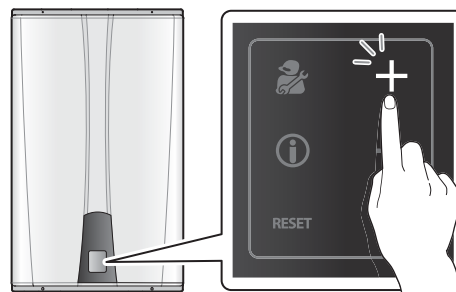

NOTE

The water heater will retain your settings during a power outage.

You can adjust the temperature by the below 10-degree increments, depending on the temperature range:

Temperature range	Adjusting the water temperature
98°F-120°F (Fahrenheit mode) 36°C-50°C (Celsius mode)	1°F or 0.5°C increments
120°F-140°F (Fahrenheit mode) 50°C-60°C (Celsius mode)	Press the + or - buttons for 2 seconds to adjust in 5°F or 2°C increments

The water heater will not provide hot water instantly at the hot water faucet unless a recirculation line has been installed from the furthest fixture back to the water heater and the unit is set to “external recirculation” mode.

4.7.3 Using Commercial Mode

To use water above 140°F (60°C) (up to 182°F (83°C)), you can use Commercial Mode.

- To enter Commercial Mode: Press the up (+) and down (-) button simultaneously for 10 seconds. “HIGH” appears on the display.
- To exit Commercial Mode: Press the up (+) and down (-) button simultaneously for 10 seconds. “LoW” appears on the display.




NOTE

- To adjust the temperature, press the up (+) button for 5 seconds to adjust in 10°F (5°C) increments.
- Commercial Warranty Applies when this mode is used. Refer to the Warranty for more details.

4.7.4 Viewing Basic Information

To view information about the water heater, press the Information button.

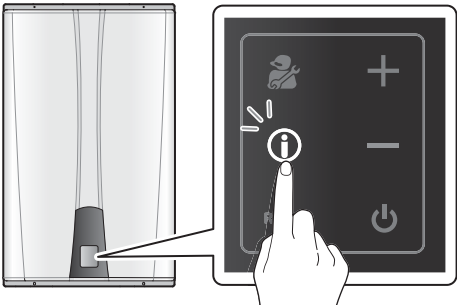


Press the + or – buttons to switch between the information types.

Display	Description
	Flow rate in gallons per minute (GPM).
	Hot water outlet temperature (OUT).
	Cold water inlet temperature (IN).

To exit information mode, press the Reset button.

4.7.5 Resetting the Water Heater

If an error message appears, you can try resetting the water heater to resolve the problem. To reset the water heater, press the Reset button.

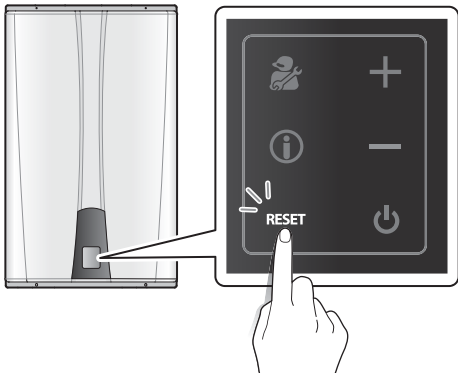

If resetting the water heater does not solve the problem, refer to the Troubleshooting section of this manual or contact Technical Support at 1-800-519-8794.

4.7.6 LCD display

DISPLAY	Function description	Remark
 Preheating icon	Displays when a recirculation mode is activated. When the remote controller is not connected: Preheating will operate based on the setting of the DIP switches on the front panel. When the remote controller is connected: Preheating will operate based on the timer settings of the remote controller (recirculation mode must be selected on the front panel) When the AHU is connected: The preheating function of NPE will be turned off, and the AHU heating icon will be displayed instead of the preheating icon.	Preheating setting
 Error icon	Displays an error icon when an error occurs. When operation is maintained but an error is only displayed, the basic operation(temperature setting, etc.) is normally possible. However, at this time, it is impossible to adjust the setting temperature if hot water is in use.	Error situation flashing Error history off
 Combustion icon	Displays during a combustion cycle. The combustion icon flashes at intervals of 1 second when the water heater is operating to prevent freezing.	Flame signal state display
 Master icon	Displayed on the Master unit in a cascade system. Master: ON, Slave: OFF	On at Master
Segment	Displays data according to each setting and display condition on 4 segments.	
IN OUT	When displaying the cold water inlet temperature: IN displayed When displaying the hot water outlet temperature: OUT displayed	Displayed in information mode
L/M	The unit icon displays the current flow rate (in liters/min)	With display units set to °C.
GPM	The unit icon displays the current flow rate (in gal/min)	With display units set to °F.
%	The unit icon is displayed when indicating the percentage of a parameter.	

Segment state display	Function	Remark
WAIT	Displayed while waiting for a response from the main controller when executing a command	
RST	Displayed during an alarm or error reset	
CLR	Displayed when deleting the Error History or Tech Info	
INIT	Displayed when initiating a Factory Reset	

4.7.7 Button

Button						
Description or name	Diagnostic	Reset	Power	Information	Plus	Minus

Short Key	Function	Remark
[Diagnostic] short key	Display of information for service	
[INFO] short key	Display/confirmation of information for consumers	
[RESET] short key	Error code release/reset	
[PLUS] short key	Item movement/UP	
[MINUS] short key	Item movement/DOWN	

Long Key combination	Function	Remark
[POWER] long key(1 sec)	Power ON/OFF	
[INFO] long key(2 sec)	Error history display	Must be in Normal mode or Error Display mode
[RESET] long key(5 sec)	Individual deletion of Error History /Tech Data	Works only at the relevant mode
[Diagnostic] long key(5 sec)	Advancement into Test Menu	Must be in Normal mode
[Diagnostic] long key(10 sec)	Version display	Power turned OFF
[PLUS] + [MINUS] long key (10 sec)	High temperature water setting/release(NPE-240A only)	Allows temperature settings above 140°F (60°C)
[Diagnostic]+[PLUS] long key(5 sec)	Cascade: assigns master unit and completes set-up	Possible at Normal mode
[Diagnostic]+[MINUS] long key(2 sec)	Cascade: assigns slave unit	
[Diagnostic]+[RESET] long key(5 sec)	Cancels cascade operation (from master unit) / removes individual slave unit from cascade system	Possible at Normal mode with Cascade operation activated
[Diagnostic]+[POWER] long key(5 sec)	Cascade system power ALL ON/OFF	Possible only at Master, and possible only with power turned OFF or at a Normal Operation condition
[Diagnostic]+[PLUS]+[RESET]+[POWER] long key(5 sec)	Factory reset	Possible only with power turned OFF

* While buttons are being pressed on the front panel, the keypad will remain lit to its maximum brightness. After pressing a button, the keypad will dim to medium brightness for 5 seconds, then dim to minimum brightness for 5-10 seconds and then completely turn OFF 10 seconds later.

* Button entries are recognized after pressing for a short period (50msec) and then releasing.

* If a button is pressed and held for a longer time as specified in the above chart, it will be recognized as a "long key" function.

4.7.8 Power ON/OFF

1. Turn the power ON/OFF by pressing the [POWER] button for about 1 sec.
2. If the unit is experiencing an error, the error code will continue to display on the front panel even if the unit is turned OFF.

Item	Description	Display method
Power ON	Normal operation mode with power turned ON	Power ON: When the setting temperature is 120°F (Fahrenheit specification) 
		Power ON: When the setting temperature is 60.0°C (Celsius specification) 
Power OFF	Power OFF condition with power turned OFF	Power OFF: DISPLAY ALL OFF except the state icon (The state icon is normally displayed depending on conditions)

* If power is initially applied, the panel is turned ON for 2 seconds. (To check whether the LCD is defective)

4.7.9 Normal operation

1. Turn the water heater ON by pressing the [Power] button for approximately 1 second.
2. The setting temperature will be displayed.
3. Under the usage of AHU & Outdoor sensor, when DHW is off and space heating is on, the current heating temperature based on the AHU outdoor temperature will be displayed, and when space heating is off, DHW temperature setting will be displayed.
4. When an alarm occurs, the "A.760" code and the setting temperature are toggled and displayed at intervals of 1 second.
5. While an alarm occurs, press the [Reset] button for over 2 seconds to display "RST" and then release the alarm.

6. When a level1 error occurs, the error icon flashes for 1 second and the error code and the setting temperature are toggled and displayed at intervals of 1 second (Level 1 Error = An error that can be reset without turning the power OFF then ON).
7. Press the [Reset] button once for a level1 error so that "RST" is displayed for 3 seconds and the error is released when the error release condition is satisfied.
8. The water heater will function normally during an alarm or level1 error.

Item	Description	Display method
Normal condition	Normal operation mode with power turned ON	When the setting temperature is 120°F (Fahrenheit specification) 
		When the setting temperature is 60.0°C (Celsius specification) 
Alarm occurrence	When a lime alarm period set with a dip switch is reached	 ↕ 1 sec flashing 
Level1 error occurrence	When a level1 error occurs	 ↕ 1 sec flashing 

4.7.10 Setting the Operation Mode


1. Using the Front Panel, press and hold the Diagnostics Button for over 5 seconds until "1.TST" is displayed.
2. Press the + (Up) button once to change the display to "2.OPR".
3. Press the Information Button once to access the Operation Mode menu.
4. Press the + (Up) button once to set the water heater to operate at 1-stage MIN ("MIN.1").
5. To set the water heater to operate at 2-stage MAX, press the + (Up) button 3 times or until "MAX.2" is displayed.
6. To exit the Operation Mode and return the water heater to normal operation, press the Reset button twice.



4.7.11 Error display and reset

1. Depending on the severity of the issue that is causing the error, the water heater will either stop its operation or will only be able to perform basic operations. A flashing red error icon can be seen on the front panel along with the associated error code.
2. When an error occurs while accessing other modes on the front panel, press [RESET] to access the <error display mode> while the error icon is flashing in order to view the error code.
3. While the panel is in the <error display mode>, the error icon and code will flash in rotation at 1 second intervals.

4. The error code is displayed in 3 digits. (see below)

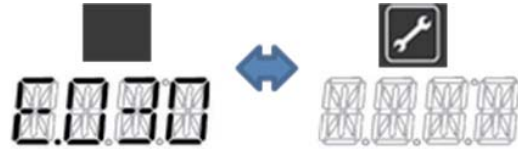

5. While in the <error display mode>, it is possible to access the User Info, Service Info, Error History and Component Test mode.
6. Press the [RESET] button once with the error code displayed to reset the water heater. The front panel will display "RST" for 3 seconds and then release the error if the cause of the error has been resolved.
7. If it is impossible to release the error, the error code will display after 3 seconds.

4.7.12 Hot water temperature setting

1. At the <Normal operation mode>, press the [+] or [-] button to access the <hot water temperature control mode>.
2. If the <hot water temperature control mode> is displayed, the temperature setting value flashes. → The temperature value is displayed while the temperature is being set.
3. Adjust the temperature with the [+] / [-] button. (Operated depending on the temperature range: See the following table below).
4. Pressing the [+] / [-] button for over 2 seconds acts as a continuous key and will rapidly adjust the temperature.
5. It is impossible to increase the temperature above ~110°F (43°C) while using the hot water (or only when at least 1 unit is using hot water in a cascade system).
6. For high temperature applications, press the [+] + [-] button for over 10 seconds to access temperature settings above 140°F (60°C). ("HIGH" or "LOW" displayed for 2 seconds after setting)
7. Press the [Info] or [Reset] button once to return to the <Normal operation mode>. (The temperature setting value is maintained according to its last setting.)
8. If there is no button input for 5 seconds, then it automatically returns to the <Normal operation mode>. (The temperature setting value is maintained according to its last setting.)



US/Canada specification

Temperature range	Increase/ decrease value	[+] key	[+] continuous key operation	[-] key	[-] continuous key operation
98~120°F (36~50°C)	1°F (0.5°C)	Short key	Increased every 100msec	Short Key	Decreased every 100msec
120~140°F (50~60°C)	5°F (2°C)	2sec Long Key	Not working	Short Key	Decreased every 100msec
140~182°F (60~83°C)	10°F (5°C) 180°F (80°C) <-> 182 (83°C)	5sec Long Key	Not working	Short Key	Decreased every 100msec

4.7.13 Viewing Basic Information

1. At the <Normal operation mode>, press the [Info] button once to access the Information Data.
2. Whenever the [+] / [-] button is pressed, the Information Data item can be selected and displayed.
3. The data items being currently outputted are displayed by an LED ICON. (Flow rate-GPM/LPM, leaving water temperature-OUT, entering water temperature-IN)
4. Press the [Reset] button once to return to the <Normal operation mode>.
5. If there is no button input for 5 minutes, it automatically returns to the <Normal operation mode>.

Item	Description	Display method
Flow rate	• Display of the current flow rate • Minimum display unit: 0.2 Gal/min or l/min	GPM flow rate display ex)10.2GPM 
Water temperature	• Gal/min or l/min • Display of the current outgoing water temperature	OUT temperature display ex) 120°F 
	• Display of the current incoming water temperature	IN temperature display ex)120°F 


4.7.14 Error occurrence history display

1. At the <Normal operation mode> or <Error display mode>, press the [Info] button for over 2 seconds to access the error history mode. The most recent error will be displayed first.
2. When the [+] / [-] button is pressed, the error history can be searched. A total of 10 errors are stored in memory and are labeled from 0 to 9 with 0 being the most recent error.
3. Whenever the [Info] button is pressed, the previous error occurrence time difference(unit time, maximum 9999 hr) and the sub error code are toggled and displayed.
4. Pressing the [Reset] button for 5 seconds while in the <ERROR HISTORY DISPLAY MODE> displays "CLR" and deletes all the ERROR HISTORY DATA.
5. Press the [Reset] button once to return to the <Normal operation mode>.
6. If there is no button input for 5 minutes, then it automatically returns to the <Normal operation mode>.


While in <ERROR HISTORY DISPLAY MODE> the first digit indicates the history of the error with 0 being the most recent. The remaining 3 digits indicate the error code. If there is no error history, a "0" will be displayed.

Passed time display: The time between the currently displayed error and the just previously generated error is displayed in 1-hr unit. (0 is displayed if the error code is empty)

Ex) When the most recent error code is 615, the sub error code is 5, and 24 hours have passed since the error was generated.

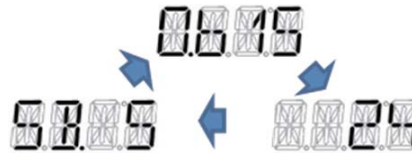

- When the Sub Error Code is 0(i.e., there is no sub error code), the display is as follows:












4.7.15 Service information display



1. At the <Normal operation mode>, press the [Diagnostic] button once to access the service information display.
2. Press [+] or [-] to navigate through the user parameters.
3. Item of current SERVICE Information Data is indicated as an alphabetical numbering on the first segment and relevant DATA value is indicated at the 2nd, 3rd and 4th segment. (Alphabetical numbering A~Z are indicated and next ones and indicated as 1~9, then those after that are indicated as symbols.)
4. Press the [Reset] button once to return to the <Normal operation mode>.
5. If there is no button input for 1 hour, then it automatically returns to the <Normal operation mode>.
6. The proper units are indicated with the LCD ICON for the applicable input items (Example: Water pressure - psi).

Item	Description	Display method
(A)Flow rate	Display of the current flow rate Minimum display unit : 0.2 Gal/min or l/min	GPM flow rate display ex) 10.2GPM

Item	Description	Display method
(B) Hot Water Outlet temperature	Display of the current outgoing water temperature	OUT temperature display ex) 120°F
(C) Water Inlet temperature	Display of the current incoming water temperature	IN temperature display ex) 120°F
(D) Heat Capacity	Display of current heat capacity %	% Heat capacity display in percentage ex) 92%
(E) Water adjustment valve condition	Display of the water adjustment valve condition(%) Fully closed= 100% Fully opened= 0%	% display of the valve close ratio in percentage ex) When closed 24%
(F) Mixing valve condition	Mixing valve condition display(%) Fully closed= 0% Fully opened= 56%	"A" models
		"S" models: % display of the valve close ratio in percentage ex) When closed 46%
(G) Heat exchanger flow rate	Calculated value by the mixing valve open condition from the total flow rate For "A" models, this flow will be the same as (A)	GPM flow rate display ex) Relevant flow rate: 5.4gpm
(H) Current RPM	Fan motor RPM display	Display of RPM by omitting the last digit ex) 3600rpm
(I) Current APS	APS voltage value display	Display of the APS value as voltage up to the first decimal place ex) 3.2V

Item	Description	Display method
(J)Flame condition	Flame detection current AD value display Flame On: 8bit AD value less than 70 Flame Off: 8bit AD value more than 175	Display of the flame detection AD value 0~255 ex) 200 
(K)Exhaust gas temperature	Current exhaust gas temperature display	Exhaust gas temperature display ex) 120°F 
(L)Model and capacity	Currently set model and capacity display The 2nd & 3rd digits represent the model and the 4th digit represents the type of unit.	ex) Capacity 180, Condensing 
(M)Recirculation setting information * 2 nd letter: Pump I: Internal Pump E: External Pump B: Both (Internal & External) Pump * 3 rd , 4 th letters: Circulation, Intelligent Preheat EC: External Circulation IC: Internal Circulation IT: Intelligent Preheat	Displays the recirculation mode that has been selected on the front panel.	Preheating not working 
		Internal pump, internal circulation 
		Internal pump, external circulation 
		Internal pump, intelligent preheating 
		External pump, external circulation 
		Internal pump and external pump, internal circulation 
		Internal pump and external pump, external circulation 
		Internal pump and external pump, intelligent preheating 

Item	Description	Display method
(N)Number of currently working cascade units	Number of actually working units in the current cascade system	CASCADE OFF 
		CASCADE ON: Display of the number of working units Ex) 8 units working 
(O)Cascade information	Cascade ON/OFF condition display Individual Master/Slave number and operation condition display Segment display: ID+o(ON)/X(OFF)	CASCADE OFF 
		CASCADE ON: MASTER UNIT, standby ON 
		CASCADE ON: MASTER UNIT, standby OFF 
		CASCADE ON: SLAVE UNIT, standby ON ex) ID 12 
		CASCADE ON: SLAVE UNIT, standby OFF ex) ID 12 
(P) Information on gas type	Displays the current gas <panel version : after v1.3>	NG 
		LPG 

Item	Description	Display method
(Q) Altitude setting information	Displays the current altitude level setting <panel version : after v1.5>	0~2,000ft 
		2,000~5,400ft 
		5,400~7,700ft 
		7,700~10,100ft 
(R) Heat exchanger outlet temperature	Display of the current outlet temperature (Applies to Front panel version V1.6 (July 23, 2013) or later versions only)	OUT temperature display ex) 120°F 
(S) Heat exchanger inlet temperature	Display of the current inlet temperature (Applies to Front panel version V1.6 (July 23, 2013) or later versions only)	IN temperature display ex) 120°F 
(T) AHU outdoor temperature	Displays the current AHU outdoor temperature.	AHU Off or AHU Outdoor Off 
		AHU On & AHU Outdoor On ex) 120°F 
(U) Heating temperature based on the AHU outdoor temperature	Displays the current heating temperature based on the AHU outdoor temperature.	AHU Off or AHU Outdoor Off 
		AHU On & AHU Outdoor On ex) 120°F 

4.7.16 Test information menu



1. At the <Normal operation mode>, press the [Diagnostic] button for over 5 seconds to access the <TEST INFORMATION MENU MODE>.
2. Select the desired test mode in the INFORMATION MENU using the [+] / [-] button.
3. Press the [Info] button once to get into the currently displayed item mode.
4. Press the [Reset] button once to return to the <Normal operation mode>.
5. If there is no button input for 5 minutes, then it automatically returns to the <Normal operation mode>.


Item	Description	Display method
Component check mode	Used to test the normal operation of each device	
Operation condition setting mode	Used to test the operation condition of the water heater	



4.7.17 Component Check

1. While in <TEST INFORMATION MENU MODE>, press the [+] / [-] button and then press the [Info] button once 1.TST is displayed on the front panel.
2. After accessing <Component check mode>, make sure that the water heater is not operating (stop flow).
3. Increase/decrease and change the component check menu item with the [+] / [-] button.
4. For an item not supported by the current model, do not display the item but skip it. (Depending on the DIP SW setting of the main controller)
5. Press the [Info] button once to display "WAIT", execute the component check operation for the relevant item, and return to the <trouble check mode> after operation ends. (Excluding the Dual Venturi Test)
6. During the component check operation, a test is automatically performed without pressing additional buttons (except for Dual Venturi test).
7. The Dual Venturi Test function is to perform an On/Off manual operation test with the [+] , [-] buttons, and if the [Reset] button is pressed or there is no key input for 5 minutes, then it returns to the "D.VEN" display item.

8. Press the [Reset] button once to return to the <TEST INFORMATION MENU MODE>. (To the display of the previously entered item 1.TST)
9. If there is no button input for 5 minutes, it automatically returns to the <TEST INFORMATION MENU MODE>.

Item	Description	Display method
Fan Motor	Fan motor component check menu display	
Water Adjustment Valve	Water adjustment valve component check menu display	
Dual Venturi	Dual Venturi component check menu display	
Pump ("A" models only)	Pump and flow sensor component check menu display	
Mixing valve ("S" models only)	Mixing valve component check menu display	

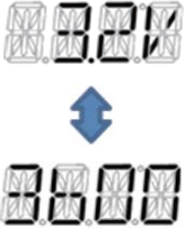Component	Test Performed	Display
Fan Motor	Gradually increase/decrease the speed of the fan motor starting from 0 RPM to full speed and back down to 0 RPM.	The current APS value and the current rpm value is repeatedly displayed at intervals of 2 seconds 
Water Adjustment Valve	Rotates the valve from its current position to fully open (56%), then fully closed (0%) and then back to the starting position while checking feedback.	Display of the valve close ratio %  Display of "FEED" when detecting the feedback 

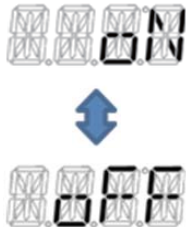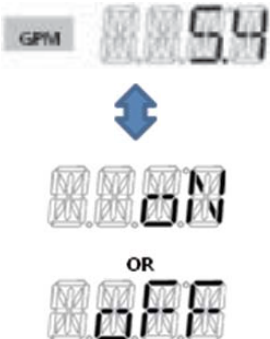Component	Test Performed	Display
Dual Venturi	After starting the test, the Dual Venturi is turned ON, and whenever the [+], [-] button is pressed, the condition is toggled as On → Off or Off → On.	Whenever the [+], [-] button is pressed, the condition is toggled as On → Off or Off → On 
Pump ("A" models only)	Cycles the pump 10 sec On and 5 sec OFF five times. (Repeats five times for a total of 75 seconds)	The flow rate and ON/OFF are repeatedly displayed at intervals of 2 seconds GPM icon lights when the flow rate is displayed 
Mixing valve ("S" models only)	Rotates the valve from its current position to fully open (56%), then fully closed (0%) and then back to the starting position while checking feedback.	The display is the same as the water adjustment valve.

* When selecting each test mode, the water heater performs an automatic test and then returns to the normal operation condition. (Manual operation required for a Dual Venturi Test)

4.7.18 Operation Condition Setting

1. While in <TEST INFORMATION MENU MODE>, press the [+]/[-] button and then press the [Info] button once when 2.OPR is displayed on the front panel.
2. Whenever the [+]/[-] button is pressed, it increases/decreases the operation condition and flashes at intervals of 500msec. If the condition is not changed for 3 seconds, it works at the displayed operation condition. (NORMAL operation condition > 1-stage MIN > 1-stage MAX > 2-stage MIN > 2-stage MAX > NORMAL operation condition)
3. If the [Reset] button is pressed once, then it returns to the <TEST INFORMATION MENU MODE>. (Displayed as the previously entered item 2.OPR)
4. If there is no button input for 3 hours, then it automatically returns to the <Normal operation mode>.

Mode	Description	Display method
Normal operation condition	Operated in a normal operation mode	
1-stage MIN operation condition	Operated in a 1-stage MIN operation mode	
1-stage MAX operation condition	Operated in a 1-stage MAX operation mode	
2-stage MIN operation condition	Operated in a 2-stage MIN operation mode	
2-stage MAX operation condition	Operated in a 2-stage MAX operation mode	

4.7.19 Mixing control mode ("S" models only)

NPE-S models have a control mode to limit the actuation of the mixing valve, which prevents malfunction of the mixing valve resulting from frequent operation.

To limit the mixing valve operation, follow these steps:

1. On the Front panel, press the Power button to turn off the heater.
2. Enter the R&D information menu by pressing the Up (+) button 3 times, the Down (-) button 3 times, and then the Up (+) button 4 more times.

- In the R&D information menu, use the Up (+) or Down (-) buttons to move to 2.PAR (Parameter information mode), and then press the Info button.

No.	Mode	Display method
1	Technical information mode	
2	Parameter information mode	

- In the Parameter information mode, use the Up (+) or Down (-) buttons to select P.02 (Mixing control mode) and press the Info button to enter.

No.	Mode	Display method
1	Cascade protocol mode	
2	Mixing control mode	
3	Recirculation Type	

- In the Mixing control mode, use the Up (+) or Down (-) buttons to select an option and press the Info button to set the mode.

Mode	Description	Display method
Auto mode (Default)	- Switches to the Overshoot mode if DHW use exceeds 23,000 times in 3 months of operation. - Once any other mode is selected, Auto mode cannot be selected any more (factory reset will revert to the default setting).	
Normal mode	No limitations on mixing valve operation	

Mode	Description	Display method
Overshoot mode	- Mixing valve is operated only when an overshooting occurs. - Operation begins when the DHW temperature exceeds the target temperature by more than 14°F (8°C). However, when the DHW temperature exceeds 131°F (55°C), the mixing valve operates to limit the temperature to 131°F (55°C).	
Off	Mixing valve control is not in use (fully closed at all times)	

4.7.20 Initial setting of a cascade system

- At the <Normal operation mode>, press the [Diagnostic] + [PLUS] button for over 5 seconds to set the current water heater as the MASTER unit and to enter <Cascade setup mode>.
- Once in <Cascade setup mode>, it will be necessary to assign an ID number to each slave water heater in the system. Be sure that each slave unit has been connected using a Ready-Link cable.
- On each slave water heater, press the [Diagnostic] + [MINUS] buttons for over 2 seconds to automatically receive an ID number from the MASTER water heater. The ID number will display on the front panel of each water heater.
- The MASTER water heater will assign ID numbers sequentially in the order that the slave water heaters are configured (1-15).
- When all water heaters have been assigned an ID number, press the [Diagnostic] + [PLUS] buttons on the MASTER unit for over 5 seconds to complete the setup. The water heaters will return to <Normal operation mode> and the cascade system will be activated.
- If the cascade setting is not completed within 1 hour, the water heaters will revert to <Normal operation mode> and the cascade system will not be active.

Mode	Description	Display method
MASTER setting mode	Set as MASTER unit and assign ID numbers to slave units	MASTER icon flashing 
SLAVE ID initialization condition	When given an initialization command from the MASTER unit	
SLAVE ID assignment condition	When given an ID from the MASTER unit	ex) ID 12 

4.7.21 Cancellation of a cascade system

1. If the [Diagnostic] + [reset] buttons are pressed for over 5 seconds while in <Normal operation mode> at the MASTER unit with CASCADE turned ON, then all units in the CASCADE SYSTEM are released and work individually.
2. In order to reset the CASCADE SYSTEM after releasing it, repeat the CASCADE SYSTEM initialization procedure as described previously.
3. If the [Diagnostic] + [reset] buttons are pressed for over 5 seconds while in <Normal operation mode> at the SLAVE unit where the CASCADE communication error(E.736) occurred with CASCADE turned ON, then the SLAVE unit is released from the CASCADE SYSTEM and works individually.

4.7.22 Cascade system – Master unit replacement

Configuration with NPE units only

In order to replace the Master water heater and the controller or change a slave unit into the MASTER unit, cancel the CASCADE SYSTEM and then repeat the CASCADE SYSTEM initialization procedure as described previously.

4.7.23 Cascade system – Slave unit addition

Configuration with NPE units only

1. In order to add an additional slave unit, connect a Ready-Link communication cable to the new unit and wait for the MASTER unit to automatically recognize the new unit. The slave unit will automatically enter <SLAVE addition mode> and display SL-- on the front panel.
2. At the new slave unit, press the [Diagnostic] + [MINUS] button once to receive an ID number from the MASTER unit. The ID number will display for 5 seconds and then return to <Normal operation mode> linked into the CASCADE system.

Mode	Description	Display method
SLAVE addition mode	When connecting a new slave unit with a Ready-Link cable to the CASCADE system	
SLAVE ID assignment condition	Given an ID from MASTER, and then the ID is displayed for 5 seconds	ex) ID 12 



NOTE

- NPE water heaters and NR, NP, or CH units use different communication protocols. Therefore, an additional setup is required when replacing an NR, NP, or CH unit in a cascade system with an NPE water heater.
- When replacing an NR, NP, or CH unit in a cascade system with an NPE water heater, the NPE unit can only be configured as a slave unit, and one of the the NP, NR, or CH units in the system must be configured as the master unit.

Configuration with a combination of NR, NP and CH units

Follow these steps to replace an NR, NP, or CH unit in a cascade system with an NPE water heater:

1. In the Parameter information mode, use the Up (+) or Down (-) buttons to select P.01 (Cascade protocol mode), and then press the Info button.

No.	Mode	Display method
1	Cascade protocol mode	
2	Mixing control mode	

2. In the Cascade protocol mode, use the Up (+) or Down (-) buttons to select an option and press the Info button to set the mode.

Mode	Description	Display method
NPE Models only (Default)	The cascade system consists of only NPE water heater units.	
Cascade system with NR/ NP/CH units	The cascade system consists of a combination of NR/NP/CH units and NPE water heater units.	

3. The master NPE unit that is connected to the NR, NP and CH units will come online as soon as the unit is configured as the master unit (for NR, NP or CH units, a model-specific configuration may be used to set them as the master units).
4. The unit ID will be initialized on the NPE unit, if "2. NR" is selected in the Cascade protocol mode.
5. The master unit puts the NPE unit whose ID is initialized into the slave setup mode and a new ID is assigned to the NPE unit when you press the Diagnostic button and the Down (-) buttons simultaneously for two seconds.
6. The master water heater periodically scans for slave water heaters and assigns IDs (1–15) to the corresponding units in order.
7. For NR, NP or CH units, a model-specific configuration may be used to complete the master unit configuration.
8. For details about slave ID assignment, see page 50.



NOTE

Ensure that you have properly configured the cascade protocol settings before making any changes to the current cascade system.

4.7.24 Cascade system – Panel [POWER] button function

1. Press the [POWER] button once at the front panel to turn ON/OFF each unit individually.
2. Press the [Diagnostic] + [POWER] button on the MASTER unit front panel for over 5 seconds to turn ON/OFF the whole CASCADE system.

4.7.25 Recirculation type Setting

1. In the Parameter information mode, use the Up (+) or Down (-) buttons to select P.03 (Recirculation type), and then press the Info button.

No.	Mode	Display method
1	Cascade protocol mode	
2	Mixing control mode	
3	Recirculation type (Main Controller version : after V1.5)	


2. In the Recirculation Type, use the Up (+) or Down (-) buttons to select an option and press the Info button (or no button input for 10 seconds) to set the mode.

No.	Mode	Display method
1	Normal	
2	Special mode for preheating	

3. If the [RESET] button pressed once, then it returns to the <PARAMETER INFORMATION MENU MODE>.


* If there is no button input for 5 minutes, then automatically returns to the <PARAMETER INFORMATION MENU MODE>.

4.8 Wiring Diagram

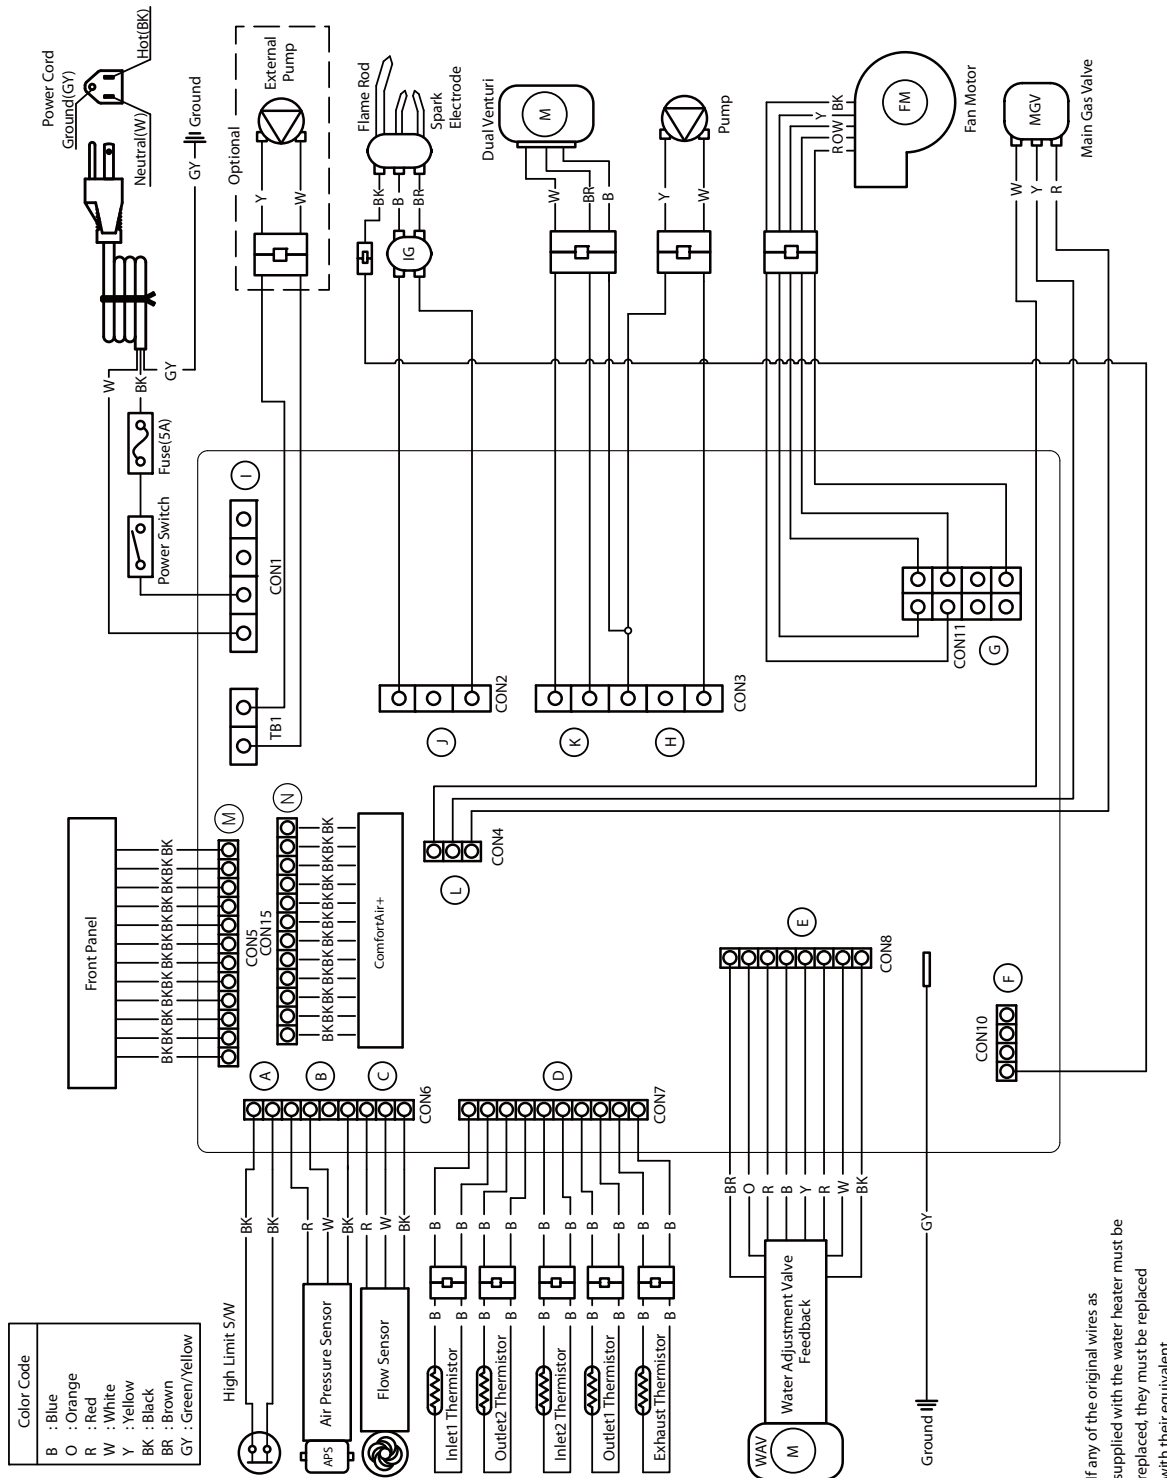


[NPE-180A/210A/240A]

If any of the original wires as supplied with the water heater must be replaced, they must be replaced with their equivalent.

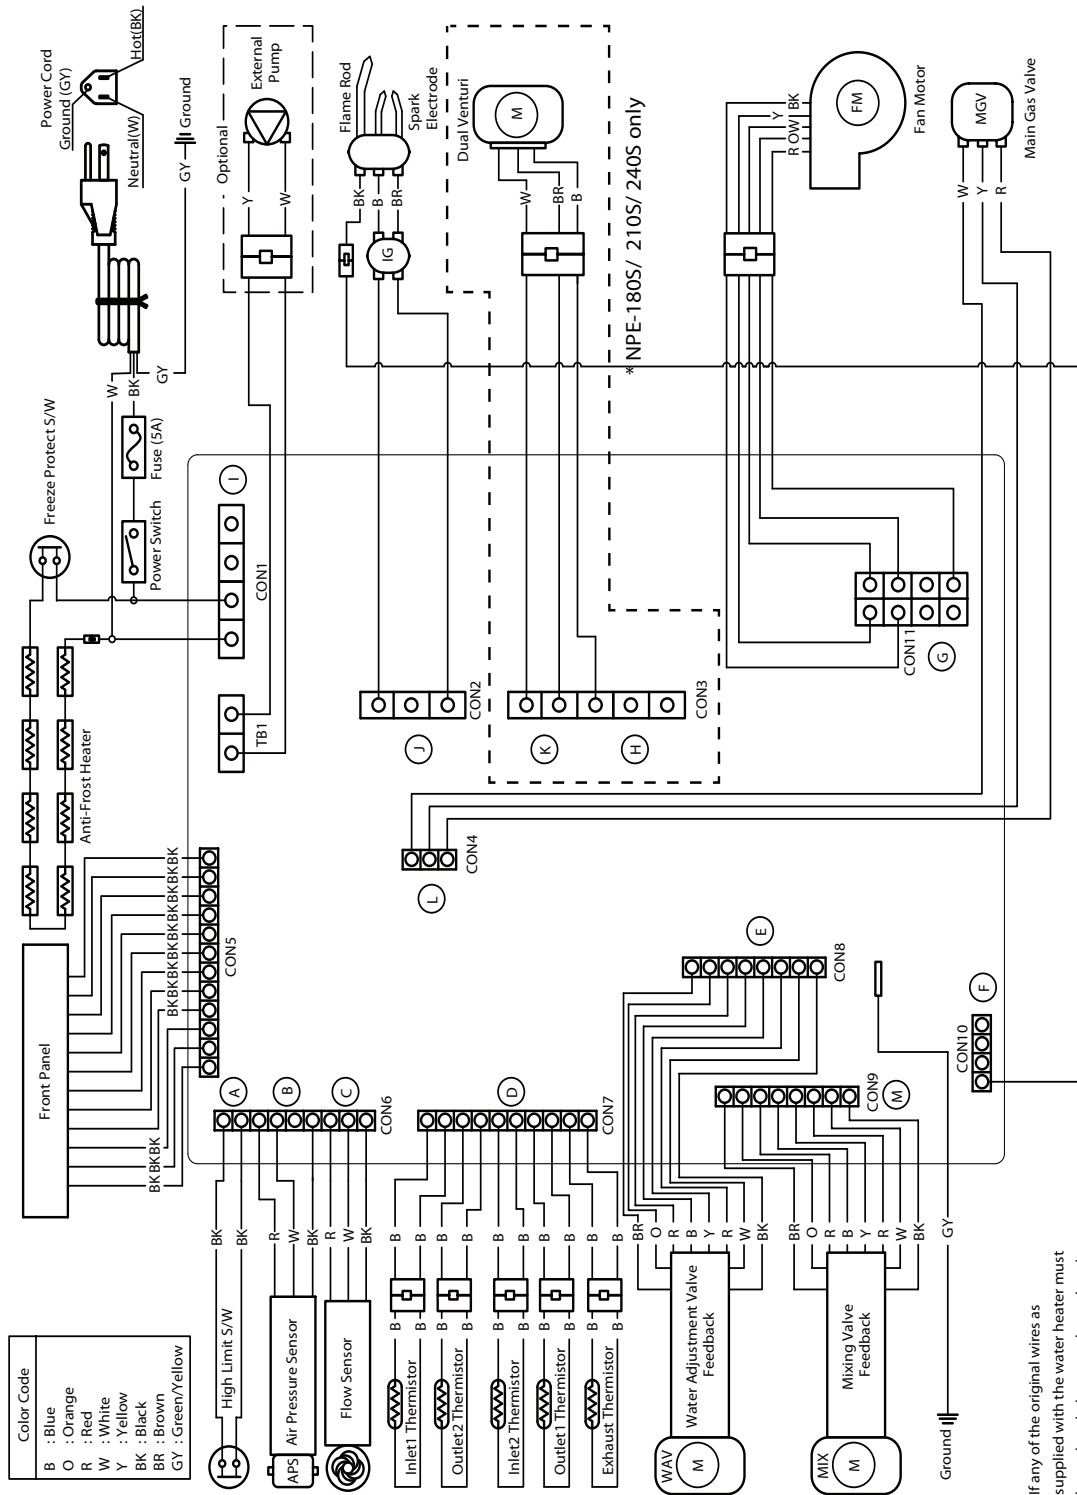


[NPE-150S/180S/ 210S/ 240S]

4.9 Ladder Diagram

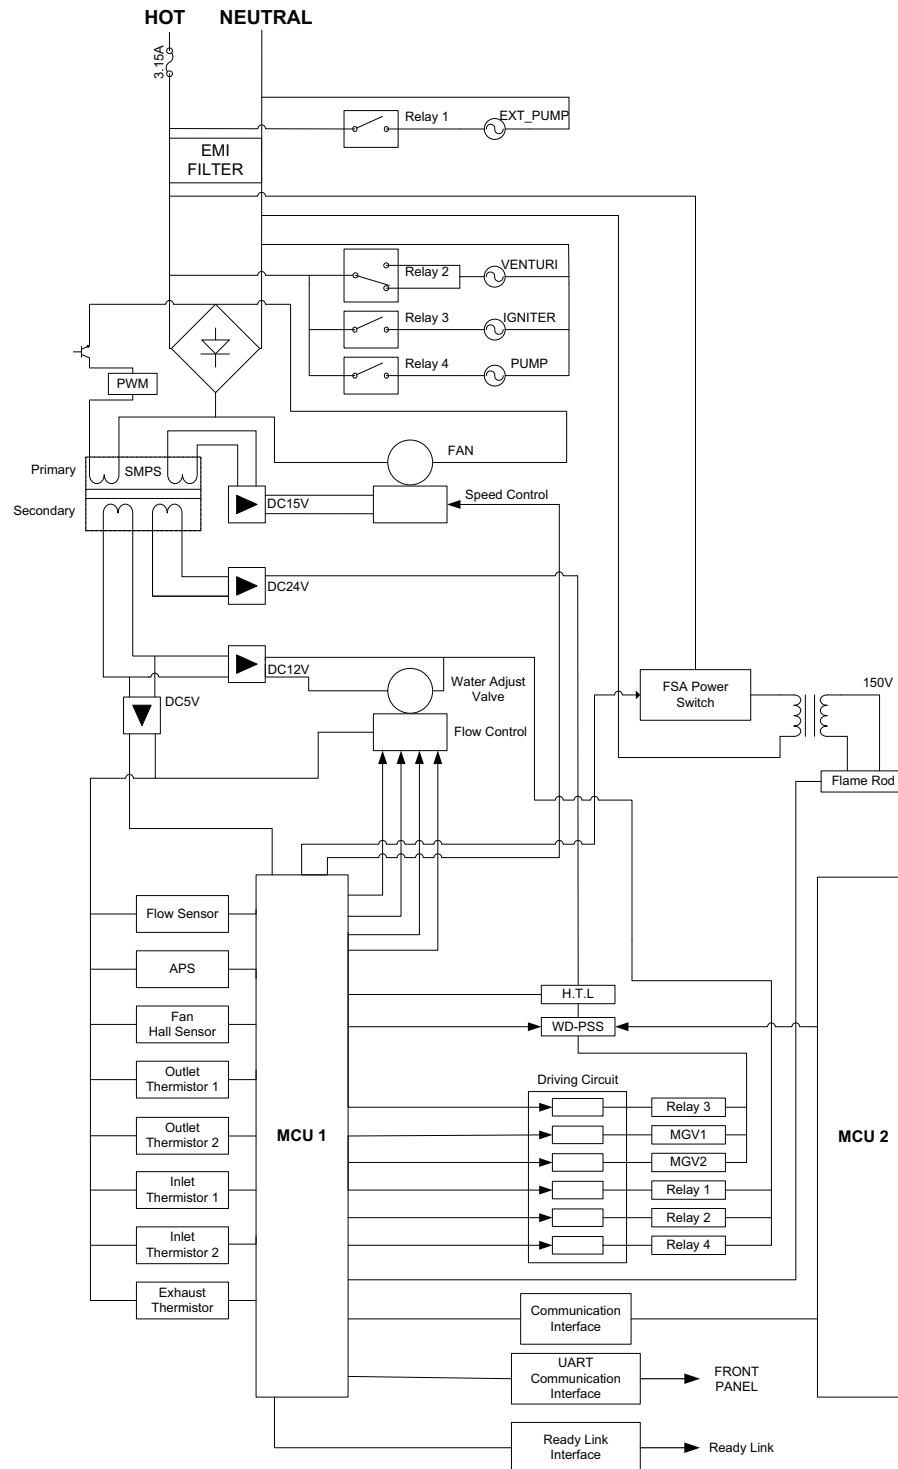


[NPE-180A/ 210A/ 240A]

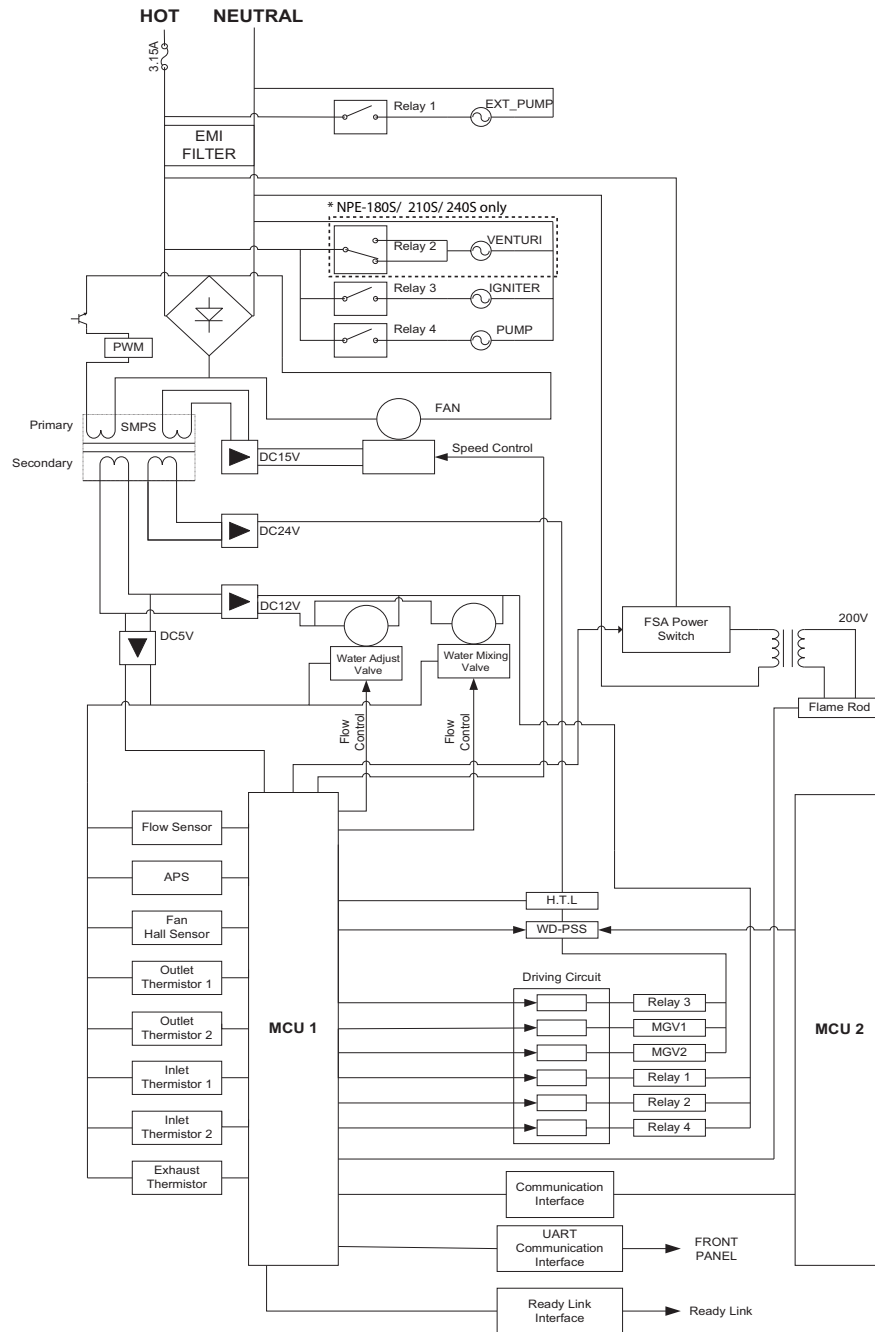

[NPE-150S/ 180S/ 210S/ 240S]

4.10 Electrical Diagnostic Points

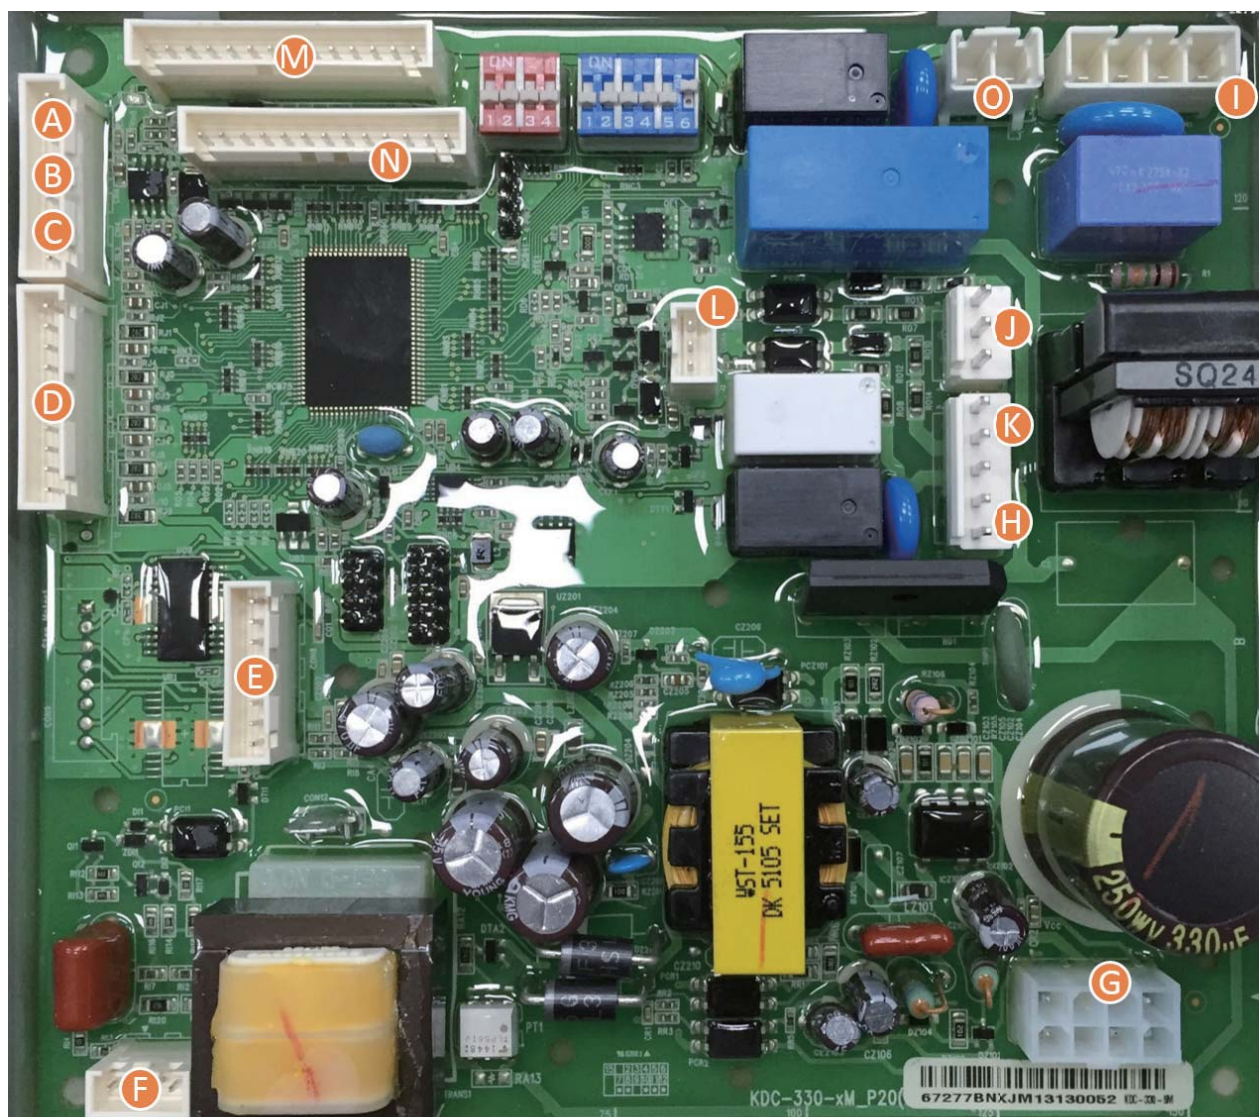

Point	Function	Wire Color	Normal Value	Check
A	High Temperature Limit Switch	BLACK-BLACK	DC 0 V	Normally Shorted. Confirm RMS voltage.
B	APS	RED-BLACK	DC 5 V	Confirm steady voltage.
		WHITE-BLACK	DC 0.3~4.5 V	Voltage changes according to the APS operation.
C	Flow Sensor	RED-BLACK	DC 12 V	Confirm steady voltage.
		WHITE-BLACK	PULSE	Check Pulse.
D	Cold Water-1	BLUE-BLUE	DC 0~5 V	Voltage changes according to temperature.
	Hot Water-2	BLUE-BLUE	DC 0~5 V	Voltage changes according to temperature.
	Cold Water-1	BLUE-BLUE	DC 0~5 V	Voltage changes according to temperature.
	Hot Water-2	BLUE-BLUE	DC 0~5 V	Voltage changes according to temperature.
	Exhaust Sensor	BLUE-BLUE	DC 0~5 V	Voltage changes according to temperature.
E	Water Adjust / Mixing Valve	RED-BLACK	DC 12 V	Confirm steady voltage.
		WHITE-BLACK	DC 0-5V	Voltage changes according to the Mixing Valve position.
		BLUE-BROWN		
		ORANGE-YELLOW	PULSE	Check Pulse.
F	Flame Rod	BLACK	0~10 uA	Measure the current when the burner is operating.
G	Fan Motor	BLACK-RED	DC 127V~184 V	Confirm steady voltage.
		BLACK-YELLOW	DC 15 V	Confirm steady voltage.
		BLACK-ORANGE	DC 0~7.5 V	Voltage changes relative to fan operation.
		BLACK-WHITE	0 rpm~6500 rpm	Check PULSE.
H	Pump	YELLOW-WHITE	* ON : AC 96 ~138 V	Confirm voltage as operating.
			* OFF : 0V	
I	Power Input	WHITE-BLACK	AC 97~138 V	* Confirm appropriate power source.
				* Confirm the FUSE.
				* Confirm the circuit breaker.
	Ground Wire	GREEN-YELLOW	Ground Wire	Check for properly grounded wire.
J	Dual Venturi	BROWN-BLUE	* ON : AC 95~120V	Confirm voltage relative to operation.
			* OFF : 0V	
K	Igniter	BLUE-BLUE	* ON : AC 97~138 V	Confirm voltage when the unit is igniting.
			* OFF : 0V	
L	Gas Valve	RED-YELLOW	DC 22~24 V	Confirm voltage as the Main Gas Valve 1 is operating.
		WHITE-RED	DC 22~24 V	Confirm voltage as the Main Gas Valve 2 is operating.
M	Front Panel	BLACK		
N	Comfort Air+	BLACK		
O	External Pump	BLACK	* ON : AC 96 ~138 V	Confirm voltage as operating.
			* OFF : 0V	

4.11 Key Components Description

4.11.1 PCB


Part	Check Point
Function	To control each component and also to check the overall performance of the unit.
Failure Event	Malfunctioning PCB.
Effects	A component may not operate within the unit and could produce an error code. In most cases of PCB failure, the whole unit will not operate until the problem is resolved.
Error Code	E515, E615
Diagnostic	Visual inspection: Connection and/or breakage of wires and/or burn marks on the PCB.
Color/Number of wires	25 (see page 40) Page 52, 57



4.11.2 High Limit Switch

Check Point	Check Point
Function	1. Overheat prevention switch. 2. If the unit detects extremely high temperatures, it will automatically trip and shut down the unit. 3. Excessively high water temperatures (more than 197.6 °F or 92 °C) in heat exchanger will activate the high limit switch.
Failure Event	Unable to detect excessively high water temperature if switch fails.
Effects	Unable to shut down the water heater if the water temperature from the heat exchanger exceeds 197.6°F (92°C).
Error Code	E016, E046
Diagnostic	1. Visual inspection: Connection and/or breakage of wires. 2. Resistance check: Check range of resistance shown below.
Color/Number of wires	Resistance range : under 1.0 Ω

Testing/Inspection Information

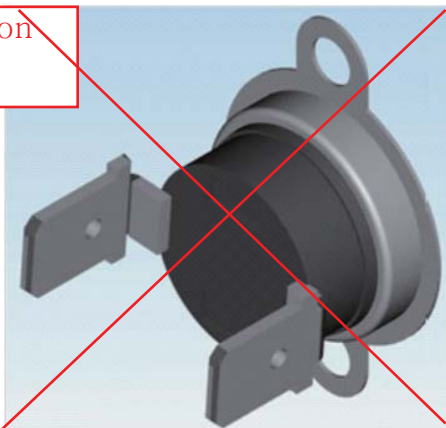

삭제

박스안만 확대

4.11.3 Thermistor

Part	Check Point
Function	Measure inlet, outlet, and internal heat exchanger temperatures in the water heater.
Failure Event	Unable to properly measure water temperature within the water heater.
Effects	1. If any of the thermistors fail, an error code appears before starting operation. 2. If resistance values are off, the water heater will produce temperature fluctuations in hot water.
Error Code	E047, E407, E421, E432, E441
Diagnostic	1. Visual inspection: Connection and/or breakage of wires. 2. Check the resistance of the sensor (Stop operating and lower the temperature before checking).
Color/Number of wires	Resistance range : Please refer to the table below

Testing/ Inspection Information



Temp(°F)	Thermistor (kΩ)	Exhaust Limit Temperature Sensor (kΩ)
32~40	17.9~25.4	113.6~180.7
40~50	14.5~20.3	89.2~139.5
50~60	11.4~16.4	67.5~108.5
60~70	9.4~12.8	51.5~81.1
70~80	7.5~10.4	41.5~61.3
80~90	6~8.2	32.2~48.9
90~100	5.1~6.6	26.3~37.6
100~110	4.1~5.7	20.8~30.4

4.11.4 Fan Motor


Part	Check Point
Function	To provide combustion air into the burner and to purge exhaust flue gas. To maintain the gas input with a long vent run, the fan operates with APS for ideal combustion.
Failure Event	1. Fan speed failure: the fan RPM is around 0 RPM. 2. The fan assembly screw is loose and/or the fan is disassembled. 3. Disconnected or defective fan connection terminal assembly.
Effects	1. Unstable combustion condition. 2. Unit vibrating and noise. 3. The water heater is not operating properly.
Error Code	E109, E110
Diagnostic	1. Visual inspection: check the fan connection wire and/or the fan mounting location. 2. Voltage check: Check range of voltage shown below.
Color/Number of wires	• Black-Red: DC 127V~184 V • Black-Yellow: DC 15 V • Black-Orange: DC 0~7.5 V • Black-White: 0 ~ 7,000 RPM
	

삭제

4.11.5 Flame Rod Assembly

Part	Check Point
Function	To ignite gas by repeatedly discharging a high voltage spark to the main burner until gas ignites.
Failure Event	1. Unable to ignite during the ignition process. 2. Produces multiple unsuccessful attempts to ignite.
Effects	1. The unit cannot ignite during the ignition process and "E003" or "E004" error codes will display. 2. Durability of the igniter wears down
Error Code	E003, E004, E012
Diagnostic	Visual inspection: Connection and/or breakage of wires.
Color/Number of wires	BLACK: 0~10 uA

Testing/ Inspection Information

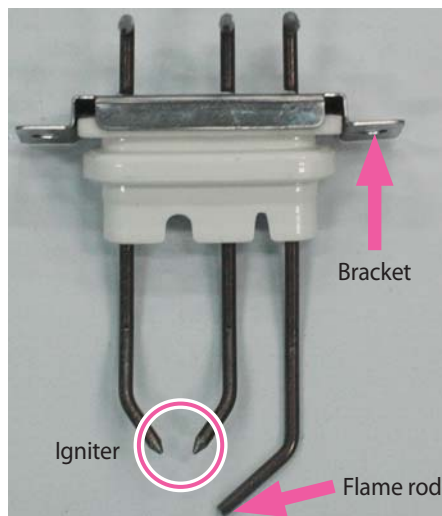


Gap distance : 3.5~4.5mm (1/8")

4.11.6 Ignition Transformer

Part	Check Point
Function	To ignite gas by repeatedly discharging a high voltage spark to the main burner until gas ignites.
Failure Event	1. Unable to ignite during the ignition process. 2. Produces multiple unsuccessful attempts to ignite.
Effects	1. The unit cannot ignite during the ignition process and "E003" or "E004" error codes will display. 2. Durability of the igniter wears down.
Error Code	E003, E004
Diagnostic	1. Visual inspection: Connection and/or breakage of wires. 2. Voltage check: Check range of voltage shown below.
Color/Number of wires	Blue - On : AC 97 ~ 138 V - Off : 0V

Testing/Inspection Information

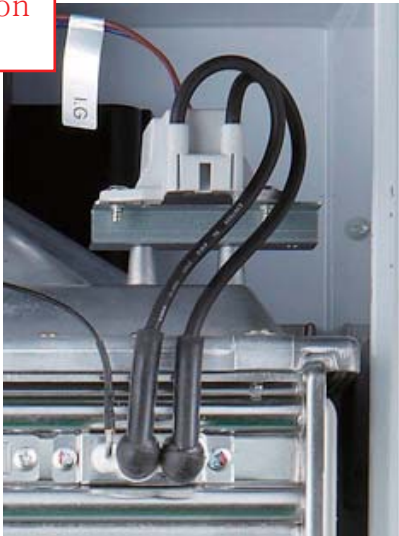


Input Voltage	Output Voltage	Output Current
120 V, 60 Hz	20 KV±	10mA±2mA



4.11.7 APS


Part	Check Point
Function	Detecting the air pressure entering the burner system.
Failure Event	1. Combustion noise occurs. 2. Imperfect and/or abnormal flame occurs. 3. Occurs when APS does not detect proper voltage.
Effects	1. The water heater is not operating. 2. Produces excessive carbon monoxide emissions.
Error Code	E110
Diagnostic	1. Visual inspection: Connection and/or breakage of wires. 2. Voltage check: Check range of voltage shown below. 3. Check the exhaust duct for obstruction or blockages. 4. Check the condensate trap and drain piping for obstruction or blockages. 5. Check for decreased hot water output.
Color/Number of wires	• RED-BLACK: DC 5 V • WHITE-BLACK: DC 0.3 ~ 4.5 V

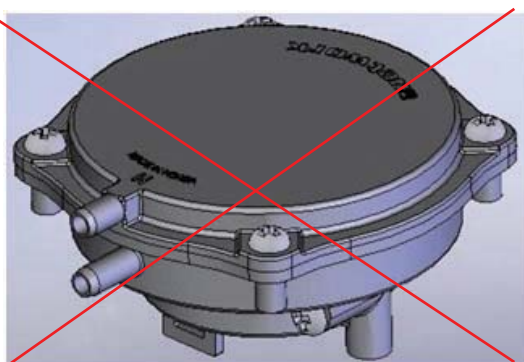

삭제

4.11.8 Main Gas Valve

Part	Check Point
Function	1. To control the amount of gas supplied to the burner based on fan speed. 2. When the unit experiences abnormal combustion, it shuts off the gas valve automatically and prevents unsafe situations.
Failure Event	Unable to open/close
Effects	1. No flames. 2. No operation of the unit.
Error Code	E003, E012
Diagnostic	1. Visual inspection: Connection and/or breakage of wires. 2. Voltage check: Check range of voltage shown below.
Color/Number of wires	• RED-YELLOW: DC 22~24 V • WHITE-RED: DC 22~24 V

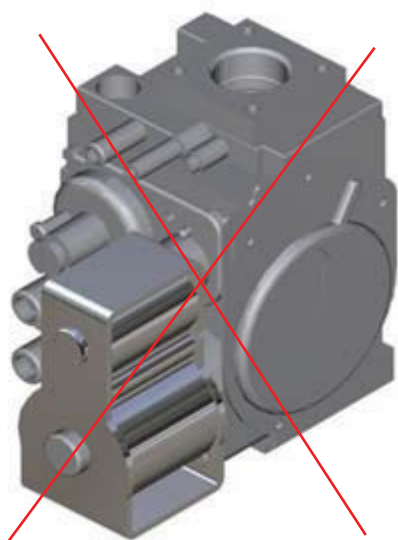

삭제



가운데로 이동 후
화살표는 양쪽모두

Test P_{out} with
manometer for
specified pressure
range to ensure
that the Gas Valve is
operating properly.




4.11.9 Burner

Part	Check Point
Function	1. Pre-Mix system reduces emissions and increase efficiency. 2. The burner facilitates the air/gas mixture necessary to produce the proper heat during combustion.
Failure Event	1. Unable to initialize/sustain combustion. 2. Dust or soot deposit on the burner surface 3. Possible gas leakage from burners.
Effects	1. Abnormal combustion. 2. Unstable flame conditions and/or flame loss. 3. Ignition failure.
Error Code	E003, E004, E012
Diagnostic	Visual inspection: Excessive deposits on the burner surface and/or unstable flame conditions during operation.
Color/Number of wires	N/A




4.11.10 Water Adjustment Valve

Part	Check Point
Function	To control the water flow to maintain steady hot water temperatures.
Failure Event	The valve cannot modulate or open/close in CASCADE mode.
Effects	1. Water Adjustment Valve is not operating properly. 2. Abnormal flow detected during normal operation. "E434" displayed. 3. Temperature fluctuations at the hot water outlet.
Error Code	E434
Diagnostic	1. Visual inspection: Connection and/or breakage of wires. Clean the Domestic cold water inlet filter. 2. Voltage check: Check range of voltage shown below.
Color/Number of wires	• RED-BLACK: DC 12 V • WHITE-BLACK Start position: DC 0 V Any open position: DC 5 V • BLUE-BROWN: PULSE • ORANGE-YELLOW

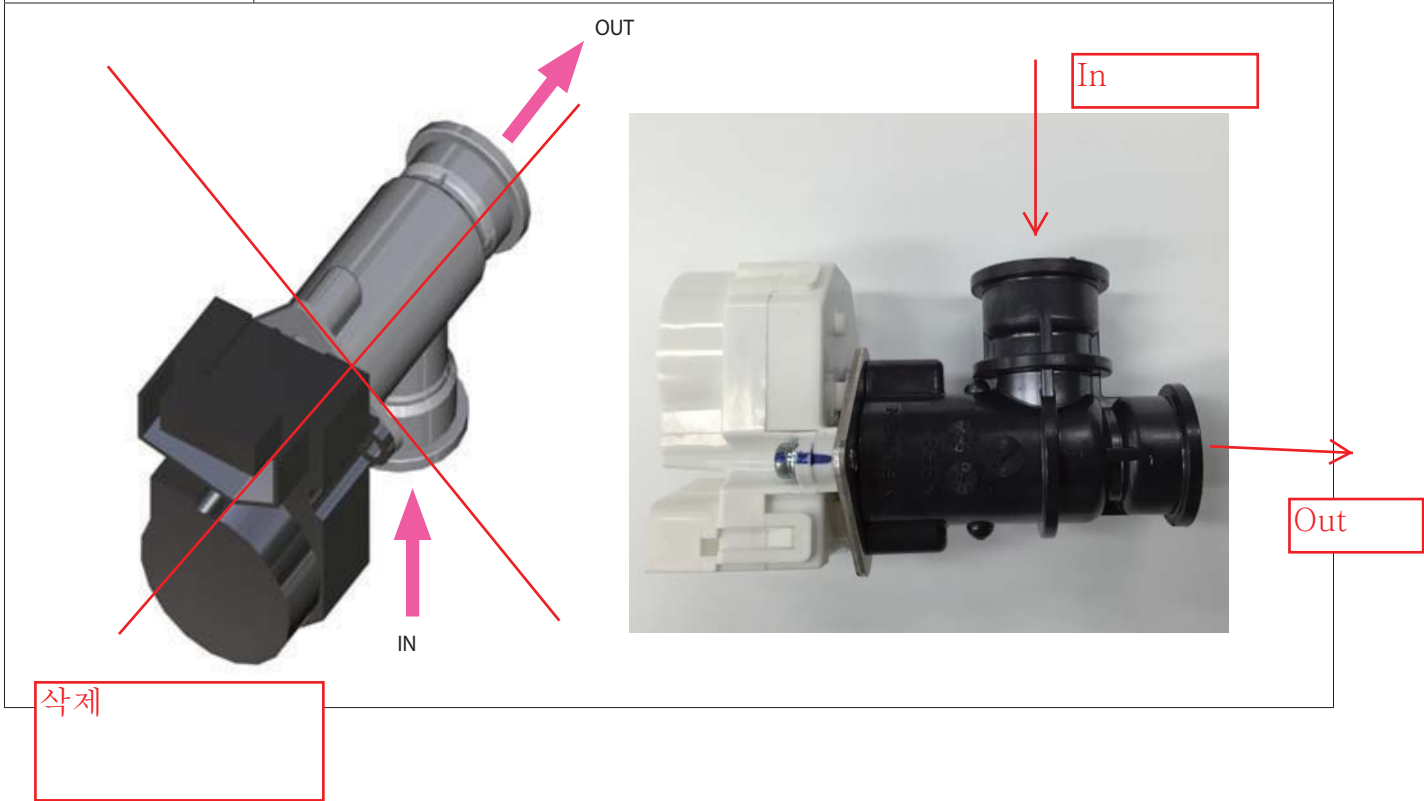

4.11.11 Flow Sensor


Part	Check Point
Function	To detect water flow in GPM (Gallons Per Minute) for steady hot water temperatures.
Failure Event	1. Unable to detect or measure water flow rate. 2. Damage to and/or water leakage from the water flow sensor.
Effects	Ignition sequence does not start.
Error Code	E439
Diagnostic	1. Visual inspection: Connection and/or breakage of wires. 2. Visual Inspection: Check for damage and/or scale formation on sensor.

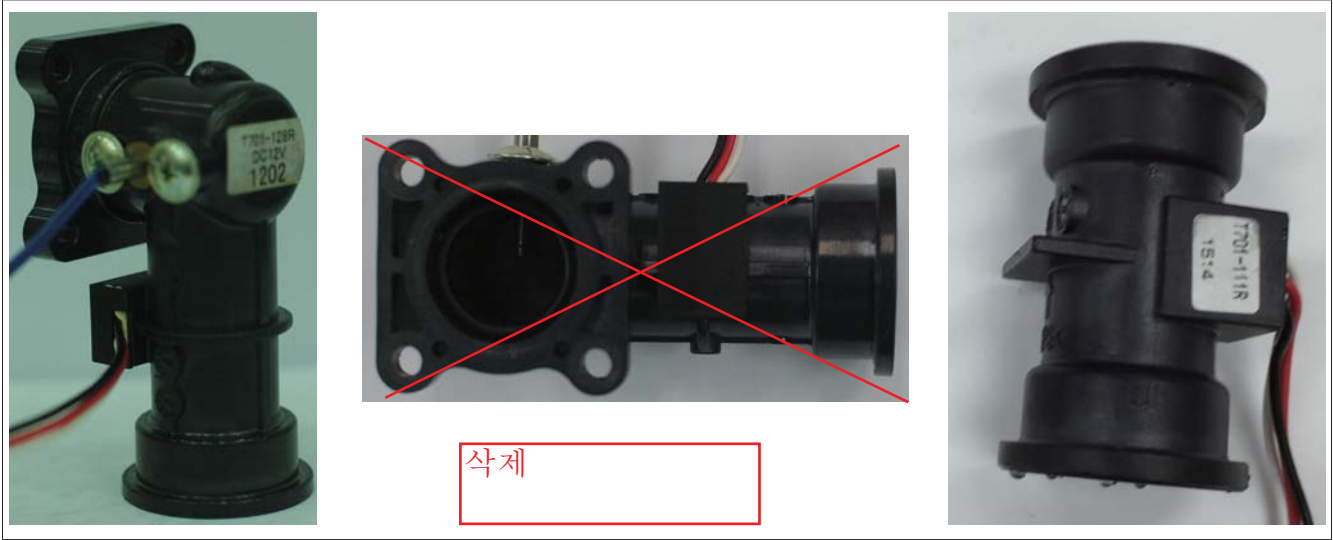

A Models Only

S Models Only

4.11.12 Primary Heat Exchanger

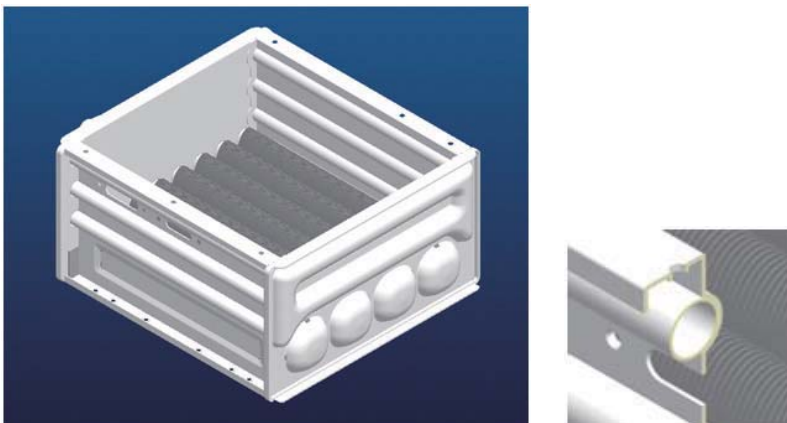Part	Check Point
Function	1. Main part for heat transfer from the burner. 2. There are multiple paths of water pipes on the heat exchanger surface as well as inside the combustion chamber which minimizes the heat loss.
Failure Event	1. Water and/or exhaust gas leakage through a crack. 2. Improper heat transfer can cause the water in the heat exchanger to boil due to possible scale formation.
Effects	1. Exhaust gas leakage. 2. Excessive heating of the water that produces boiling noises.
Error Code	E016, E030, E047
Diagnostic	1. Visual inspection: Check if there is a crack on the surface of heat exchanger. 2. Sound inspection: Check if boiling occurs inside the unit.
Color/Number of wires	N/A
	

4.11.13 Secondary Heat Exchanger

Part	Check Point
Function	1. Main part for heat transfer from the burner. 2. There are multiple paths of water pipes on the heat exchanger as well as inside the combustion chamber which minimizes heat loss.
Failure Event	1. Water and/or exhaust gas leakage through a crack. 2. Improper heat transfer can cause the water in heat exchanger to boil.
Effects	1. Exhaust gas leakage. 2. Excessive heating of the water that produces boiling noises.
Error Code	E016, E030, E047
Diagnostic	1. Visual inspection: Check if there is a crack on the surface of heat exchanger. 2. Sound inspection: Check if boiling occurs.
Color/Number of wires	N/A



4.11.14 Buffer Tank (“A” models only)

Part	Check Point
Function	To provide hot water at a steady temperature and to operate without a minimum flow rate with the use of the internal circulation pump.
Failure Event	Cracking and/or water leakage due to wear.
Effects	Temperature fluctuations in the hot water outlet and/or leaking.
Error Code	N/A
Diagnostic	Visual inspection : Check the mini buffer tank for any cracks.
Color/Number of wires	N/A

4.11.15 Circulation Pump ("A" models only)

Part	Check Point
Function	1. Pump operates when using internal or external hot water circulation. 2. Internal circulation will minimize the effect of temperature fluctuations and external circulation delivers hot water to fixtures quickly resulting in water conservation.
Failure Event	Unable to detect or measure water flow rate when the pump is called to operate.
Effects	1. The water heater freezes. 2. Temperature fluctuations when the water heater is set to internal recirculation. 3. Hot water is not quickly available at fixtures when the water heater is set to external recirculation.
Error Code	E438
Diagnostic	1. Visual inspection: Check the circulation pump connection wire. * Check for blocked/clogged water filter. 2. Voltage check: Check range of voltage shown below.
Color/Number of wires	YELLOW-WHITE • ON : AC 96 ~138 V • OFF : 0V



삭제



반시계 방향으로 90도 회전

5. Troubleshooting

별표를 다음 페이지 내용과 동일한
점으로 표기

5.1 Error Code List

Error Code	Sub Code	Function	Self-diagnostic/Action
E003	0	Ignition failure	* Check to see if the main gas supply valve is open. * Verify that gas pressure is within operating range. * Check gas system and orifice. * Check Dual Venturi for proper operation. * Check for proper dipswitch settings (see page 20). * Tighten the ground connection screws on heat exchanger.
E004	0	FALSE flame detection	* Ensure ground wire is connected. * Check the igniter for spark.
E012	0	Flame loss	* Check the main gas line (Is the valve open?). * Verify gas pressure is within operating range. * Check gas meter for proper BTU capacity. * Check flame rod and verify [J] value in DIAGNOSTIC mode. * Check intake air filter. * Check ground wire. * Check power supply. * Tighten the ground connection screws on heat exchanger.
E016	0	Overheating of heat exchanger	* Clean the inlet water filter. * Check High Limit Switch. * Check for proper dipswitch settings (see page 20) * Check the water adjustment valve. * Check the heat exchanger; a flush may be necessary. * Check pump operation (for A models only). * Turn OFF the system for at least 30 minutes then restart.
E030	0	Exhaust Overheat: exhaust limit sensor shuts down the unit when the flue temperature exceeds 230 °F (110 °C) for more than 10 seconds.	* Turn OFF the system for at least 30 minutes then restart. * Clean the inlet water filter. * Check exhaust thermistor and verify [K] value in DIAGNOSTIC mode. * Check for proper dipswitch settings. * Check the water adjustment valve. * Check the heat exchanger; a flush may be necessary.
E047	1	Abnormal exhaust thermistor (open)	* Check exhaust thermistor connection.
	2	Abnormal exhaust thermistor (short)	* Check for proper connection to the PCB.
E060	1	Abnormal Dual Venturi Limit Switch operation (ON)	* Check the Dual Venturi connection.
	2	Abnormal Dual Venturi Limit Switch operation (Close OFF)	* Test Dual Venturi for proper operation using TEST mode.
	3	Abnormal Dual Venturi Limit Switch operation (Open ON)	* Check gas orifice for obstructions.
E109	0	Abnormal fan motor activity	* Check and clean the intake air filter. * Verify proper voltage and wire connection. * Check and clean the fan motor.
E110	1	Exhaust blockage (checking the FAN)	* Check the intake/exhaust/condensate drain pipe for obstructions.(ice, snow, wildlife, etc)
	2	Exhaust blockage (Using hot water)	* Check and clean the intake air filter.
	3	Exhaust blockage (using space heating)	* As a temporarily solution for troubleshooting purposes, restart the unit and/or remove the front cover.

Error Code	Sub Code	Function	Self-diagnostic/Action
E407	1	Abnormal Hot water outlet thermistor (Open)	- Check the thermistor. - Replace the thermistor.
	2	Abnormal Hot water outlet thermistor (Short)	
E421	1	Abnormal Cold water inlet thermistor (Open)	- Check the thermistor. - Verify [C] value in DIAGNOSTIC mode. - Replace the thermistor.
	2	Abnormal Cold water inlet thermistor (Short)	
E432	1	Abnormal Cold water inlet2: thermistor (Open)	- Check the thermistor. - Check thermistor voltage and resistance values. - Replace the thermistor.
	2	Abnormal Cold water inlet2: thermistor (Short)	
E434	1	Abnormal water adjustment valve. (Open)	Check the water adjustment valve.
	2	Abnormal water adjustment valve. (Close)	
E438	0	Abnormal circulation pump. ("A" models only)	- Check the circulation pump. - Check water filter for blockage. - Check the flow sensor. - Check the cold water main line. - Set to Internal Recirculation mode and verify flow rate.
E439	0	Abnormal flow sensor	Check the flow sensor.
E441	1	Abnormal Hot water inlet2: thermistor(Open)	Check the thermistor.
	2	Abnormal Hot water inlet2: thermistor(Short)	Replace the thermistor.
E445	1	Abnormal mixing valve(Open)	Check the mixing valve.
	2	Abnormal mixing valve(Close)	
E515	1~7	Abnormal communicatin between PCB and Ignitor.	Check the PCB.
	8	Abnormal communication between PCB and Ignitor	- Check the PCB connection. - Check the Ignitor.
	9	Abnormal communication between PCB and FAN	- Check the PCB connection. - Check the Fan.
	10	Abnormal monitoring device of PCB	- Check the PCB connection. - Check the Dual Venturi.
	11~12	Abnormal communication between PCB and Dual Venturi	- Check the PCB connection. - Check the Dual Venturi.
E517	0	Abnormal dip switch setting	Check the dip switches on the front panel and PCB.
E593	1	Abnormal panel key	Check the Panel.
E594	0	Abnormal input data from High limit switch of Heat exchanger	Check the PCB.
	1	Abnormal input data from exhaust sensor	- Check the exhaust sensor wiring connection. - Check the exhaust sensor.
	2	Abnormal input data from flame rod	- Check the flame rod wiring connection. - Check the flame rod.
	3~14	Abnormal memory of PCB	Check the PCB
	15	Below the range of input data from Pressure sensor	Check the Pressure sensor wiring connection.
	16	Over the range of input data from Pressure sensor	Check the output voltage of pressure sensor.

Error Code	Sub Code	Function	Self-diagnostic/Action
E615	0	Abnormal input data from High limit switch of Heat exchanger	Check the PCB.
	1	Abnormal input data from exhaust sensor	- Check the exhaust sensor wiring connection. - Check the exhaust sensor.
	2	Abnormal input data from flame rod	- Check the flame rod wiring connection. - Check the flame rod.
	3~14	Abnormal memory of PCB	Check the PCB.
	15	Below the range of input data from Pressure sensor	Check the Pressure sensor wiring connection.
	16	Over the range of input data from Pressure sensor	Check the output voltage of pressure sensor.
E736	0	Abnormal cascade communication	- Check the Ready-Link cable. - Check the cascade settings. - Check PCB version for compatibility.
E740	1	Abnormal outdoor temperature sensor (Open) (appears only when the outdoor reset curve is enabled).	1. Ensure that the outdoor reset curve is configured properly. 2. Check the outdoor temperature sensor wiring connection.
	2	Abnormal outdoor temperature sensor (Short) (appears only when the outdoor reset curve is enabled).	
E760	0	Flushing/service alarm	A heat exchanger flush is necessary.
E782	0	Abnormal Main-Panel communication	Check the PCB.
E785	0	Abnormal Flow Switch Operation	- Check the Cold Water line. - Check the Flow Switch connection.

If any of the above solutions do not resolve the problem with the Water Heater, contact Navien's Technical department at 1-800-519-8794.

There will be error codes displayed on the front panel and recorded on the PCB board (within the unit) of any problems or failures that occur with the Water Heater.



IMPORTANT


To reset the Water Heater, either press the [Reset] button on the front panel or disconnect, then reconnect electrical power to the water heater.

5.1.1 003Error


Error occurrence conditions and check items

Error	Description
E003 Ignition failure	In the case of an ignition failure, the water heater will attempt ignition 10 times. If no flame is detected, the system displays the error message E03E (manually cleared) on the remote controller.
Check items	1. Check if the gas supply valve is open and for proper supply pressure. 2. Check the electrode gap, electricity discharge, or deformation of the flame rod. 3. Check the operation of the ignition transformer (ignition state, input power (AC 102~132 V) 4. Check the operation of the gas control valve (DC 22~24 V, coil short circuit, solenoid valve). 5. Check the flame rod, wiring and grounding. 6. Check if the air pressure hose is broken or clogged. 7. Check if the air pressure sensor works properly. 8. Check the PCB DIP switch settings. 9. Adjust the offset pressure (see page 29). 10. Check the gas orifice plate for the proper gas type. 11. Check the flue and air supply for any collected water (for vertical vent installations). 12. Tighten the ground connection screws on heat exchanger. 13. If the issues continue despite checking the items above, replace the PCB.


Scenario1

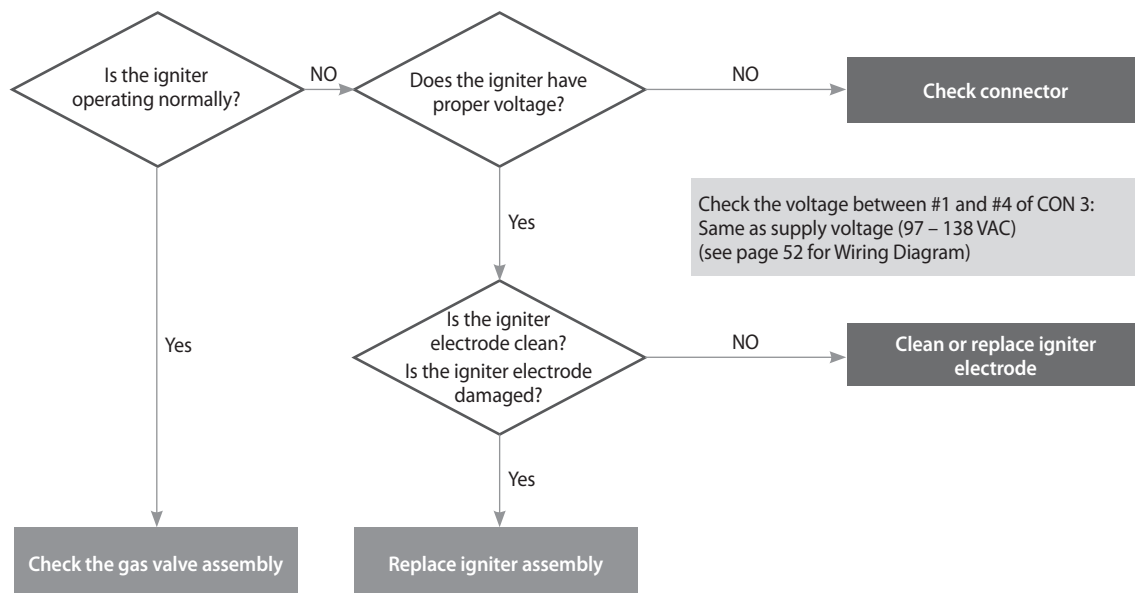



Scenario2



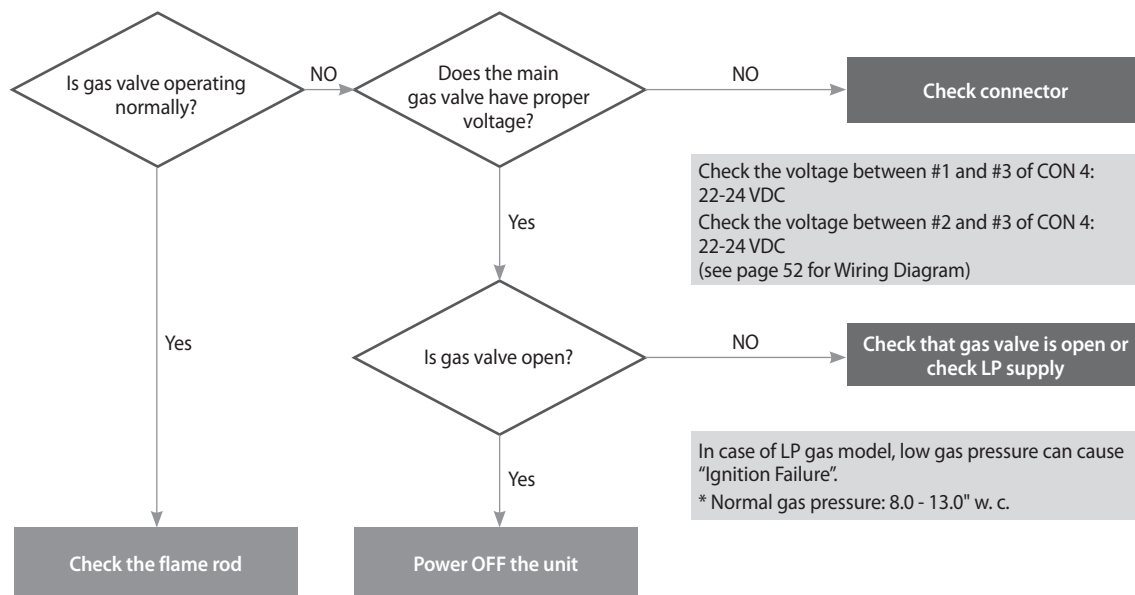



Scenario3

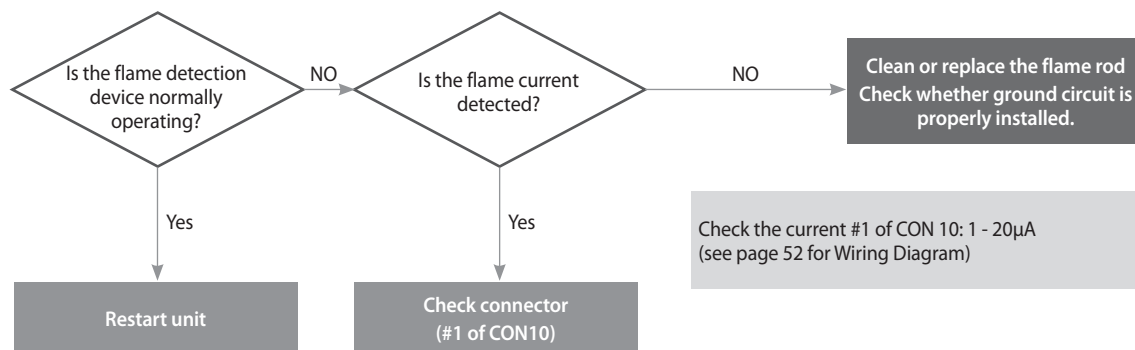


Check method

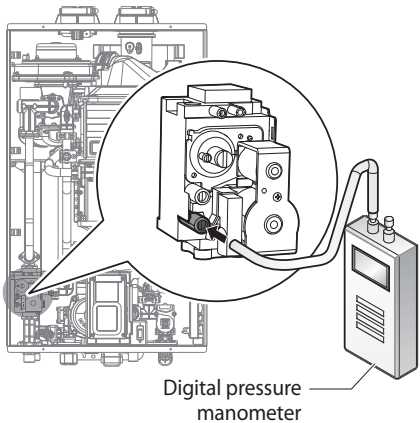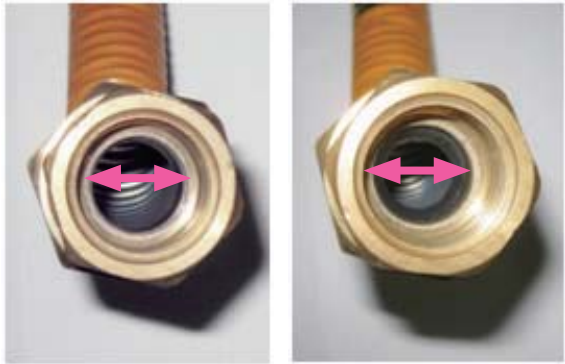Failure mode	Cause	Check method
Ignition failure	Gas supply error	1. Check if the main gas valve is open. 2. Check the gas supply pressure. • NG: 3.5" - 10.5"W.C, LP: 8" - 13"W.C • LP pressure drop occurs frequently in the winter. 3. Check the flexible pipe diameter for compatibility with the water heater. 4. While the static pressure is normal, the use of another gas appliance may cause a possible drop in gas pressure to the unit. Therefore, it is required to check the dynamic pressure. • Static pressure: Gas pressure during stand by. • Dynamic pressure: Gas pressure at max combustion. (2nd stage MAX combustion setting: DIP S/W 1-1 ON) 5. If a CSST connector has been used, check to ensure that it is not been overtightened resulting in the seal obstructing gas flow. 6. Check the meter class (Example) • Gas meter Water heater Furnace Domestic gas stove • 425 CFH (Gas Meter) ≥ 195 CFH (Water Heater)+ 58.8 CFH (Furnace) + 63.7 CFH (Domestic gas stove) ※ 1 CFH = 1,020 Btuh
	 Digital pressure manometer Check gas supply pressure(Refer to page 24)	 A shifted seal narrows the inner diameter of CSST connector
	Defective electrode gap and shape	Defective electrode gap and shape disables ignition. • Appropriate electrode gap: approx. 3~4mm(1/8") (replace if defective) • An ignition fail may occur due to improper gap, while discharge seems normal when checked via the flame monitoring window. Therefore, it is required to check the gap after disassembly.

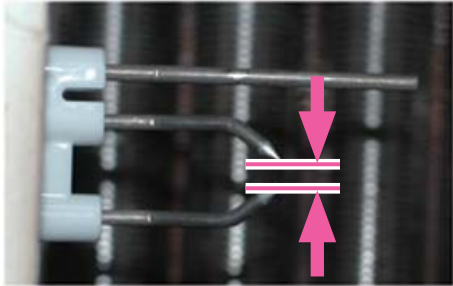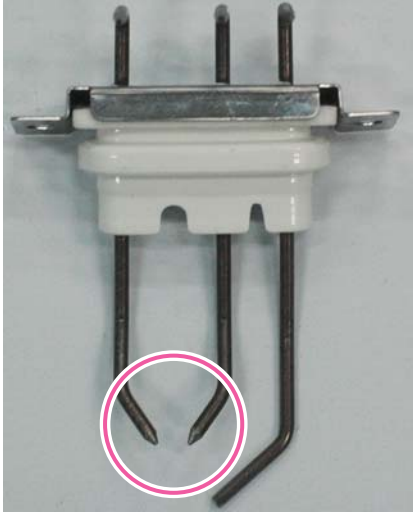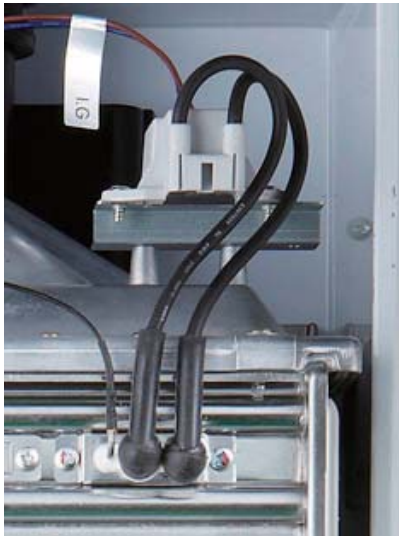Failure mode	Cause	Check method
Ignition failure	 Electrode gap 3.5~4.5mm(1/8")	 Electrode gap error
	No spark from electrode	When no spark is made from the electrode at ignition: • Remove the electrode and check if there is a crack on the insulator. • Adjust the gap if there is a discharge of electricity from the metallic part of the burner. • Ensure that the insulating gasket is installed between the electrode and burner casing. • Check the input power to the ignition transformer (AC 102 ~ 132 V). • If there is sufficient power to the ignition transformer, replace the ignition transformer. • Replace the PCB if there is no power or insufficient power supplied to the ignition transformer. • Check the insulator boots on the spark wires for cracks/holes.
	 Ignition transformer	

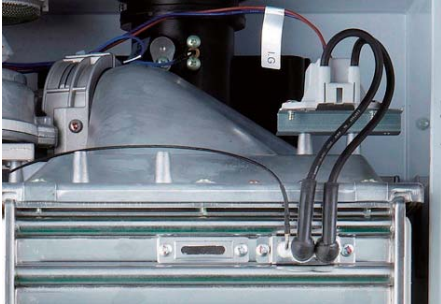Failure mode	Cause	Check method
Ignition failure	Main gas valve	1. Check the primary/secondary power supply to the main gas valve. • Check, with a multimeter, if the input power is DC 22-24 V. 2. Replace the PCB if power is not supplied. 3. If power supply is normal, check if the coil is open. 4. Check if the solenoid valve works properly. • Feel or hear a click.
	  	Gas block Check if the coil is open Check the voltage of the solenoid valve / White-Yellow , White-Red
Repeated ignition-out	Flame sensing error	1. Check the location of the flame, if there is any deformation or foreign substance, repair or replace the part. 2. Check the flame rod wire for proper connection and/or damage. 3. Check the grounding to the water heater case to verify proper grounding at the outlet. • If the ground wire is improperly connected or not making a good connection, remove and reattach the ground wire ensuring good contact with the case. • Or use a multimeter to measure the flame sensing current (normally 3~4 μA).
	 	Measuring flame current Grounding wire position

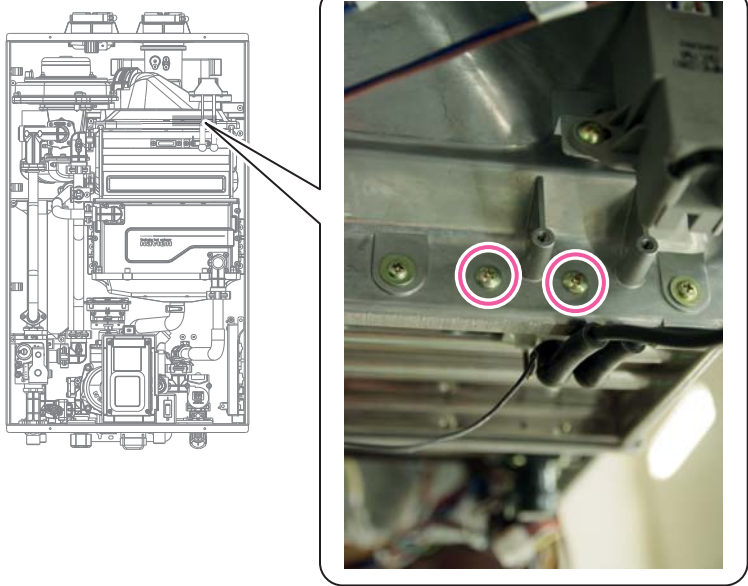Failure mode	Cause	Check method
Flame loss and noise occurs at ignition	Check if there are any blockages in the gas orifice plate.	Ignition failure will occur if the gas orifices are clogged. • Remove the gas inlet pipe and check the orifice plate.
Improper air intake air supply	Rainwater intrusion	Check if rainwater has collected inside the unit from an improperly installed air intake pipe.
Other trouble	Screw loosening	Tighten the ground connection screws on heat exchanger. 
	Defective PCB	If the issue continues despite checking above items, replace the PCB.

5.1.2 004Error


Error occurrence conditions and check items

Error	Description
E004 E04 False-flame detection	- Pre ignition false-flame If a flame signal is detected continuously for 3 seconds before combustion (stand-by, pre-purge, pre-ignition), a false-flame error 04E (automatically cleared) is displayed on the front panel and the system performs continuous post-purge and operates the pump. - Post purge false-flame If a flame signal is detected continuously for 3 seconds when the system performs post-purge as fuel supply is stopped, a false-flame error 004E (automatically cleared) is displayed on the front panel and the system performs continuous post-purge and operates the pump.

다음 페이지 상단으로 이동

앞페이지 내용을 이동하여서 공간이 안나면, 하기의 문장간의 공백은 삭제.

Error	Description
Check items	1. Check if gas leaks due to defective seals on the main gas valve. 2. Check if proper spark is discharged from the electrode. 3. Check if gas is supplied within the proper pressure range. 4. Check the PCB and replace if defective.


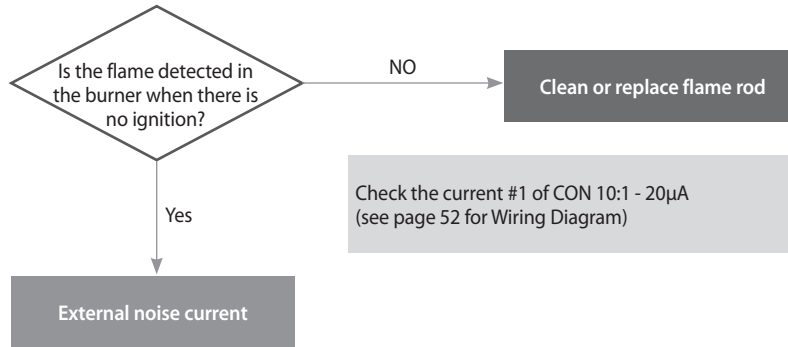



Check method

Failure mode	Cause	Check method
Flame before/after combustion	Leakage from main gas valve	Replace the gas flame if flame occurs before combustion or if there is remaining flame after combustion is stopped.
Error before/after combustion	Discharge of electricity from electrode	Spark discharges from electrode to flame sensor at ignition. • Replace or correct location of flame detecting rod.
	Gas valve	Gas may leak as the main gas valve is pushed by the gas supply over the standard pressure. • Check the supply pressure: NG: 3.5" ~ 10.5"WC, LP: 8.0" ~ 13.0"W.C • If the gas pressure is too high, notify the gas supplier about the issue, and if necessary, replace the gas valve. • If there is a gas leak close the gas supply valve and repair the unit before using the system.
Other trouble	Defective PCB	If the issue continues despite the checking of items above, replace the PCB.

5.1.3 012Error

Error occurrence conditions and check items

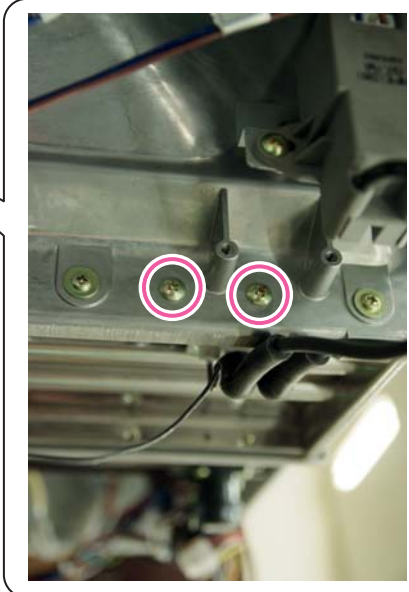
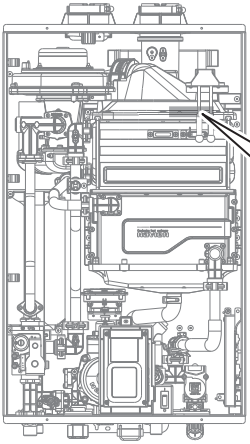
Error	Description
E012 Flame loss	If the system detects loss of flame during combustion, the system stops supplying fuel, attempts to restart, counts the incidents of flame loss, and if the incident occurs 20 times consecutively displays 012E (manually cleared) on the front panel.
Check items	1. Measure, with a manometer the gas supply pressure (NG: 3.5" ~ 10.5" W.C, LP: 8"~ 13.0" W.C) 2. Check the Gas meter Capacity. 3. Tighten the ground connection screws on heat exchanger.  * Check the flame detection AD value for proper resistance. (refer to page 42~43) 4. Check if the gas orifice is clogged. 5. Check if the PCB is working properly.

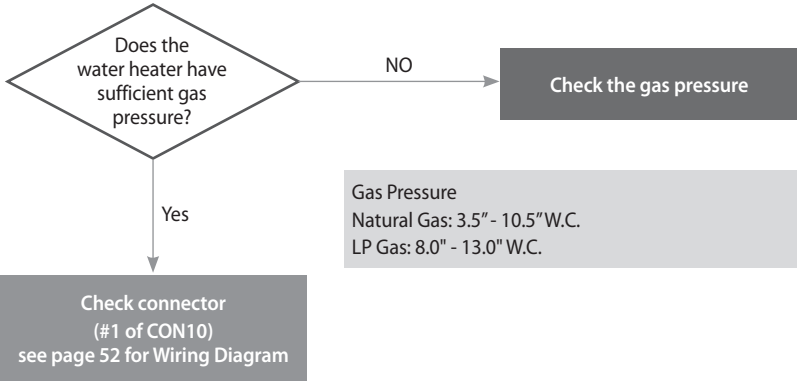

Check method

Fault	Possible Causes	Check method
Flame loss and noise occurs after ignition	Low gas supply pressure	- Check the gas supply pressure. - NG: 3.5" - 10.5"W.C, LP: 8" - 13"W.C - LP pressure drop occurs frequently in the winter. - While the static pressure is normal, the use of another gas appliance may cause a possible drop in gas pressure to the unit. Therefore, it is required to check the dynamic pressure. ※ Check the static pressure: Gas supply pressure during stand by. - Check the dynamic pressure: Gas supply pressure at (2nd stage MAX combustion setting: DIP S/W 1-1 ON) MAX combustion - Check the gas pipe connector. - If a CSST connector has been used, check to ensure that it is not been overtightened resulting in the seal obstructing gas flow. - Check the gas meter capacity (Example) - Gas meter Water heater Furnace Domestic gas stove 425 CFH (Gas Meter) ≥ 195 CFH (Water Heater)+ 58.8 CFH (Furnace) + 63.7 CFH (Domestic gas stove) ※ 1 CFH = 1,020 Btuh - If too much pressure is exerted on the nut component while installing the gas pipe may reduce the gas supply due to packing push-out and Teflon blockage, etc.

편집 확인 요망.

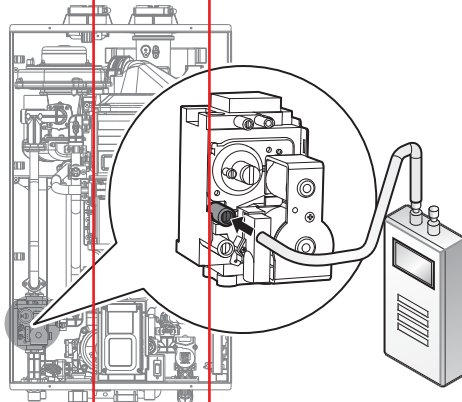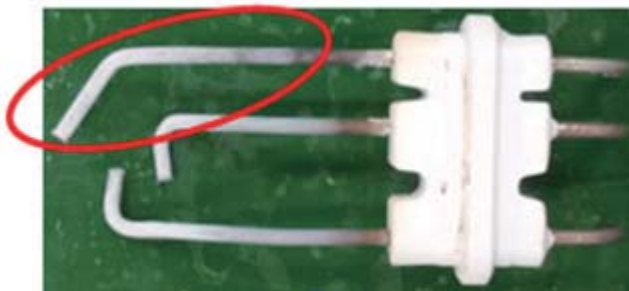Fault	Possible Causes	Check method																									
Flame loss and noise occurs after ignition		Check the offset values for low fire	<table><thead><tr><th>Model</th><th>Gas Type</th><th>Offset</th></tr></thead><tbody><tr><td rowspan="2">NPE-150S</td><td>NG</td><td>-0.04"±0.01"</td></tr><tr><td>LP</td><td>-0.03"±0.01"</td></tr><tr><td rowspan="2">NPE-180A NPE-180S</td><td>NG</td><td>-0.04"±0.01"</td></tr><tr><td>LP</td><td>-0.03"±0.01"</td></tr><tr><td rowspan="2">NPE-210A NPE-210S</td><td>NG</td><td>-0.04"±0.01"</td></tr><tr><td>LP</td><td>-0.02"±0.01"</td></tr><tr><td rowspan="2">NPE-240A NPE-240S</td><td>NG</td><td>-0.04"±0.01"</td></tr><tr><td>LP</td><td>-0.02"±0.01"</td></tr></tbody></table> Offset value for low fire		Model	Gas Type	Offset	NPE-150S	NG	-0.04"±0.01"	LP	-0.03"±0.01"	NPE-180A NPE-180S	NG	-0.04"±0.01"	LP	-0.03"±0.01"	NPE-210A NPE-210S	NG	-0.04"±0.01"	LP	-0.02"±0.01"	NPE-240A NPE-240S	NG	-0.04"±0.01"	LP	-0.02"±0.01"
	Model	Gas Type	Offset																								
NPE-150S	NG	-0.04"±0.01"																									
	LP	-0.03"±0.01"																									
NPE-180A NPE-180S	NG	-0.04"±0.01"																									
	LP	-0.03"±0.01"																									
NPE-210A NPE-210S	NG	-0.04"±0.01"																									
	LP	-0.02"±0.01"																									
NPE-240A NPE-240S	NG	-0.04"±0.01"																									
	LP	-0.02"±0.01"																									
	Flame Rod (Electrode)	Replace the electrode or clean the fire detecting electrode. - Cause: Due to the properties of the electrode, the oxide film is created due to long-term exposure to the high temperature; therefore, errors may be caused in detecting the fires. - Check-up: Use sandpaper to clean the fire detecting electrode covered with oxide film or replace it. 																									


라인정렬

Fault	Possible Causes	Check method	
	Tightness of Screw or Ground Bolt		Check the tightness of the screw or ground bolt in the Chamber + SC heat exchanger. - Cause: Screw or ground bolt in the chamber and SC heat exchanger can be loosened by the vibration or external impact when operating the boiler (water heater). - Check-up: A failure in the current flow between the chamber and burner may cause the flame-out; therefore, the tightness (fastened) of the screw needs to be checked. [Fasten the ground screw (2EA) after fastening the assembly screw (3EA) in the front of the heat exchanger]  [Location of assembly screw and ground bolt in heat exchanger]
	Defected metal fiber		1 Check the presence of debris in the metal fiber. 2 Check the sagging of the metal fiber and then the gaps with the electrode. [Gap between the electrode and metal fiber: 12mm]
Flame loss during 2nd stage	Blockage in the gas orifice plate.		Flame loss will occur if the gas orifices are clogged. • Remove the gas inlet pipe and check for debris; remove and clean the orifice plate if necessary.
Other trouble	Defective PCB		If the issue continues despite checking above items, replace the PCB.


5.1.4 016Error



Error occurrence conditions and check items

Error	Description
E16 Bimetal overheated	If the overheat controller on the heat exchanger is initiated during combustion/standby of the water heater, the system displays the 016E (manually cleared) message on the front panel. The water heater switches into Lock-Out, and performs post-purge continuously and operates the pump.
Check items	1. Check if the overheat controller is working properly. * Check resistance value or continuity. (refer to page 59) 2. Check the hot water temperature sensor. (refer to page 60)

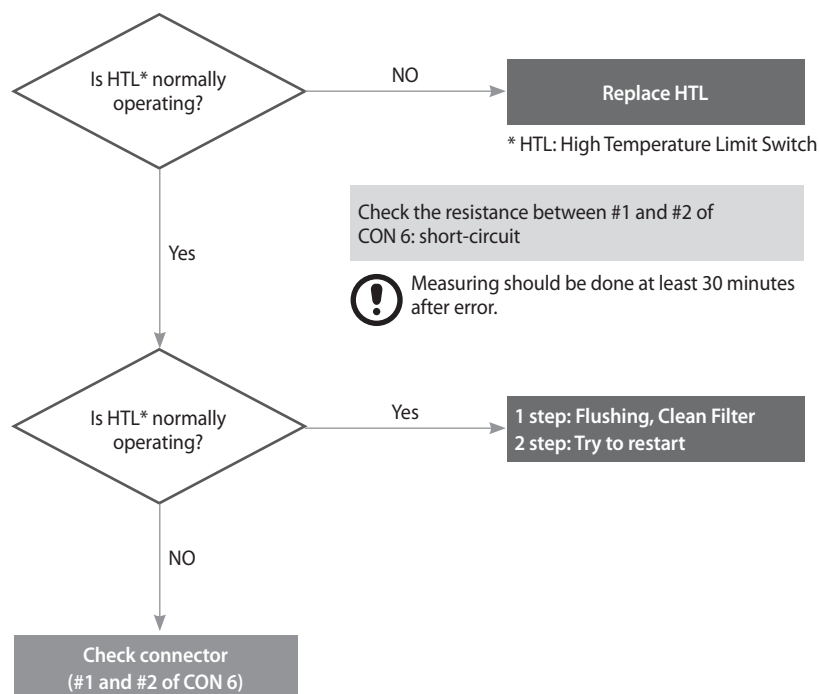

Check method

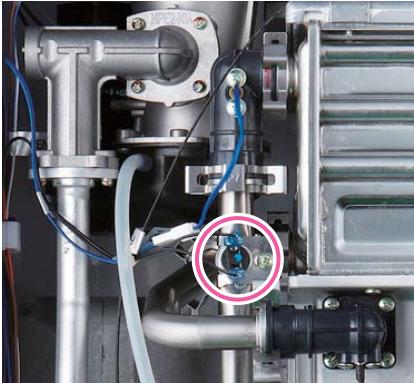
Fault	Possible Causes	Check method
Defective safety device	Defective overheat controller	Check if the contact point of the overheat controller is defective. • Use a multimeter to see if the resistance is normal (0.3Ω) or abnormal (∞).
	 Overheat controller	 Check if the overheat controller wire is disconnected (Normal 0.3Ω)
Temperature sensor error	Defective hot water output temperature sensor	1. If the hot water temperature is sensed lower than it actually is due to a defective sensor, check if the deviation of temperature is large due to a defective temperature sensor. • Check the output temperature displayed on the front panel. 2. Measure the temperature sensor resistance, and determine if the sensor is defective.

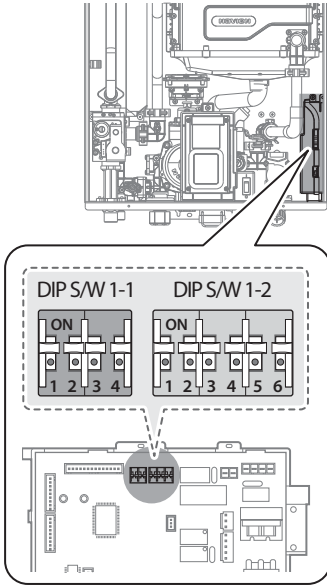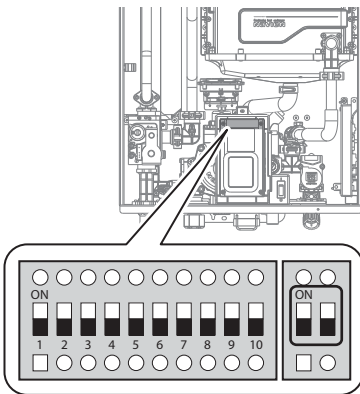Fault	Possible Causes	Check method															
Other trouble	Capacity setting	1. If the Max switch #1 of 1-1 is on, Set the switch to the normal operation position. 2. PCB DIP S/W capacity setting error can suddenly increase the hot water temperature.															
	• Check the PCB DIP S/W capacity setting.(refer to page 21) <table><tr><th></th><th>DIP SWITCH 1-1</th><th>DIP SWITCH 1-2</th></tr><tr><td>NPE-150</td><td rowspan="4"> ON 1 2 3 4 </td><td> ON 1 2 3 4 5 6 </td></tr><tr><td>NPE-180</td><td> ON 1 2 3 4 5 6 </td></tr><tr><td>NPE-210</td><td> ON 1 2 3 4 5 6 </td></tr><tr><td>NPE-240</td><td> ON 1 2 3 4 5 6 </td></tr></table> 			DIP SWITCH 1-1	DIP SWITCH 1-2	NPE-150	ON 1 2 3 4	ON 1 2 3 4 5 6	NPE-180	ON 1 2 3 4 5 6	NPE-210	ON 1 2 3 4 5 6	NPE-240	ON 1 2 3 4 5 6			
		DIP SWITCH 1-1	DIP SWITCH 1-2														
	NPE-150	ON 1 2 3 4	ON 1 2 3 4 5 6														
	NPE-180		ON 1 2 3 4 5 6														
NPE-210	ON 1 2 3 4 5 6																
NPE-240	ON 1 2 3 4 5 6																
• 2-switch Panel: <table><tr><th>Switch</th><th>Function</th><th colspan="2">Setting</th></tr><tr><td rowspan="2">1</td><td rowspan="2">Cascade Vent</td><td>Common Vent</td><td>1-OFF</td></tr><tr><td>Individual Vent</td><td>1-ON</td></tr><tr><td rowspan="2">2</td><td rowspan="2">Gas Type</td><td>Natural Gas</td><td>2-OFF</td></tr><tr><td>Propane Gas</td><td>2-ON</td></tr></table> 		Switch	Function	Setting		1	Cascade Vent	Common Vent	1-OFF	Individual Vent	1-ON	2	Gas Type	Natural Gas	2-OFF	Propane Gas	2-ON
Switch	Function	Setting															
1	Cascade Vent	Common Vent	1-OFF														
		Individual Vent	1-ON														
2	Gas Type	Natural Gas	2-OFF														
		Propane Gas	2-ON														
Primary heat exchanger overheated	The surface temperature rises due to heavy scale deposits in the primary heat exchanger. • Flush the primary heat exchanger.																
Defective PCB	If the issue continues despite checking the items above, the PCB is defective.																

5.1.5 E030Error

Error occurrence conditions and check items

Error	Description
E030 Exhaust gas temperature error	If the overheat controller on the top of the exhaust duct is initiated, the system displays the heat exchanger bimetal overheat message 30E (cleared manually) on the front panel. The water heater switches into Lock-Out, and performs post-purge continuously and operates the pump. Overheating controller operates when the temperature exceeds 230°F (110°C) for 10 minutes or over. 1. When the controller detects the exceeding temperature of 230°F (110°C) for 10 minutes or over, "E030" error code will display and perform post-purge. → Automatically cleared. 2. When the controller detects the exceeding temperature of 140°F (60°C) while performing post-purge. → Manually cleared. 3. When the controller detects the exceeding temperature of 230°F (110°C) for 10 seconds or over three times or more after the error is automatically cleared. → Manually cleared.
Check items	1. Check if the overheat controller operates normally. 2. Check if the PCB works properly.

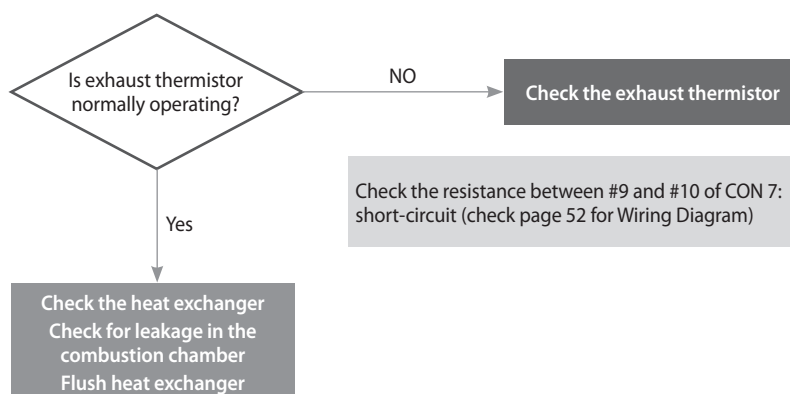


Check method

Fault	Possible Causes	Check method
Heat exchanger overheated	Damaged or clogged heat exchanger	1. The error occurs due to high exhaust gas temperature caused by a damaged or clogged heat exchanger. 2. Flush the heat exchanger to remove scale deposits. 3. Replace the heat exchanger if it is damaged or cannot be unclogged.
Defective part	Defective overheat controller	Defective contact point of the exhaust gas overheat controller 230°F (110°C) Max • Check connection of the overheat controller. • If the resistance is abnormal, replace the temperature sensor. (refer to page 60) • Check the output temperature displayed on the PCB.
	Check if the hot water temperature sensor is open (Error type : MΩ Open)	
Other trouble	Defective PCB	If the issue continues despite checking the items above, replace the PCB.


5.1.6 046Error

Error occurrence conditions and check items

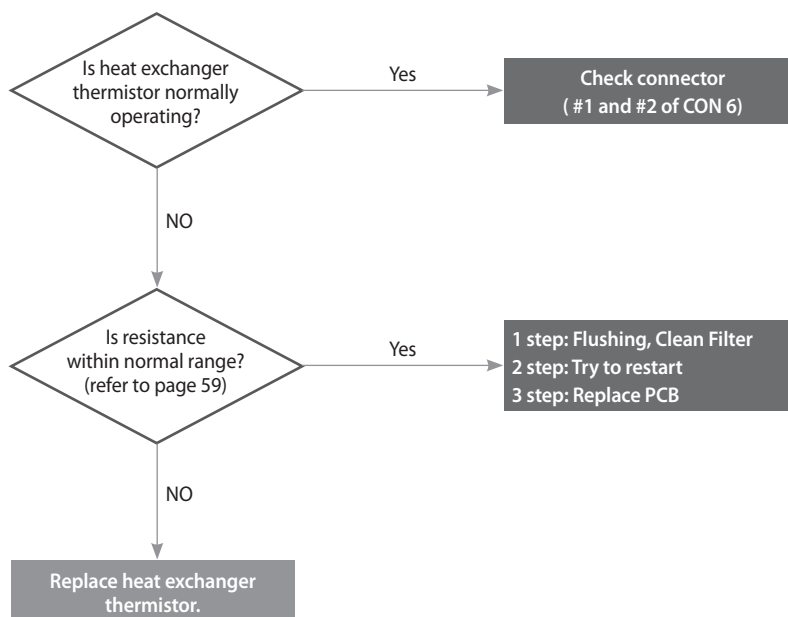

5.1.7 047Error


Error occurrence conditions and check items

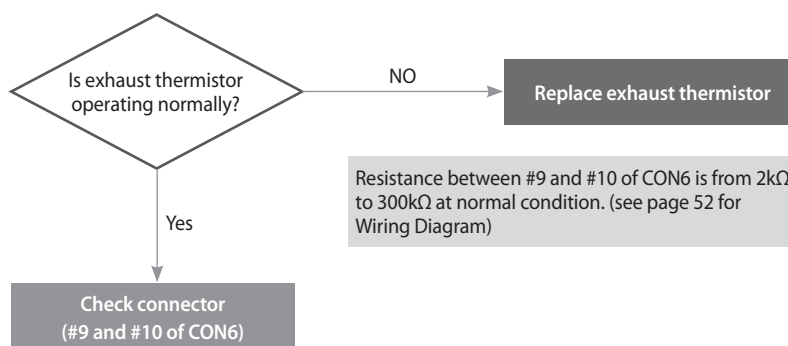


5.1.8 060Error

Error occurrence conditions and check items

Error	Description
E060 Dual Venturi error	This error message is displayed on the front panel if the wiring is disconnected or the Dual Venturi malfunctions. The water heater switches into Lock-Out, and performs post-purge continuously and operates the pump.
Check items	1. Check that the Dual Venturi is operating correctly. 2. Check that the wiring harness is connected correctly and the cables are not damaged.

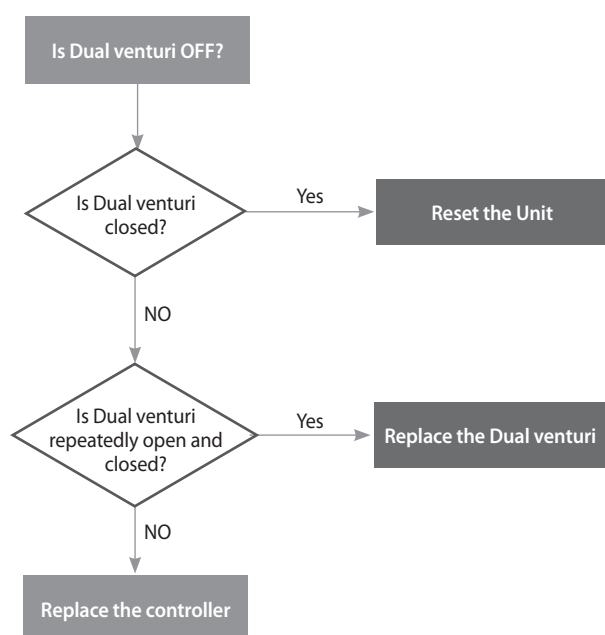

Dual venturi OFF

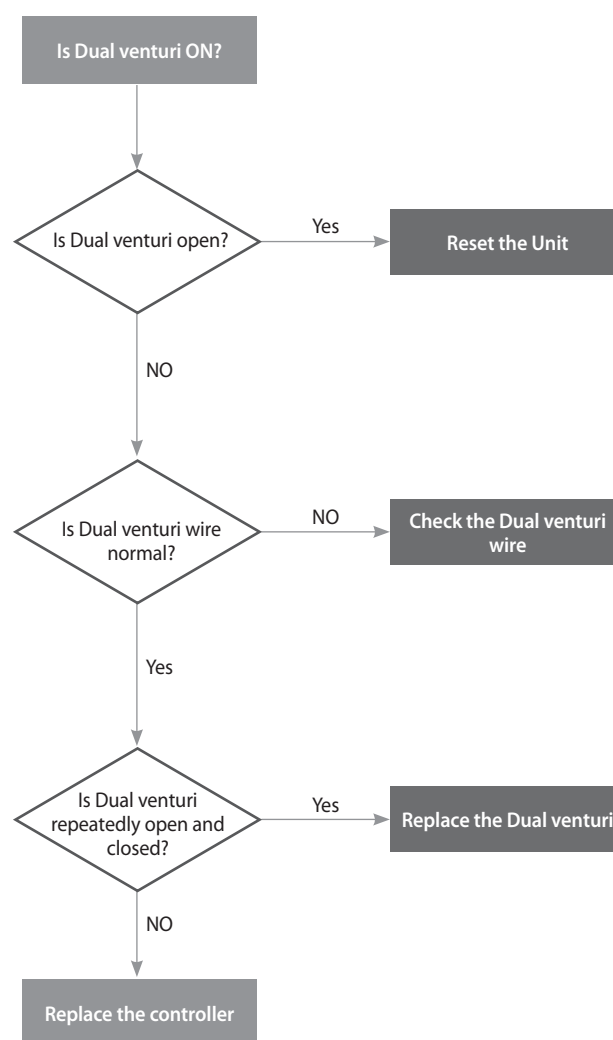

Dual venturi ON


Check method

Fault	Possible Causes	Check method
Dual Venturi action error	Defective Dual Venturi cable or harness	1. Disconnect all cables from the Dual Venturi. 2. Using a multi-meter, test the Dual Venturi electrical wiring.
	Dual Venturi not operating	1. Turn off the power to the unit using the main power switch (do not use the front panel power button) and wait for 10 seconds. 2. Turn on the power. 3. Wait until Fan Auto Adjusting is complete. 4. Enter the Dual Venturi Test Mode and perform a test. 1) Repeat the test at least twice. Turning the unit ON and OFF once makes one test cycle. ON → OFF → ON → OFF → is the minimum sequence. 2) Confirm that the Dual Venturi is operating correctly. a. Listen to the Dual Venturi while it is running and check for operational noise (clicks at unit ON and unit OFF). b. If operational noise cannot be heard because of ambient noise, disassemble the Dual Venturi and perform a visual inspection. 5. If error message (E060) occurs, replace the Dual Venturi. 6. If a Dual Venturi error does not occur, replace the APS.

5.1.9 109Error

Error occurrence conditions and check items

Error	Description
E109 Fan motor RPM error	The system checks the RPM signal after the fan starts to run, and displays the error message 109E (cleared manually) in the following cases: 1. If the RPM remains low or close to 0, the system determines RPM error, and the water heater switches into Lock-Out (gas valve and ignition transformer locked). (However, the air pressure sensor should be normal.) 2. If the RPM signal of low or close to 0, is detected for 3 seconds during combustion, the system stops combustion, and the water heater switches into Lock-Out. (However, the air volume sensor should be normal.)
Check items	1. Check if the fan motor works normally using the component test mode (refer to page 47). 2. Check the power supply to the fan (Black + Red, approx. DC 127~184 V) 3. If RPM is significantly low while the fan works and the power supply is normal, replace the fan motor. 4. If the fan connector is wet due to any reason including leakage, take corrective action by powering the unit OFF, then drying the components completely before continuing operation. 5. Check for loose connection of white connector that attaches the fan motor to the PCB.

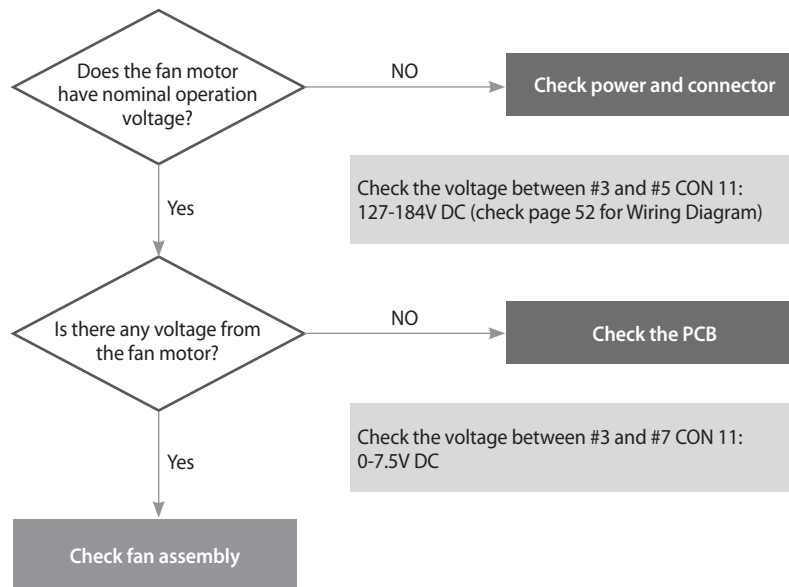


Check method

Fault	Possible Causes	Check method
Fan action error	No fan operation	1. Check the power supply to the blower. • Black+Red, approx. DC 127~184 V 2. Replace the PCB if voltages are abnormal. (When replacing the PCB, turn off the unit and then wait for at least 10 seconds before proceeding.) 3. If the issue continues despite the checking the items above, replace the fan motor.
		 Check if the fan motor wire is disconnected
Fan motor RPM error	Defective rotator	1. If RPM is significantly low while the fan is operating and the power supply is normal. Follow the instructions listed below and replace the fan. 1) Unplug the power cable to the unit and then wait for 10 seconds until the remaining SMPS voltage completely discharges. 2) Disconnect the fan cable and then re-connect it. 3) Plug the power cable and turn on the unit. 4) Fan Auto Adjusting verifies error conditions for error code E109. If an E109 error occurs, enter the Fan Test Mode and verify fan RPM and APS input voltage. (Display: ex. H.320 = 3200 RPM) 5) If RPM is low or there is a sensor circuit error, replace the fan.  Connection and disconnection of the fan cables while the unit is ON may cause electrical damage to the fan drive circuit or main PCB. 2. If the issue continues despite checking the items above, replace the PCB.

5.1.10 110Error

Error occurrence conditions and check items

Error	Description
E110 Air pressure error	The system senses the air volume and the RPM signal, and displays 110E on the front panel in the following cases: 1. When the initial fan auto-adjust is not performed. 2. When the unit capacity reaches up to 95% of the maximum heat during combustion, and APS is not up the standard value.
Check items	1. Check if the venturi (burner) hole is clogged. 2. Check if the condensation drain line or the drain is clogged. 3. Check the flue and exhaust to verify proper installation and clearances. (Circulation of exhaust gas generates noise.) 4. Check if the air supply/exhaust flue is clogged (rainwater may collect inside from an improperly installed air supply/exhaust pipe). 5. Defective air pressure sensor or PCB.

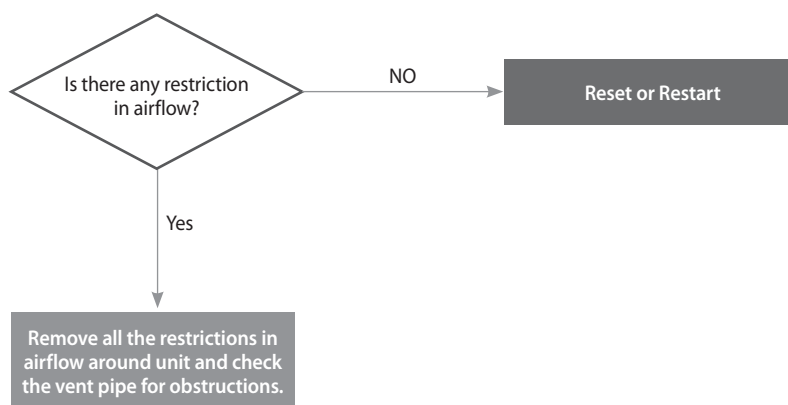

Check method

Fault	Possible Causes	Check method
110E Exhaust blockage	Abnormal flow of intake air supply / exhaust	- If 110E occurs intermittently during ignition or combustion, compare the standard RPM with the current RPM at Min / Max combustion (dip switch 1-1&1-2). If the current RPM is higher than normal, check the following: - Air supply / exhaust vent for any blockages. - Blocked condensate drain - If the air pressure sensor hose is broken or clogged. - Replace the old PCB with the latest version.
Condensate drain error	Condensate drain error	Exhaust air is blocked due to condensate drain error. - Check if the condensate hose or the siphon is frozen. - Check if the condensate hose is kinked. - Remove bottom of trap and verify it is not blocked.
Defective air supply/ exhaust flue	Deformed or clogged flue	- Check the exterior of the flue for damage and obstructions. - Check if rainwater is collected due to vertical installation of the air intake pipe.
	Exhaust gas flows in through the supply pipe	If the exhaust gas enters into the air supply pipe, abnormal combustion may cause E110. Check the installation of the flue.

5.1.11 407Error


Error conditions and Check Items

Error	Description
E407 Hot water outlet Temperature sensor open / short	If an error (open: 14°F (-10°C) or lower) in the Hot water outlet temperature sensor is detected, the system displays the 407E error on the front panel. If this occurs, the water heater initiates shutdown.
Check items	- Check if the Hot water outlet temperature sensor connector is wet due to any reason, including leakage. - Check the Resistance of the Hot water outlet temperature sensor. - Replace the defected Hot water outlet temperature sensor. - Replace the controller.


5.1.12 421Error

Error conditions and Check Items

Error	Description
E421 Heat exchanger input temperature sensor open	If an error (open: 14°F (-10°C) or lower) in the heat exchanger input temperature sensor is detected, the system displays the 421E error on the front panel. If this occurs, the water heater initiates shutdown.
Check items	1. Check if the heat exchanger input temperature sensor connector is wet due to any reason, including leakage. 2. Replace the defected heat exchanger input temperature sensor. 3. Replace the controller.

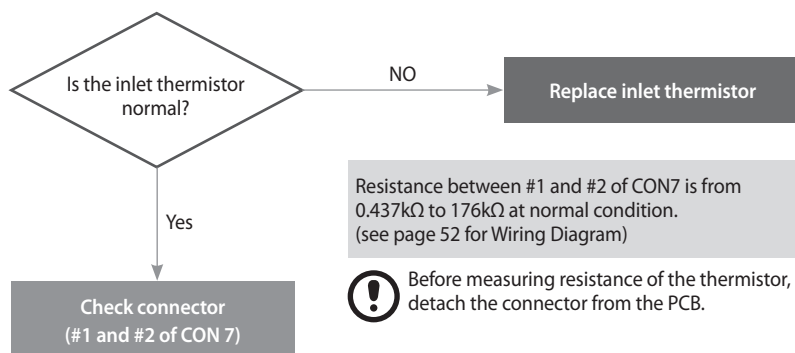


Check method

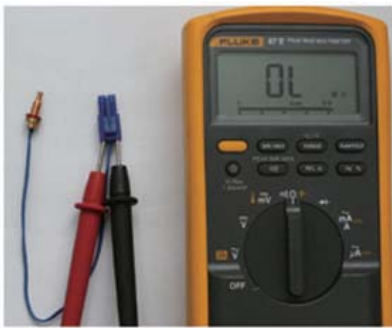Fault	Possible Causes	Check method
Defective sensor	Defective temperature sensor connector	Check if the temperature sensor is open and if the connector is connected properly.
	Temperature sensor	Check the resistance of the temperature sensor. (Defective if it is 30kΩ or higher) • Replace the temperature sensor if the resistance value is abnormal. • Check the temperature displayed on the front panel.
Possible Issues	Defective PCB	If the issues continue despite checking the items above, replace the PCB.
	 Heat exchanger input temperature sensor / connector  Check if the secondary water temperature sensor is open Error type : MΩ Open	


5.1.13 432Error

Error occurrence conditions and check items

Error	Description
E432 Cold Water water temperature sensor open	If an error (open: 14°F(-10°C) or lower) in the cold water temperature sensor is detected, the system displays the 432E (cleared automatically) error message on the front panel. The water heater initiates shutdown mode.
Check items	1. Check if the cold water temperature sensor is open and if the connector is attached properly. 2. Check the defect of the cold water temperature sensor. 3. Defective PCB

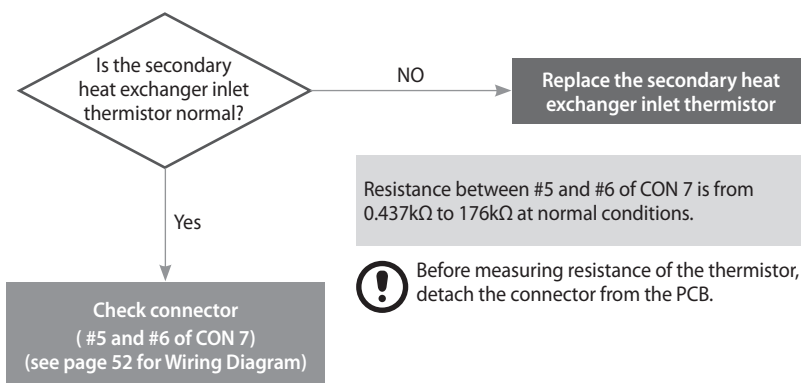


Check method

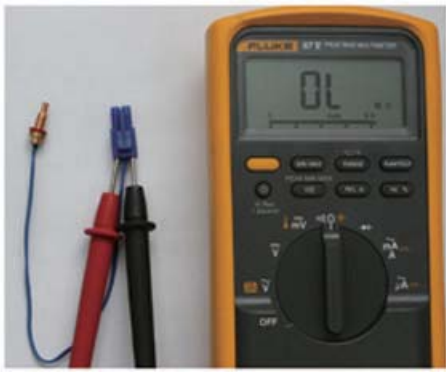Fault	Possible Causes	Check method
Defective sensor	Defective temperature sensor connector	Check if the cold water temperature sensor is open and if the connector is attached properly.
	Temperature sensor	• Measure the temperature sensor resistance. (Defective if it is 30kΩ or higher.) • Replace the temperature sensor if the resistance is abnormal
Other trouble	Defective PCB	If the issue continues despite the checking the items above replace the PCB.
	 Direct water temperature sensor  Check if the water temperature sensor is open. Error type: MΩ Open	

5.1.14 434Error

Error occurrence conditions and check items

Error	Description
E434 Water Adjustment valve error	If the water adjustment valve does not work properly due to a defective feedback sensor, water adjustment valve, or PCB board, the system displays 434E (cleared automatically/manually). <only when in CASCADE mode> • Water adjustment valve error – The system commands opening of the water adjustment valve, but the valve remains closed. [Check the feedback sensor.] (Cleared manually) • If the Water adjustment valve sensor open/short-circuit is detected, the system displays an error message. If flow is sensed, the system clears the error automatically and provides the hot water. If open/short-circuit is detected after hot water is used, the system displays the error message.
Check items	If the 434 error occurs, connect the Water adjustment valve to the PCB. The valve must be kept open when the water heater is not operating. If the PCB is defective, the motor keeps operating and the valve continues to make attempts to open/close. 1. Defective water adjustment valve 2. Defective PCB 3. Check the operation of the water adjustment valve using the Component Test mode (refer to page 47).

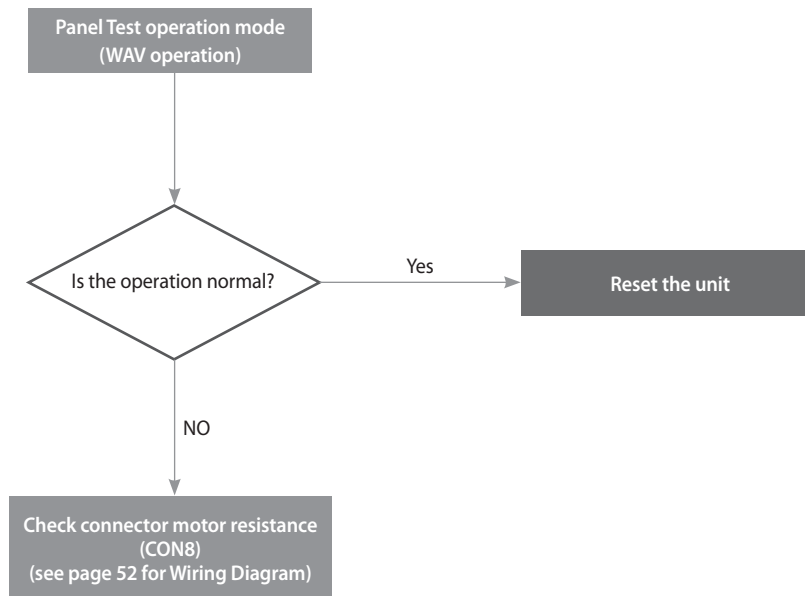


Check method

Fault	Possible Causes	Check method
Remote controller / PCB error	Malfunction of water adjustment valve Defective water adjustment valve	If an error occurs in the cascade system, disconnect the cascade cable and check the system in the following procedure: 1. Check the operation of the water adjustment valve using the Component Test mode (refer to page 47). 2. If the PCB is defective, the motor keeps operating as the water adjustment valve is OPEN or CLOSED, or the valve repeats open/close. 3. Replace the water adjustment valve for other symptoms. 4. As a temporary measure, you can disassemble the water adjustment valve, open it manually, and separate the power cable of the water adjustment valve.
Water heater works but error occurs	Defective water adjustment valve sensor	1. Open or short-circuit of the flow control valve sensor. 2. Check the connector assembly and wiring state of the water adjustment valve feedback sensor. 3. Check the operation of the water adjustment valve using the Component Test mode (refer to page 47).

Emergency measures for a blocked water adjustment valve * (refer to page 47 for Component Test mode information)


1. Switch off power, shut off water supply to the unit, and drain water from the unit.
2. Remove the top/bottom clips of the water adjustment valve.
3. Disassemble the motor and open the lid.
4. Turn the water adjustment valve axis disk counterclockwise until it does not turn anymore.
5. Pull out the water adjustment valve power connector.
6. Reconnect power and start the unit while using hot water.

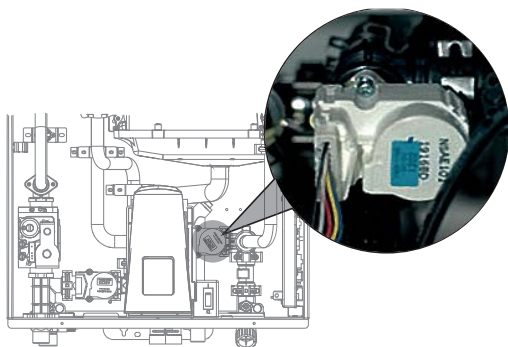

Turn the gear clockwise to open the valve manually



Closed Position

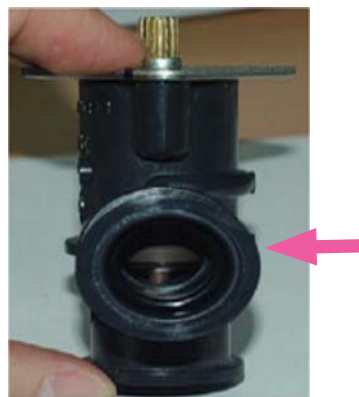


Open Position

5.1.15 438Error ("A" models only)

Error occurrence conditions and check items

Error	Description
E438 Pump error	Connect the power, start the pump, and check if the system senses water flow. If flow is not sensed after the pump has started, the system displays 438E (cleared automatically) on the front panel.
Check items	1. Defective flow sensor. 2. Defective pump. * Check water filter for debris. * Check for locked air in the pump. 3. Defective PCB. * Check the operation of the pump and flow sensor using the Component Test mode (refer to page 47).

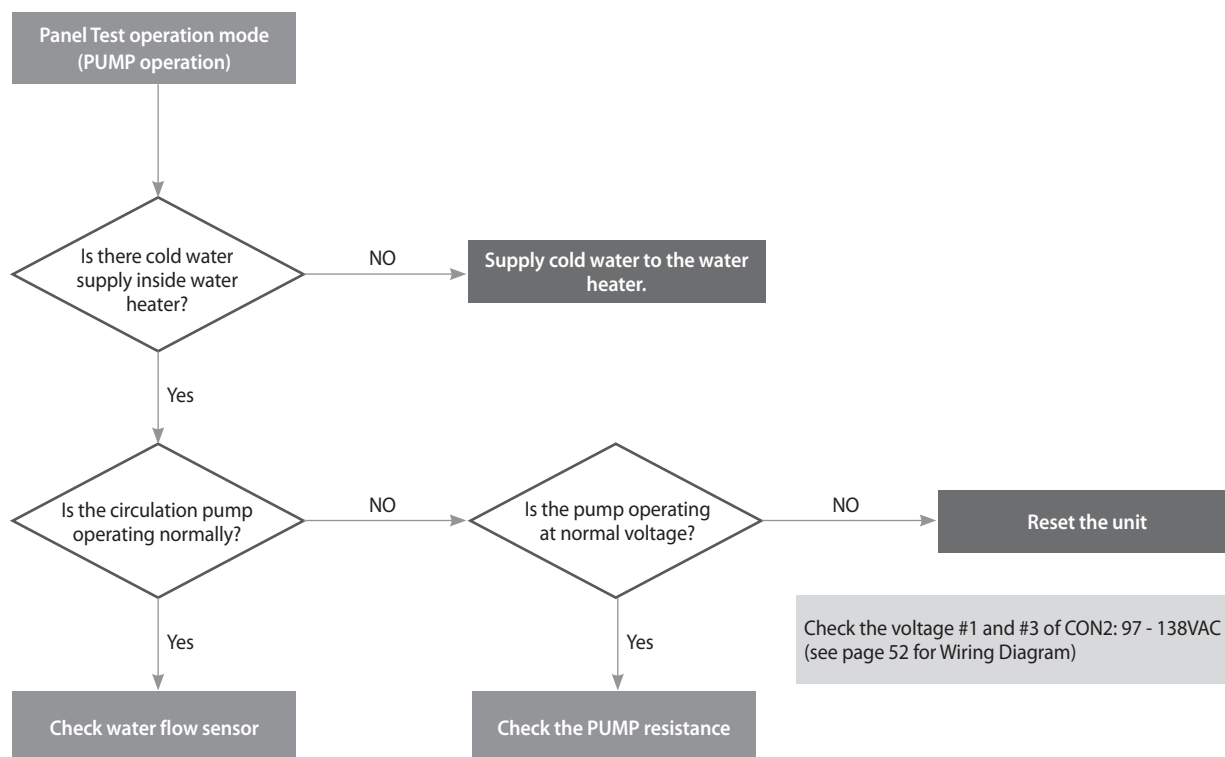


Check method

Fault	Possible Causes	Check method
Pump Malfunction	Defective flow sensor	Check the current flow rate displayed on the front panel. The flow sensor is defective if the water flow displayed is 0.0 gal/min when the pump is operating or when water is discharged from the hot water tap.
	 Direct water temperature sensor	
Defective pump	Defective pump	1. Check if the pump is working normally. 2. Check the pump power cable connector and verify that the wiring is properly installed. 3. Check the power supply to the pump (AC 102-132 V). 4. Check for air in the system.
	 Circulation pump	 Circulation pump wire: Yellow-White
Other trouble	Defective PCB	If the issue continues despite checking the items above, the PCB could be defective. Replace the PCB.

5.1.16 439Error

Error occurrence conditions and check items

Error	Description
E439 Flow sensor error	As one or more units are operating in the cascade system, if no flow is detected while the system opens the water adjustment valve, the system considers it as a defective flow sensor. The system displays 439E (cleared manually) on the front panel and switches the unit operation into the Lock-Out mode (gas valve and ignition transformer locked).
Check items	1. Check the supply of cold water while the cascade system is disabled. (frozen/locked valve). 2. Defective flow sensor. 3. Defective PCB.

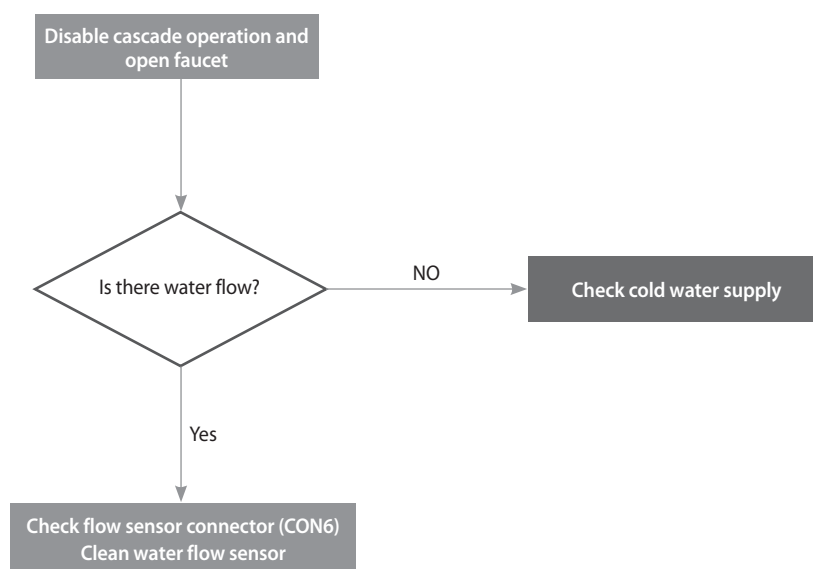

Check method

Fault	Possible Causes	Check method
No hot water flow	Cold water supply error	1. Check if the water adjustment valve is opening/closing properly. 2. Check if the cold water line is frozen. 3. Check if the cold water filter is clogged.
Water heater not working	Defective flow sensor	1. Check the current flow displayed on the front panel. • If the flow sensor is defective, the displayed flow value is 0.0 while water flows from the hot water tap. • Remove the flow sensor and blow into it. The rotation detector on the flow sensor is defective if the impeller rotates and display remains 0.0. * Component Test mode may also be used to check the operation of the flow sensor (refer to page 47). 2. Check connector assembly and contact of the flow sensor. 3. Check the input voltage of the flow sensor. • Operating voltage (Black + Red) : Defective PCB if DC 12 V is not supplied. 4. Replace the flow sensor if no flow is detected while the operating voltage is normal.
Other trouble	Defective PCB	If the issue continues despite the checking of items above the PCB is defective.

Emergency measures for a defective flow sensor


Replacement of the part is usually required for the water heater to operate when an error occurs with the flow sensor. If it is impossible to replace the part immediately, use the following emergency measures.

If the flow sensor impeller is stuck due to foreign substances:


Remove the flow sensor and blow air through the part from the inlet side. If the impeller does not rotate, disassemble the impeller, and remove the foreign substance before reassembling it.

If the flow displayed on the front panel is 0.0, and the impeller rotates when you blow into it, the flow sensor will need to be replaced.


1. Drain water from the unit, then remove the 4 screws and retaining clips from the flow sensor.

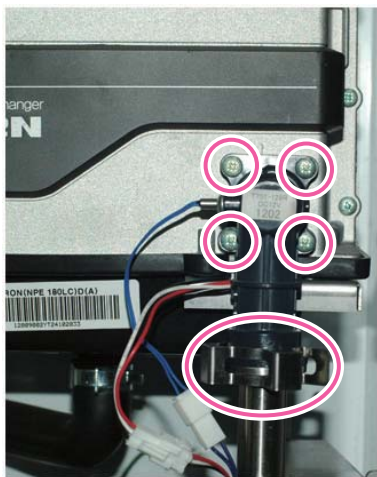

2. Detach the 2 wire connectors that connect the flow sensor to the PCB.

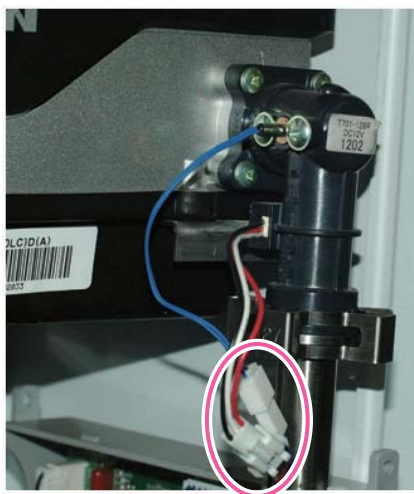


3. Blow air through the flow sensor. Check that the impeller rotates freely.

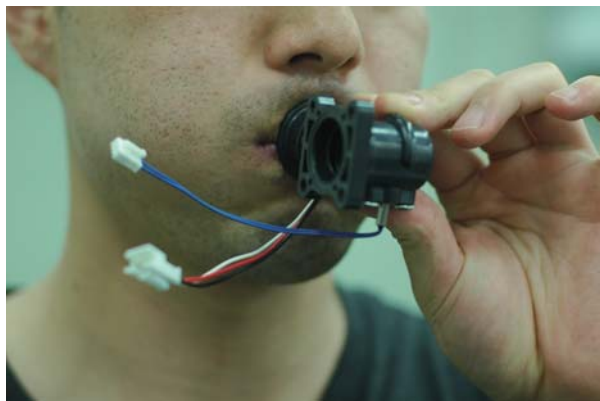

5.1.17 441Error


Error occurrence conditions and check items

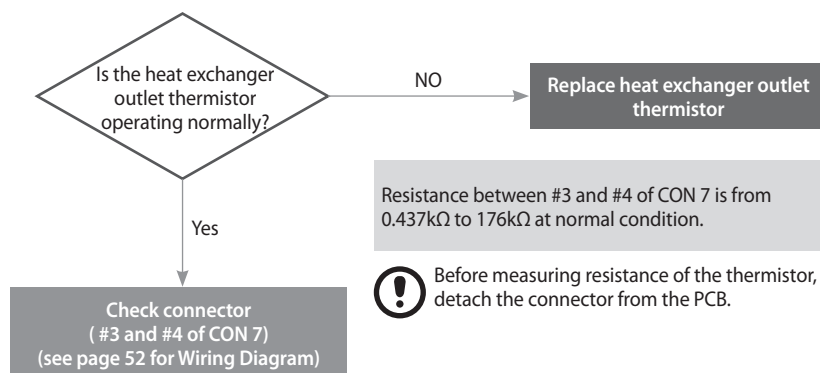

5.1.18 445Error

Error occurrence conditions and check items

Error	Description
E445 Mixing valve error	If the mixing valve does not work properly due to a defective feedback sensor, mixing valve, or PCB board, the system displays 445E (cleared automatically/manually). - Mixing valve error – The system commands opening of the mixing valve, but the valve remains closed. [Check the feedback sensor.] (Cleared manually) - If a mixing valve sensor open or short-circuit is detected, the system displays an error message. If flow is detected, the system clears the error automatically and provides hot water. If an open or short-circuit is detected after hot water is used, the system displays the error message.
Check items	If the 445 error occurs, connect the mixing valve to the PCB. The valve must be kept open when the water heater is not operating. If the PCB is defective, the motor keeps operating and the valve continually attempts to open or close the valve. - Defective mixing valve - Defective PCB - Check the operation of the mixing valve using the Component Test mode (refer to page 47).

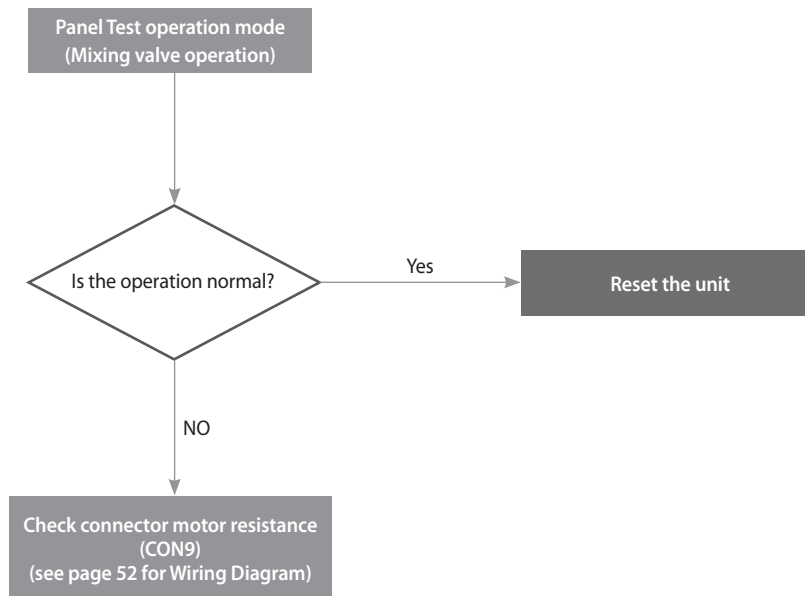


Check method

Fault	Possible Causes	Check method
Remote controller / PCB error	Malfunction of mixing valve Defective mixing valve	1. Check the operation of the mixing valve using the Component Test mode (refer to page 47). 2. If the PCB is defective, the motor keeps operating as the mixing valve is OPEN or CLOSED, or the valve repeats open/close. 3. Replace the mixing valve for other symptoms. 4. As a temporary measure, you can disassemble the mixing valve, open it manually, and separate the power cable of the mixing valve.
Water heater works but error occurs	Defective mixing valve sensor	1. Open or short-circuit of the flow control valve sensor. 2. Check the connector assembly and wiring state of the mixing valve feedback sensor. 3. Check the operation of the mixing valve using the Component Test mode (refer to page 47).

Emergency measures for a blocked mixing valve * (refer to page 47 for Component Test mode information)

1. Switch off power, shut off water supply to the unit, and drain water from the unit.
2. Remove the top/bottom clips of the mixing valve.
3. Disassemble the motor and open the lid.
4. Turn the mixing valve axis disk counterclockwise until it does not turn anymore.
5. Pull out the mixing valve power connector.
6. Reconnect power and start the unit while using hot water.

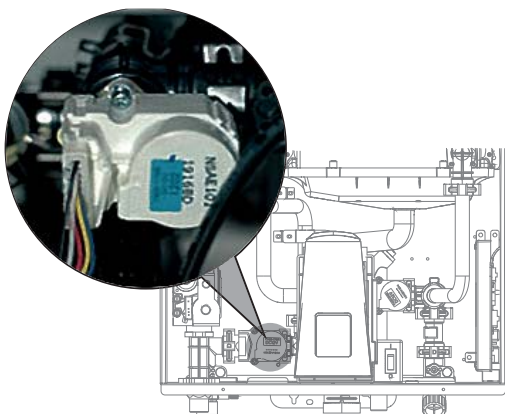

Turn the gear clockwise to open the valve manually



Closed Position




Open Position

5.1.19 515Error

Error occurrence conditions and check items

Error	Description
E515 error	If an error occurs in the internal circuit of the PCB (e.g., resistance, transistor or relay fault), the system displays 515E (cleared manually) on the PCB.
Check items	1. Defective PCB 2. Check with a multimeter if the PCB is supplied with the proper voltage (AC 102~132 V). 3. Check the wire connection. 4. Disconnect the ground wire, then check the PCB

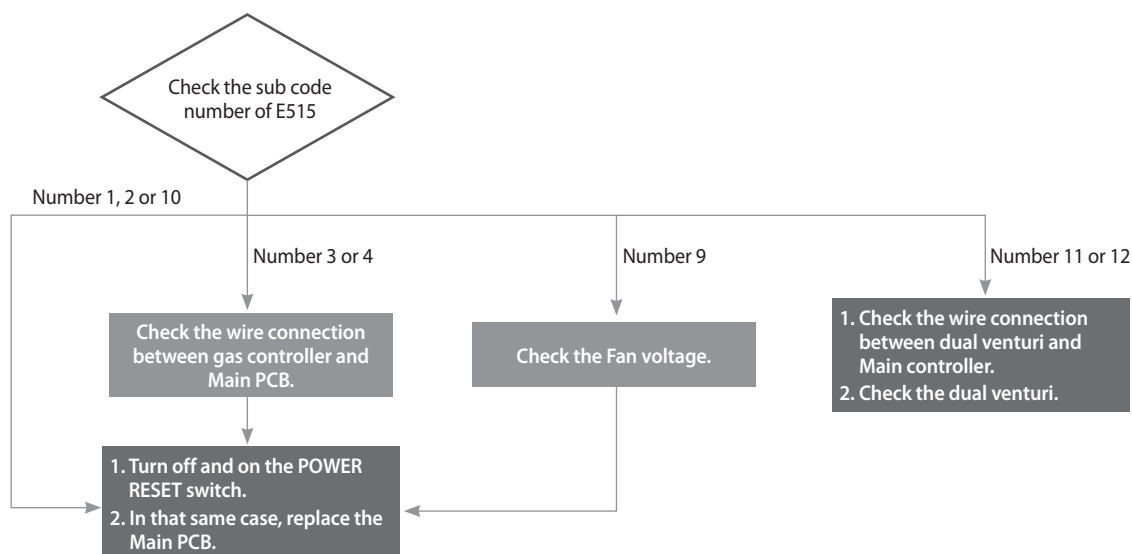


Check method

Fault	Possible Causes	Check method
PCB or Electrical supply	Defective PCB	Replace the PCB if there is an error with the PCB internal circuit.
	Power supply error	Check with a multimeter if the PCB is supplied with the proper voltage. • Check with a multimeter if the voltage at the electrical outlet is AC 102~132 V.
	Power supply grounding noise	Power supply grounding noise causes malfunction. • Disconnect ground from the grounding terminal inside the unit, and check if the PCB is operating normally.


5.1.20 517Error

Error occurrence conditions and check items

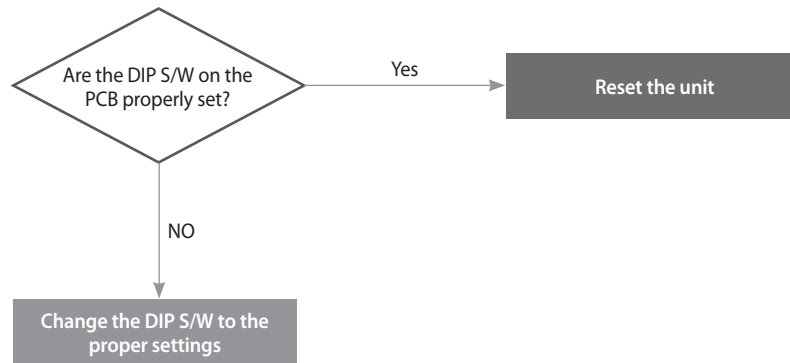

5.1.21 593Error

Error occurrence conditions and check items

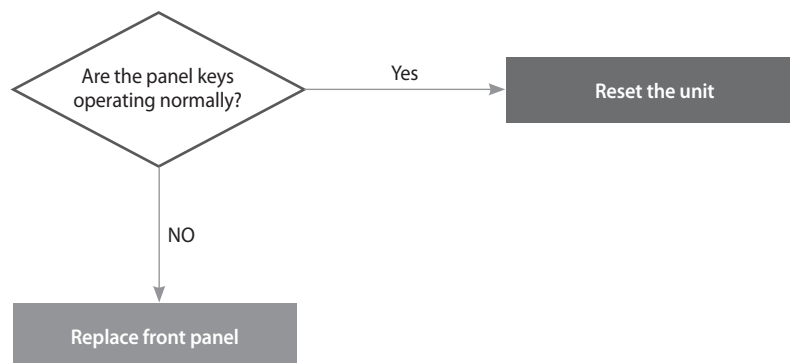

5.1.22 594Error

Error occurrence conditions and check items

Error	Description
E594 error	If the communication is abnormal in parts of PCB, the system displays E594 on the PCB.
Check items	1. Check the PCB.

Check method

Fault	Possible Causes	Check method
E594 Error	Abnormal communication by PCB.	1. Click the Reset button on Front panel. 2. Turn the POWER to the unit OFF then ON. Disconnect then reconnect power if necessary. 3. If the system still displays E594, replace the main PCB.


5.1.23 615Error

Error occurrence conditions and check items

Error	Description
E615 error	Abnormal signal input by PCB.
Check items	1. Turn the POWER RESET switch OFF then ON (or unplug and replug the power supply). 2. If the system still displays E615, replace the main PCB.


5.1.24 736Error

Error occurrence conditions and check items

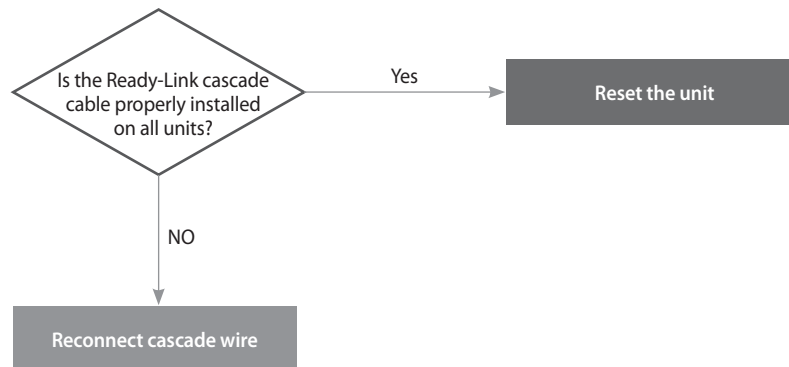

5.1.25 782Error

Error occurrence conditions and check items

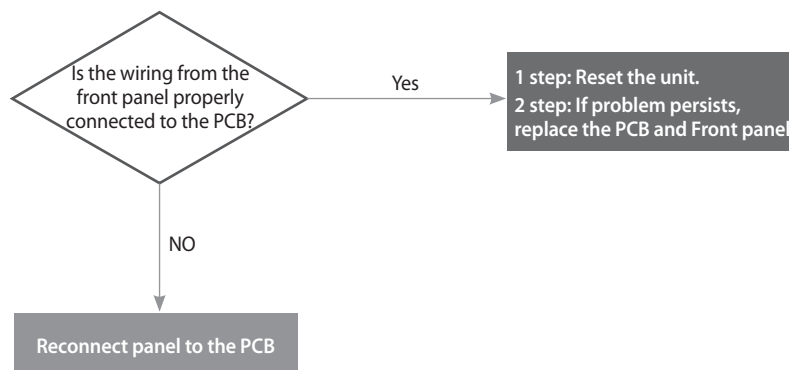

5.1.26 740Error

Error occurrence conditions and check items

Error	Description
E740 Abnormal outdoor sensor	If an error (under 2.2kΩ or over 122.2kΩ) in the outdoor sensor is detected continuously for 3 seconds, The system displays the error message E740 on the front panel. If this occurs, the water heater changes the control mode from Reset Curve Mode to Normal Mode.
Check items	1. Check if the outdoor sensor connector is wet due to any reason, including leakage. 2. Check the Resistance of the outdoor sensor. 3. Check the parameter setting. (refer to page 155) 4. Replace the defected Hot water outlet temperature sensor. 5. Replace the controller.

5.1.27 760Error

Error occurrence conditions and check items

Error	Description
E760 Flushing Alram	If the water heater operate more than set flushing time(day), The system displays the error message E760 on the front panel. If this occurs, the water heater operate with Normal Mode.
Check items	1. Check the water heate and flushing the water heate, if it is required. 2. Reset the timer with reset button on the front panel.

5.1.28 785Error

Error occurrence conditions and check items

Error	Description
E785 Abnormal External Flow Switch	If an AHU heating is OFF and Flow Rate is 0 and Flow Switch is detected continuously for 3 seconds, The system displays the error message E785. If this occurs, the water heater operate AHU heating Mode and operate DHW mode when the water heater detect saved flowrate plus 0.4gpm(1.5 lpm) more.
Check items	1. Check if the Flow Switch is ON or OFF. 2. Check the Resistance of the terminal block. 3. Replace the controller.

5.2 Troubleshooting guide by symptom



5.2.1 Noise

Error type	Cause	Check method
Vibration noise	Defective installation	Incorrect mounting to the wall or in an improper location. • Check for improper installation and reinstall the unit if necessary.
	Fan vibration noise	Vibration caused due to defective blower. • Check the blower. If vibration is significant, replace the fan. • If intermittent noise occurs during operation, check the fan for debris. • If vibration noise occurs during operation of the product, and stops when the case lid is removed, check the fan.
Regular noise	Defective flow sensor	Rotating noise due to debris caught in the flow sensor.
	Malfunction of water adjustment valve	Noise due to repeated opening/closing of water adjustment valve due to a defective PCB.
Noise at ignition	Gas and air differential pressure error (Pop, Beep, Explosive ignition)	- Offset pressure adjustment error (refer to page 29) - Adjust offset pressure with the pressure adjusting screw on the main gas valve. - Set the PCB DIP 4-switch to 1-OFF,2-ON (low fire) or use the Front Panel to set the unit at "MIN.1" (refer to page 40). - If noise occurs at standard value, adjust setting above/below the standard. - Gas supply error due to defective air pressure sensor. - If the same error is repeated, it is due to a defective PCB.
Noise during combustion	Boiling noise	How to check boiling: - Boiling occurs if the water temperature rises to 149 °F ~167 °F (65 °C~75 °C). The heat exchanger is clogged partially due to scale deposits. Flush the main heat exchanger to remove scale. - Replace the heat exchanger if the error occurs from the start of the installation.
	Whirring	Exhaust gas that is recirculated into the water heater through the air inlet could produce abnormal combustion noises. - Check the distance between intake and exhaust (at least 12" (300mm)). - Check the distance between flues if two or more units are installed (at least 12" (300mm)). - Check if there are any obstructions near the flue.
	Low gas pressure (whirring)	- Noise occurs due to low gas pressure. - Check the gas supply pressure (dynamic pressure) - Low gas supply due to offset pressure error. (refer to page 29) - Set the PCB DIP 4-switch to 1-OFF,2-ON (low fire) or use the Front Panel to set the unit at "MIN.1" (refer to page 40).
		Noise due to defective air pressure sensor. • Replace the air pressure sensor.
	Noise during combustion	- Noise due to damaged air pressure hose. - Noise may be intermittent depending on the size of the damage.

5.2.2 Water Temperature Issue

Error type	Cause	Check method
Water heater is not operating properly.	Front panel power off	Hot water does not run if the front panel is switched off.
	Defective flow sensor	The water heater does not work due to the defective flow sensor. • The flow sensor impeller will not rotate if it contains excessive scale or debris. Clean out the flow sensor if possible. • If the impeller rotates normally, replace the flow sensor back into the water heater. • The sensor may be reused temporarily after cleaning, but replacement is recommended.
	Defective hot water temperature sensor	The temperature is sensed higher than the actual temperature due to a defective hot water (cold water) sensor. • Hot water temperature is low although hot water is recognized by the water heater. • The cold water temperature sensor may not work properly.
Low hot water temperature	Hot water setting error	Check the hot water temperature setting on the front panel.
	Water mixed with cold water.	The temperature of hot water at the tap is low while the temperature is high at the hot water outlet. • Cold water and hot water are mixed due to improper pipe installation. • Cold water and hot water are mixed due to improper piping at the hot water faucet.
No hot water from the valve	Check the pipe	1. The cold water valve is closed. 2. Check if the cold water filter is clogged with foreign substance. 3. The water adjustment valve is closed. (Refer to E434 on page 102) 4. Check if the cold water / hot water pipes are frozen during the winter. 5. The main heat exchanger is clogged (by scale). 6. Low inlet water pressure
Cold water flows temporally	Pre-heating does not work	For the A model, the system initiates the internal/external circulation preheating when a recirculation mode is selected on the front panel DIP switches. Confirm the DIP switch settings.

5.2.3 Circuit breaker operation

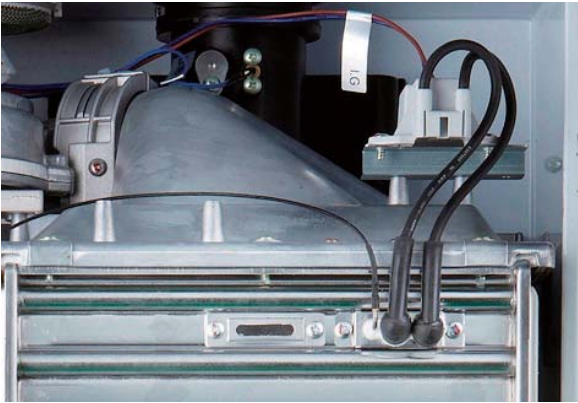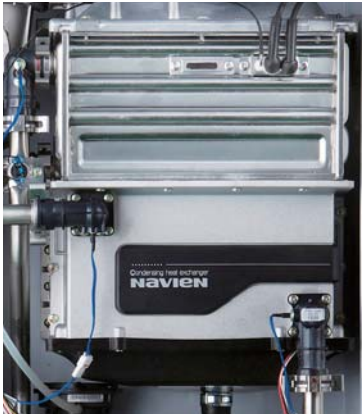Error type	Cause	Check method
Circuit breaker trips	Power supply	The circuit breaker trips immediately as soon as the power cord is plugged in the receptacle. Check the sheath of power cord, or if there is short-circuit. Check the components in order from the power transformer to the PCB.
	Defective part assembly	If the circuit breaker operates after repairs check the wiring of each part. Maintain proper direction when assembling the ignition transformer. Be careful that wire is not compressed when assembling the main gas valve Check if the wire is fixed and properly attached on the main side of the heat exchanger.
	 Normal assembly	
	 Short-circuit due to defective assembly  Wiring near the heat exchanger	
	Circuit breaker operates while the water heater is running	If circuit breaker trips during the operation of the water heater, check the order of operation, and replace the concerned part. e.g., The circuit breaker operates at switchover to burner stage 2 after ignition. ► Replace the dual venturi.
Remote controller power	Check the wire	Check the power supply to the remote controller terminal. (DC 19 V or higher). If there is a problem in power supply, check the output voltage of the PCB, and take the action separately for wiring error and defective PCB, respectively. If the power supply is normal, replace the remote controller.

6. Replacement of Parts

6.1 Replacement Procedure

CAUTION

1. When performing maintenance and/or servicing the water heater, always turn off the electric power, gas and water shut-off valve. Wait for the water heater to become cool. Be careful to avoid injury to your fingers on sharp edges.
2. Drain all water from the water heater when removing the waterway components.
3. Before any disassembly, make sure that all issues and error codes are properly diagnosed.
4. Handle all parts carefully.
5. When reassembling, prevent any foreign substance, i.e. dust, etc. from entering back into the water heater.
6. After reassembling, check for gas and water leakage. Then, test for proper ignition. Make sure that there is no gas leakage from the gas connections by testing with soap bubble solution. Bubbles indicate a gas leak that must be corrected.
7. Check the performance and operation after the water heater has been serviced.

To remove and replace any parts from the water heater, you will need a screwdriver that is at least 8 ~ 10 inches long. A flashlight and magnetic tip are also recommended. Navien recommends the use of a parts tray to hold small parts and screws. All of the hardware is essential to the proper operation of the unit upon re-assembly.

NOTE

When disassembling and reassembling the water heater, refer the components diagram & parts list.

6.2 Components Replacement Instructions

6.2.1 PCB

1. Turn off the gas supply to the unit.
2. Disconnect the unit from the power supply.
3. Turn off the water supply to the unit.
4. Remove the screws that are located near the top and bottom of the PCB that hold it in place as shown in Figure 1.

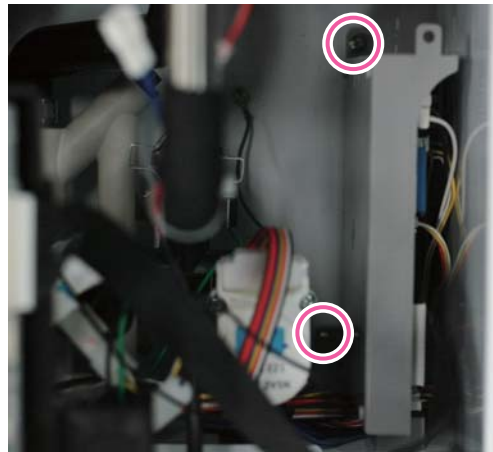


Figure 1

5. Disconnect all wiring connectors from the PCB as shown in Figure 2.



Figure 2

6. Remove the 2 screws located on the back of the case.

7. Remove the old PCB and replace it with the new part.
8. Reattach all wiring connectors to the PCB.
9. Set the proper DIP S/W settings on the PCB (refer to page 90).
10. Reinstall the PCB using the 2 screws previously removed.
11. Turn on the water and gas supplies, then reconnect the power supply to the unit.



NOTE

All wiring harness connections to the PCB should match in color and pintypes. Do not use excessive force when removing the connectors as this may cause damage to the PCB.

6.2.2 Fuse

1. Turn off the gas supply to the unit.
2. Disconnect the unit from the power supply.
3. Locate the fuse housing shown in **Figure 3** below. Open the housing to expose the fuse.

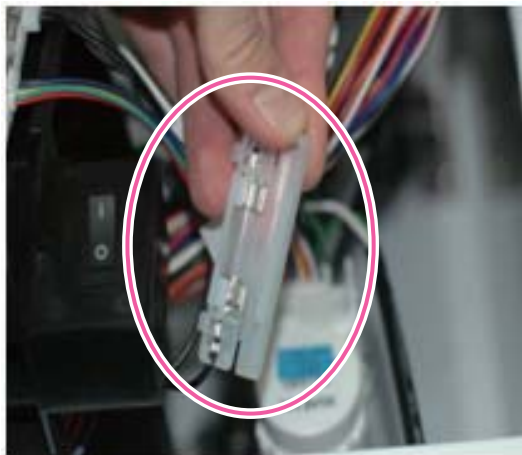


Figure 3

4. Replace the old fuse with the new part.
5. Ensure that the new fuse is of an equivalent rating and that it is properly fixed inside the housing.
6. Close the fuse housing.
7. Turn on water supply, power supply, and gas supply to the unit.

6.2.3 Fan Motor (Combustion Air)

1. Turn off the gas supply to the unit.
2. Disconnect the unit from the power supply.
3. Turn off the water supply to the unit.
4. Remove the mounting screw from the fan assembly as shown in Figure 4 below.
5. Remove the fan assembly bracket with the attached intake port.

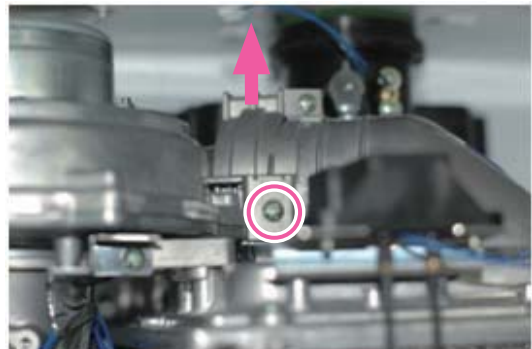


Figure 4

6. Disconnect the wiring connector from the fan assembly, and then remove the 4 screws from the gas valve connection as shown in Figure 5 below.

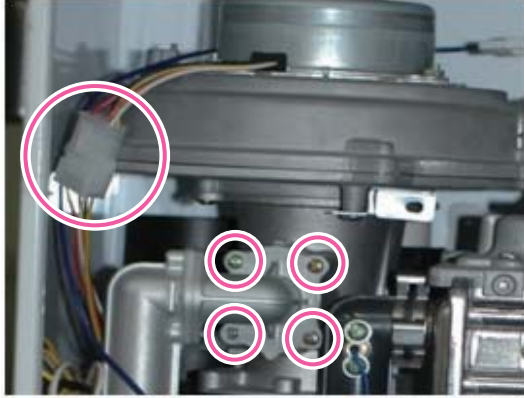


Figure 5

7. Pull out the fan assembly and remove the 4 screws that secure the air intake port to the fan assembly.
8. Remove the four screws from the bottom of the fan assembly.



Figure 6

9. Detach the fan motor from the assembly and replace it with the new part.
10. Replace the 4 screws used to attach the fan motor to the assembly.
11. Remove procedure of gas pipe from gas valve.

12. Reinstall the fan assembly to the bracket by using the mounting screw.
13. Attach the gas valve connection back to the fan assembly by using the 4 screws as shown in Figure 5.
14. Reconnect the wiring connector from the fan assembly.
15. Turn on water supply, power supply, and gas supply to the unit.



NOTE

Do not over-tighten the screws for the fan motor replacement with high torque drill. This may cause damage to the part(s).

6.2.4 Flame Rod

1. Turn off the gas supply to the unit.
2. Disconnect the unit from the power supply.
3. Turn off the water supply to the unit.
4. Remove the Ignition Transformer insulated cables.
5. Remove the 2 screws from the flame rod as shown in Figure 7 below.

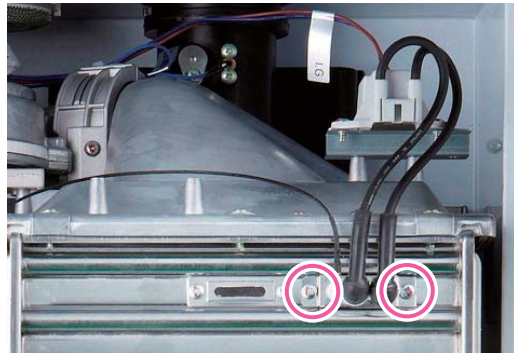


Figure 7

6. Remove the flame rod wiring connector.

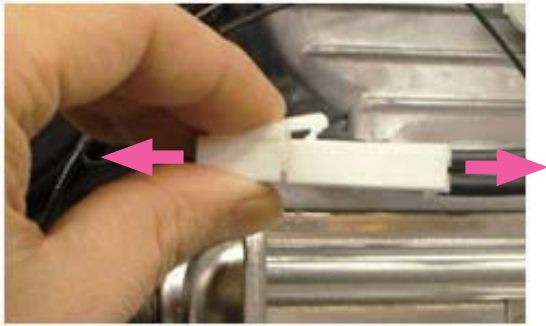


Figure 8

7. Remove the flame rod from the burner assembly and replace with the new part.
8. Reconnect the 2 ignition transformer insulated cables to the new flame rod.
9. Place the new flame rod back onto the burner assembly and secure it by using the 2 screws from Figure 7.
10. Turn on water supply, power supply, and gas supply to the unit.



NOTE

Always use new factory gaskets included with the flame rod when replacing the part onto the burner assembly.

6.2.5 Ignition Transformer

1. Turn off the gas supply to the unit.
2. Disconnect the unit from the power supply.
3. Turn off the water supply to the unit.
4. Remove the Ignition Transformer insulated cables from the flame rod.

5. Disconnect the wiring connector from the Ignition Transformer (Figure 9).

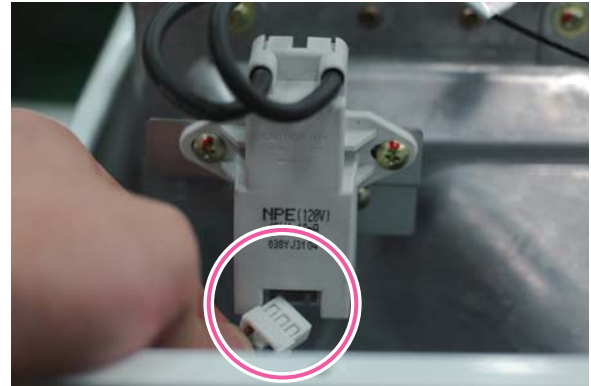


Figure 9

6. Remove the 2 screws from the Ignitor Transformer.

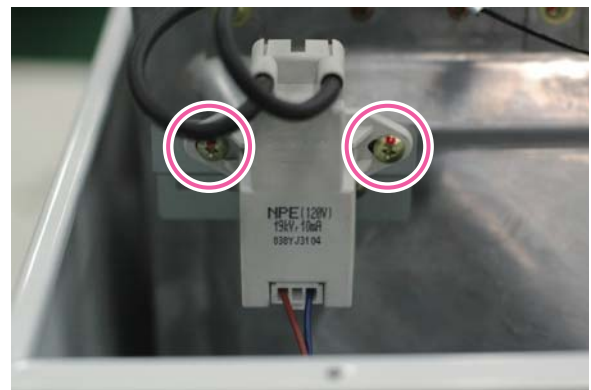


Figure 10

7. Pull out the Ignition Transformer.
8. Replace the old Ignition Transformer with the new part, and then use the 2 screws to secure the part.
9. Reconnect the Ignition Transformer insulated cables to the flame rod.
10. Reattach the wiring connectors from the Ignition Transformer.
11. Place the front panel back onto the unit and secure it by using the 4 screws.
12. Turn on water supply, power supply, and gas supply to the unit.



NOTE

Verify that the Ignition Transformer insulated cables are firmly connected to the flame rod.

6.2.6 APS

1. Turn off the gas supply to the unit.
2. Disconnect the unit from the power supply.
3. Turn off the water supply to the unit.
4. Remove the air pressure sensor wiring connector (Figure 11).



Figure 11

5. Remove the hose from the air pressure sensor.

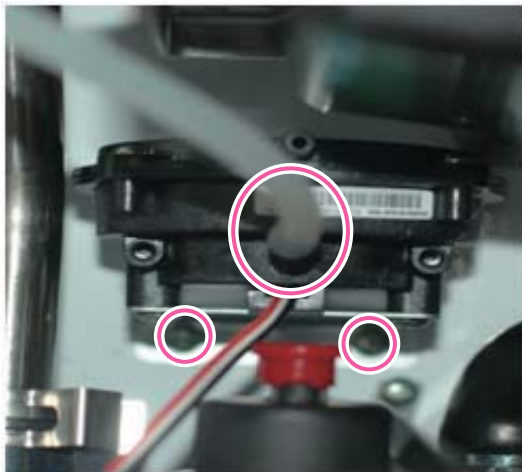


Figure 12

6. Remove the 2 screws that attaches the air pressure sensor to the burner assembly.
7. Pull out the air pressure sensor.
8. Replace the old air pressure sensor with the new part.
9. Reattach the air pressure sensor hose.
10. Connect the air pressure sensor wiring connector.
11. Place the front panel back onto the unit and secure it using the 4 screws.
12. Turn on water supply, power supply, and gas supply to the unit.



NOTE

Confirm that the new air pressure sensor is in the proper position before turning the unit back on.

6.2.7 Main Gas Valve

1. Turn off the gas supply to the unit.
2. Disconnect the unit from the power supply.
3. Turn off the water supply to the unit.
4. Remove the 2 screws.
5. Disconnect the wiring connector at the gas valve.



Figure 13

6. Remove the 4 screws located at the bottom of the unit that are attached to the gas valve.



7. Remove the 4 screws directly on the bottom of the gas valve to remove the gas pipe.

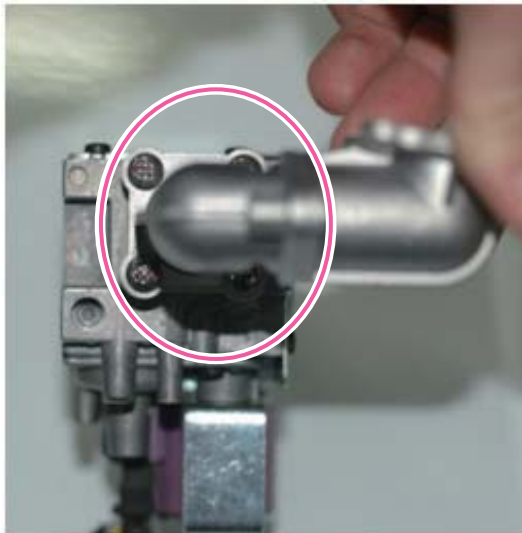


Figure 14



Figure 15

8. Remove the 4 screws directly from the bottom of the gas valve to remove the elbow.
9. Replace the O-ring where the gas valve assembly attaches to the elbow. Make sure the old O-ring is discarded.
10. Replace the old gas valve with the new part and reattach the elbow and gas pipe to the gas valve.
11. Reconnect the gas valve assembly to the unit by using the 4 screws at the elbow and 2 screws at the gas pipe.
12. Reattach the gas valve wiring connector.



WARNING

Failure to correctly assemble the components according to these in-structions may result in a gas leak or explosion.

13. Check that all gas connections are tightly sealed to ensure that no gas leaks are present.
14. Turn on water supply, power supply, and gas supply to the unit.
15. Verify the gas pressures to the unit with the values provided in this Service Manual.



NOTE

Always replace the old O-rings and gaskets with new parts to ensure tight seals between connections. Ensure that all properly sized O-rings are used for the replacement.

6.2.8 Condensate Trap

1. Turn off the gas supply to the unit.
2. Disconnect the unit from the power supply.
3. Turn off the water supply to the unit.
4. Remove the pin that secures the condensate drain cap and then remove the cap. Use a bucket to collect the condensate.



Figure 16

5. Detach the condensate piping from the unit.
6. Remove the 3 screws located at the bottom of the unit that are attached to the condensate trap.



Figure 17

7. Loosen the clip that secures the hose to the condensate trap, and then pull off the hose.

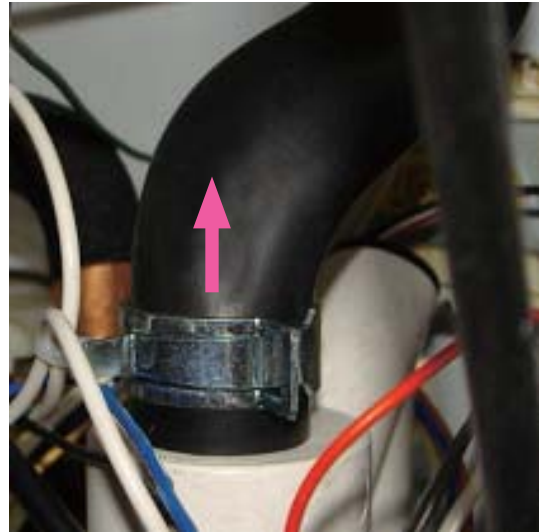


Figure 18

8. Remove the old condensation trap and replace it with the new part.
9. Reconnect the hose to the condensate trap.
10. Reattach the condensation trap to the unit and secure it using the 5 screws.
11. Replace the controller to its original position.
12. Turn on the water supply, power supply, and gas supply to the unit.



NOTE

Ensure that the condensate drain trap is completely inserted into the condensate fitting to eliminate leaking. Use the pin to secure the cap to the fitting.

6.2.9 Flow Sensor

1. Turn off the gas supply to the unit.
2. Disconnect the unit from the power supply.
3. Turn off the water supply to the unit. Drain all water from the appliance.
4. Remove the stainless clip and four screws at the flow sensor.

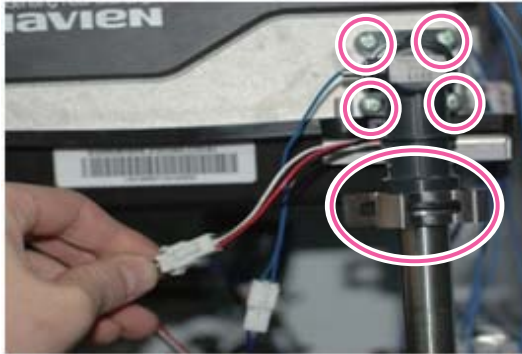


Figure 19

5. Detach the 2 wire connectors that connect the flow sensor to the PCB.

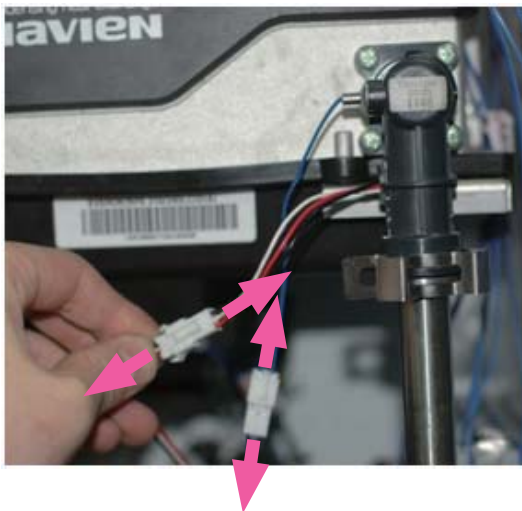


Figure 20

6. Pull out the flow sensor.
7. Replace with old flow sensor with the new part.
8. Reinstall the flow sensor into the cold water inlet pipe and reattach the stainless clip. Ensure that the flow sensor is properly connected to the cold water inlet pipe and that the clip is tightly holding the two parts together.
9. Reinstall the four screws at the flow sensor to secure the part to the heat exchanger.
10. Turn on water supply, power supply, and gas supply to the unit.
11. Carefully open a hot water tap and ensure there are no leaks at the flow sensor connections.

6.2.10 Buffer Tank

1. Turn off the gas supply to the unit.
2. Disconnect the unit from the power supply.
3. Turn off the water supply to the unit. Drain all water from the appliance.
4. Remove the gas valve to gain access to the buffer tank (refer to the gas valve replacement procedures).

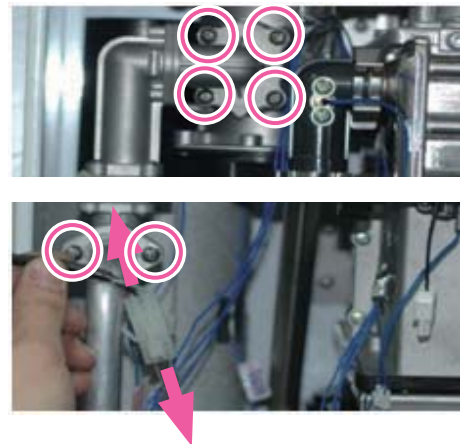


Figure 21

5. Remove the clip at the bottom of the buffer tank.



Figure 22

6. Remove the 3 mounting screws from the buffer tank.

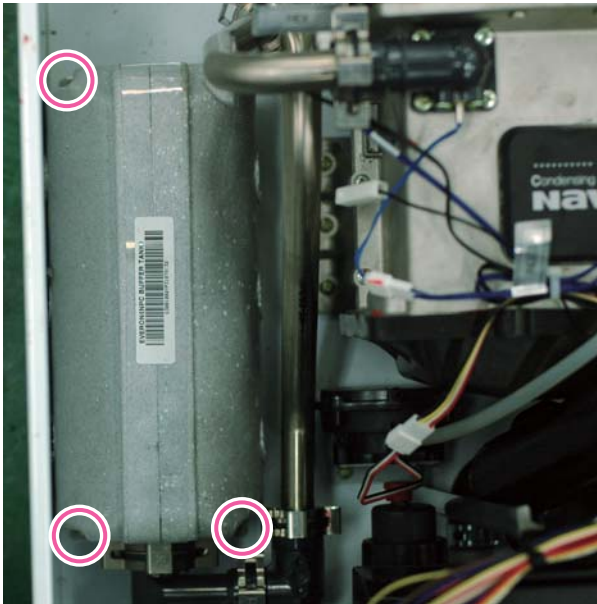


Figure 23

7. Pull out the buffer tank.
8. Replace the old buffer tank with the new part.
9. Reinstall the buffer tank by using the 4 mounting screws.
10. Attach the gas valve assembly back onto the unit (refer to the gas valve replacement procedures).

11. Turn on water supply, power supply, and gas supply to the unit.

12. Carefully open a hot water tap and ensure there are no leaks at the buffer tank connections.



NOTE

1. Use caution when removing the buffer tank from the unit as it may contain scalding hot water.
2. Use properly sized O-rings at the buffer tank connections.
3. Protect the electrical components as contact with excess water could cause damage.

6.2.11 Circulation Pump

1. Turn off the gas supply to the unit.
2. Disconnect the unit from the power supply.
3. Turn off the water supply to the unit. Drain all water from the appliance.
4. Remove the 3 screws from the bottom of the case along with the screw that connects the rear bracket to the case in order to detach the front panel from the unit.

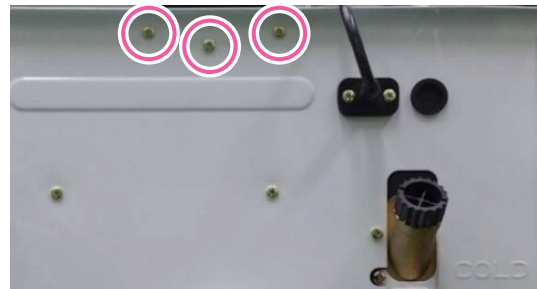


Figure 24

5. Move the controller aside for better access to the Circulation Pump.
6. Remove the 2 screws from the bottom of the case.

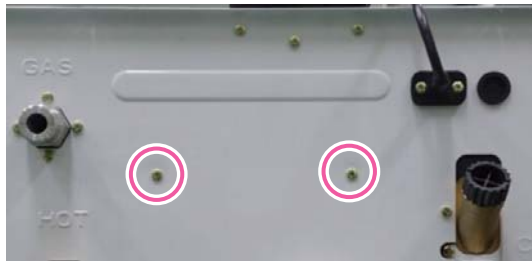


Figure 25

7. Unscrew the pump drain plug.
8. Remove the stainless steel clip and 2 screws from the pump as shown in Figure 26.

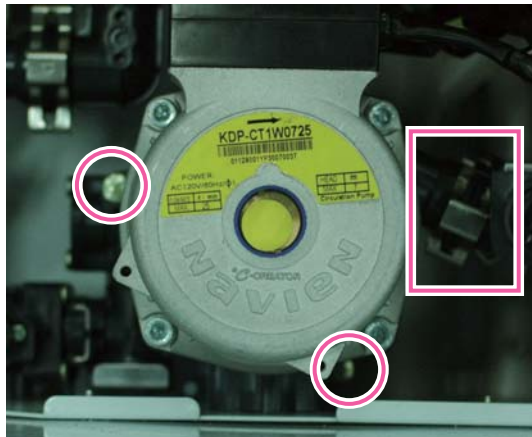


Figure 26

9. Disconnect the wiring connector at the pump assembly.

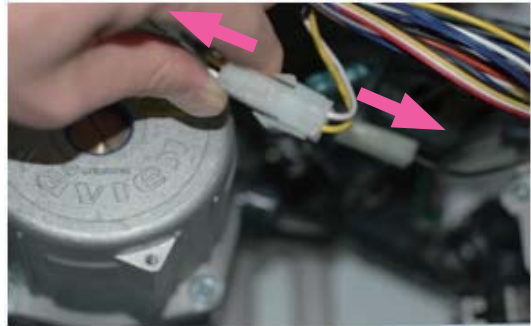


Figure 27

10. Carefully remove the pump.



Figure 28

11. Replace with the new pump.
12. Place the new pump back into its original position and ensure that all connections are tightly sealed.
13. Secure the pump with the stainless steel clip and the 2 fixing screws.
14. Reinstall the pump drain plug at the bottom of the unit.
15. Reconnect the wiring connector at the pump.
16. Attach the controller back onto the unit by using the 3 screws at the bottom of the unit.
17. Fix the pump bracket to the case with the mounting screw.

18. Use the 4 screws at the bottom of the case to fix the pump to the unit.
19. Install front panel using 4 screws.
20. Turn on water supply, power supply, and gas supply to the unit.
21. Open a hot water tap and ensure that there are no leaks at the pump connections.
22. Open the air vent on top of pump to release air within the system.



NOTE

Always use proper O-rings at the pump connection to ensure tight seals

6.2.12 2-Way Valve

1. Turn off the gas supply to the unit.
2. Turn off the 120V power supply to the unit.
3. Turn off the water supply to the unit. Drain all water from the appliance.
4. Remove the 3 screws at the hot water outlet fitting to loosen the 2-way valve that is attached to the hot water outlet fitting.



Figure 29

5. Remove the 4 stainless steel clips from the connections (2 round clips and 2 flat clips).

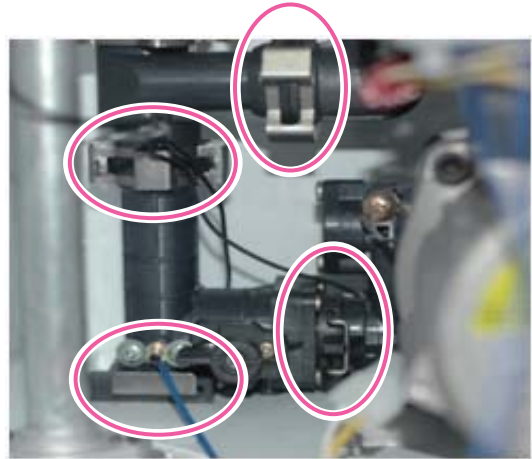


Figure 30

6. Disconnect the wiring connector at the 2-way valve.

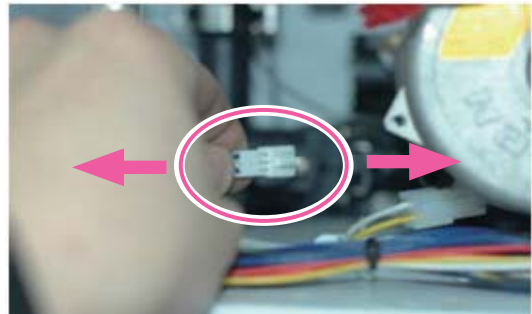


Figure 31

7. Remove the 3 buffer tank screws and pull out the buffer tank

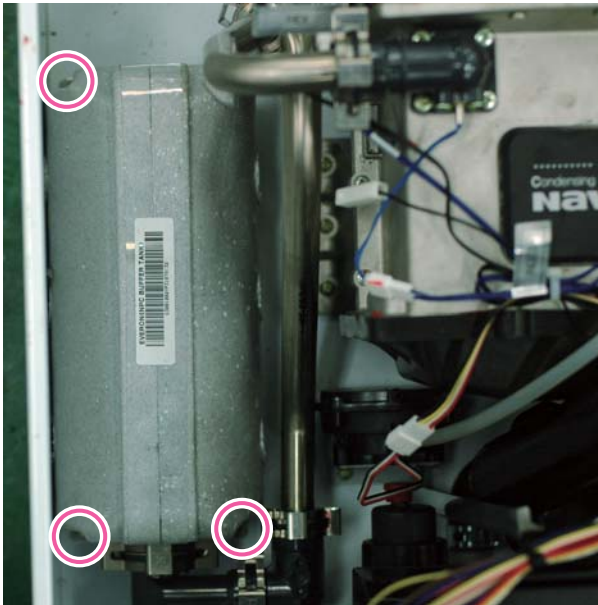


Figure 32

8. Replace with new 2-way valve.
9. Place the 2 round stainless steel clips and 2 flat stainless clips back onto the 2-way valve connections.
10. Replace the 4 buffer tank mounting screws.
11. Reconnect the wiring connector at the 2-way valve.
12. Place the front panel back onto the unit using 4 screws.
13. Turn on water supply, power supply, and gas supply to the unit.
14. Open a hot water tap and ensure there are no leaks at the water heater.

6.2.13 Water Adjustment Valve

1. Turn off the gas supply to the unit.
2. Disconnect the unit from the power supply.
3. Turn off the water supply to the unit. Drain all water from the appliance.
4. Disconnect the mixing valve wire connector.



Figure 33

5. Remove the 2 stainless steel clips from the water adjustment valve connections.


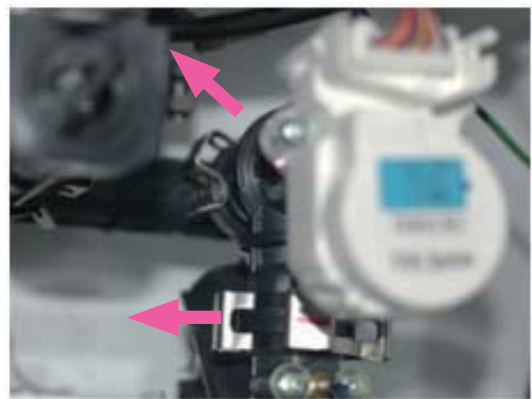


Figure 34

6. Remove the water adjustment valve.
7. Replace with the new water adjustment valve.
8. Place the 2 stainless steel clips back onto the valve connections. Ensure that the clips are securely holding the connection together to prevent leaks.
9. Reattach the water adjustment valve wire connectors.
10. Turn on water supply, power supply, and gas supply to the unit.
11. Open a hot water tap and ensure there are no leaks at water adjustment valve connections.


7. Components Diagram and Part List

7.1 Case Assembly

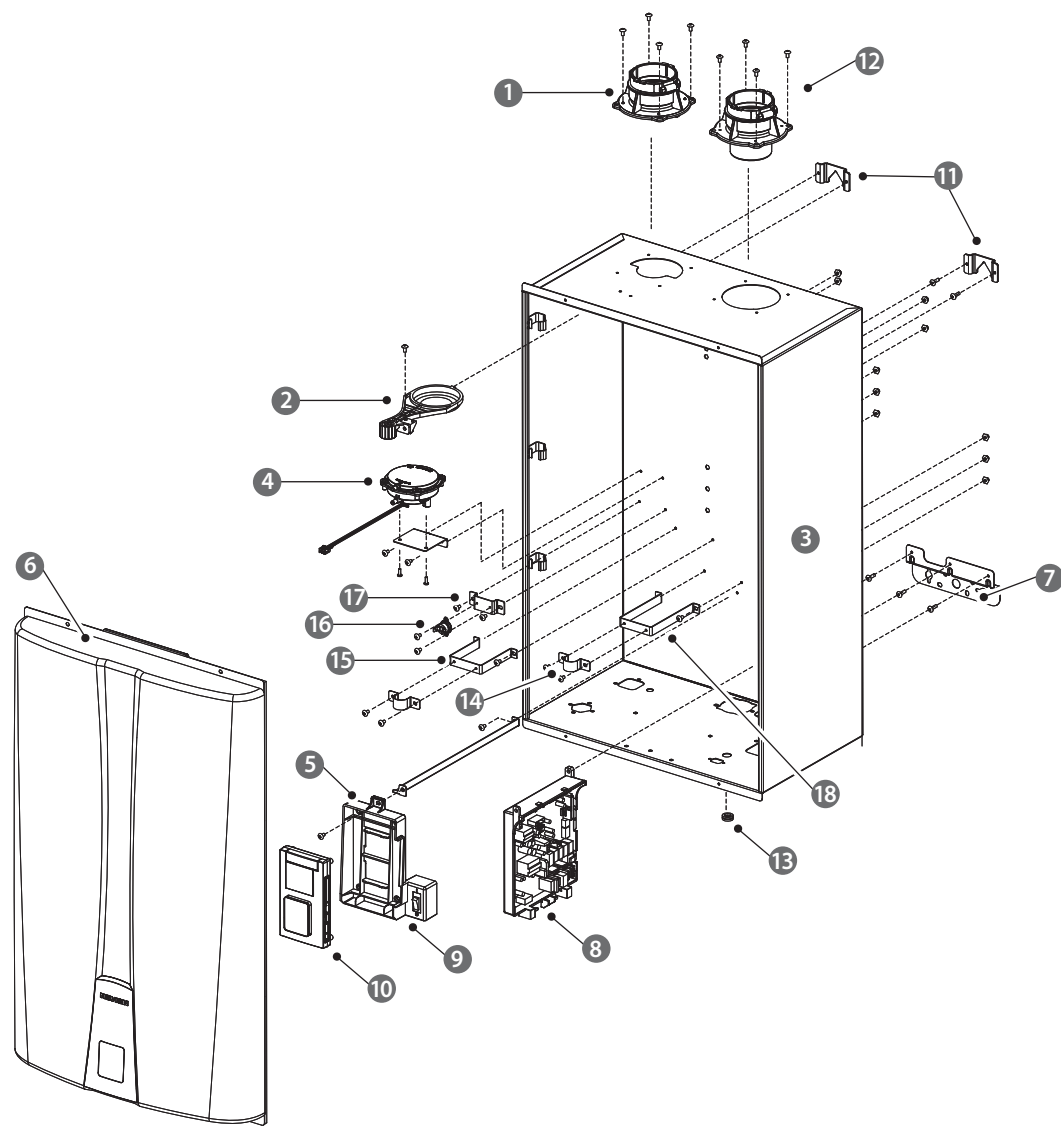


#	Description	Part #	Remark
1	Intake Air Duct Assembly	30008662B	
2	Intake Air Filter	20007667A	
3	Case	20019078C	NPE-180A/210A/240A
		20026559B	NPE-150S/180S/210S/240S
4	Air Pressure Sensor	30010346A	
5	Panel Bracket	20018388A	
6	Cover	30008678B	NPE-180A/210A/240A
		30011694A	NPE-150S/180S/210S/240S
7	Case Lower Bracket	20007643B	
8	PCB	30011969A	
9	Power Switch	30009482A	
10	Front Panel	30008333A	
11	Case Bracket	20007609A	
12	Exhaust Pipe Assembly	30008673A	
13	Rubber Ring	20025127A	
14	Saddle	20013508A	NPE-150S/180S/210S/240S
15	Saddle Bracket 1	20026170A	NPE-150S/180S/210S/240S
16	Freeze Protector Sensor	30002587A	NPE-150S/180S/210S/240S
17	Freeze Protector Sensor Bracket	20007671A	NPE-150S/180S/210S/240S
18	Saddle Bracket 2	20026172A	NPE-150S/180S/210S/240S

7.2 Burner Assembly(NPE-180A/ 210A/ 240A)

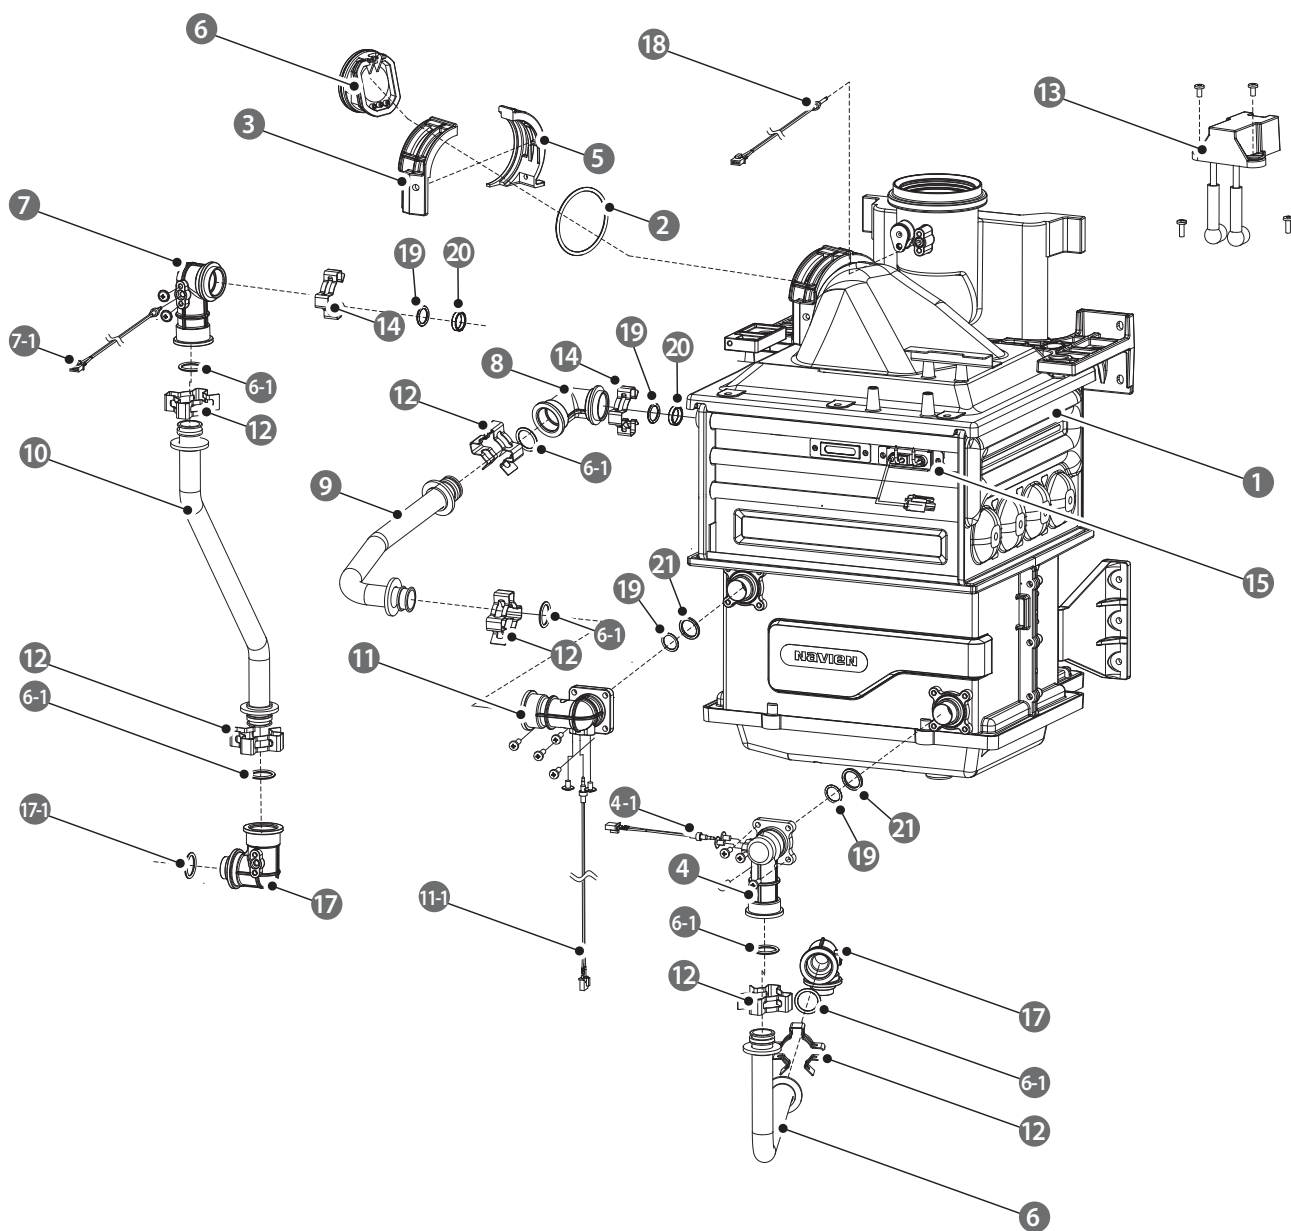


#	Description	Part #	Remark
1	Heat Exchanger Assembly	30009189A	NPE-180A
		30010812A	NPE-210A
		30008780A	NPE-240A
2	Fan O-Ring (G50)	20003019A	
3	Fan Bracket(F)	20022095A	
4	Flow Sensor Assembly	30008571A	
4-1	Thermistor	30008366A	
5	Fan Bracket(R)	20022096A	
6	Cold Inlet Pipe	30009166A	NPE-180A
		30010805A	NPE-210A
		30008446A	NPE-240A
6-1	O-Ring (Φ17.5x2.7t)	20006947A	
7	WPA-A (Clip)	20018344A	
7-1	Thermistor	30008366A	
8	WPA-B	20018343A	
9	H-Ex Middle Pipe	30009126A	NPE-180A
		30010803A	NPE-210A
		30008439A	NPE-240A
10	Hot Water Outlet Pipe	30009145A	NPE-180A
		30008442A	NPE-210A/240A
11	WPA-A (Screw)	30008569A	
11-1	Thermistor	30008366A	
12	Fastner	20017726A	
13	Ignition Transformer	30010455A	
14	Fastner	20007853A	
15	Ignitor	30012226A	
16	Damper	30008825A	
17	Buffer Tank Inlet Adapter	20018346A	
17-1	O-Ring (P16)	20017210A	
18	Thermistor	30009478A	
19	O-Ring (Φ17.5x2.7t)	20006947A	
20	Backup Ring	20018744B	
21	Packing (Φ26.5x2.4t)	20006868A	

7.3 Burner Assembly(NPE-150S/ 180S/ 210S/ 240S)

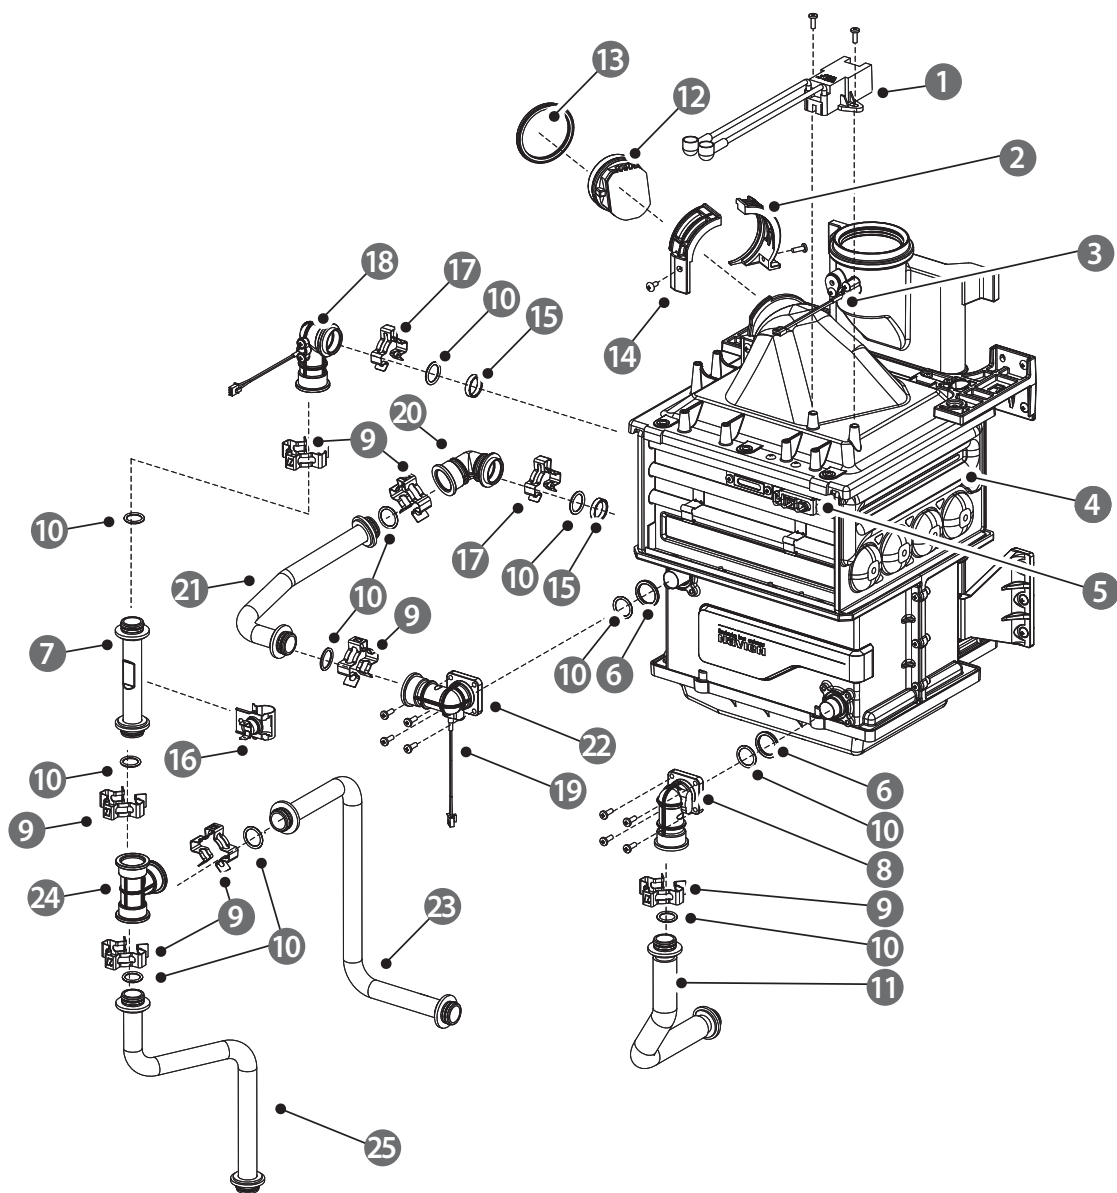

#	Description	Part #	Remark
1	Ignition Transformer	30010455A	
2	Fan Bracket (R)	20022096A	
3	Thermistor	30009478A	Exhaust
4	Heat Exchanger Assembly	30214351A	NPE-150S
		30011706A	NPE-180S
		30011705A	NPE-210S
		30011704A	NPE-240S
5	Ignitor	30214183A	NPE-150S
		30012226A	NPE-180S/210S/240S
6	Packing (Φ26.5x2.4t)	20006868A	
7	Heat Exchanger Outlet Pipe	30014326A	NPE-150S
		30011519A	NPE-180S
		30011515A	NPE-210S/240S
8	WPA-C (Screw)	20026780A	
9	Fastner	20017726A	
10	O-Ring (Φ17.5x2.7t)	20006947A	
11	Cold Inlet Pipe	30214751A	NPE-150S
		30011521A	NPE-180S
		30011665A	NPE-210S
		30011517A	NPE-240S
12	Fan Damper	30008825A	
13	Fan Packing	20022744A	
14	Fan Bracket (F)	20022095A	
15	Backup Ring	20018744B	
16	High Limit Switch	30002577A	
17	Fastner	20007853A	
18	WPA-A (Clip)	20018344A	
19	Thermistor	30008366A	Water
20	WPA-B	20033191A	NPE-150S
		20018343A	NPE-180S/210S/240S
21	H-Ex Middle Pipe	30014330A	NPE-150S
		30009126A	NPE-180S/180A
		30010803A	NPE-210S/210A
		30008439A	NPE-240S/240A
22	WPA-A (Screw)	30008569A	
23	Mixing Pipe	30014327A	NPE-150S
		30011518A	NPE-180S
		30011514A	NPE-210S/240S
24	WPA-T	20025960A	
25	Hot Water Outlet Pipe	30014328A	NPE-150S
		30011520A	NPE-180S
		30011516A	NPE-210S/240S


7.4 Waterway Assembly(NPE-150S/ 180S/ 210S/ 240S)

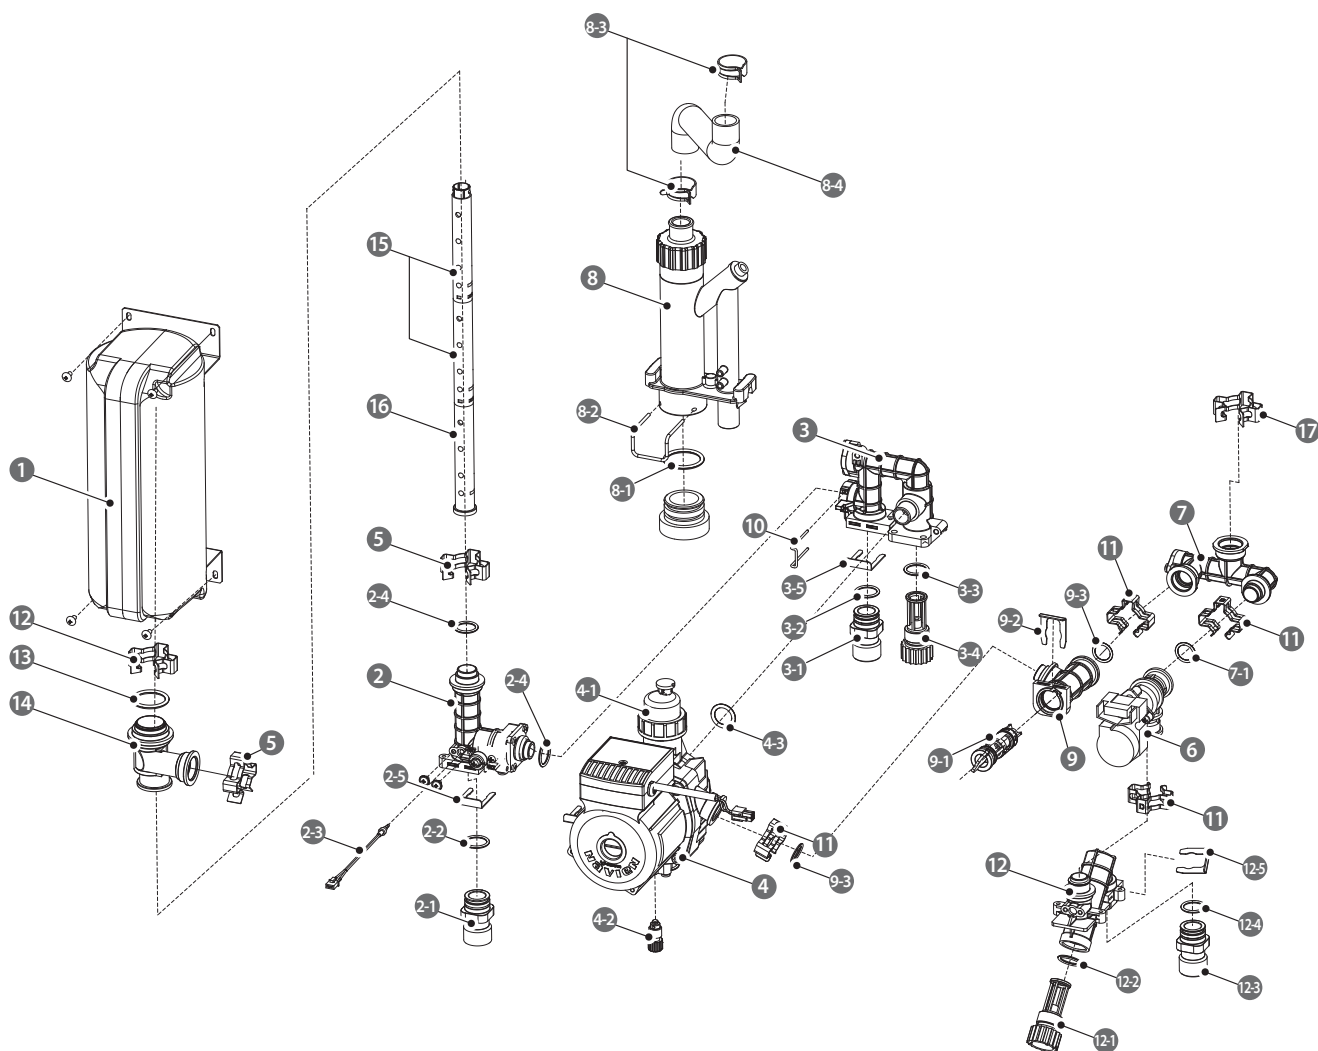

#	Description	Part #	Remark
1	Buffer Tank	30009030A	
2	Hot Water Outlet Pipe Assembly	30008338A	
2-1	Pipe Adapter	20024496A	
2-2	O-RING (P20)	20017212A	
2-3	Thermistor (Red)	30008366A	
2-4	O-RING (P16)	20017210A	
2-5	Pipe Clip	20007733B	
3	Return Pipe Assembly	30008350A	
3-1	Pipe adapter	20024496A	


#	Description	Part #	Remark
3-2	O-RING (P20)	20017212A	
3-3	O-RING (P19)	20017211A	
3-4	Water Filter	30008171A	
3-5	Pipe Clip	20007733B	
4	Circulation Pump	30010780A	
4-1	Pump Air Separator	30006831B	
4-2	Drain Plug	30008630A	
4-3	O-RING (P18)	20006947A	
5	Fastner	20017726A	
6	Water adjustment valve (WAV)	30008245A	
7	WAV Outlet Pipe Assembly	30008624A	
7-1	O-Ring (P16)	20017210A	
8	Syphon	30009756B	
8-1	O-Ring (Φ31.7x3.5t)	20018013A	
8-2	Syphon Clip	20018155A	
8-3	Hose Clip	20007833A	
8-4	Syphon Hose	20018429A	
9	Pump Outlet Pipe Assembly	30008361A	
9-1	Check Valve	30008359A	
9-2	Pipe Clip	20017722A	
9-3	O-Ring (P16)	20017210A	
10	Return Pipe clip	20017767A	
11	Fastner	20007859A	
12	Cold Water Inlet Pipe Assembly	30009437A	
12-1	Water Filter	30008171A	
12-2	O-RING (P19)	20017211A	
12-3	Pipe adapter	20024496A	
12-4	O-RING (P20)	20017212A	
12-5	Pipe Clip	20007733B	
13	O-RING (P29)	20017923A	
14	Buffer Tank adapter	20017757A	
15	Buffer tank pipe A	20017759A	
16	Buffer tank pipe B	20017760A	
17	Fastner	20017724A	

7.5 Waterway Assembly(NPE-150S/ 180S/ 210S/ 240S)

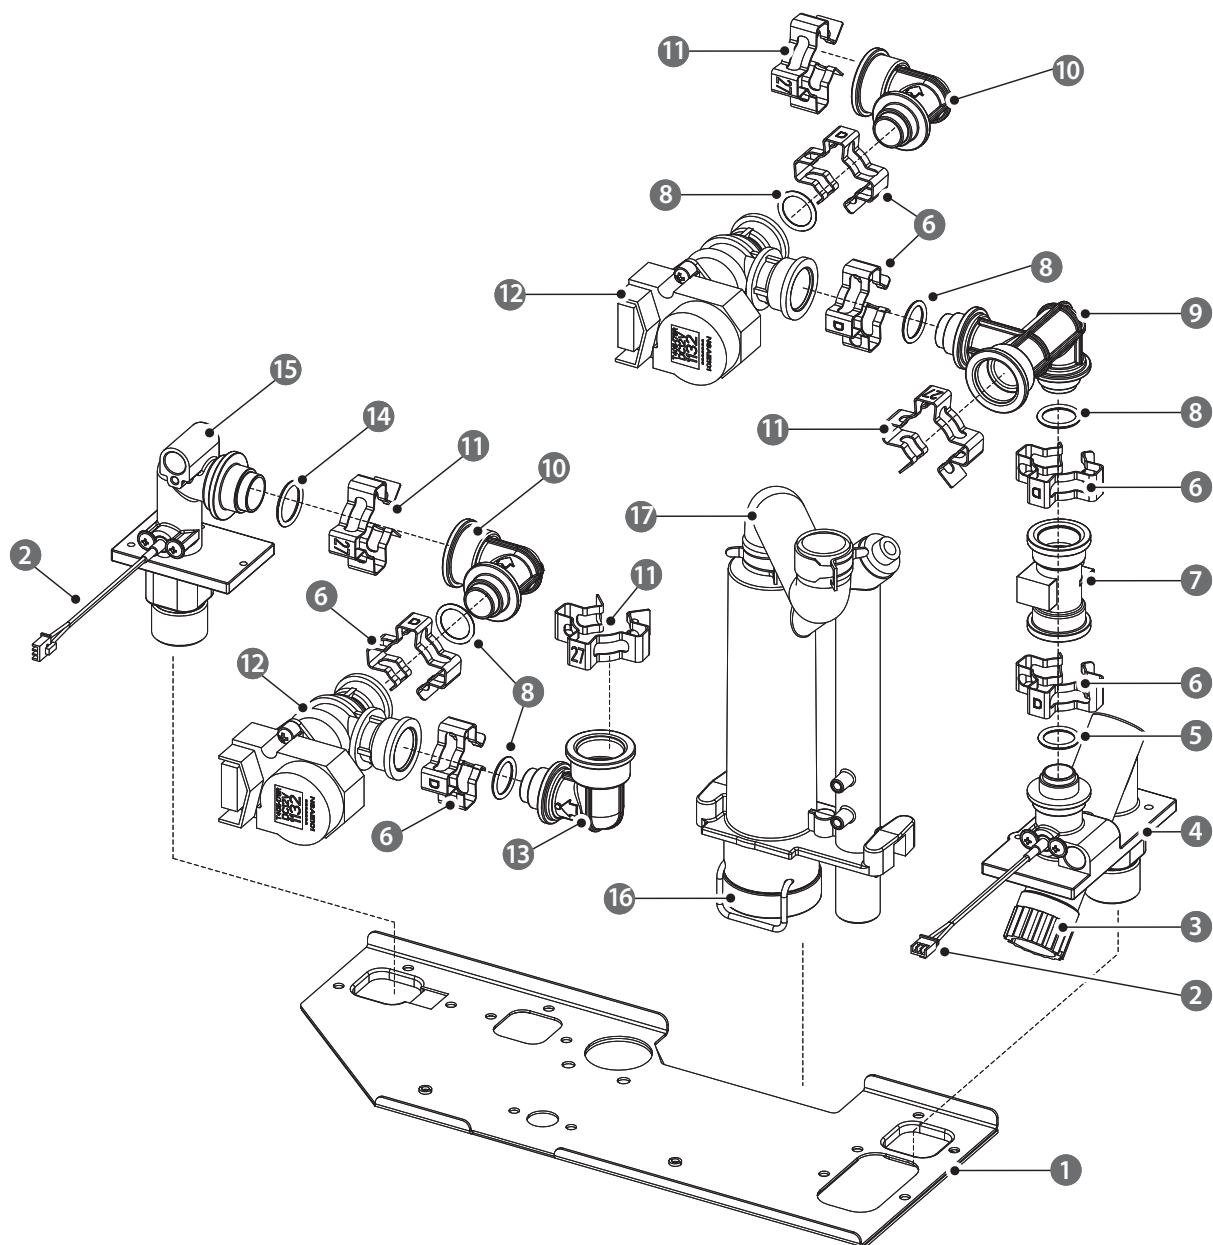


#	Description	Part #	Remark
1	Bracket	20026489A	
2	Thermistor	30008366A	
3	Water Filter	30008171A	
4	Cold Water Inlet Adapter	30011597A	
5	O-Ring (P15)	20017217A	
6	Fastner	20007859A	
7	Flow Sensor	30011534A	
8	O-Ring (P16)	20017210A	
9	Flow Sensor Outlet Adapter	20025959A	
10	Outlet Adapter	20025961A	
11	Fastner	20017726A	
12	Water Adjustment Valve (WAV)	30011532A	
13	Inlet Adapter	20025962A	
14	O-Ring (P18)	20006947A	
15	How Water Outlet Adapter	30011601A	
16	Siphon	30009756B	
17	Siphon Hose	20018429A	

7.6 Fan(Gas) Assembly

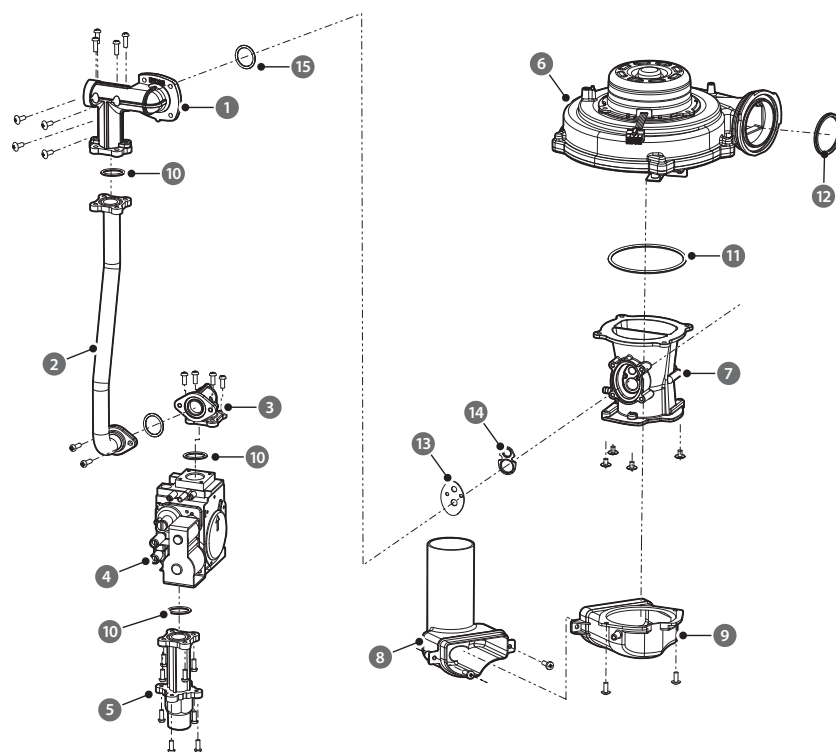

[NPE-180S/180A/210S/210A/240S/240A]

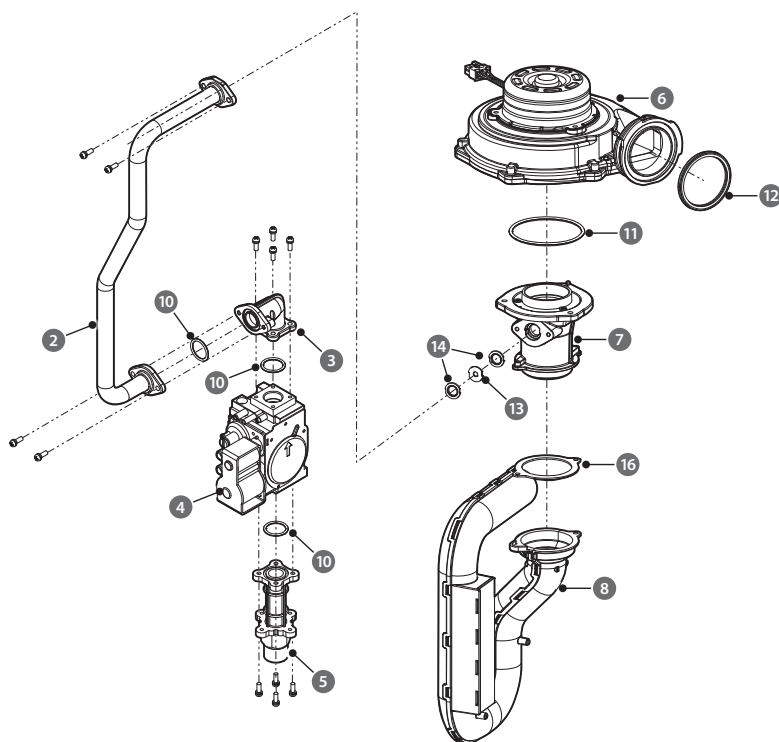

[NPE-150S]

#	Description	Part #	Remark
1	Gas Adapter	30009921A	NPE-180S/180A
		30009922A	NPE-210S/210A/240S/240A
2	Gas Pipe	30014329A	NPE-150S
		30013323A	NPE-180S/180A
		30008431A	NPE-210S/210A/240S/240A
3	Gas Connector	20018430A	
4	Gas Valve	30008429A	
5	Gas Inlet Adapter	20023809A	
6	Fan Assembly	30015421A	NPE-150S
		30008834A	NPE-180S/180A/210S/210A/240S/240A
7	Single Venturi	30014688A	NPE-150S
	Dual Venturi	30009219A	NPE-180S/180A
		30008909A	NPE-210S/210A/240S/240A
8	Silence	30015322A	NPE-150S
		20019142A	NPE-180S/180A
		20023829A	NPE-210S/210A/240S/240A
9	Silence Adapter	20023861A	NPE-180S/180A
		20019141A	NPE-210S/210A/240S/240A
10	O-Ring (P20)	20006934A	
11	O-Ring (G70)	20007001A	NPE-150S
	O-Ring (G75)	20018079A	NPE-180S/180A/210S/210A/240S/240A
12	Fan Packing	20022744A	
13	Gas Orifice	20029420B	NPE-150S (NG)
		20034178A	NPE-150S (LP)
		20024159A	NPE-180S/180A (NG)
		20024190A	NPE-180S/180A (LP)
		20019144A	NPE-210S/210A/240S/240A (NG)
		20024189A	NPE-210S/210A/240S/240A (LP)
14	Venturi Packing	20030893A	NPE-150S
		20022660A	NPE-180S/180A/210S/210A/240S/240A
15	O-Ring (P34)	20019090A	NPE-180S/180A/210S/210A/240S/240A
16	Silence Packing	20032129A	NPE-150S

8. Inspection and Maintenance Schedule

8.1 Maintenance

This section describes various maintenance procedures that may need to be performed on the water heater from time to time.

8.1.1 Cleaning the Water Heater

CAUTION

Make sure the water heater is turned off and the power supply is disconnected before cleaning the water heater. The water heater may remain hot for several minutes after it is turned off. To prevent burns, wait until the water heater has cooled down before cleaning.


To clean the water heater, wipe the outside with a damp cloth. Use a non-acidic, non-abrasive cleaner to remove any surface stains. The front panel is moisture resistant, but it is not waterproof. Keep it as dry as possible.

8.1.2 Draining the Water Heater


You need to drain the water heater before performing maintenance tasks, such as cleaning the inlet water filter, or to prevent the water heater from freezing when it will not be used for an extended period.

To drain the water heater:


1. Place a bucket under the water heater, to collect the residual water inside the water heater.
2. Press the Power button on the front panel to turn off the power to the water heater.

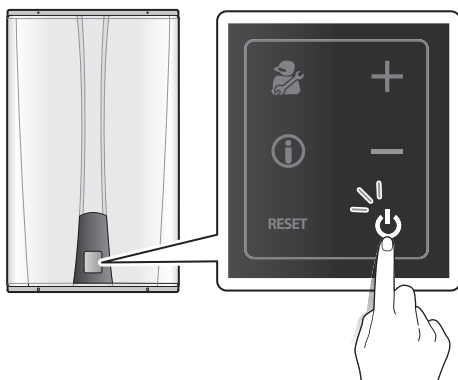

3. Close the gas valve.

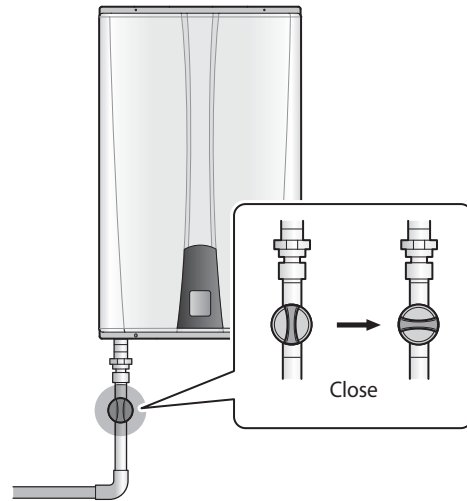


4. Close the water supply valve on the inlet to the water heater. If there is no valve, turn off the water supply at the water main.

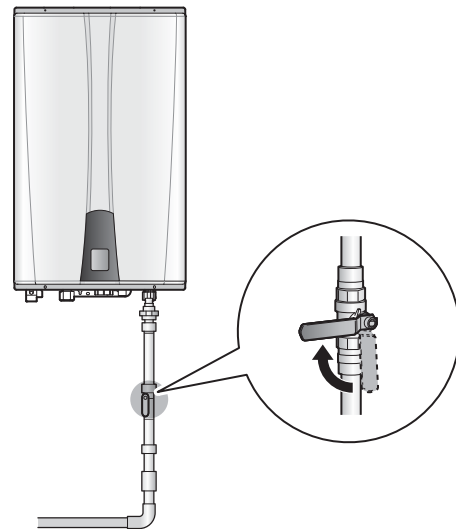

5. Open all hot water faucets completely. The water that remains in the plumbing lines will drain out.


6. Remove the pump inlet filter from the bottom of the water heater.

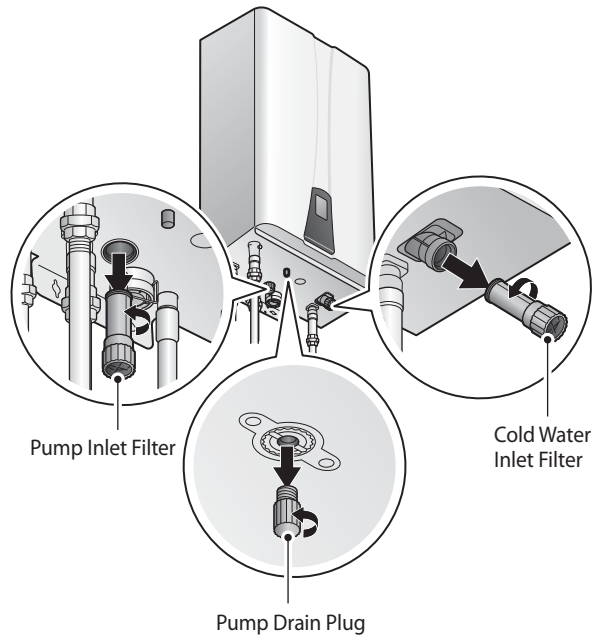

7. Open the pump drain plug.
8. Remove the cold water inlet filter.
9. Allow the residual water to drain from the water heater.
10. When the water is completely drained, reinsert the pump inlet filter and the cold water inlet filter, and then close the pump drain plug.
11. To refill the water heater follow the steps of "Draining the Water Heater" in reverse.

Draining the water in the condensate trap

Referring to the below figures, place a bucket under the water heater and remove the cap from the bottom of the trap to drain collected condensate.

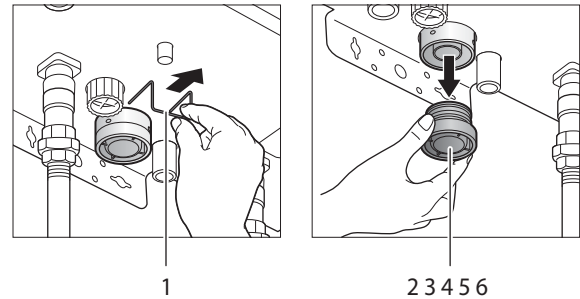

#	Description
1	Remove the retaining clip.
2	Place a bucket under the water heater.
3	Twist and remove the cap.
4	Clean out the condensate trap.
5	Replace the cap and the retaining clip.
6	Pour water down the exhaust flue (if possible) or allow the unit to run to refill the condensate trap.

8.1.3 Flushing the Heat Exchanger


CAUTION

Flushing the Heat Exchanger shall be performed only by an authorized technician or licensed professional. Read the following instructions carefully before attempting this procedure. Keep in mind that improper maintenance can void your warranty.

Before flushing the Heat Exchanger, gather the following items:

- A bucket that is 5 gallons or larger
- Cleaning solution diluted with water
- 3 hoses
- A submersible circulation

To flush the Heat Exchanger:

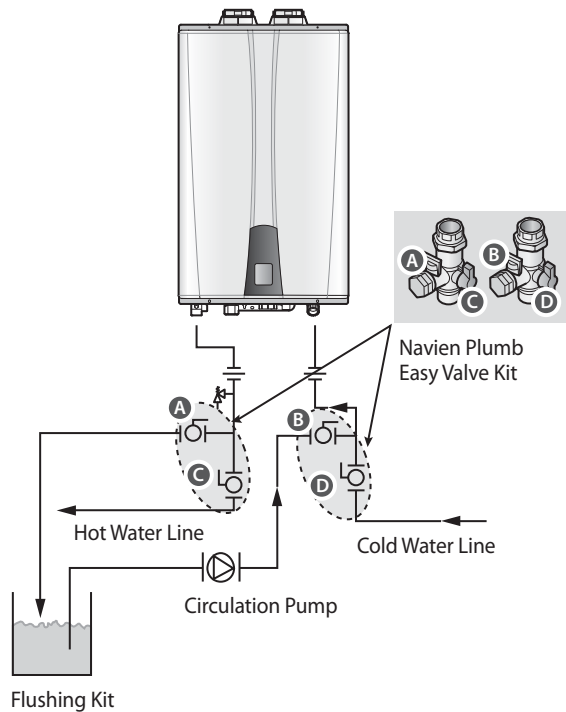


1. Press the Power button on the front panel to turn off the water heater.
2. Disconnect the power supply to the water heater.
3. Close the "C" and "D" valves on the hot and cold water lines.
4. Connect one tube to the "A" valve and place the free end in the bucket.
5. Connect one of the tubes to the circulation pump outlet and the cold water line at the "B" valve.
6. Connect one tube to the circulation pump inlet and place the free end in the bucket.
7. Pour the cleaning solution into the bucket.
8. Open both "A" and "B" valves.
9. Turn on the circulation pump and allow the solution to circulate through the water heater for at least 45 minutes.
10. Rinse the cleaning solution from the water heater:
 - a. Remove the free end of the drain tube from the bucket and place it in the condensate drain or laundry tub (wherever the water heater drains).
 - b. Close the "B" valve and open the "D" valve. Do not open the "C" valve yet.
 - c. Allow water to flow through the water heater for 5 minutes.
 - d. Close the "A" valve and open the "C" valve.
11. Disconnect all tubes.
12. Remove the cold water inlet filter from the water heater and clean out any residue.
13. Reinsert the filter and ensure the filter cap is securely tightened.
14. Reconnect the power supply to the Water Heater.
15. Press the Power button on the front panel to turn on the water heater.


8.1.4 Cleaning the Inlet Water Filter and Recirculation Inlet Filter

To clean the filters:

1. Drain the water heater.
2. While the filters are removed, rinse it with clean running water (cold) and, if necessary, scrub it clean with a brush.

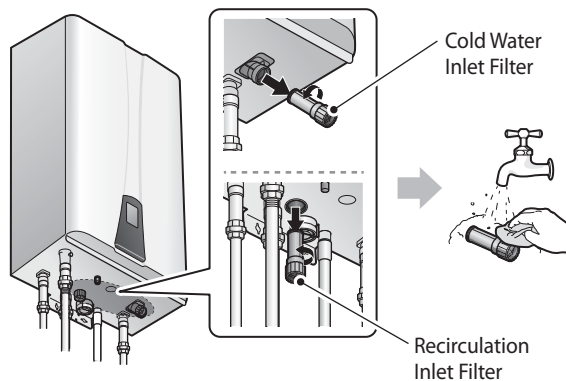

3. Reinsert and tighten the filters.

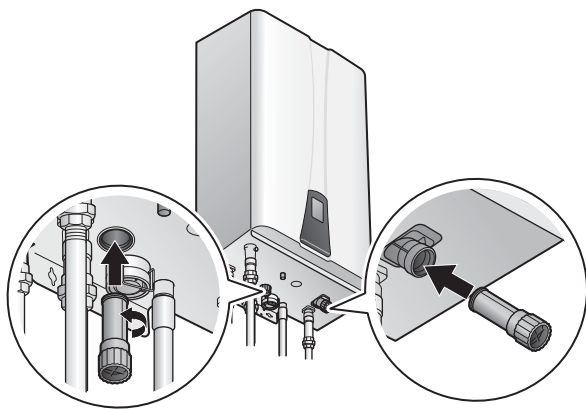


4. Refill the water heater.

8.1.5 Cleaning the Air Intake Filter


If the air intake filter becomes clogged by dust or lint, the water heater will cease to operate and "Error Code 10" will appear on the front panel display. To properly maintain the water heater, you should clean the air intake filter every 3-4 months.

To clean the air intake filter:


1. Press the Power button on the front panel to turn off the water heater.

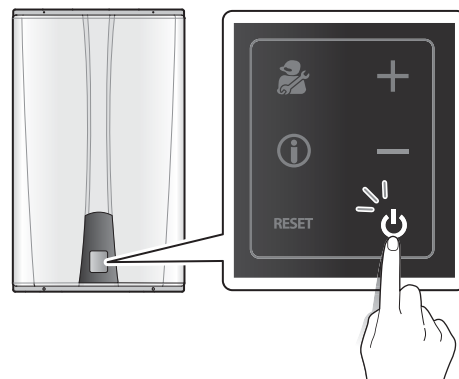

2. Disconnect the power supply to the water heater.
3. Remove the front cover of the water heater.
4. Remove the screw that secures the air intake filter (the filter is located at the top left of the water heater).

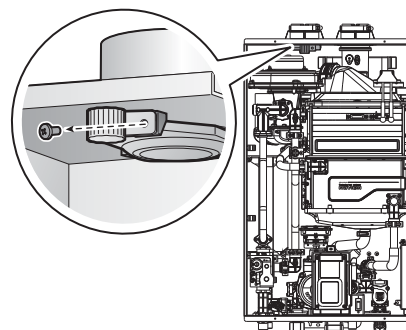

5. Pull the filter out of the water heater.

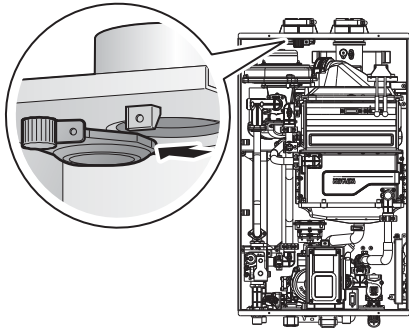

6. Remove the filter from the plastic assembly and clean it with a toothbrush and clean running water.



7. Allow the filter to dry completely.
8. Reinsert the filter into the plastic assembly.
9. Place the filter assembly back into the water heater and secure it with the screw.
10. Replace the front cover.
11. Reconnect the power supply to the water heater.
12. Press the Power button on the front panel to turn on the water heater.

8.2 Annual Servicing

In order to maintain its safe and efficient operation, it is recommended that the water heater is serviced annually.



CAUTION

Servicing must be performed by a qualified service agency or gas supplier

Inspection

- Visual inspection for general signs of corrosion
- Checking and adjusting the gas/air ratio
- Checking Flue Gas
- Carrying Out a Water Leak Test in Operation
- Carrying out a gas leak test in operation
- Checking Hot Water Temperature and Flow
- Checking Noise
- Checking venting systems
- Checking the remote controller

Maintenance

- Draining the water heater and cleaning the inlet water filter
- Cleaning the Return Filter
- Cleaning the intake air filter
- Flushing the heat exchanger
- Replacement of parts

8.3 Inspection Report

Inspection Items	References	Date:	Date:
Visual Inspection for General Signs of Corrosion	YES / NO		
Checking and Adjusting the Gas/Air Ratio	YES / NO		
Checking Flue Gas	YES / NO		
Carrying Out a Water Leak Test in Operation	YES / NO		
Carrying Out a Gas Leak Test in Operation	YES / NO		
Checking Hot Water Temperature and Flow	YES / NO		
Checking Noise	YES / NO		
Checking Venting Systems	YES / NO		
Checking the front panel.	YES / NO		

8.4 Maintenance Report

Inspection Items	References	Date:	Date:
Draining the Water Heater and Cleaning the Inlet Water Filter	YES / NO		
Cleaning the Return Filter	YES / NO		
Checking the Intake Air Filter	YES / NO		
Flushing the Heat Exchanger	YES / NO		
Replacement of Parts			

9. Common Vent and Outdoor vent Cover Installing

9.1 Installing the Outdoor vent Cover

This kit must be installed by a qualified installer in accordance with these instructions and all applicable codes and requirements of the authorities having jurisdiction.

Keep this manual near the water heater for future reference whenever maintenance or service is required. The following safety symbols are used in this manual.

Read and follow all safety instructions in this manual precisely to avoid unsafe operating conditions, fire, explosion, property damage, personal injury, or death.



DANGER

Indicates an imminently hazardous situation which, if not avoided, could result in severe injury or death.



WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in injury or death.



CAUTION

Indicates a potentially hazardous situation that, if not avoided, could result in property damage.



DANGER

If the information in these instructions is not followed exactly, a fire or explosion may result, causing property damage, personal injury, or death.

- Installation and service must be performed by a qualified installer, service agency or the gas supplier.
- The installation must conform with local codes or, in the absence of local codes, the National Fuel Gas Code, ANSI Z223.1/NFPA 54 and/or CSA B149.1, Natural Gas and Propane Installation Code.



WARNING


- The outdoor vent cover gets hot during operation. Install the heater in a location where the top of the vent cover kit cannot be reached by children and pets.
- Exhaust gas will be released through the outdoor vent cover kit. Exhaust gas is hot and contains carbon monoxide. The outdoor vent cover kit cannot be installed on a water heater mounted indoors. To prevent risk of fire and carbon monoxide poisoning, observe all clearances required in this manual.
- Do not place or store any combustible material within 5 feet of the appliance. Maintain specified clearance to combustibles on the wall where the appliance is installed and any adjacent walls or overhang. Observe all clearances required in this manual.
- The water in this appliance is cold and always remains cold except for the times when the burner is on. To prevent any damages from freezing, always drain the water heater.
- Damage to the water heater from freezing is not covered under the manufacturer's warranty.

Required Tool




Phillips Screwdriver

Included Items

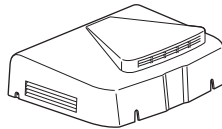


Outdoor Vent Cover

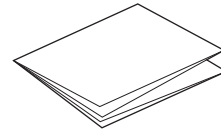


Installation Manual

9.2 Installing Procedure

1. Remove the two Phillips screws on the top front of water heater.

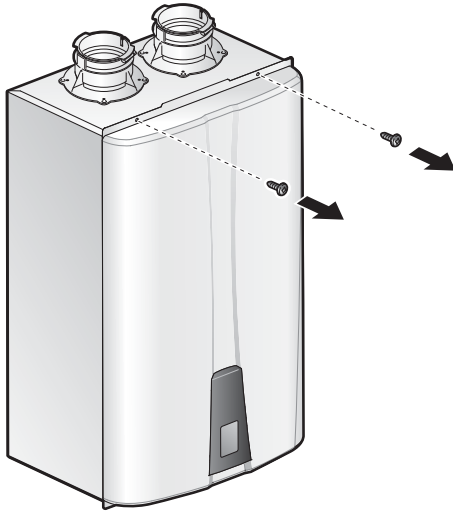


2. Position the outdoor vent cover on top of the water heater and securely press it into the intake and exhaust collars as illustrated.

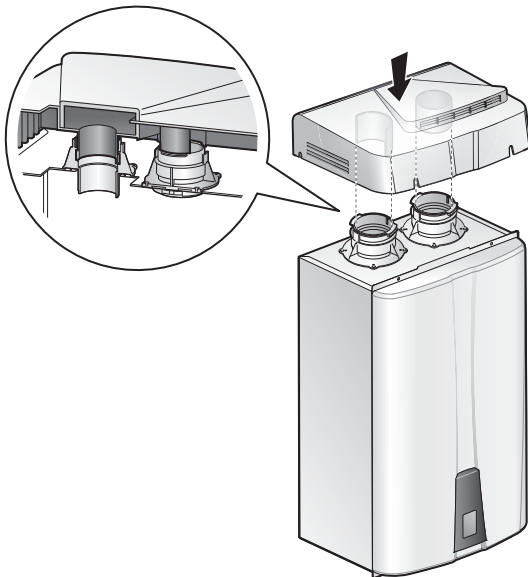

Make sure all the screw holes are aligned, and connectors for both vents are connected into place.

3. Tighten the screws on the front of the water heater.

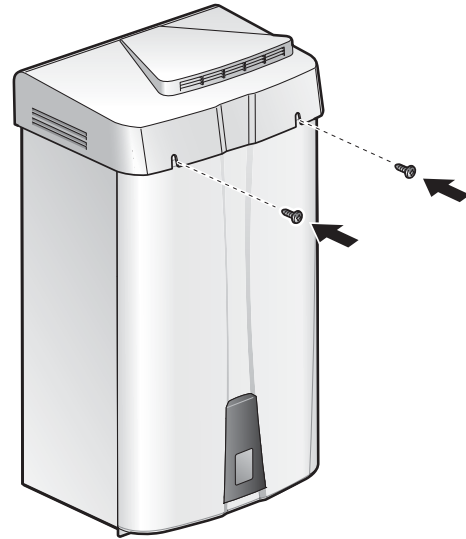

WARNING

Make sure the front cover of the water heater is securely reattached to prevent any damages to the water heater.



NOTE



Once the outdoor vent cover is installed, it does not need to be removed before removing the front cover of the water heater.

9.3 Choosing an Installation Location

When choosing an installation location, you must ensure that the location provides adequate clearance for the water heater, adequate venting and drainage options, and sufficient access to gas, water, and electrical supplies. Before proceeding, read the water heater installation manual.

- Choose an outside wall for the installation. Installation on a wall protected by an overhang above is recommended.
- Size the water and gas connections according to the instructions in the water heater installation manual. Use unions when connecting both water lines and the gas supply line to the heater.

Install the water heater in an area that allows for service and maintenance access to utility connections, piping, filters, and traps. Based on the installation location, allow for the following minimum clearances from the water heater:

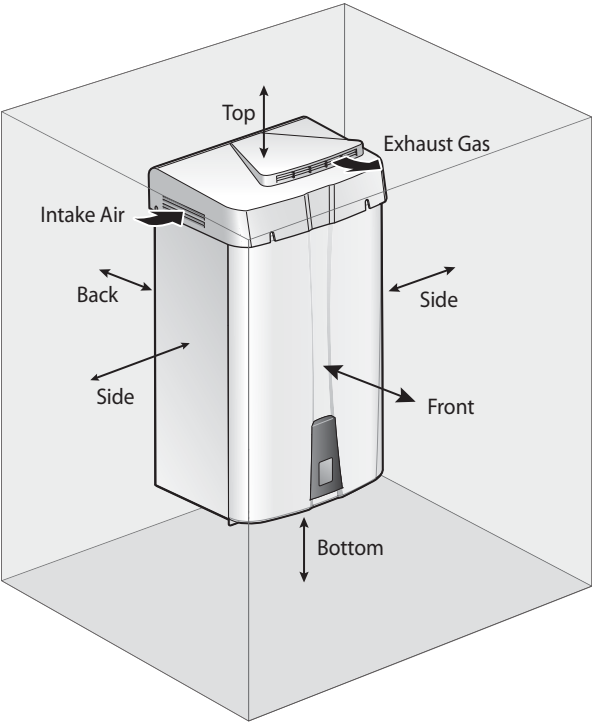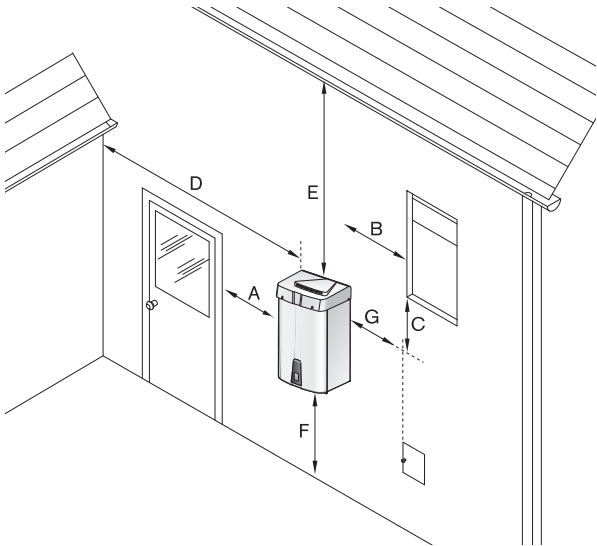

References	Descriptions	Minimum distances
A	Directly below or adjacent to an opening; operable windows, doors and any fresh air openings	48" (USA)
B		
C		
D	From any adjacent wall	12"
E	Below a gutter, sanitary pipework, eaves or overhang	36"
F	Above ground	12"
G	From a gas meter or gas regulator	36"


References	Minimum distances
Bottom	12"
Back	0.5"
Sides	3"
Front	24"
Top	36"

9.4 Mounting Water Heater


Navien water heaters come with a mounting bracket that is pre-drilled at 16 inches on center for easy installation on standard wall studs. If the strength of the wall is insufficient or if the framing is non-standard or uneven, reinforce the area before installing the water heater. Avoid installation on common walls as the unit will make some operational noises while it is running.

To mount the water heater to the wall:

1. Affix the bracket securely to the wall and ensure that it is level and that it can support the weight of the water heater.

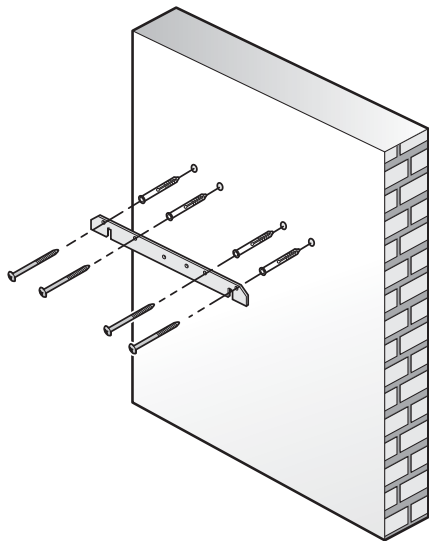

2. Align the grooves on the back of the water heater with the hooks on the mounting bracket and hang the water heater on the bracket.

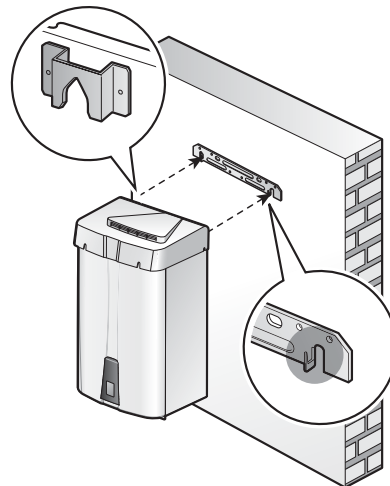



When mounted with the mounting bracket, the water heater will have a 5/8" (16mm) clearance from the back of the wall.





CAUTION

Do not mount the water heater to dry wall that has not been reinforced.

9.5 Ventilation Flow

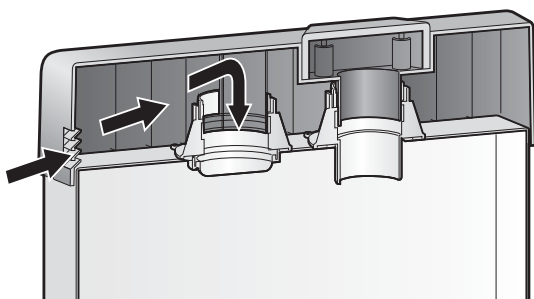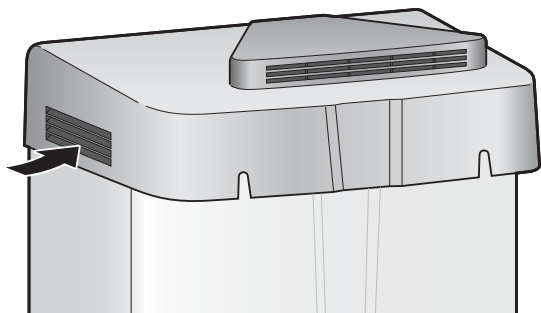

Intake Air Flow

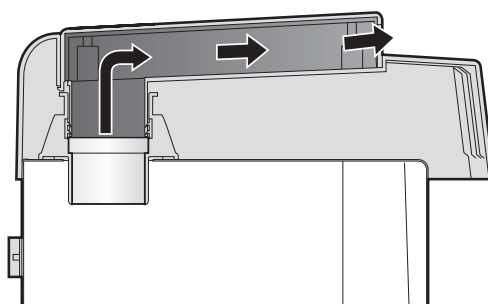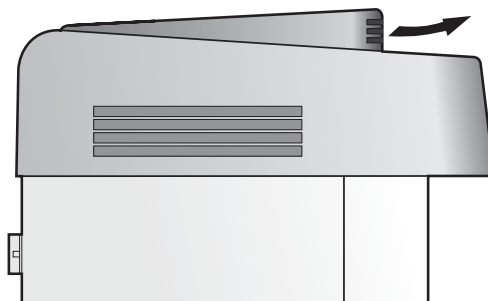


Exhaust Gas Flow

9.6 Common Venting


Model : NPE-150S, 180A, 180S, 210A, 210S, 240A, 240S

When cascading the water heaters with other Navien water heaters, you can install a common venting system. Do not use common venting if the water heater is used in a cascading system with other manufacturer's water heaters. Include a condensate drain in the main trunk as illustrated in the following examples.


- Venting the Exhaust Only (Non-Direct)

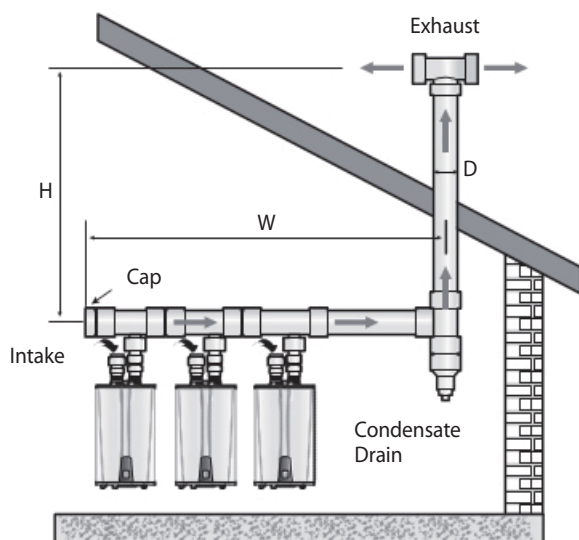

- Venting Intake and Exhaust to the Same Location

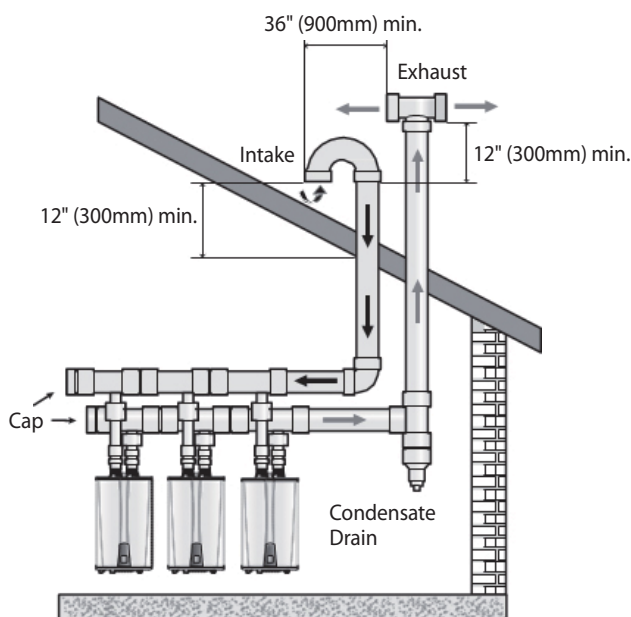


- Venting Intake and Exhaust to Different Locations

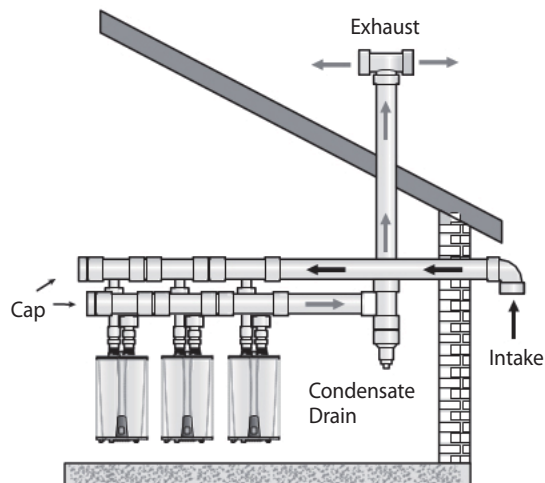

To determine the size of a common vent:

1. Add the BTU/H input ratings for each water heater in the cascading system to determine the total BTU/H rating.
2. Determine the total length (L) of the common vent, which consists of the horizontal width (W) and the vertical height (H):
Total length (L) = W + H.

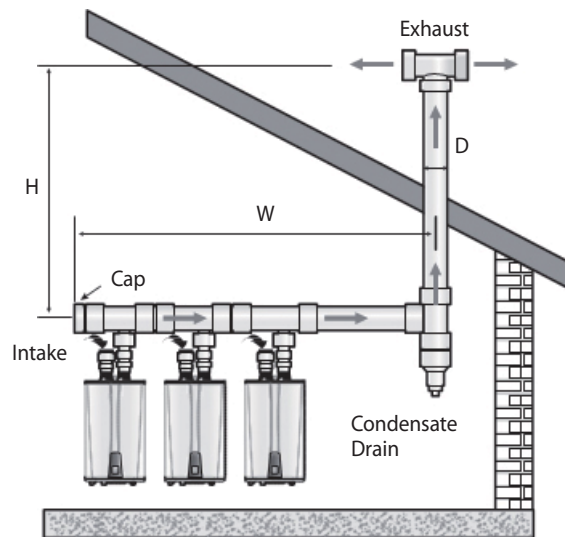

3. Refer to the common vent table that follows to determine the minimum length required for the common vent, based on the total BTU/H rating, and the diameter of the vent pipe.



NOTE

For each short radius elbow that will be used in the vent, add 8 feet (2.4 m) to the total length. For each long radius elbow that will be used in the vent, add 5 feet (1.5m) to the total length.

**CAUTION**

- Regardless of the vent size listed in the table, the connection to the common vent must always be as large as the largest connector. If the largest connector and the recommended vent are the same size, use the next largest size for the vent.
- One short radius elbow = 8 feet, One long radius elbow = 5 feet

Total length (L) = W + H

Required Load (Total BTU/H)	Model			Total length (ft)			
	NPE-180A NPE-180S	NPE-210A NPE-210S	NPE-240A NPE-240S	D=3"	D=4"	D=5"	D=6"
300,000	2			60(18m)	100(30m)	160(48m)	-
330,000	1	1		60(18m)	100(30m)	160(48m)	-
360,000		1	1	60(18m)	100(30m)	160(48m)	-
398,000			2	60(18m)	100(30m)	160(48m)	-
540,000		3			70(21m)	110(33m)	160(48m)
559,000		2	1		70(21m)	110(33m)	160(48m)
578,000		1	2		70(21m)	110(33m)	160(48m)
597,000			3		70(21m)	110(33m)	160(48m)
				D=5"	D=6"	D=7"	D=8"
739,000		3	1	80(24m)	120(37m)	-	-
758,000		2	2	80(24m)	120(37m)	-	-
777,000		1	3	80(24m)	120(37m)	-	-
796,000			4	80(24m)	120(37m)	-	-
995,000			5	60(18m)	90(27m)	130(40m)	-
1,194,000			6	-	80(24m)	100(30m)	140(43m)
1,393,000			7		70(21m)	90(27m)	120(36m)
				D=7"	D=8"	D=9"	D=10"
1,592,000			8	82(25m)	107(33m)	135(41m)	
1,791,000			9	73(22m)	95(29m)	120(37m)	148(45m)
1,990,000			10	65(20m)	85(26m)	108(33m)	133(41m)
2,189,000			11		78(24m)	98(30m)	121(37m)
2,388,000			12		71(22m)	90(27m)	111(34m)
				D=9"	D=10"	D=11"	D=12"
2,587,000			13	83(25m)	103(31m)	124(38m)	
2,786,000			14	77(23m)	95(29m)	115(35m)	137(42m)
2,985,000			15	72(22m)	89(27m)	108(33m)	128(39m)
3,184,000			16	68(21m)	83(25m)	101(31m)	120(36m)

10. Installing the ComfortAir+

WARNING

All installation should be done by a qualified expert and in accordance with the appropriate Navien manual. Installing an electric appliance with improper methods or materials may result in serious injury or death due to fire.

ELECTRICAL SHOCK HAZARD. Disconnect power before installing or servicing. This can cause severe personal injury, death, or substantial property damage if ignored.
All wiring must be installed in accordance with local regulations of the installation site.

When Installing this Product:

- 1. Read these instructions carefully. Failure to follow them could damage the product or cause a hazardous condition.
- 2. Check the ratings given in the instructions and on the product to make sure the product is suitable for the application.
- 3. Installers must be trained, experienced, and licensed service technicians.
- 4. Follow local codes for installation and application.

After installation is complete, check the product's operation by following the instructions provided in this manual.

NOTE





All wiring must be installed in accordance with local regulations of the installation site.

10.1 About the ComfortAir+

Navien ComfortAir+ is an add-on controller for the Navien NPE-180A/240A water heaters. It adds input and output functions to the NPE-180A/240A water heaters for a combination application where space heating and domestic hot water (DHW) are supplied simultaneously. With this add-on controller, a thermostat (1 or 2-stage) and an outdoor sensor can be installed along with a hydronic air handler to add space heating functionality to the system.

10.1.1 Included Items

The product is supplied with an installation kit. Make sure that the installation kit contains the following items before installing the product.

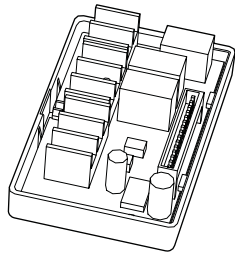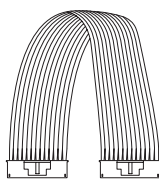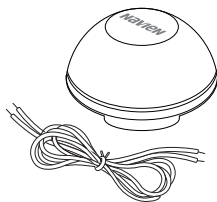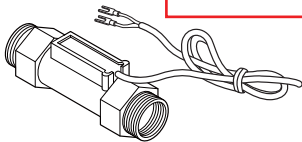	
Navien ComfortAir+ Add-on Controller	Installation Manual
	
Main Control Connector (13-pin cable for connection to NPE-180A/240A water heaters)	Outdoor Temperature Sensor (with cable)
	
Flow Switch (with cable)	

180A/210A/240A

10.1.2 Specifications

Refer to the following table for product specifications.


Items	Specifications
Model name	KDO-A100 180A/210A/240A
Device type	Add-on controller for Navien NPE- 180A/240A water heaters
Installation type	Snap-on (onto the NPE- 180A/240A water heater PCB tray)
Connections	Main connector socket to water heater Main control connector (13-pin cable) Thermostat input terminals Contacts for one thermostat (1 or 2-stage) Outdoor sensor connection terminal Contacts for one outdoor sensor Output terminal to the air handler unit Contacts for one AHU (1 or 2-stage)

10.1.3 CSA P.9 –11 Rating

Combo System		CSHE	WHPF	Recovery Efficiency	TPF
Heat Generator	Fan Coil				
NPE-180A	MMVE0S4NAAA	94 (%)	0.96	97 (%)	0.94
NPE-240A	MMVE0M4NAAA	95 (%)	0.95	96 (%)	0.95

10.1.4 Device Layout

Refer to the following diagram for the product layout.

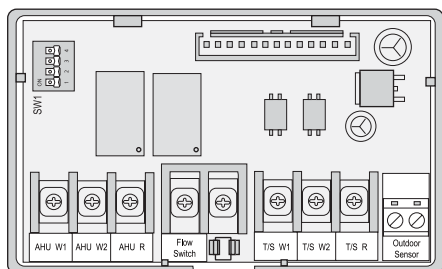

Wiring Connection Table

Terminal	Wiring Connection
AHU W1	Connect to AHU W1
AHU W2	Connect to AHU W2
AHU R	Connect to AHU R
Flow switch	Flow switch input terminal
T/S W1	Connect to thermostat W1
T/S W2	Connect to thermostat W2
T/S R	Connect to thermostat R
Outdoor Sensor	Outdoor sensor input

Dip Switch Function Table

SW (DIP 1–4)	ON	OFF	Default
DIP 1	Outdoor reset not in use	Outdoor reset in use	OFF
DIP 2	Simultaneous DHW and heating*	DHW priority	OFF
DIP 3	2-stage thermostat using	1-stage thermostat using	OFF
DIP 4	Reserved		OFF

* Depending on the DHW flow rate (demand), simultaneous DHW and heating may not be available. When the DHW demand is high, DHW supply takes priority and the heating may be temporarily turned off until the DHW demand decreases, even when this function is activated.

10.2 Installing the Device

This section provides information required to install the ComfortAir⁺ add-on controller in an NPE-**180A/240A** water heater.



WARNING


Ensure that you have turned off the power to the water heater before installing the device.

10.2.1 Basic Principles

The following diagram shows the basic operation of an NPE-180A/240A water heater system with the ComfortAir⁺ add-on controller.

180A/210A/240A

System Diagram

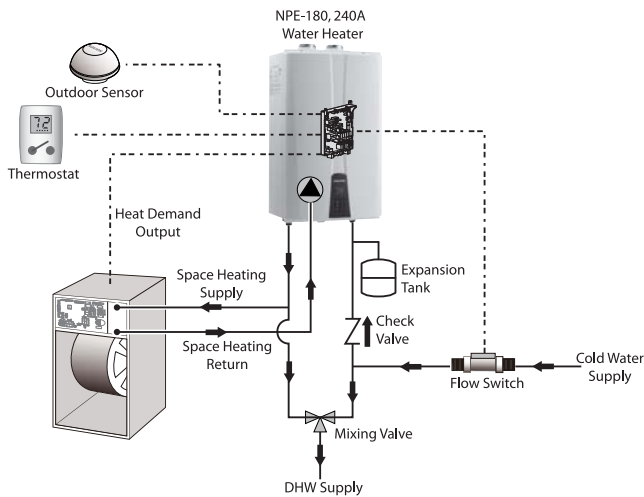

WARNING

A mixing valve must be installed in the system in order to limit the DHW output temperature and prevent scalding. Setting the mixing valve to 115–120°F is recommended.




NOTE

- Install a spring check valve for vertical pipe runs. Do not use a swing check valve with vertical piping.
- Install either a spring check valve or a swing check valve in a horizontal pipe run.
- An outdoor sensor and a flow switch are supplied with the product.
- Use 18 AWG cables for thermostat wiring.
- Install NSF certified mixing valves and expansion tanks ONLY.


10.2.2 Installing the Device in an NPE-180A/240A Water Heater

Follow the instructions to install the Navien ComfortAir⁺ in an NPE-180A/240A water heater.

1. Turn off the power supply to the water heater.
2. Remove the water heater's front cover by loosening the four screws securing it to the case.

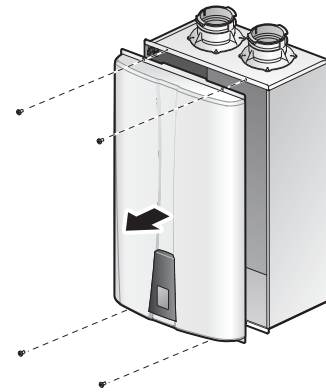

3. Remove the two screws holding the PCB tray in place and pull out the PCB tray from the unit.

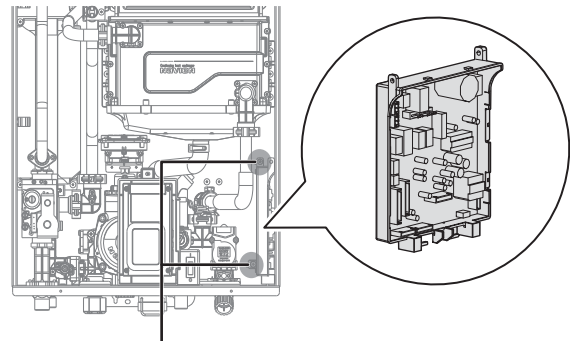


Remove screws here.


4. Verify the current PCB version of the NPE water heater.
 - **For OLD PCB Version KDC-330-5M P12:** The PCB must be replaced with an updated version. Remove all the cables and connectors from the PCB and replace with the latest PCB version that is compatible with the ComfortAir⁺ kit. Reconnect all the cables and connectors to the PCB. Proceed to the next step.
 - **For NEW PCB Version KDC-330-5M P20:** The existing PCB can be used. Pull out the PCB from the tray but do NOT disconnect any cables or wires. Proceed directly to the next step.

180A/210A/240A

5. Install the ComfortAir⁺ onto the NPE-180A/240A water heater's PCB tray. Align the latch at the back of the case with the front lip of the PCB tray.

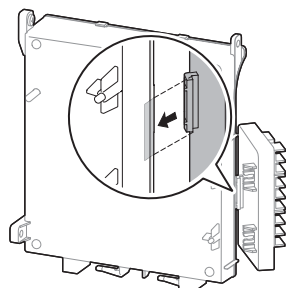

6. Align the two latches at the back of the ComfortAir⁺ with the two catch bars at the back of the water heater's PCB tray. Then pivot the ComfortAir⁺ onto the PCB tray until the latches snap-on to the catch bars.

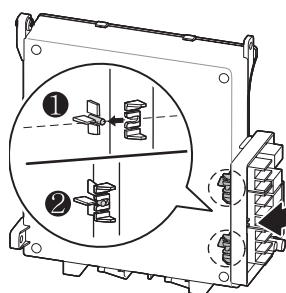

7. Connect cables to the ComfortAir⁺. For more details, refer to "10.5.2 Entering the R&D Information Menu", on page 165.
8. Set the proper DIP switches for the desired installation setup. For more details, refer to "Dip Switch Function Table", on page 159.
9. Replace the PCB tray back into the water heater and secure it with the two screws.
10. Close the front cover and secure it with the 4 screws.



CAUTION

Before disconnecting cables inside the unit, label all cables. Wiring errors can cause improper operation and dangerous situations. Verify wiring connections and unit operation after servicing.

10.3 Wiring the Device


This section provides information required to plan and install the system wiring.

10.3.1 System Wiring Examples

Refer to the following wiring diagrams to properly install wiring for various setups you may need in your system. Set DIP switch (SW) #3 as specified for each configuration.


1-Stage Thermostat / 2-Stage Control System

Set DIP switch (SW) #3 to 'Off' to configure the system to use a 1-stage thermostat/ 2-stage control.

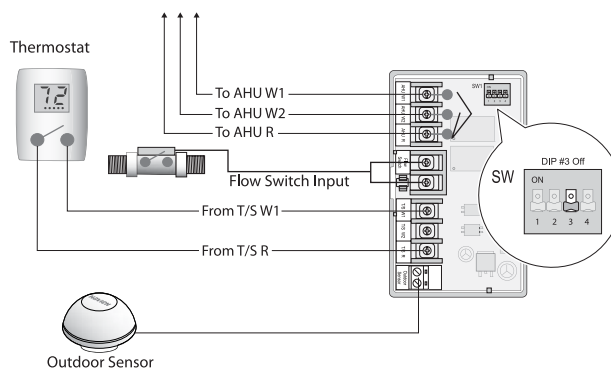


1-Stage Thermostat / 1-Stage Control System

Set DIP switch (SW) #3 to 'Off' to configure the system to use a 1-stage thermostat / 1-stage control.

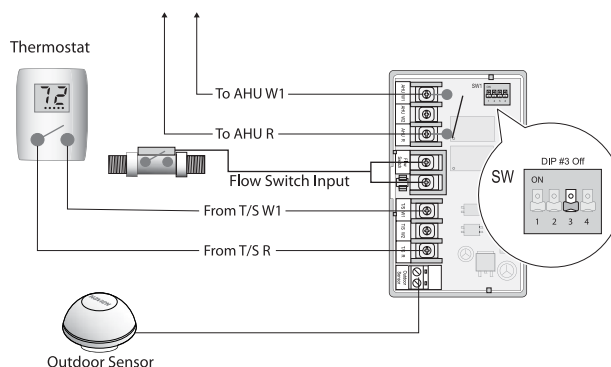


2-Stage Thermostat / 2-Stage Control System

Set DIP switch (SW) #3 to 'On' to configure the system to use a 2-stage thermostat / 2-stage control.

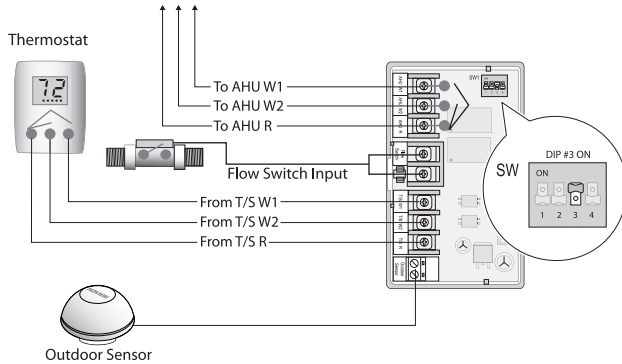

Connecting the Thermostat Cables

The ComfortAir+ receives input signals from thermostats to control the AHU. Insert the fork connector into the contact. Then tighten the terminal screw with a screwdriver.

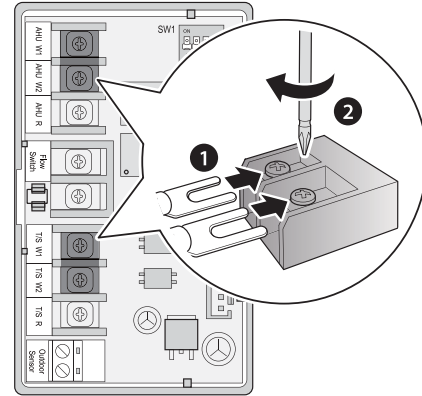


10.3.2 Cable Connections

Follow the instructions below to connect the cables to the ComfortAir+.


Connecting the Outdoor Temperature Sensor Cable

An outdoor temperature sensor is supplied with the Navien ComfortAir+ installation kit. Insert the exposed wire into the terminal. Then tighten the terminal screw with a screwdriver.

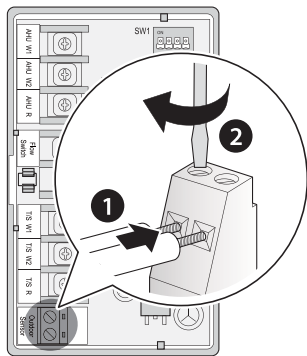

Connecting the Flow Switch Cables

Insert the fork connector into the contact. Then tighten the terminal screw with a screwdriver.


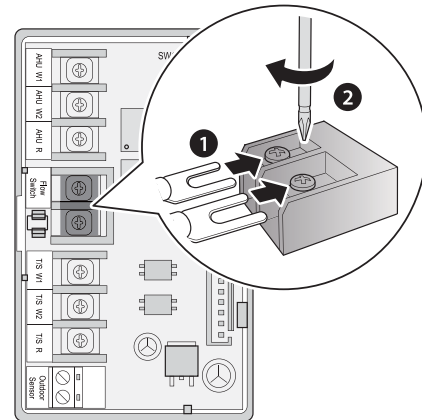


NOTE

- Use thermostat wire (18 gauge wire) for the outdoor temperature sensor connection.
- When installing the outdoor temperature sensor, avoid installing it in direct sunlight.

Connecting the Main Control Connector

To connect the ComfortAir⁺ to the Navien NPE-180A/240A water heater, use the 13-pin main control connector supplied with the Navien ComfortAir⁺. Connect one end of the cable to the connector socket on the ComfortAir⁺ PCB. Then, connect the other end to the connector socket on the NPE-180A/240A water heater PCB.

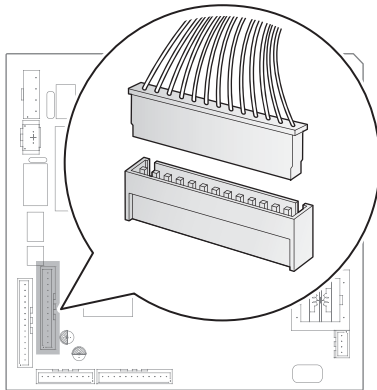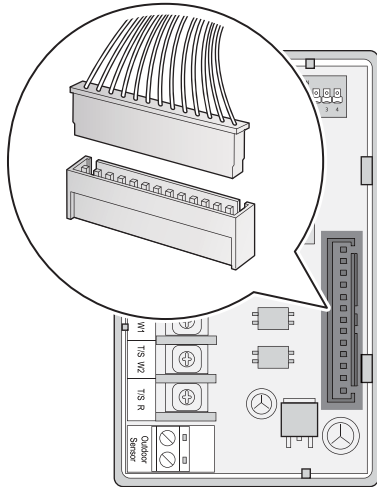

10.4 Configuring the Device

This section provides the information required to set the desired options for the NPE-180A/240A water heater system with the ComfortAir⁺ add-on controller.

180A/210A/240A


10.4.1 Pump Control Options

! CAUTION

The drawings in this instruction are intended only as a guide and are not replacements for professional engineering drawings. This drawing represents a concept system and does not imply compliance with local building codes. Actual installation requirements may vary depending on installation locations and parameters. All installation work must be carried out in accordance with all local building codes. Verify with local building officials before commencing system installation.

The following example demonstrates the application of pump control configuration options.

A System with the Internal Circulation Pump

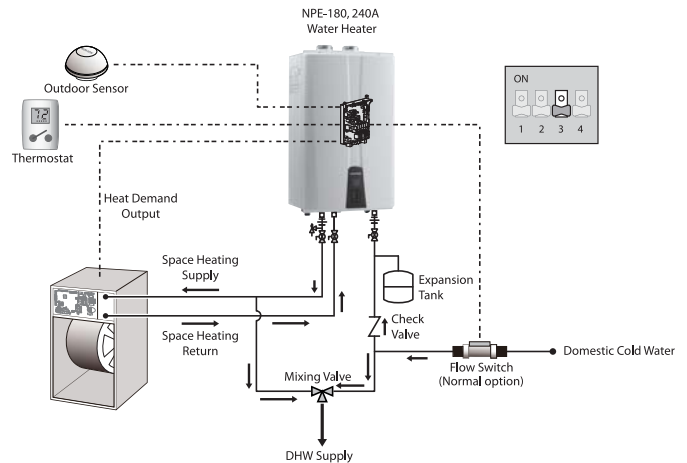

Set the 2-way valve inside the water heater to 'EXT'. For more information about settings, refer to "Selecting a Recirculation Mode ('A' model only)" in the Water Heater Installation Manual.

! WARNING

An anti-scalding device must be installed in the system in order to limit the DHW output temperature and prevent scalding. Setting the valve to 115-120°F is recommended.



NOTE


- Install a spring check valve for vertical pipe runs. Do not use a swing check valve with vertical piping.
- Install either a spring check valve or a swing check valve for a horizontal run.
- An outdoor sensor and a flow switch are supplied with the product.
- Use 18 AWG wires for thermostat installation.
- Install certified mixing valves and expansion tanks ONLY.

10.4.2 DHW Priority Options

Refer to the following options to configure the system's DHW supply modes.

DHW Priority Mode

When the system is configured for the DHW priority mode, space heating does not operate if there is DHW demand (the flow switch is 'closed').




Set the DIP switch (SW) #2 to 'Off' to configure the system to operate in the DHW priority mode.

Simultaneous DHW and Space Heating Mode

When the system is configured for simultaneous DHW and Space heating mode, both DHW and space heating will be supplied at the same time. However, when DHW demand becomes high, the system automatically turns off the space heating. The system will continue in this mode until it determines that DHW demand has reduced from high demand to moderate or low demand.* Please see appendix for water heater performance specifications.

* The system determines that DHW demand is high and stops supplying the space heating when: - the water heater is running at or above 85% of its maximum capacity.



Set the DIP switch (SW) #2 to 'On' to configure the system to operate DHW and space heating mode simultaneously.

10.5 Configuring the NPE-180A/240A Water Heater

180A/210A/240A

This section provides information required to properly configure the NPE-180A/240A water heater to setup and utilize the functions provided by the ComfortAir® add-on controller.

10.5.1 Entering the Service Information Mode

Follow the instructions below to access the Service information mode.

1. At <Normal operation mode>, press the [Diagnostic] button once to access the service information screen.
2. If you press the [+] / [-] button, the value for the selected item is increased or decreased. Then, the adjusted value is displayed.
3. The currently-selected information data item is identified with an alphabet character prefix followed by 3 digits of the relevant data.
4. Press the [Reset] button once to return to <Normal operation mode>.



NOTE

If no buttons are pressed for 1 hour, then it automatically returns to the <Normal operation mode>.

Item	Description	Display	
(T) Outdoor temperature	Displays current outdoor temperature		Outdoor reset OFF (Dip switch #1 'ON')
			Outdoor reset On (Dip switch #1 'OFF' eg.) 50°F
(U) Heating temperature based on the outdoor temperature	Displays the heating temperature based on the current outdoor temperature		Outdoor reset OFF (Dip switch #1 'ON')
			Outdoor reset On (Dip switch #1 'OFF' eg.) 120°F

10.5.2 Entering the R&D Information Menu

This section describes how to enter the R&D information mode to configure various parameters and control system functions.

Entering the R&D Information Menu

Follow the instructions below to enter the R&D information menu.

1. On the Front panel, press the Power button to turn off the water heater.
2. Enter the R&D information menu by pressing the Up (+) button three times, the Down (-) button three times, and then the Up (+) button four more times.
3. In the R&D information menu, use the Up (+) or Down (-) buttons to move to 2.PAR (Parameter information mode), and then press the Info button.

No.	Mode	Display
1	Technical Information	1.TEC
2	Parameter Information	2.PAR

4. To return to the previous menu (R&D information menu), press the [Reset] button once.

10.5.3 Parameter Table

The following table lists the parameters used to configure the water heater system functions.

No.	Mode	Display
4	Pump Exercise Operation Time	P.04
5	Burn Delay Time	P.05
6	Pump Post Purge Time	P.06
7	Outdoor Low Temperature Set-point	P.07
8	Outdoor High Temperature Set-point	P.08

No.	Mode	Display
9	CH MIN Set-point	P.09
10	CH MAX Set-point	P.10
11	2-Stage T/S Output Heat-Capacity	P.11

10.5.4 Configuring Water Heater Functions

This section describes the water heater functions and provides the information required to configure the parameters for the desired operation.

Pump Exercise Operation Time (P04)

The pump exercise function is designed to prevent the stagnation of hot water in the heating system.

The pump exercise function operates every 24 hours. Pump exercise operation time function sets the desired pump exercise operation time differently depending on the plumbing as well as environmental conditions.

180A/210A/240A

With this option activated, the NPE-180A/240A water heater monitors the pump operation. When it detects that a pump has not been used for a specific period, it runs the pump for a set duration. If the flow rate is not detected while the pump is operating, the 'E438' error message is displayed.

To change the pump exercise operation time:

1. In the Parameter information time mode, use the Up (+) or Down (-) buttons to select P.04. Then, press the Info button to enter the Pump exercise operation time mode.
2. In the Pump exercise operation time mode, use the Up (+) or Down (-) buttons to change the value and press the Info button to set to the desired mode.

Range	Description	Display
1-240(sec)	Sets the exercise operation time (default: 30 sec)	30



NOTE

- If no buttons are pressed for 10 seconds or if the Info button is pressed, the current parameter value will be saved automatically.
- To return to the <PARAMETER INFORMATION MENU MODE>, press the [Reset] button once.
- If no buttons are pressed for five minutes, the display will automatically return to the <PARAMETER INFORMATION MENU MODE>.
- While the pump is excising, the burner will not fire.

Burn Delay Time (P.05)

This function is used to set the burner delay time at an optimal value for the air handler application. If there is no burner delay time, the water heater might turn on or off once or twice during the air handler delay time.

To change the burner delay time:

1. In the Parameter information time mode, use the Up (+) or Down (-) buttons to select P.05. Then, press the Info button to enter the Burn delay time mode.
2. In the Burn delay time mode, use the Up (+) or Down (-) buttons to change the value and press the Info button to set to the desired mode.

Range	Description	Display
0	Burn delay time unavailable	
1-120 (sec)	Sets the pump ON delay time when the heating is turned on (default: 30 sec).	



NOTE

- If no buttons are pressed for 10 seconds or if the Info button is pressed, the current parameter value will be saved automatically.
- To return to the <PARAMETER INFORMATION MENU MODE>, press the [Reset] button once.
- If no buttons are pressed for five minutes, the display will automatically return to the <PARAMETER INFORMATION MENU MODE>.

Pump Post Purge Time (P.06)

This function is used to set the post purge time after a combustion cycle is completed.

To change the pump post purge time:

1. In the Parameter information time mode, use the Up (+) or Down (-) buttons to select P.06. Then, press the Info button to enter the Pump post purge time mode.
2. In the Pump post purge time mode, use the Up (+) or Down (-) buttons to change the value and press the Info button to set to the desired mode.

Range	Description	Display
0	Pump post purge time unavailable	
1-120 (sec)	Sets the pump post purge time when heating stops in a system (default: 30 sec).	



NOTE


- If no buttons are pressed for 10 seconds or if the Info button is pressed, the current parameter value will be saved automatically.
- To return to the <PARAMETER INFORMATION MENU MODE>, press the [Reset] button once.
- If no buttons are pressed for five minutes, the display will automatically return to the <PARAMETER INFORMATION MENU MODE>.

Outdoor Reset Control (P07–P10)

The Outdoor Reset Control feature can be used to enhance energy efficiency while maintaining optimal heating performance. Outdoor Reset Control automatically changes the space heating temperature setting based on the outdoor temperature and the current space heating system application (system load).

To achieve optimal heating performance, configure the following set-points: the Outdoor Low Temperature, the Outdoor High Temperature, the heating MIN and the heating MAX Set-point configuration must be based on the ComfortAir⁺ system characteristics and installation environment.

Refer to the following examples in the graph to configure the Outdoor Reset Control feature.

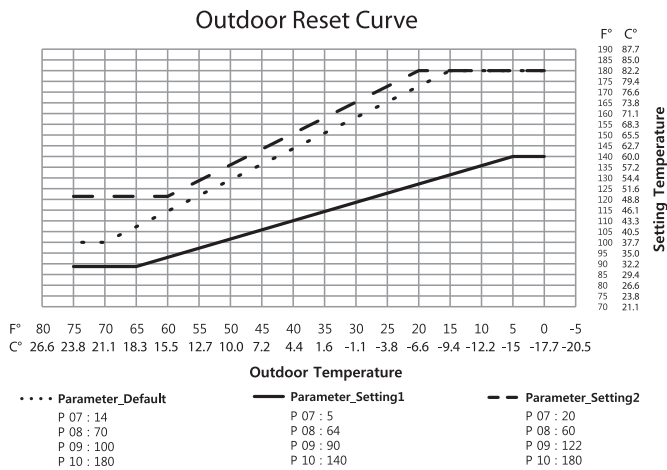

* The graph above is an example of a few possible outdoor reset parameter settings. For more information about settings, refer to the following information.

* If the Outdoor Reset On (DIP switch #1 OFF) is set and the outdoor temperature sensor is not connected, or the outdoor temperature sensor value is outside the normal range, the '740' error message is displayed and the system operates the same way as with the Outdoor Reset OFF (DIP switch #1 ON) setting..

Outdoor Low Temperature Set-point (P.07)

To change the outdoor low temperature set-point:

1. In the Parameter information time mode, use the Up (+) or Down (-) buttons to select P.07. Then, press the Info button to enter the Outdoor low temperature set-point mode.
2. In the Outdoor low temperature set-point mode, use the Up (+) or Down (-) buttons to change the value and press the Info button to set to the desired mode.

Item	Description	Display
Outdoor low temperature set-point	• Sets the outdoor low temperature set-point when outdoor reset is ON (DIP switch #1 'OFF') (default: 14°F (-10°C)) • Range: -4°F (-20°C) – 59°F (15°C) • Cannot be greater than the [Outdoor high temperature set-point -9°F (5°C)]	
Unavailable	Outdoor reset is OFF (DIP switch #1 'ON')	



NOTE

- If no buttons are pressed for 10 seconds or if the Info button is pressed, the current parameter value will be saved automatically.
- To return to the <PARAMETER INFORMATION MENU MODE>, press the [Reset] button once.
- If no buttons are pressed for five minutes, the display will automatically return to the <PARAMETER INFORMATION MENU MODE>.

Outdoor High Temperature Set-point (P.08)

To change the outdoor high temperature set-point:

1. In the Parameter information time mode, use the Up (+) or Down (-) buttons to select P.08. Then, press the Info button to enter the Outdoor high temperature set-point mode.
2. In the Outdoor high temperature set-point mode, use the Up (+) or Down (-) buttons to change the value and press the Info button to set to the desired mode.

Item	Description	Display
Outdoor high temperature set-point	• Sets the outdoor high temperature set-point when outdoor reset is ON (DIP switch #1 'OFF') (default: 70°F (21°C)) • Range: 5°F (-15°C) – 104°F (40°C) • Cannot be lower than the [Outdoor low temperature set-point + 9°F (5°C)]	
Unavailable	Outdoor reset is OFF (DIP switch #1 'ON')	



NOTE

- If no buttons are pressed for 10 seconds or if the Info button is pressed, the current parameter value will be saved automatically.
- To return to the <PARAMETER INFORMATION MENU MODE>, press the [Reset] button once.
- If no buttons are pressed for five minutes, the display will automatically return to the <PARAMETER INFORMATION MENU MODE>.

Heating MIN Set-point (P.09)

To change the heating MIN set-point:

1. In the Parameter information time mode, use the Up (+) or Down (-) buttons to select P.09. Then, press the Info button to enter the Heating MIN set-point mode.
2. In the Heating MIN set-point mode, use the Up (+) or Down (-) buttons to change the value and press the Info button to set to the desired mode.

Item	Description	Display
Heating MIN set-point	• Sets the Heating MIN set-point when outdoor reset is ON (DIP switch #1 'OFF') (Default: 100°F (37.5°C)) • Range: 100°F (37.5°C) – 140°F (60°C) • Cannot be greater than the [CH MAX set-point - 36°F (20°C)]	
Unavailable	Outdoor reset is OFF (DIP switch #1 'ON')	



NOTE

- If no buttons are pressed for 10 seconds or if the Info button is pressed, the current parameter value will be saved automatically.
- To return to the <PARAMETER INFORMATION MENU MODE>, press the [Reset] button once.
- If no buttons are pressed for five minutes, the display will automatically return to the <PARAMETER INFORMATION MENU MODE>.

Heating MAX Set-point (P.10)

To change the heating MAX set-point:

1. In the Parameter information time mode, use the Up (+) or Down (-) buttons to select P.10. Then, press the Info button to enter the Heating MAX set-point mode.
2. In the Heating MAX set-point mode, use the Up (+) or Down (-) buttons to change the value and press the Info button to set to the desired mode.

Item	Description	Display
Heating MAX set-point	• Sets the Heating MAX Set-point when outdoor reset is ON (DIP switch #1 'OFF') (Default: 180°F (82°C)) • Range: 136°F (57.5°C) – 180°F (82°C) • Cannot be lower than the [CH MIN set-point + 36°F (20°C)]	
Unavailable	Outdoor reset is OFF (DIP switch #1 'ON')	



NOTE

- If no buttons are pressed for 10 seconds or if the Info button is pressed, the current parameter value will be saved automatically.
- To return to the <PARAMETER INFORMATION MENU MODE>, press the [Reset] button once.
- If no buttons are pressed for five minutes, the display will automatically return to the <PARAMETER INFORMATION MENU MODE>.

2-Stage T/S Output Heat-Capacity (P.11)

Models with the 2-stage air handler control function (W1, W2) can use a 2-stage thermostat or can be automatically controlled by the ComfortAir+ controller (If the DIP switch # 3 is OFF).

When using the automatic 2-stage heating feature, the system will modulate between the 1-stage and 2-stage based on the set heat capacity parameter of the water heater. This heat capacity value can be adjusted based on the desired modulation point (default heat capacity is 25%)

To change the 2-stage T/S output heat-capacity:

1. In the Parameter information time mode, use the Up (+) or Down (-) buttons to select P.11. Then, press the Info button to enter 2-stage T/S output heat-capacity mode.
2. In the 2 stage T/S output heat-capacity mode, use the Up (+) or Down (-) buttons to change the value and press the Info button to set to the desired mode.

Item	Description	Display
Min heat capacity – 100% (by 0.5%)	• Sets the standard modulating heat capacity value between 1-stage and 2-stage heating operation • 2-stage T/S OFF (DIP switch #3 'OFF')	
Unavailable	2-stage T/S ON (DIP switch #3 'ON')	



NOTE

- If no buttons are pressed for 10 seconds or if the Info button is pressed, the current parameter value will be saved automatically.
- To return to the <PARAMETER INFORMATION MENU MODE>, press the [Reset] button once.
- If no buttons are pressed for five minutes, the display will automatically return to the <PARAMETER INFORMATION MENU MODE>.

180A,210A


10.6 Maintenance

The Navien NPE-180A and NPE-240A water heaters that are used in the DHW/heating systems should be properly maintained and flushed on an annual basis. Please see the NPE Water Heater Service Manual for more details regarding annual servicing and maintenance.


10.7 Appendix

This section provides additional information to be considered when you design a hydronic system using an NPE-180A/240A water heater.


10.7.1 NPE-180A/240A Pressure Drop Curve

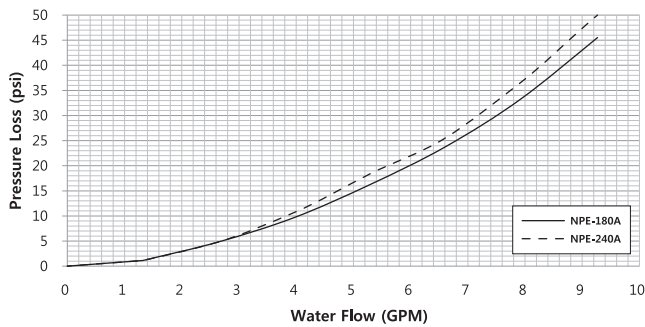

10.7.2 NPE-180A/240A Flow Rate Graph

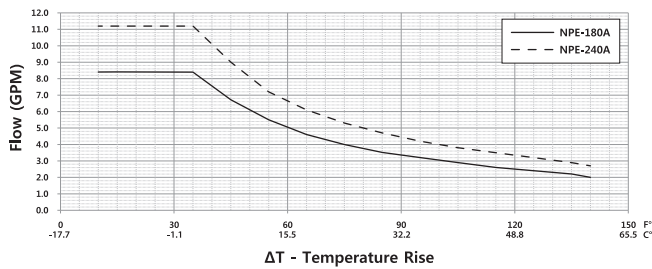

10.7.3 NPE-180A/240A Pump P-Q Curve

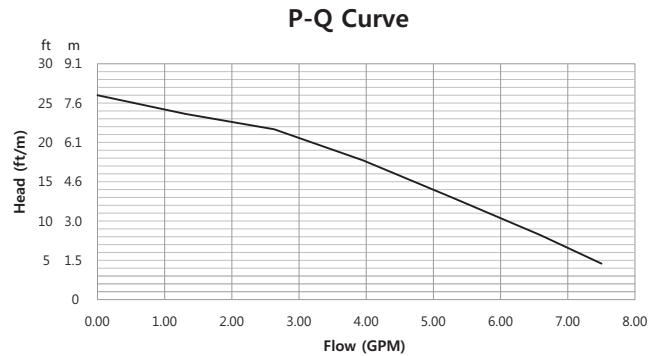

NOTE

- When the system uses an internal circulation pump with the NPE-180A/240A water heaters, the flow rate may vary depending on the type and capacity of the AHU in use.
- If the system uses an internal circulation pump with the NPE-180A/240A water heaters or pumps manufactured by SunTherm corporation (MMVE0S4NAAA, MMVE0M4NAAA), the flow rate will be approximately 3 GPM.