


# Day Hub

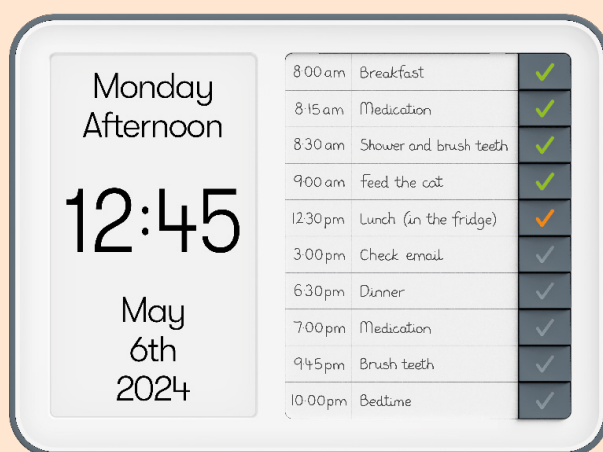

## User manual

English, Deutsch, Español,  
Français, Italiano, Nederlands,  
Português, 日本語

**relish.**

# English

## Contents

- 4 Getting Started
- 5 Device Setup
- 5 Automatic Time & Date Synchronisation
- 6 Task Alerts
- 7 Task Alerts Volume
- 7 Wi-Fi
- 8 On Screen Keyboard
- 9 Pair to a Day Connect
- 10 Unpair a Day Connect
- 10 Factory Reset
- 10 Software Updates
- 12 Warranty Registration
- 12 Technical Specifications
- 12 Important Safety information

# Relish Day Hub

## Included in your box:


- Day Hub
- Power adapter and regional plugs
- Task List card
- Transparent cover
- 5 spare Task List cards and 1 transparent cover



- 1 Light sensor (hidden)
- 2 Display
- 3 Volume/navigation buttons
- 4 OK button
- 5 Back button
- 6 Menu button
- 7 Task List
- 8 Task Alert buttons

## Help

- 1. Please refer to the troubleshooting guides and FAQ section of the Relish website ([www.relish-life.com](http://www.relish-life.com)).
- 2. You can also view trouble-shooting videos here: 
- 3. If you're still encountering problems, please contact Relish customer service on: [info@relish-life.com](mailto:info@relish-life.com) or +44 (0) 203 488 2001 (Monday to Friday, 8:30-5:30 GMT), quoting your order number. We'll do our best to get back within two working days.

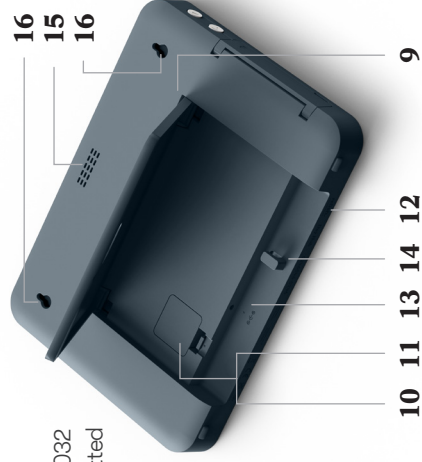

- 9 Stand
- 10 Battery door
- 11 Lithium coin cell CR2032 battery (included & fitted to the device)
- 12 Serial number
- 13 AC power input
- 14 Cable hook
- 15 Speaker
- 16 Hanging Holes

## Getting Started

**1.** Select the appropriate plug for your region and fit it to the power adapter.

Use only the supplied power adapter and plugs (using third-party parts will void your warranty).



**2.** Open the stand. Pass the cable through the lozenge shaped hole in the stand and loop the end of the cable over the cable tidy hook on the rear of the product.

Do not pass the cable through the hole in the stand if you're wall mounting the product.

**3.** Insert the power cable into the AC power input at the back of the device.

Please leave your device plugged in / switched on at all times. It's designed to be energy efficient, keeping running costs to the bare minimum.


**4.** Insert the plug into a mains power outlet. If you're planning on connecting the device to Wi-Fi, please make sure the chosen plug socket is within good range of your Wi-Fi router.

**5.** Position the device on a stable surface where it is easy to access and is in clear line of sight.

Alternatively, you can wall mount the device using the hanging holes.

To wall mount use two M3 x 6mm screws, spaced 190mm (19cm) apart.

We recommend using a spirit level to make sure they're installed level. (Screws not included).

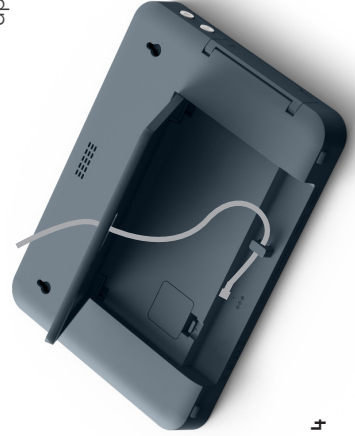


## Device Setup

**1.** The device will turn on as soon as it's plugged into the mains. Please wait a few seconds while it loads.

**2.** A setup guide will appear on the display when you use the device for the first time. Please follow these step-by-step instructions to get your device ready for use.

**3.** Setup will take between 10 and 20 minutes to complete, and you will need a permanent fine liner or ball point pen and a scrap piece of paper.

You can change your device settings at any time via the Settings Menu. To access the menu, press the Menu button on the left-hand side of the product .

## Automatic Time & Date Synchronisation

This device uses advanced technology to ensure it keeps perfect time, and automatically updates to the correct date and year – even if it's unplugged for weeks at a time. It works reliably in all regions, including those that practice Daylight Saving Time (DST). Time and date settings will be synchronised automatically if the device is connected to Wi-Fi, or you can set these manually in the Setup Guide or Settings Menu.


If the device is unplugged it uses a battery to remember the time and date settings. Please replace this battery every 8 to 10 years by following the steps below.

**1.** Keep your device plugged into the mains.

**2.** Remove the battery door (which is located behind the stand).

**3.** Gently lever out the battery by inserting a blunt non-conductive implement (e.g. a plastic pen lid) into the gap highlighted by the two arrow icons.

**4.** Carefully insert the new battery and replace the battery door.

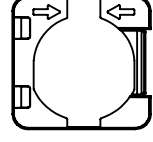

**This device does not support batteries with bitter coatings.**

## Task Alerts



Once the device is setup correctly, Task Alerts will sound on this device at the same times every day, helping you keep to a regular routine.

**Please only add tasks which you would like to complete every day, at the same times.**

1. When a task is due for completion, the corresponding Task Button will flash orange, and an audible alert will sound.
2. When you complete the task, press the Task Button to mark it as completed.
3. It will then glow green, giving you a visual record of which tasks have been completed that day. (Uncompleted tasks will continue to glow orange).

It's essential that the Task Alert times programmed into the device match the times written on your Task List.

To check your Task Alert times, press the menu button on the left-hand side of the device, navigate down to 'Task Alerts', then select 'Review Task Alert times'.

Your Task List will reset at 3am every night, ready for the following day.

To change your Task Alerts or Task Alert times, press the menu button on the left-hand side of the device, navigate down to 'Task Alert', then select 'Edit a Task Alert'. Spare Task List cards are included in the product packaging.

## Task Alert Volume

The volume of the Task Alert sounds can be adjusted in the Settings Menu.

The volume can be fine-tuned further by pressing the easily accessible Volume Up (▲) or Volume Down (▼) buttons on the side of the device.

## Wi-Fi (optional)

This device will perform all functions perfectly out of the box, and without connecting to your Wi-Fi network.

You do not need Wi-Fi access to use this product.

However, if you do have Wi-Fi

at home we highly recommend connecting this device to your network when prompted in the initial setup stages. This will simplify the rest of the device setup process, maximise connectivity with other Relish products and enable automatic software updates.

## Wi-Fi: Connect using WPS

WPS (Wi-Fi Protected Setup) is a functionality built into many wireless routers to make it easier for users to connect to the internet.

- Please follow the instructions in the device's Settings Menu to guide you through setup using this feature.
- Please note that not all Wi-Fi routers support WPS. In this instance, please enter the password manually when prompted in the device's Settings Menu.

## Wi-Fi: Manual password entry

If WPS is not used, you will need to manually select the correct Wi-Fi network and enter the Wi-Fi password manually using an on-screen keyboard. The keyboard can be navigated

using the buttons on the left-hand side of the device.

Once you have entered all the Wi-Fi password characters, navigate to 'Confirm' and press the OK button.

## Wi-Fi Signal Strength

Wi-Fi signal strength can be viewed in the top right-hand corner of the Settings Menu screen.



Strong  
Wi-Fi signal




Weaker  
Wi-Fi signal

## On-Screen Keyboard

To navigate to:




Scroll left




Numbers & symbols



Scroll right



Additional symbols




Lower case



Delete a character



Upper case



Enter a space


## Pair to a Day Connect (optional)

You can pair this device with a Relish Day Connect and receive Task Alerts in multiple rooms at the same time.

- Move the devices closer to your Wi-Fi router (if connecting via Wi-Fi).

- Move the devices to locations where there are no signal-blocking obstructions between them or the Wi-Fi router.

To pair your Day Hub to a Day Connect please follow the below steps:

1. Press the menu button  on the left-hand side of your Day Connect device.

Obstructions might include thick walls or large electronic appliances (e.g. washing machines, microwaves, dishwashers, ovens, refrigerators, or air conditioners).

2. Select 'Pairing and unpairing devices'.

3. Select 'Pair'.

Device-to-device pairing strength can be viewed in the top right-hand corner of the Settings Menu screen.

4. Follow the step-by-step instructions.

Devices can pair wirelessly up to 30 meters (100 feet) apart, or anywhere within your home Wi-Fi network.



Paired



Strong pairing signal



Weaker pairing signal

If your devices do not pair successfully, please try the following:

- Move the devices closer together (if not connected to Wi-Fi).

## Unpair a Day Connect (optional)

To unpair your devices please follow the below steps:

1. Press the menu button on the left-hand side of your Day Hub device.
2. Select 'Pairing and unpairing devices'.
3. Select 'Unpair a Day Connect'.
4. Select the Day Connect you would like to unpair.

You can review connected devices in the Settings Menu.

## Factory Reset

To restore your device to factory settings please follow the

instructions in the 'Factory Reset' option in the Settings Menu (☰).

## Software Updates

We occasionally issue software updates that optimise the performance of this device. These will be installed automatically overnight if the device is connected to Wi-Fi and plugged into a plug socket.

Software updates are only available for devices that are connected to a Wi-Fi network. If your device is working but not connected to Wi-Fi, don't worry - it doesn't need updating.

Please follow the below steps to check and/or manually update the device's software:

1. Ensure your device is connected to Wi-Fi.
2. Press the Menu button on the left-hand side of the device.
3. Select 'Software update'.
4. Follow the step-by-step instructions.

Software updates should take no more than 5 minutes.

### CAUTION

**Do not unplug your device whilst your device is updating**

## Warranty Registration

This Limited Warranty is extended to the original end-user purchaser or the person receiving the product as a gift. It can be transferred provided the current owner furnishes the original proof of purchase from an authorised Relish store or reseller. Unless a different warranty period is stated at the time of purchase, and evidence of this can be proven, your Relish product is covered for a period of 2 years from the date of retail purchase by the original end-use purchaser.

## Technical Specification

Connectivity: 2.4G WiFi

Adapter input: AC100-240V 50/60Hz

Output: DC 5V / 1A

Battery: Lithium Coin Cell CR2032



Correct disposal of this product - this marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.



## Important safety information

1. Read these instructions.
2. Keep these instructions.
3. Please heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water. Do not expose apparatus to dripping or splashing and do not place objects filled with liquids, such as vases, on or near the apparatus. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
6. Clean only with dry soft cloth. Household cleaners or solvents can damage the finish on your Relish products.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.

## FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

## FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This

equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

## ISED RSS Warning/ISED RF Exposure Statement

ISED RSS Warning: This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter

## Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and,if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined

by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

## Deutsch

### Inhalt

- 16** Erste Schritte
  - 17** Gerät einrichten
  - 17** Automatische Synchronisierung von Datum und Uhrzeit
  - 18** Aufgabenalarme
  - 19** Lautstärke der Aufgabenalarme
  - 19** WLAN
  - 20** Bildschirmtastatur
  - 21** Kopplung mit einem Day Connect (optional)
- 22** Kopplung mit einem Day Connect aufheben (optional)
  - 22** Zurücksetzen auf Werkseinstellungen
  - 22** Software-Updates
  - 24** Registrierung der Garantie
  - 24** Technische Daten
  - 24** Wichtige Sicherheitsinformationen

### Help

**1.** Bitte lesen Sie die Anleitungen zur Fehlerbehebung und den FAQ-Bereich auf der Relish-Website ([www.relish-life.com](http://www.relish-life.com)).

**2.** Hier können Sie sich Videos zur Fehlerbehebung ansehen:



**3.** Wenn Sie weiterhin Probleme haben, wenden Sie sich bitte an den Kundendienst von Relish: [info@relish-life.com](mailto:info@relish-life.com) oder

+44 (0) 203 488 2001 (Montag bis Freitag, 8:30–17:30 GMT) und geben Sie dabei Ihre Bestellnummer an.

Wir werden Ihnen nach Möglichkeit innerhalb von zwei Werktagen antworten.

## Relish Day Hub

### Inhalt Ihrer Box:

- Day Hub
- Transparente Abdeckung
- Netzteil und internationale Stecker
- 5 Ersatzkarten für Aufgabenlisten und 1 transparente Abdeckung



- 1** Lichtsensor (nicht sichtbar)
- 2** Display
- 3** Lautstärke-/Navigationstasten
- 4** AUS-Taste (OK)
- 5** Zurück-Taste
- 6** Menü-Taste
- 7** Aufgabenliste
- 8** Schaltflächen für Aufgabenalarme



- 9** Ständer
- 10** Batteriefachdeckel
- 11** Lithium-Knopfzelle CR2032 (im Lieferumfang enthalten und in das Gerät eingebaut)
- 12** Seriennummer
- 13** AC-Netzeingang
- 14** Kabelhaken
- 15** Lautsprecher
- 16** Löcher zum Aufhängen

## Erste Schritte

**1.** Wählen Sie den passenden Stecker für Ihre Region aus und stecken Sie ihn in das Netzteil.

Verwenden Sie nur das Netzteil und die Stecker aus dem Packungsinhalt (bei Verwendung von Fremtteilen erlischt die Garantie).



**2.** Öffnen Sie den Ständer.

Führen Sie das Kabel durch das rautenförmige Loch im Ständer und ziehen Sie das Kabelende über den Kabelhaken an der Rückseite des Geräts.

Führen Sie das Kabel nicht durch das Loch im Ständer, wenn Sie das Produkt an der Wand montieren.

**3.** Stecken Sie das Netzkabel in den AC-Netzeingang auf der Rückseite des Geräts.

Lassen Sie Ihr Gerät immer eingesteckt/eingeschaltet. Es ist auf Energieeffizienz ausgelegt, sodass die Betriebskosten auf ein Minimum reduziert werden.


**4.** Stecken Sie den Stecker in eine Netzsteckdose. Wenn Sie das Gerät mit WLAN verbinden möchten, vergewissern Sie sich, dass sich die Steckdose innerhalb der Reichweite des WLAN-Routers befindet.

**5.** Stellen Sie das Gerät auf einer stabilen Fläche auf, wo es leicht zugänglich ist und Sie es gut im Blick haben.

Alternativ können Sie das Gerät mit Hilfe der Löcher zum Aufhängen auch an der Wand befestigen.

Für die Wandmontage sollten Sie zwei M3x6mm-Schrauben im Abstand von 190 mm (19 cm) verwenden.

Wir empfehlen, mit einer Wasserwaage die waagerechte Ausrichtung zu überprüfen. (Schrauben nicht im Lieferumfang enthalten).

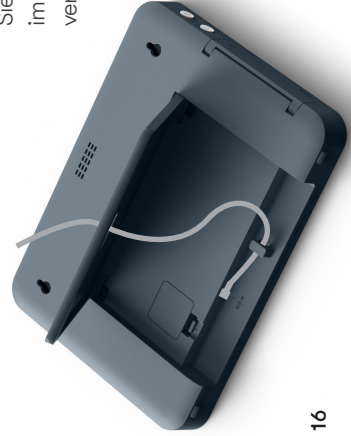

## Gerät einrichten

**1.** Das Gerät schaltet sich ein, sobald es an das Stromnetz angeschlossen wird. Warten Sie ein paar Sekunden, bis der Ladevorgang abgeschlossen ist.

**2.** Bei der erstmaligen Verwendung wird auf dem Display eine Einrichtungsanleitung angezeigt. Befolgen Sie die schrittweise Anleitung, um Ihr Gerät betriebsbereit zu machen.

**3.** Die Einrichtung dauert zwischen 10 und 20 Minuten. Sie benötigen dafür einen Fineliner oder Kugelschreiber und ein Stück Papier.

Sie können die Geräteeinstellungen jederzeit über das Einstellungs Menü ändern. Um das Menü aufzurufen, drücken Sie die Menütaste auf der linken Seite des Geräts

## Automatische Synchronisierung von Datum und Uhrzeit

Dieses Gerät hält die Uhrzeit mit modernen Technologien immer auf dem neuesten Stand und aktualisiert sich auch dann automatisch auf das richtige Datum und Jahr, wenn es wochenlang nicht angeschlossen war.

Es funktioniert zuverlässig in allen Weltregionen, auch in solchen, in denen die Sommerzeit gilt (Daylight Saving Time, DST).

Die Einstellungen für Datum und Uhrzeit werden automatisch synchronisiert, wenn das Gerät mit einem WLAN verbunden wird. Sie können sie auch in der Einrichtungsanleitung oder im Einstellungs Menü manuell festlegen.

Wenn das Gerät nicht mit dem Stromnetz verbunden ist, speichert es die Einstellungen für Datum und Uhrzeit mithilfe einer Batterie.

Diese Batterie sollte alle 8 bis 10 Jahre gewechselt werden. Gehen Sie dabei folgendermaßen vor.


**1.** Lassen Sie das Gerät am Stromnetz angeschlossen.

**2.** Entfernen Sie den Batteriefachdeckel (der sich hinter dem Ständer befindet).

**3.** Hebeln Sie die Batterie vorsichtig heraus, indem Sie ein stumpfes, nicht leitendes Werkzeug (z. B. einen Plastik-Kugelschreiber) in den

durch die beiden Pfeilsymbole markierten Spalt stecken.

4. Setzen Sie vorsichtig die neue Batterie ein und schließen Sie das Batteriefach wieder.

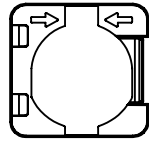

**Dieses Gerät unterstützt keine Batterien mit Bitterstoffbeschichtung.**

## Aufgabenalarme



Sobald das Gerät wie vorgesehen eingerichtet wurde, ertönen darauf jeden Tag zu den gleichen Zeiten Aufgabenalarme, damit Sie eine regelmäßige Routine einhalten können.

**Fügen Sie nur Aufgaben hinzu, die Sie jeden Tag zu denselben Zeiten erledigen möchten.**

1. Wenn eine Aufgabe fällig ist, blinkt die entsprechende Schaltfläche orange und ein akustisches Signal ertönt.

Es ist wichtig, dass die im Gerät programmierten Uhrzeiten für Aufgabenalarme mit den Uhrzeiten in der Aufgabenliste übereinstimmen.

Die Uhrzeiten für Aufgabenalarme können Sie kontrollieren, indem Sie die Menütaste auf der linken Seite des Geräts drücken, nach unten zu „Aufgabenalarme“ scrolen und dann „Überprüfung der Aufgabenalarmzeiten“ auswählen.

## Lautstärke der Aufgabenalarme

Die Lautstärke der akustischen Aufgabenalarme kann im Einstellungsmenü verändert werden.

Die Feinjustierung der Lautstärke können Sie über die leicht zugänglichen Tasten „Lauter“ (↻) und „Leiser“ (↻) an der Seite des Geräts vornehmen.

Durch Drücken der Lautstärketasten wird nur die Lautstärke des jeweiligen Geräts eingestellt. Die Einstellungen der anderen angeschlossenen Geräte ändern sich dadurch nicht. (Dies gilt nur, wenn Ihr Gerät mit einem Relish Day Connect/Connect(s) verbunden ist.)

## WLAN (optional)

Dieses Gerät führt sofort nach Inbetriebnahme auch ohne Verbindung zu einem WLAN-Netzwerk alle Funktionen einwandfrei aus.

Sie benötigen kein WLAN, um dieses Produkt zu nutzen.

Wenn Sie jedoch zu Hause WLAN haben, empfehlen wir

Ihnen dringend, das Gerät mit dem Netzwerk zu verbinden, wenn Sie bei der erstmaligen Einrichtung dazu aufgefordert werden. Dies vereinfacht die weitere Einrichtung des Geräts, verbessert die Vernetzung mit anderen Relish-Produkten und ermöglicht automatische Software-Updates.

## WLAN: Verbindung per WPS

- WPS (Wi-Fi Protected Setup) ist eine Funktion, die in viele drahtlose Router eingebaut ist, damit die Benutzer sie leichter mit dem Internet verbinden können.
- Lassen Sie sich von den Anweisungen im Einstellungsmenü des Geräts mit dieser Funktion durch die Einrichtung führen.
  - Beachten Sie, dass nicht alle WLAN-Router WPS unterstützen. Wenn dies der Fall sein sollte, müssen Sie das Passwort manuell eingeben, wenn Sie im Einstellungsmenü des Geräts dazu aufgefordert werden.

## WLAN: Manuelle Passworтеingabe

Wenn kein WPS verwendet wird, müssen Sie das gewünschte WLAN-Netzwerk manuell auswählen und das WLAN-Passwort manuell über die Bildschirmtastatur eingeben. Die Tastatur kann mit den Tasten

## WLAN-Signalstärke

Die WLAN-Signalstärke wird in der oberen rechten Ecke des Einstellungsmenüs angezeigt.



Starkes WLAN-Signal  
Schwächeres WLAN-Signal

## Bildschirmtastatur


Für die Navigation:




Nach links scrollen




Nach rechts scrollen



Zahlen und Symbole




Zusätzliche Symbole



Kleinschreibung



Großschreibung



Löschung eines Zeichens




Eingabe eines Leerzeichens

## Kopplung mit einem Day Connect (optional)

Sie können dieses Gerät mit einem Relish Day Connect koppeln und Aufgabenalarme in mehreren Räumen gleichzeitig empfangen.

Um Ihren Day Hub mit einem Day Connect zu koppeln, gehen Sie folgendermaßen vor:

1. Drücken Sie die Menüaste  auf der linken Seite des Day Connect.

2. Wählen Sie „Geräte koppeln und die Kopplung aufheben“ aus.

3. Wählen Sie „Koppeln“ aus.

4. Befolgen Sie die schrittweise Anleitung.

Die Geräte können drahtlos in einem Abstand von bis zu 30 Metern oder an einem beliebigen Ort innerhalb des WLAN-Netzwerks gekoppelt werden.



Gekoppelt

Starkes Kopplungssignal

Schwächeres Kopplungssignal

- Die Geräte näher zueinander bringen (wenn sie nicht mit WLAN verbunden sind)
- Die Geräte näher an den WLAN-Router bringen (wenn die Verbindung per WLAN hergestellt wird)

- Die Geräte so aufstellen, dass keine Hindernisse zwischen ihnen und dem WLAN-Router das Signal blockieren

Bei solchen Hindernissen kann es sich zum Beispiel um dicke Wände oder große elektronische Geräte (z. B. Waschmaschinen, Mikrowellen, Geschirrspüler, Öfen, Kühlschränke oder Klimaanlage) handeln.

Die Stärke des Kopplung zwischen den Geräten wird in der oberen rechten Ecke des Einstellungsmenüs angezeigt.

## Kopplung mit einem Day Connect aufheben (optional)

Um die Kopplung der Geräte aufzuheben, gehen Sie folgendermaßen vor:

1. Drücken Sie die Menütaste auf der linken Seite des Day Hub.
2. Wählen Sie „Geräte koppeln und die Kopplung aufheben“ aus.
3. Wählen Sie „Day Connect entkoppelt“ aus.
4. Wählen Sie den Day Connect aus, den Sie entkoppeln möchten.  
Im Einstellungs Menü finden Sie eine Liste der verbundenen Geräte. u.

## Zurücksetzen auf Werkseinstellungen

Eine Anleitung, wie Sie Ihr Gerät auf die Werkseinstellungen zurücksetzen, finden Sie unter

der Option „Werkseinstellungen“ im Einstellungsmenü .

## Software-Updates

Wir erstellen von Zeit zu Zeit Software-Updates, um die Leistung des Geräts zu optimieren. Sie werden über Nacht automatisch installiert, wenn das Gerät mit dem WLAN verbunden und in eine Steckdose eingesteckt ist.

Software-Updates sind nur für Geräte verfügbar, die mit einem WLAN-Netzwerk verbunden sind. Wenn Ihr Gerät funktioniert, aber nicht mit einem WLAN verbunden ist, brauchen Sie sich keine Sorgen zu machen – es benötigt kein Update.

Um die Software des Geräts zu prüfen und/oder manuell zu aktualisieren, gehen Sie

folgendermaßen vor:

1. Vergewissern Sie sich, dass das Gerät mit dem WLAN verbunden ist.
2. Drücken Sie die Menütaste auf der linken Seite des Geräts.
3. Wählen Sie „Softwareaktualisierung“ aus.
4. Befolgen Sie die schrittweise Anleitung.  
Die Aktualisierung der Software sollte nicht länger als 5 Minuten dauern.

### ACHTUNG

**Trennen Sie das Gerät während des Updates nicht vom Stromnetz.**