




Red Dot Mounting Instructions

0.100 MAX
SCREW PROTRUSION

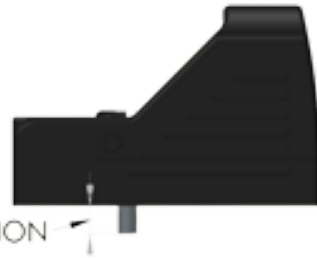

- 1.** To ensure a problem free installation check screw protrusion from bottom of optic.
- 2.** Screws must not stick out further than .100 or 2.5 mm
- 3.** Hand check the optic mounting screws can be threaded into the optic mount by hand before installing sight.
- 4.** Mounts are tapped with the following thread sizes

M3x0.5	Vortex Venom	Sightmark M-Spec
M3.5x0.6	Grace M1	
M4x0.7	Leupold Delta Point	Holosun 507K
#6-32	Trijicon RMR	Swamp Fox Liberty/Justice
#6-40	Burris Fast Fire 3	

- 5.** Max torque on the optics screws are 25 in lbs
- 6.** Use only 222 purple Loctite