

aerocoach

Computer mounts for Ascalon Elite extensions - standard Garmin configuration



Please read these instructions carefully - non-compliance will void the warranty which applies to the original owner

Please note:



- You must NOT modify the computer mount
- You must use the safety tether to secure your computer to the mount using the hole provided

Installation - standard mount, Garmin configuration:

Assembly – unlocked position

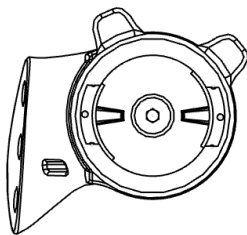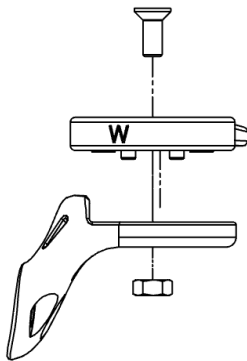

Once Garmin is placed onto mount, use tabs to rotate top section until arrow lines up with 'G' – locked position

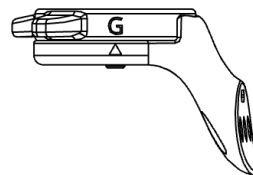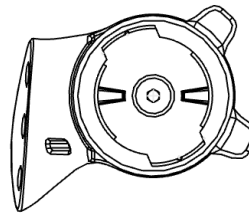

- Recommended torque for Assembly of the mount using countersunk bolt and nut provided is 2-3Nm
- Recommended torque to attach mount to Ascalons using cap head bolt provided is 2-3Nm

Please check your equipment before each ride - if you see any damage then you should not use the bicycle until it has been inspected

AeroCoach LTD does not accept any liability for issues arising due to non-compliance of these instructions. If you are unsure about the setup of your computer mount, please contact customerservice@aero-coach.co.uk

aerocoach

Modular computer mounts for Ascalons - standard Wahoo configuration



Please read these instructions carefully - non-compliance will void the warranty which applies to the original owner

Please note:



- You must NOT modify the computer mount
- You must use the safety tether to secure your computer to the mount using the hole provided

Installation - standard mount, Wahoo configuration:

Assembly – unlocked position

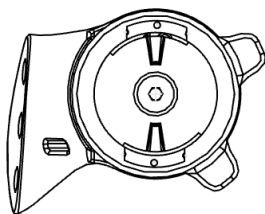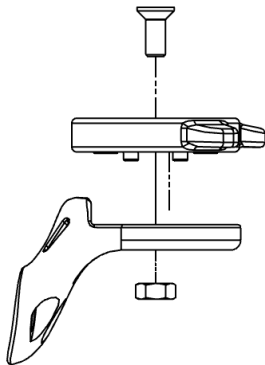

Once Wahoo is placed onto mount, use tabs to rotate top section until arrow lines up with 'W' – locked position

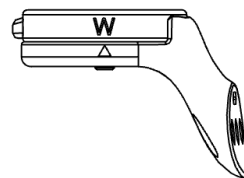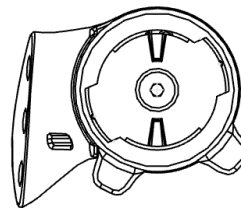

- Recommended torque for Assembly of the mount using countersunk bolt and nut provided is 2-3Nm
- Recommended torque to attach mount to Ascalons using cap head bolt provided is 2-3Nm

Please check your equipment before each ride - if you see any damage then you should not use the bicycle until it has been inspected

AeroCoach LTD does not accept any liability for issues arising due to non-compliance of these instructions. If you are unsure about the setup of your computer mount, please contact customerservice@aero-coach.co.uk

aerocoach

Modular computer mounts for Ascalons - high Garmin configuration


Please read these instructions carefully - non-compliance will void the warranty which applies to the original owner

Please note:



- You must NOT modify the computer mount
- You must use the safety tether to secure your computer to the mount using the hole provided

Installation - high mount, Garmin configuration:

Assembly – unlocked position

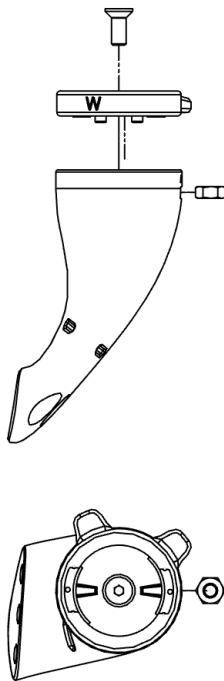

Once Garmin is placed onto mount, use tabs to rotate top section until arrow lines up with 'G' – locked position

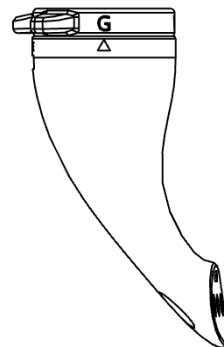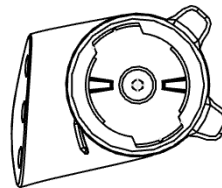

- Recommended torque for Assembly of the mount using countersunk bolt and nut provided is 2-3Nm
- Recommended torque to attach mount to Ascalons using cap head bolt provided is 2-3Nm

Please check your equipment before each ride - if you see any damage then you should not use the bicycle until it has been inspected

AeroCoach LTD does not accept any liability for issues arising due to non-compliance of these instructions. If you are unsure about the setup of your computer mount, please contact customerservice@aero-coach.co.uk

aerocoach

Modular computer mounts for Ascalons - high Wahoo configuration


Please read these instructions carefully - non-compliance will void the warranty which applies to the original owner

Please note:



- You must NOT modify the computer mount
- You must use the safety tether to secure your computer to the mount using the hole provided

Installation - high mount, Wahoo configuration:

Assembly – unlocked position

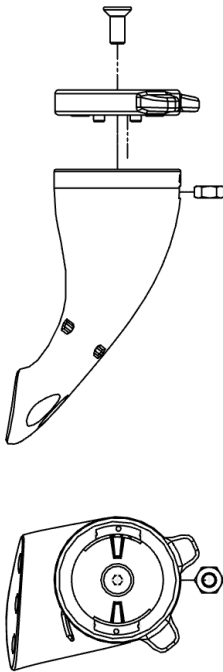

Once Wahoo is placed onto mount, use tabs to rotate top section until arrow lines up with 'W' – locked position

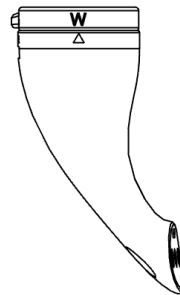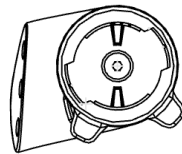

- Recommended torque for Assembly of the mount using countersunk bolt and nut provided is 2-3Nm
- Recommended torque to attach mount to Ascalons using cap head bolt provided is 2-3Nm

Please check your equipment before each ride - if you see any damage then you should not use the bicycle until it has been inspected

AeroCoach LTD does not accept any liability for issues arising due to non-compliance of these instructions. If you are unsure about the setup of your computer mount, please contact customerservice@aero-coach.co.uk

aerocoach

Modular computer mounts for Ascalons - optional action camera or light mount attachment

Please read these instructions carefully - non-compliance will void the warranty which applies to the original owner


Please note:

- You must NOT modify the attachments in any way.
- There is a weight limit of 120g for accessories mounted underneath the head unit using the action camera / light mount.


Installation - action camera attachment on standard mount:

- Follow the instructions above for orientation of the parts for assembly in the Garmin or Wahoo configuration as appropriate.
- Use the longer countersunk bolt provided with the action camera / light mount attachment in place of the countersunk bolt provided with the standard computer mount itself to assemble according to the diagrams below (please note these diagrams show the Garmin configuration - please see diagrams above to orientate the parts for Wahoo use):

Assembly – optional action camera mount

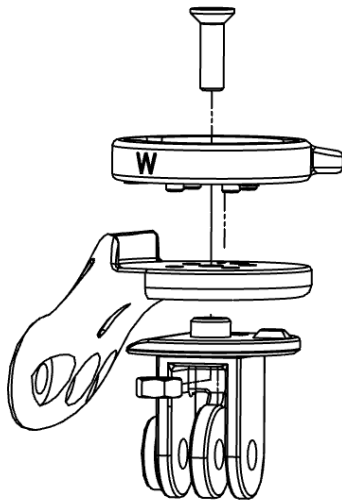

Assembly – optional light mount

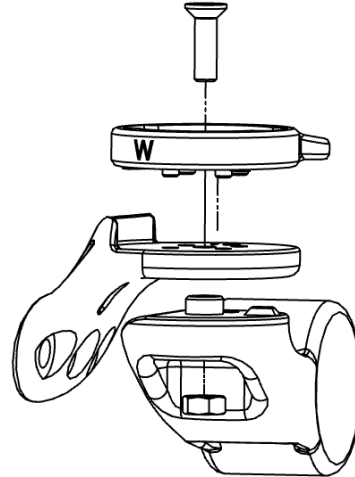

- Recommended torque for Assembly of the mount using countersunk bolt and nut provided is 2-3Nm

Please check your equipment before each ride - if you see any damage then you should not use the bicycle until it has been inspected

AeroCoach LTD does not accept any liability for issues arising due to non-compliance of these instructions. If you are unsure about the setup of your computer mount, please contact customerservice@aero-coach.co.uk