



Quick and Simple Installation Instructions

- Pre-assembled for easy installation
- Rackable for installations with sloped ground
- Add on to most new or existing 6' wide Residential aluminum fence panels
- Flush bottom and Picket bottom fences

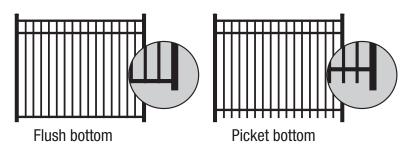

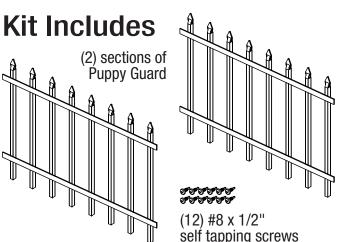



Step 1

Insert each section of Puppy Guard to yard side of your installed fence section as shown in **Figure 1**.

Bottom pickets on Puppy Guard should rest on bottom horizontal rail of installed fence section.

Slide the Puppy Guard section slightly left or right as needed to position in-between your existing pickets.


Attach using 6 each #8 x ½" self tapping screws.


Step 2

Insert second section of Puppy Guard opposite installed section of Puppy Guard as shown in **Figure 2**.

Bottom pickets on Puppy Guard should also rest on bottom horizontal rail of installed fence section as instructed in step 1.

Attach using 6 each #8 x ½" self tapping screws.

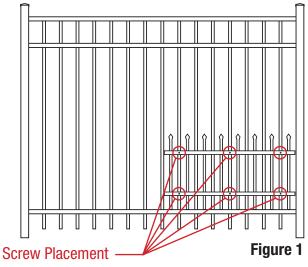

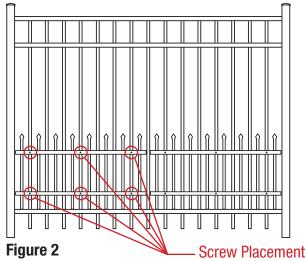

Step 3

This step is only required when Picket Bottom Style Fence is installed in your yard. Puppy Guard Add-On Strip must be purchased separately at homedepot.com (one set per 6' fence).

Install Puppy Guard strap at bottom of extended pickets of installed fence as shown in **Figure 3**.

Strap should be located between bottom of horizontal rail and bottom of pickets of your installed fence section as shown.

Attach using 3 each #8 x ½" self tapping screws.

Step 4

Install second Puppy Guard strap opposite first installed Puppy Guard strap as shown in **Figure 4**.

Attach using 3 each #8 x ½" self tapping screws.

Figure 5 Below shows how Puppy Guard can rack to installed fence.

Full video can be seen americanonefenceandrailing.com

