

# NO ZIP TRUNK COVER

## Velcro Assembly

Tools & Parts needed to assemble.

1. HALCO Hook velcro with adhesive
2. Hand Roller, squeegee & white pencil.  
This will easily wipe off with water when finished
3. Labeled Per-cut Adhesive HALCO Hook
  - 2" x 24" QTY 2 (for trunk center)
  - 1" x 24" QTY 1 (for trunk top front)
  - 2" x 32" QTY 1 (for trunk front)
  - 2" x 18" QTY 2 (for sides)
4. Ruler or Tape measure (NOT INCLUDED)


Represents  
HALCO Hook  
Velcro




SUPPLIED  
HALCO Pre-cut Hook  
Roller & Squeegee  
White Marking Pencil.

Ruler or Tape Measure.  
NOT INCLUDED

TOP LID FRONT  
Placement for Stanley or Craftsman

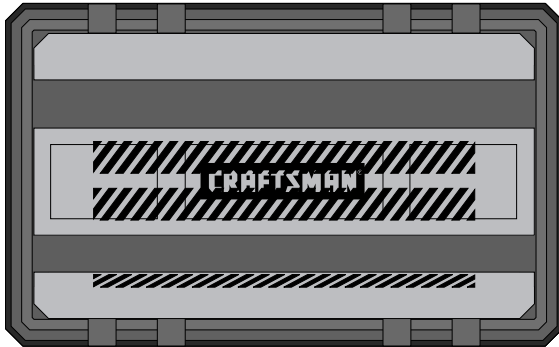

Placement for HUSKY

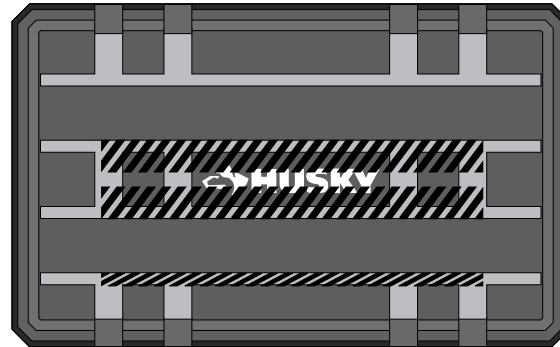

TRUNK FRONT



Apply the HALCO Hook to the trunk by first measuring and marking the placement points using the white pencil provided. Begin peeling the backing from the HALCO Adhesive Hook and adhere it along the marked lines, pulling off more backing as you go. Make sure to keep it centered. HALCO is very sticky, so press it into place by hand, and use the squeegee to smooth it over dips or creases. The roller can be used to firmly press it down once the area is completed.

Start with the trunk lid/top by placing two 24" x 2" pieces side by side in the center of the top, followed by a 24" x 1" piece at the front of the lid. Move on to the trunk front with a 32" x 2" piece. Finally, do the sides last, insuring they align with the front piece, with one 18" x 2" piece per side.

TRUNK SIDE



Your cover includes a padded seat insert with a Velcro opening on the underside, allowing you to remove the cushion if needed. Place the padded cushion over the trunk, align the two center Velcros, and press them down to meet the front 1" Velcro on the lid. Make any alignment adjustment needed for the top, then move on to the skirt.

Flip up the sides and front, and starting at the wheels, wrap the skirt around the trunk onto the HALCO Hook you've placed on it. Continue wrapping until you reach the other side, then attach it to the back panel using the Velcro on the skirt and back panel. Make sure everything looks good and adjust if necessary. Flip down all sides and the front.

You're all set! Go ahead, have a seat, and BE A SHOWOFF!

Feel free to contact us with any questions or for assistance. 302-344-1231

SCAN QR Code to view more detailed images.

Or visit our web site here:

<https://www.beashowoff.com/padded-no-zip-trunk-cover#Instructions>

