

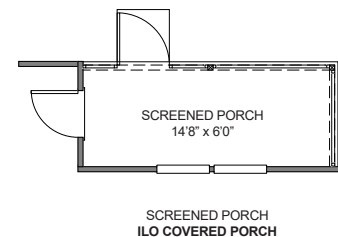
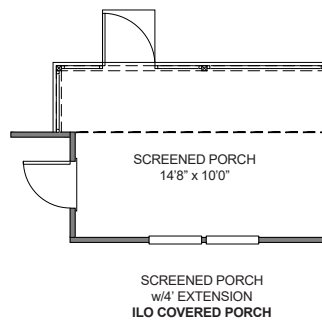


Options


First Floor

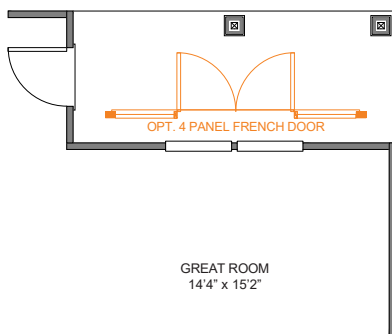

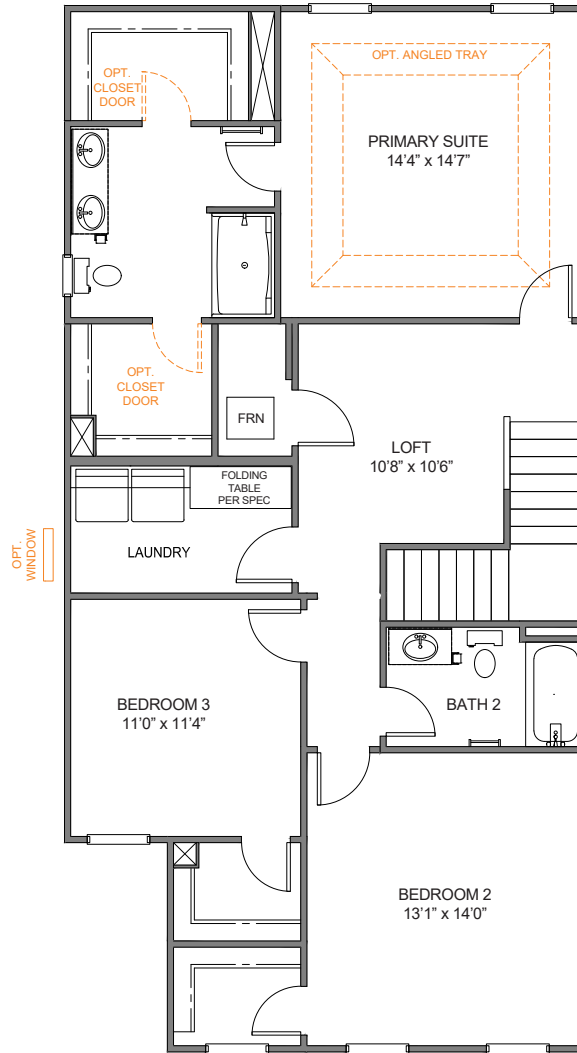


Options


Bath 2

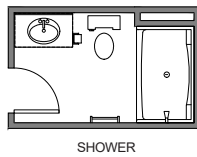


Primary Bath

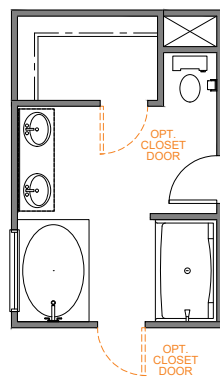





LUXURY BATH 1
TAKE 4" FROM WIC AND HVAC CLOSET

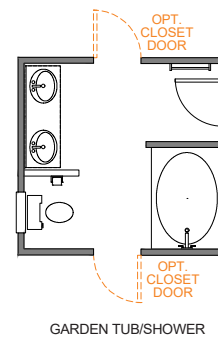


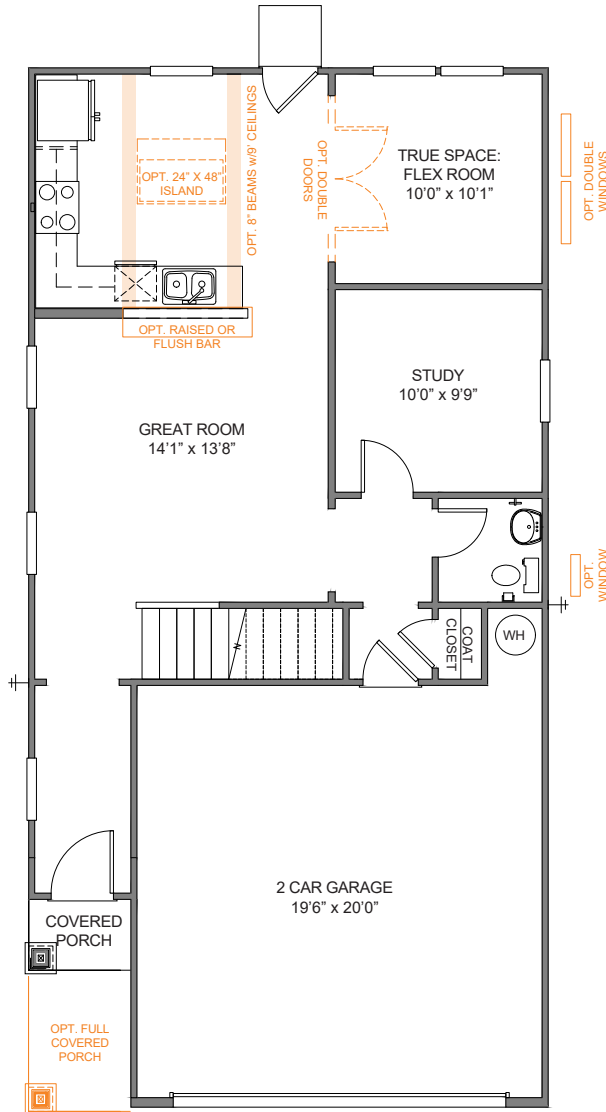

Options


First Floor

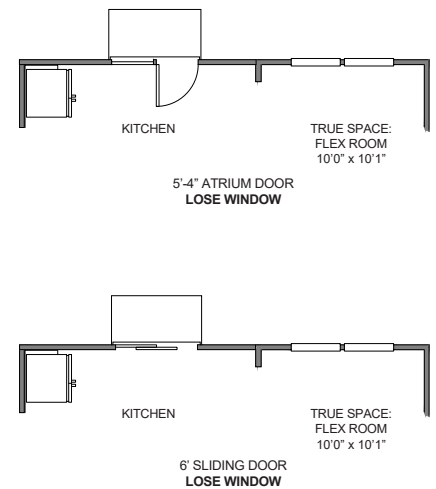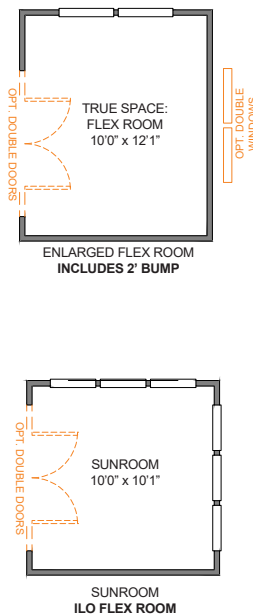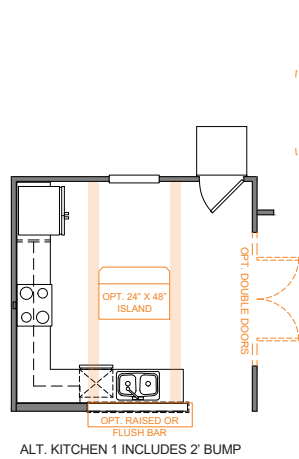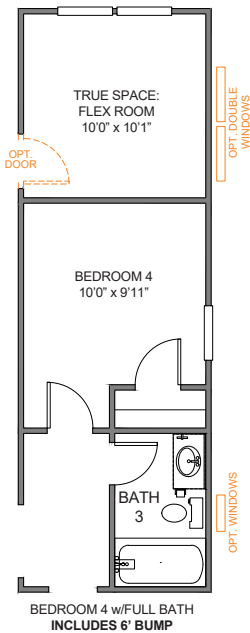

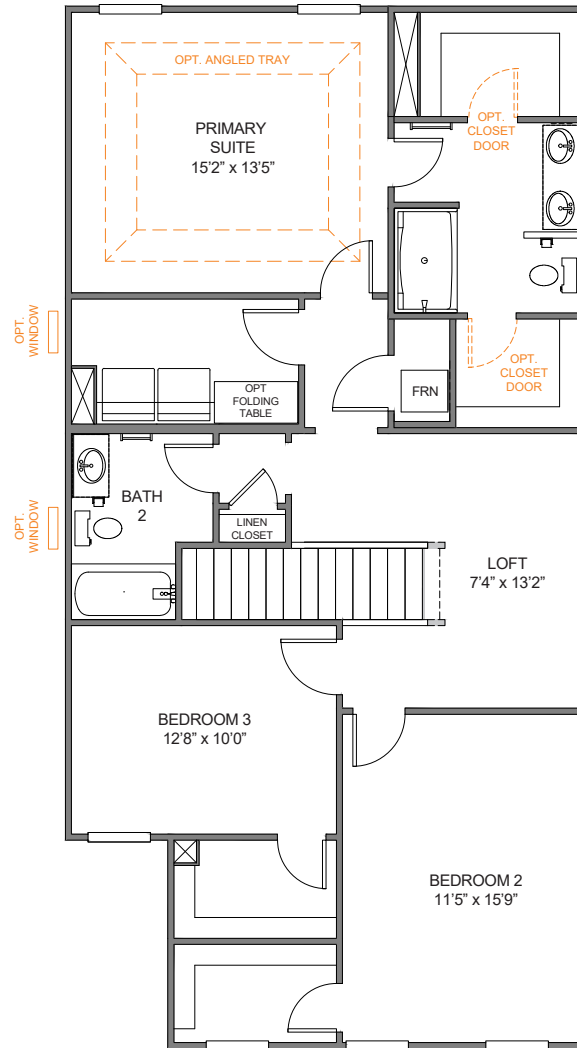


Options

Primary Bath

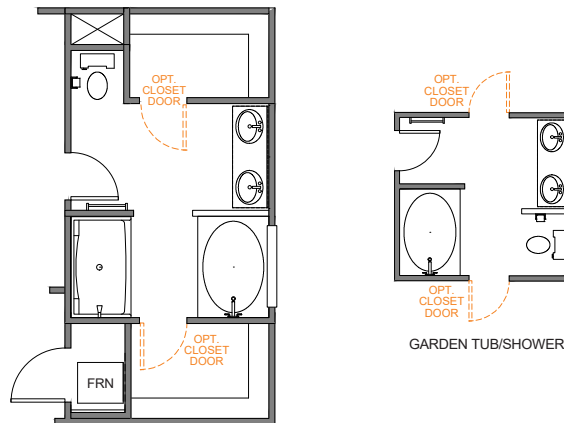


LUXURY BATH 1
LOSE 10" FROM PRIMARY BEDROOM

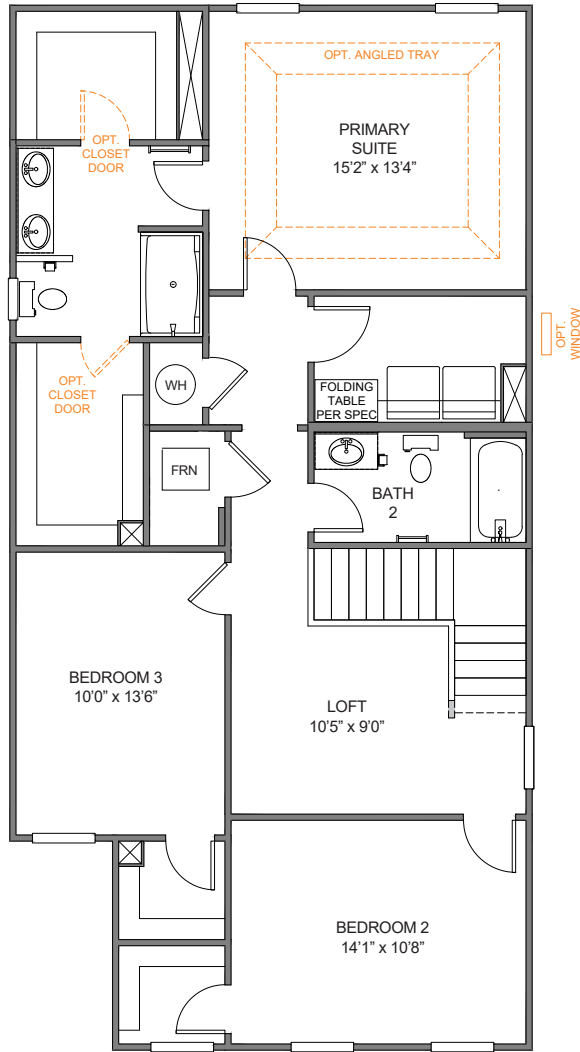


Options

Bath 2

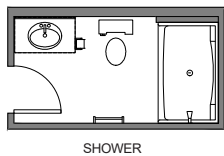

Luxury Bath

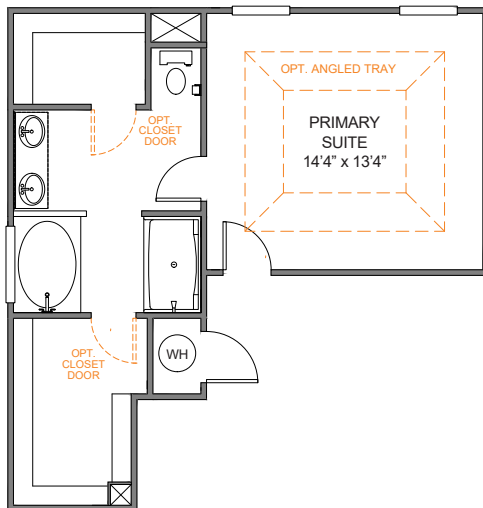

LUXURY BATH 1
LOSE 10" FROM PRIMARY BEDROOM

Primary Bath

