

HARD LID




FITTING INSTRUCTION - VARIATIONS

2021 – current NISSAN NAVARA Infill

The shorter return fold sits on top of the tub and pushed back against the 3 tabs. It is fixed into the side of the tub with factory fasteners.

NOTE: Silicon seal all along underside of infill to tub.

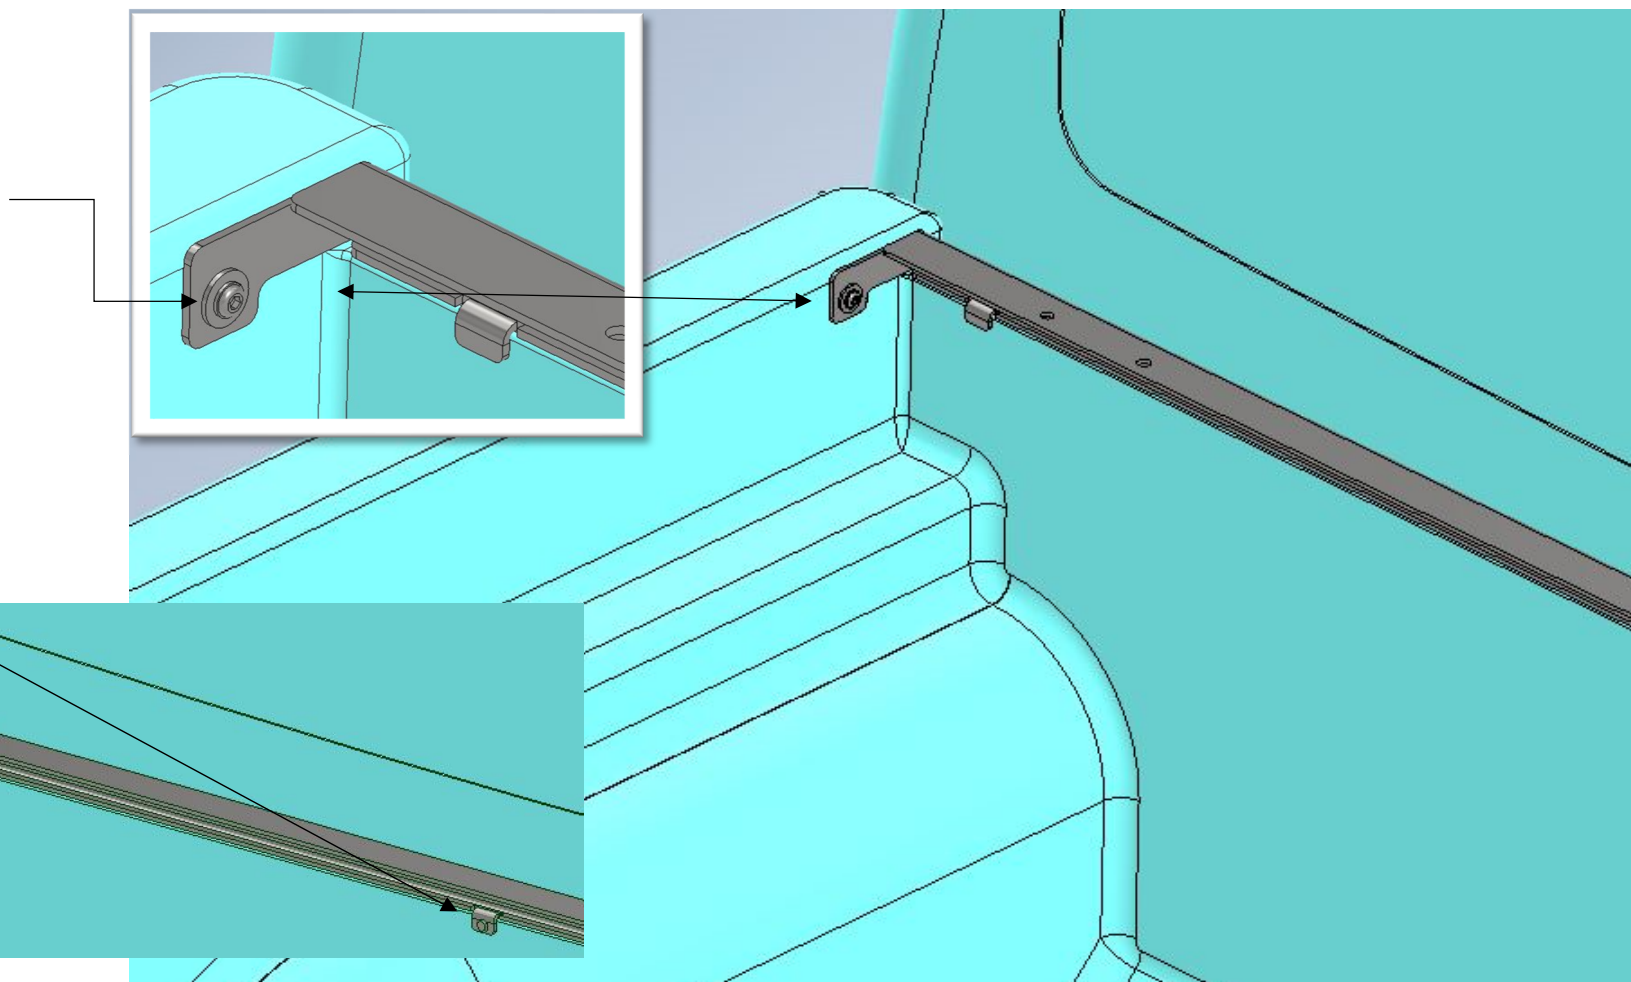

Once the infill panel is fastened in place, drill (Ø5.1) and rivet in place.

