


HARD LID




FITTING INSTRUCTION - VARIATIONS

2025 current LDV Terron 9 Infill panel


1. Remove the 2 front screws from each side of the tub.

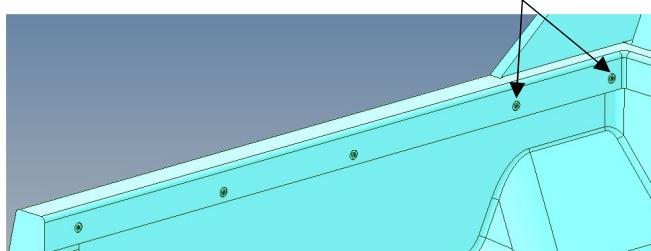


2. Carefully slide the infill into place. Fasten the sides with 2 @ M6 x 25 S/S button head socket screws, penny & spring washers (each side) into the factory holes.

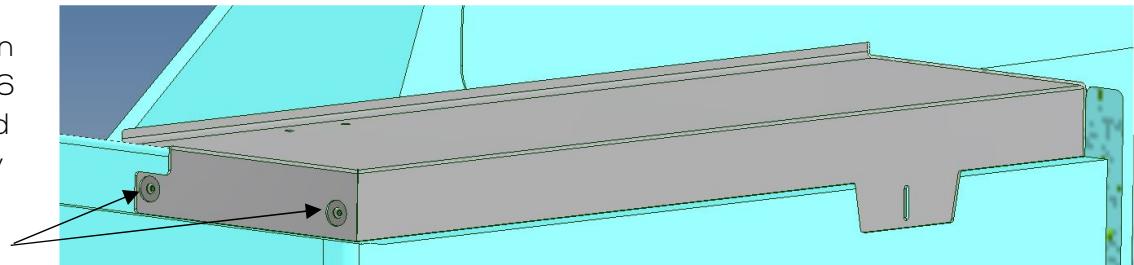

3. Fit the centre infill brace using 1 @ M6 x 25 S/S button head socket screw, spring & penny washer (top of brace has a M6 rivnut fitted).

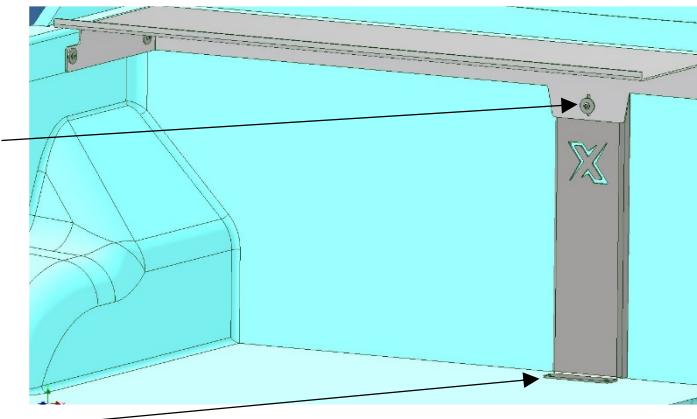


Once fastened, drill 2 @ Ø5 holes at the bottom of the support and pull up 2 @ 5mm S/S rivets.

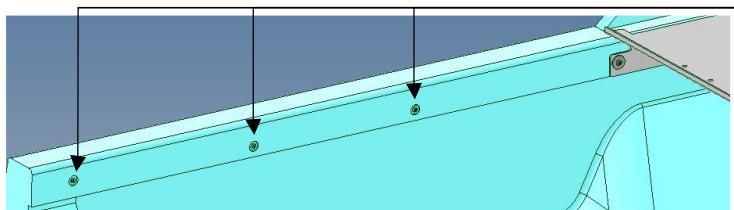

5. Remove the remaining 3 bolts from each side of the tub.

Fit the S/S side rails using 3 @ M6 x 25 S/S button head socket screws, penny & spring washers (each side) into the factory holes.

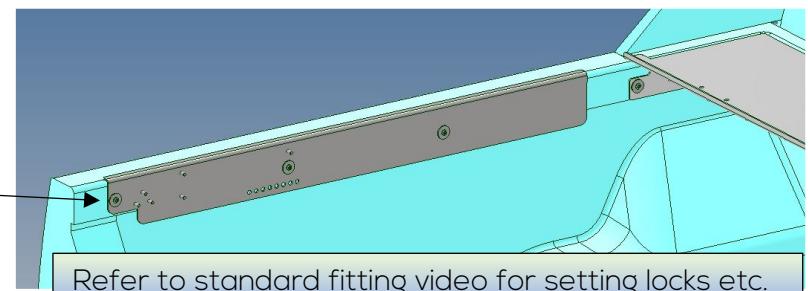

Refer to standard fitting video for setting locks etc.