

HARD LID



FITTING INSTRUCTION – JAC T9 CAB PROTECTOR BRACKET

1- Cut the 2 factory fitted cab protection brackets off the tub.

2- Clean and paint the exposed surfaces.

3- Sit the supplied brackets in place on the lid and mark the rivet holes.

4- Remove the brackets and drill 4 holes @ Ø5.







5- Rivet the 2 brackets in place on the lid (note orientation).

6- Bolt the cab protectors to the brackets using M6 x 40 s/s button head socket screw / M6 s/s spring washer / M6 s/s penny washer.

NOTE: Please use anti seize on all fasteners.

Fasteners supplied:

- 2 x M6 x 40 S/S button socket screws
- 2 x M6 S/S spring washers
- 2 x M6 S/S penny washers
- 4 x Ø5 S/S rivets

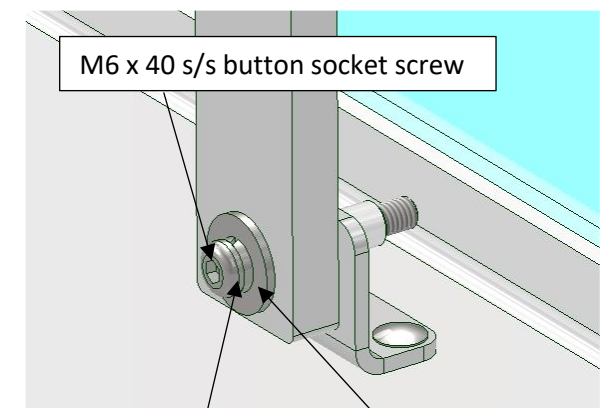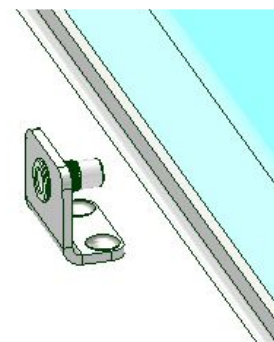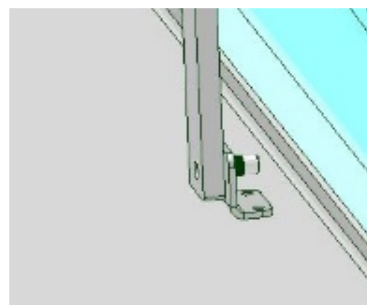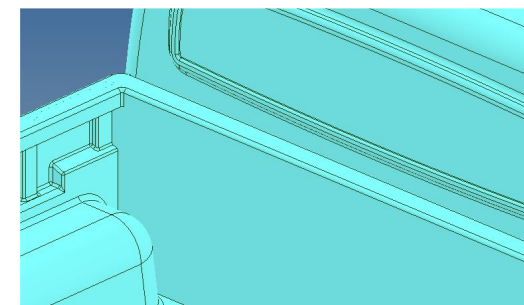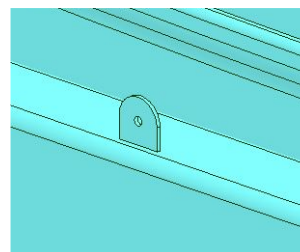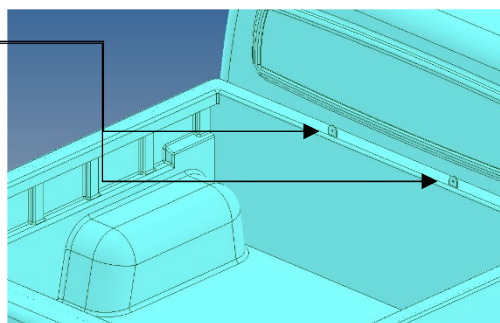

M6 x 40 s/s button socket screw

M6 s/s penny washer

M6 s/s spring washer

