


# CHEVROLET

## Camaro

### 1967-83

no louvers  
in our panel




LRFF-59X




LRFF-57X




LRFF-60X

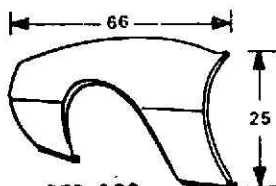


RFP-109

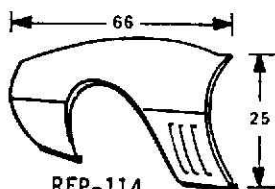

RFP-114

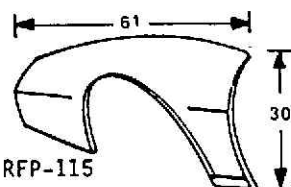

RFP-115

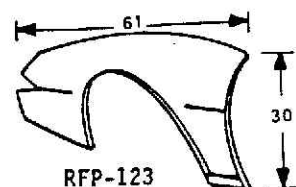

RFP-123

LRFF-59X 1967-68 LOWER REAR FRONT FENDER,tip only

LRFF-60X 1969 LOWER REAR FRONT FENDER,tip only

LRFF-57X 1972-80 LOWER REAR FRONT FENDER,tip only


#RFP-109 1967-68 REAR FENDER PANEL

#RFP-114 1969-70 REAR FENDER PANEL,(early 70 models)

#RFP-115 1970-73 REAR FENDER PANEL,(late 70 models)

#RFP-123 1974-81 REAR FENDER PANEL

RFP-138 1982-91 REAR FENDER PANEL


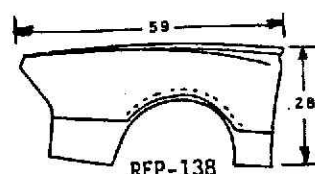


RFP-138


## 1970-72

### Chevelle

no marker light  
hole in panel

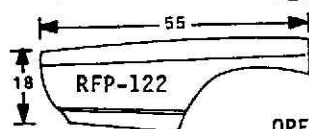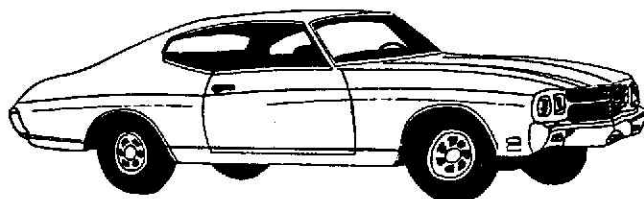

RFP-122

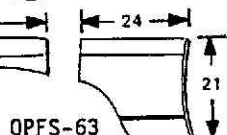

QPFS-63



LRFF-58X



LRFF-58X LOWER REAR FRONT FENDER,tip only

QPFS-63 QUARTER PANEL FRONT SECTION

RFP-122 REAR FENDER PANEL

## Chevelle

### 1973-77

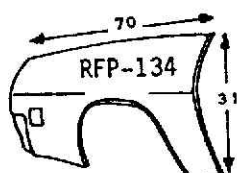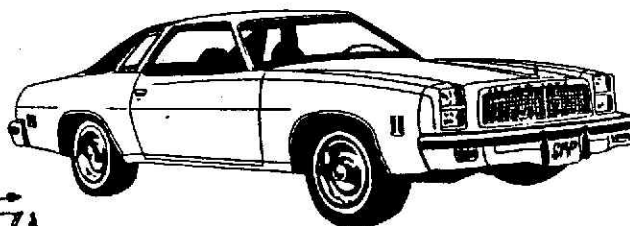

RFP-134

#RFP-134 1973-77 REAR FENDER PANEL

DB-31F

DB-31BD

DB-31F 2&4-dr DOOR BOTTOM,front

DB-31BD DOOR BOTTOM,back

#TOO LARGE FOR UPS

## Chevette

### 1977-84