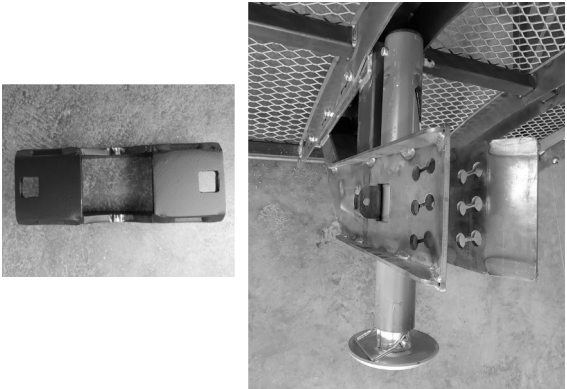
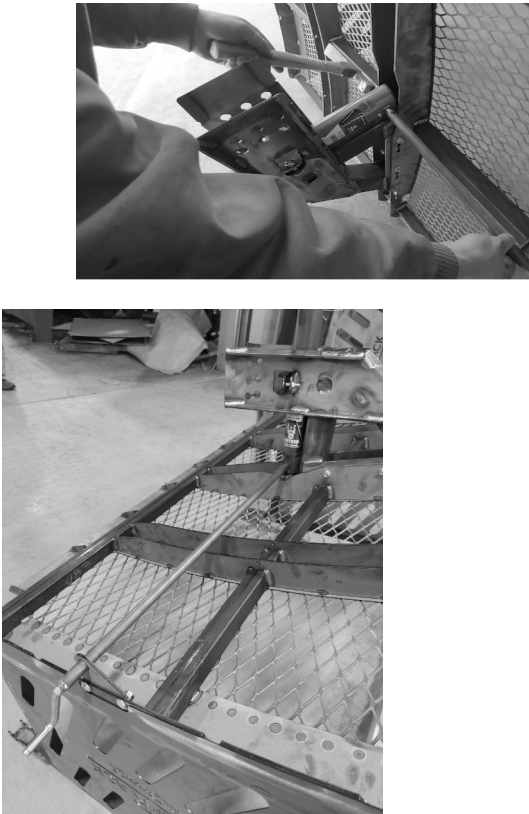



Quick Disconnect Instructions (QD-100)

Step #	Description	Image
1	Insert the custom jack into the adjustable hitch “A” frame and secure with jack mounting bracket and (2) $\frac{3}{8}$” x 1½” carriage bolts and (2) $\frac{3}{8}$” flange nuts. Ensure this is tightened down well to prevent your jack from slipping.	
2	Attach the jack handle plate to the side of dovetail and secure with (2) $\frac{3}{8}$” X $\frac{3}{4}$” bolts and (2) $\frac{3}{8}$” flange nuts.	
3	Insert jack handle extension through the jack handle plate and onto the jack. Secure with (1) $\frac{1}{4}$” x 1¼” bolt and (1) $\frac{1}{4}$” lock nut through the pre-drilled hole. A hammer can be helpful to get the jack handle extension onto the jack. The handle should be straight.	

4	Attach a turnbuckle to each side of the dovetail using (2) $\frac{5}{16}$" lynch pins on each.	
5	Remove the $\frac{3}{8}$ " x $2\frac{1}{2}$ " flange bolts on the dovetail and replace with the snapper pins .	

QD-100 Parts List

Turnbuckle		2
Custom Jack		1
Jack Handle Plate		1
Jack Handle Extension		1
Jack Mounting Bracket		1
Snapper Pin		2
Lynch Pins		4
$\frac{3}{8}$ " x $\frac{3}{4}$ " Carriage Bolt		2
$\frac{3}{8}$ " x $1\frac{1}{2}$ " Carriage Bolt		2
$\frac{3}{8}$ " Flange Nut		4
$\frac{1}{4}$ " x $1\frac{1}{4}$ " Bolt		1
$\frac{1}{4}$ " Lock Nut		1

