


Follow these steps to program your additional remote key fob to your WSK-1™ control box.

Step 1. Locate programming button #1 on your WSK-1 control box. Button #1 is closest to the antenna.

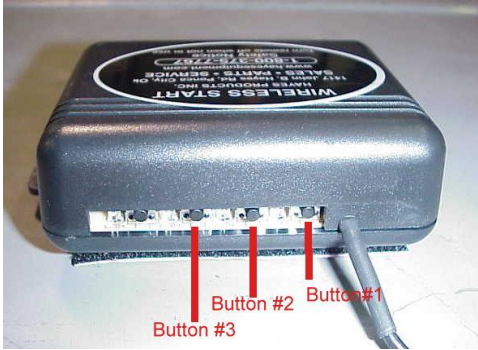

Step 2. Press and hold program button #1 down until LED lights up and flashes.

Step 3. While LED is flashing, press the ON / OFF button on your key fob. The LED will stay lit momentarily then flash.



Step 4. Press program button #1 on control box once and the blue light will go out.

Step 5. Press and hold program button #2 down until LED lights up and flashes.

Step 6. While LED is flashing, press the START button on your key fob. The LED will stay lit momentarily then flash.

Step 7. Press program button #2 on control box once and the blue light will go out.

Step 8. Press and hold program button #3 down until LED lights up and flashes.

Step 6. While LED is flashing, press the ARM button on your key fob. The LED will stay lit momentarily then flash.

Step 7. Press program button #3 on control box once and the blue light will go out.

This finishes the programming of a new key FOB to the existing control box.