


Dash

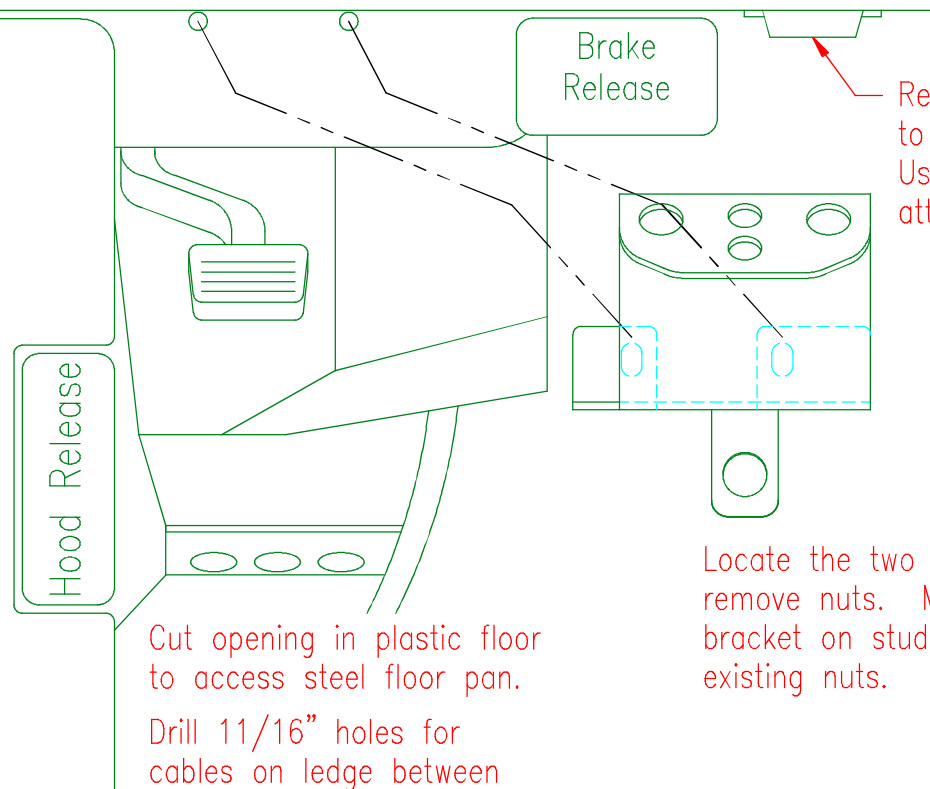

Relocate computer connection to the right of brake release. Use self tapping screws to attach to underside of dash.

Locate the two existing studs and remove nuts. Mount HC-03 dash bracket on studs and secure using existing nuts.

Cut opening in plastic floor to access steel floor pan.

Drill 11/16" holes for cables on ledge between floor pan and fire wall.

Insure window crank has adequate room for operation.

Avoid bending the first 14 inches of the cable as much as possible. Avoid all sharp, rotating and hot chassis components when routing cables.

# Installation Instructions HC-03 Dash Bracket 1999-2007 Classic Chevy Silverado GMC Sierra