


Dash

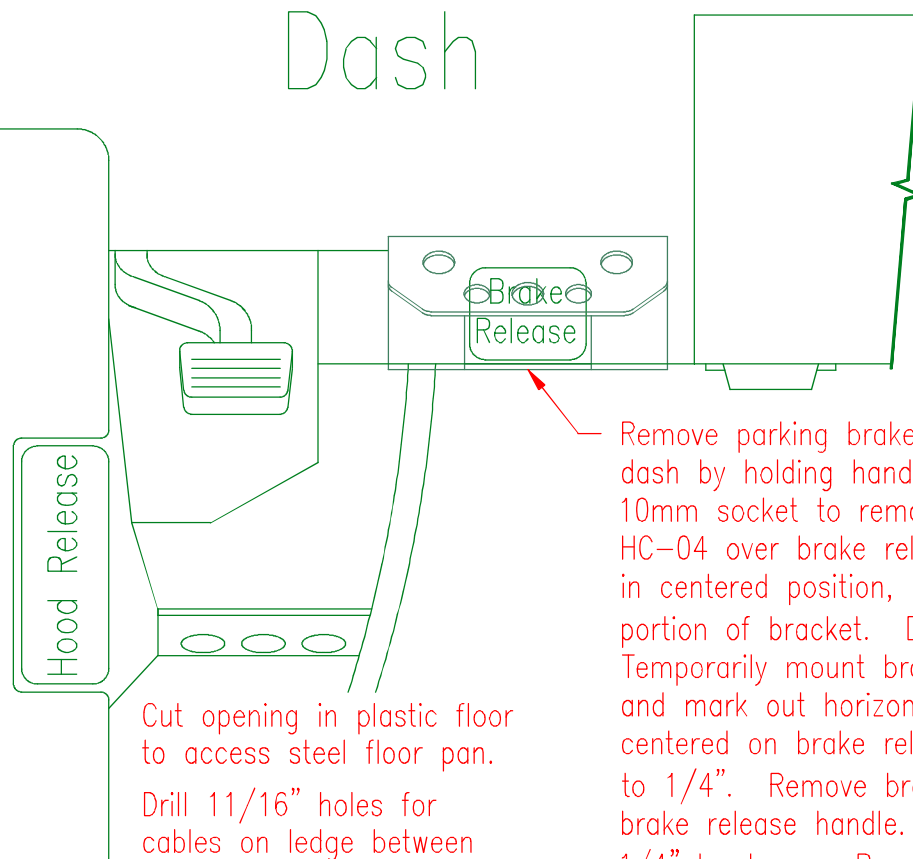

Cut opening in plastic floor to access steel floor pan.

Drill 11/16" holes for cables on ledge between floor pan and fire wall.

Remove parking brake release handle from dash by holding handle down and using a 10mm socket to remove screw. Center HC-04 over brake release cavity. Holding in centered position, mark hole on vertical portion of bracket. Drill hole to 1/4". Temporarily mount bracket to that first hole and mark out horizontal hole with bracket centered on brake release cavity. Drill hole to 1/4". Remove bracket and replace brake release handle. Mount bracket using 1/4" hardware. Be sure to keep bracket centered throughout tightening process.

Insure window crank has adequate room for operation.

Avoid bending the first 14 inches of the cable as much as possible. Avoid all sharp, rotating and hot chassis components when routing cables.

Installation Instructions HC-04 Dash Bracket 2007 & Newer Chevy Silverado GMC Sierra