
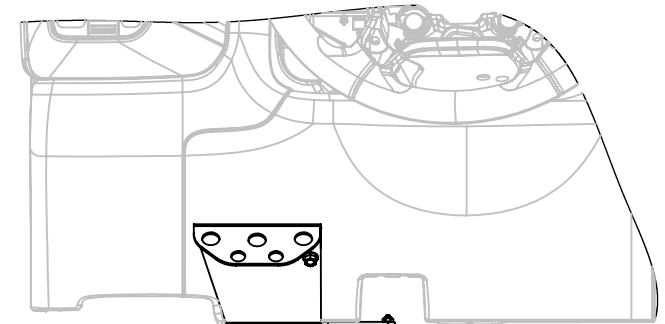
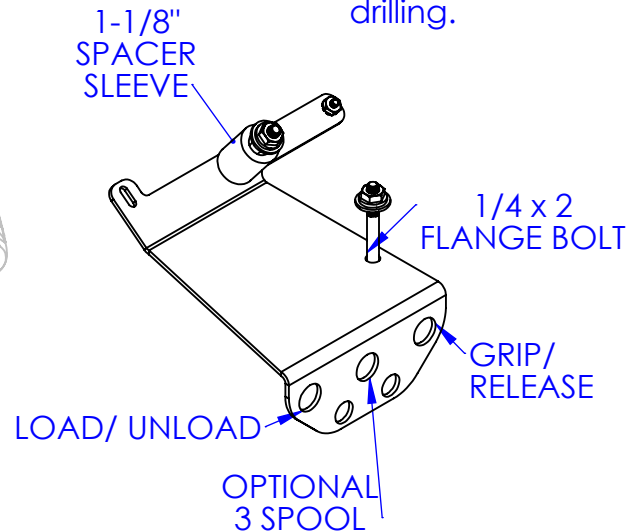


REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
A	INITIAL RELEASE	4/15/2014	

INSTALLATION INSTRUCTIONS HC-05 DASH BRACKET 2015 CHEVY/ GMC

NOTES

- Avoid bending the first 14" of the cables as much as possible. Avoid all sharp, rotating & hot chassis components when routing cables.
- Always verify that no wire harness is present before drilling.

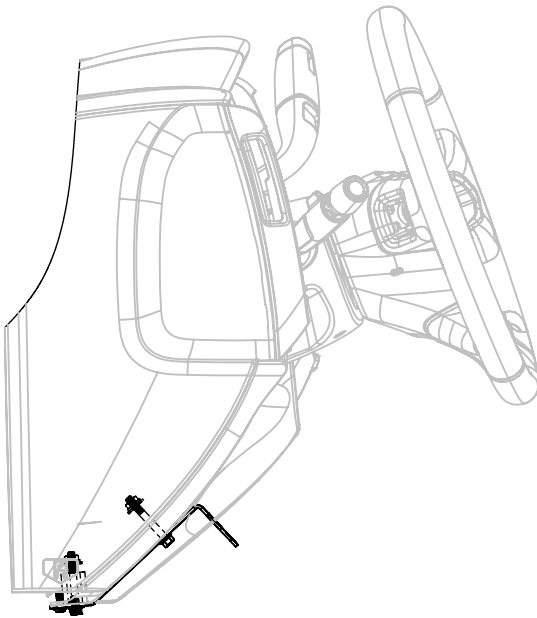

Cut opening in plastic floor to access steel floor pan.

Drill 11/16" hole for cables on ledge between floor pan & fire wall.

Locate existing screw & mount dash bracket using T15 socket.

When dash bracket is aligned drill two 9/32" holes using dash bracket as your template.

Relocate computer plug-in "OBDII" to side holes on dash bracket

Add bolts, nuts, & sleeve to match the above drawing.

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF TRIPLE C INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF TRIPLE C INC. IS PROHIBITED.

DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL $\pm 1/16$ ANGULAR: MACH ± 1 BEND \pm TWO PLACE DECIMAL ± 010 THREE PLACE DECIMAL ± 005	
MATERIAL	---
DO NOT SCALE DRAWING	

NAME	DATE
DRAWN HEATH	6/11/2014
PART # DB-HC-05	
ASM #	
COMMENTS: CHEVY / GMC DASH BRACKET 2015-	

P.O. BOX 248, SABETHA, KS 66534	
TRIPLE C INC.	
SIZE A	DWG. NO. 10-0805
SCALE: 1:7	WEIGHT: --
SHEET 1 OF 1	