


Avoid bending the first 14 inches of the cable as much as possible. Avoid all sharp, rotating and hot chassis components when routing cables.


Insure window crank has adequate room for operation.



3 Spool cable location

Remove original screw, drill holes out to 1/4". Replace with 1/4 x1 cap screws, lock washers and nuts, 3 places. Attach dash bracket middle hole to existing screw location.

Flat washers may be required as shims between plastic dash and steel dash support.

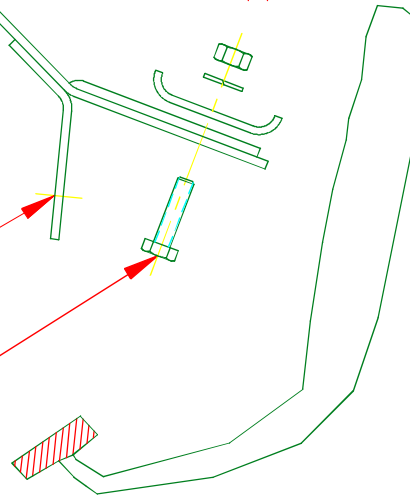


Emergency brake pedal

KICK PANEL

CAB FLOOR

Drill 11/16" holes in floor for cables.

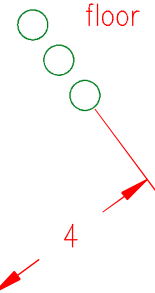

## Installation Instructions HD-01 Dash Bracket 1994-2002 Dodge

Mount dash bracket as shown. Using cable holes in bracket as a guide, sight towards floor for hole location. Drill holes in floor through one layer of sheet metal only. Locate floor pan/firewall seam under cab and pry apart enough for cables to fit through without pinching cables. Route cables from inside cab, through holes and out between seam.