


Installation Instructions HF-01 Dash Bracket 1992-1997 Ford

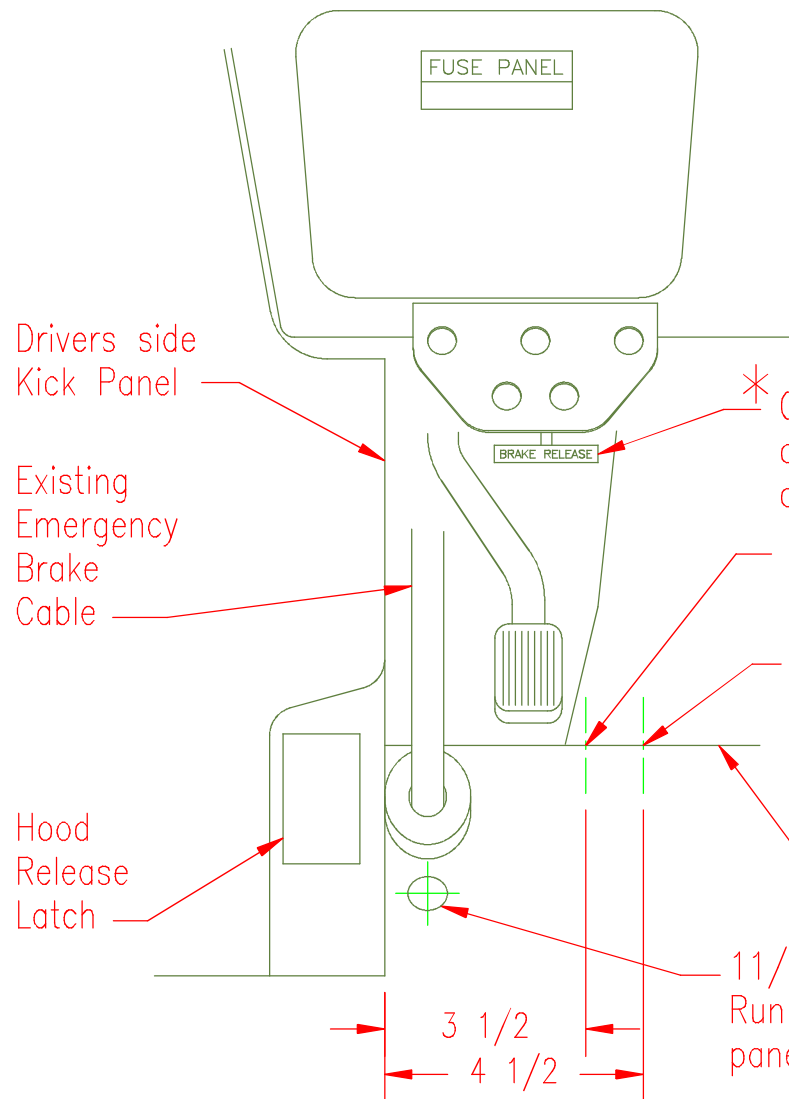

Avoid bending the first 14" of the cable as much as possible. Avoid all sharp, rotating and hot chassis components when routing cables.

Remove flanged nut from stud on emergency brake assembly. Install HF-01 bracket on stud. Replace nut on stud and tighten securely.

* Carefully reposition Brake Release handle downward to gain clearance from switch and cables.

* Use extreme caution when bending or modifying any OEM components. All components must operate without binding, catching, etc.