

DB 200 DUMP BOX W/ DBLP-150 LIFT PINS MOUNTING INSTRUCTIONS

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
A	UPDATED TO NEW STANDARD DWG FROM HB350 DB	1/11/2013	

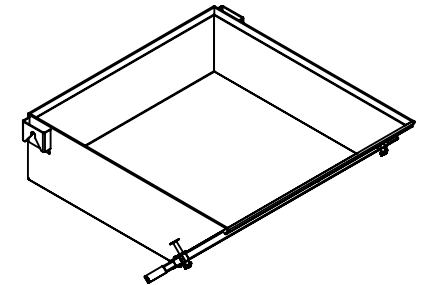
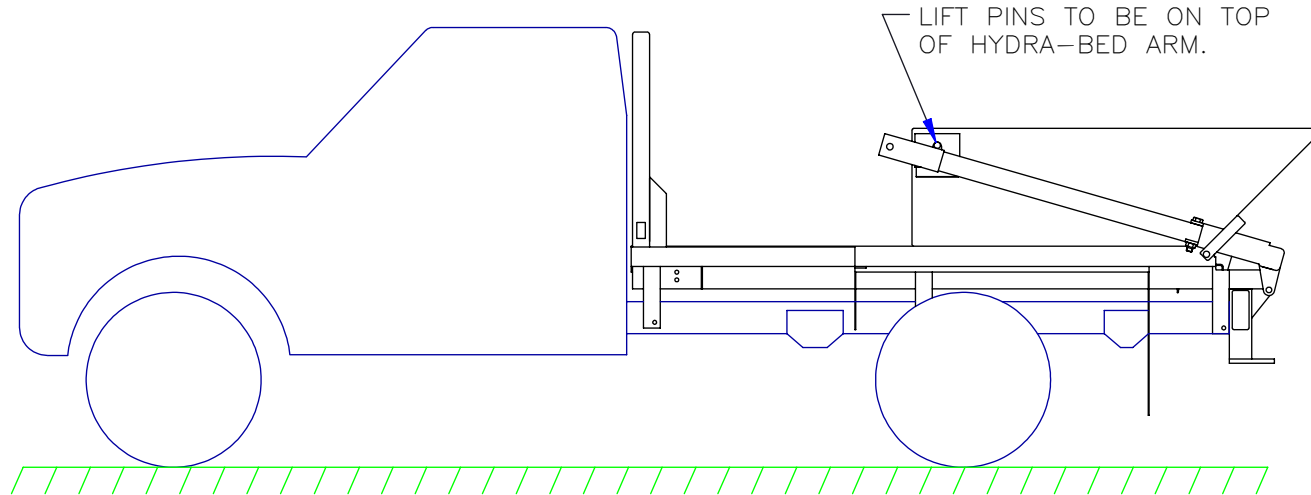


FIG. 1
DRIVERS SIDE VIEW
DB 200 MOUNTED ON HB 350

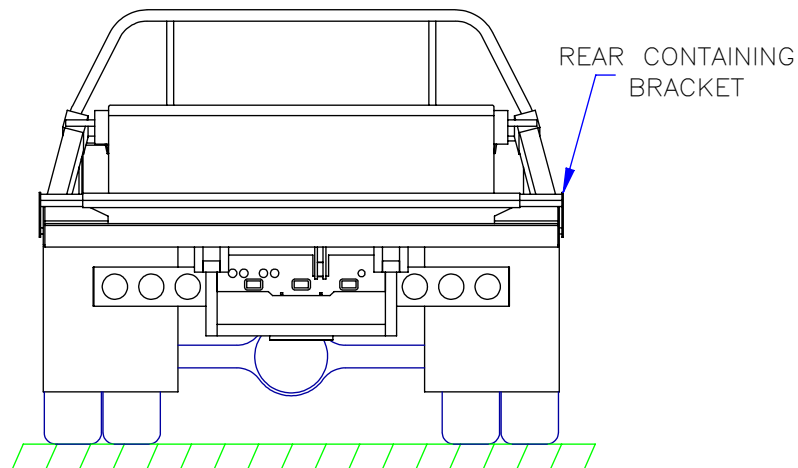


FIG. 2
REAR VIEW
DB 200 MOUNTED ON HB 350

1. PLACE DBLP-150 LIFT PIN SLEEVES ON HYDRA-BED ARMS AS SHOWN IN FIG.1. A LETTER "D" IS STAMPED ON THE TOP OF THE DRIVERS SIDE SLEEVE AND A LETTER "P" IS STAMPED ON THE TOP OF THE PASSENGERS SIDE SLEEVE. BE CERTAIN TO MOUNT THE SLEEVE SO THE PINS ARE ON TOP WHEN THE ARMS ARE IN THE FORWARD POSITION. DO NOT USE THE SLEEVES AS AN ARM EXTENSION.
2. WITH DB 200 SITTING ON THE GROUND, ROTATE HYDRA-BED ARMS TO THE REARWARD POSITION. POSITION TRUCK/HYDRA-BED SO LIFT PINS WILL ENGAGE IN DUMP BOX LIFT BRACKET. GRIP AND LOAD DUMP BOX ONTO HYDRA-BED.
3. WITH DB 200 SITTING COMPLETELY ON HYDRA-BED, INSERT REAR CONTAINING BRACKETS INTO TUBE AND PLACE KEEPER PIN IN APPROPRIATE HOLE.
4. TO DUMP LOAD FROM DUMP BOX, PUSH ON THE UNLOAD CONTROL.

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF TRIPLE C INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF TRIPLE C INC. IS PROHIBITED.

DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL $\pm 1/16$ ANGULAR: MACH ± 1 BEND \pm TWO PLACE DECIMAL ± 010 THREE PLACE DECIMAL ± 005	
MATERIAL	--
DO NOT SCALE DRAWING	

NAME	DATE
DRAWN HEATH	1/11/2013
PART # OP-DBLP-150	
ASM # OP-DB 200	
COMMENTS: INSTALLATION INSTRUCTION ON DUMP BOX (2 YD)	

P.O. BOX 248, SABETHA, KS 66534	
TRIPLE C INC.	
SIZE A	DWG. NO. 90-0501
SCALE: 1:1	WEIGHT: --
SHEET 1 OF 1	