
## INSTALLATION INSTRUCTIONS



at the langs. long as the tooth is wide

Insert evenly in holder.

grease or oil. Rubr-Lok® bul NEVER use lubricant to install Ribd Note: water may be used as a

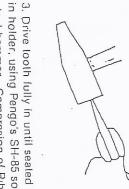

steel hammer. Compresion of Ribd in holder, using Pengo's SH-85 soft Rubr-Lok® holds tooth firmly in pocket.

driving fully in. carbides with softwood board before For lungsten carbide leeth cushion



Replace Ribd Rubr-Lok®only if damage 4. Remove worn leeth with drift punch

and removing teeth. protection when installing CAUTION: Always wear eye

## INSTALLATION INSTRUCTIONS




long as the tooth is wide at the langs. 1 Cut Ribd Rubr-Lok® as




2. Insert evenly in holder.

grease or oil. Rubr-Lok® bul NEVER use lubricant to install Ribd Note: water may be used as a



steel hammer. Compresion of Ribd 3. Drive tooth fully in until seated Rubr-Lok® holds tooth firmly in pocket: in holder, using Pengo's SH-85 soft

driving fully in. carbides with softwood board before For lungsten carbide teeth: cushion



4. Remove worn teeth with drift punch

Replace Ribd Rubr-Lok®only if damage

and removing teeth. protection when installing CAUTION: Always wear eye




2. Insert evenly in holder.

grease or oil. Rubr-Lok® but NEVER use lubricant to install Ribd Note: water may be used as a

at the langs.

long as the tooth is wide 1 Cut Ribd Rubr-Lok® as



driving fully in. carbides with softwood board before For lungsten carbide teeth: cushion



4. Remove worn teeth with drift punch Replace Ribd Rubr-Lok®only if damage

and removing leeth. protection when installing CAUTION: Always wear eye