

Date: 6/5/2012

Check spear pin fit

Grease pins (2plcs)

Check operation of pin storage

Clean cylinder rod

Install grease decals (4 plcs)

Neat way to position stickers using card

Group with yellow wire to driver side
Green to passenger side






Grommet installation

Yellow, red, black

Ground screw attach on back side



TRIPLE C INC.

Standardized Worksheet - Finish - Prospear

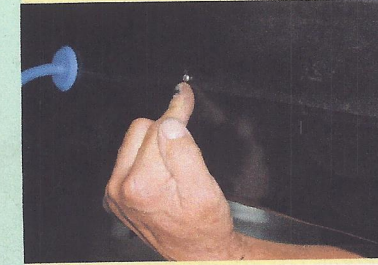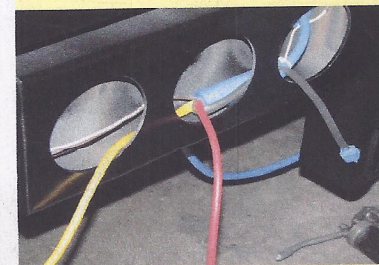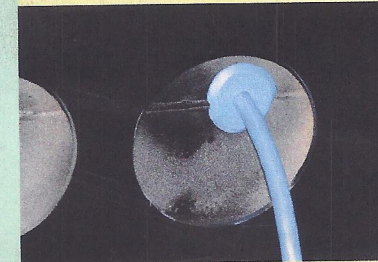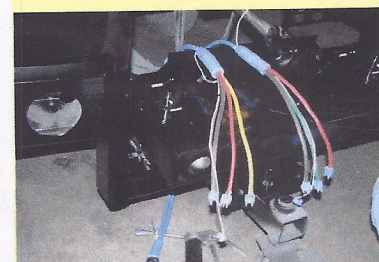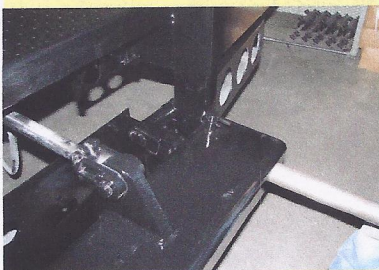

Passenger side

Hook up air hoses to lift rear assy

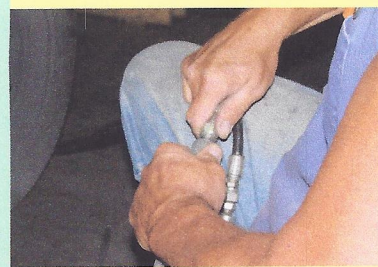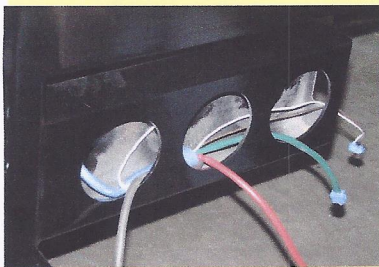

Install plugs (2) places




Installing tag light

Tilt rear assembly to allow access



More tag light detail


Grease pivot points

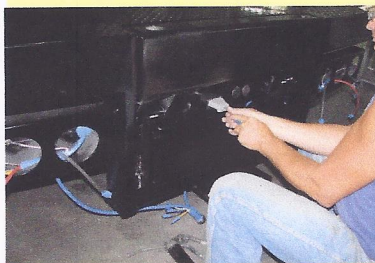


Get fishtape and insert on passenger side




Insert wire thru hole and tape

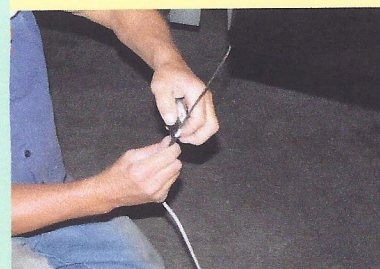

Pull through to passenger side

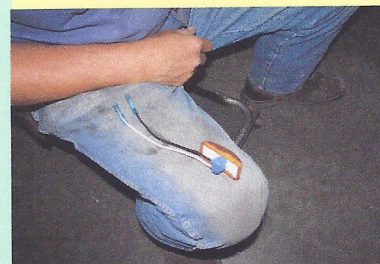


Light assembly

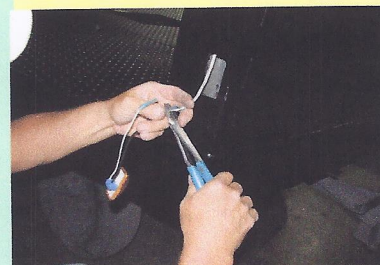


Strip wires

Crimp

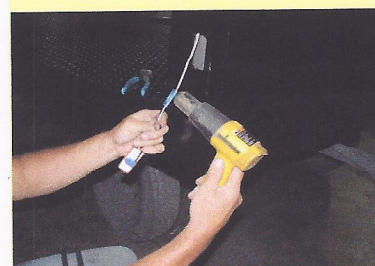

Heat shrink

Installed

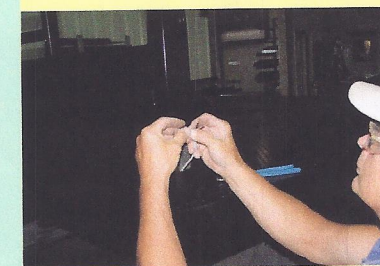

Driver side leave slack

cut strip


Normally the light would go on now but waiting for light so not shown

String wire along frame and leave slack about 3 to 4 ft.




Install nut plate - put through hole and turn 1/4 turn
(6) places

Install bolt & large washer (4) places

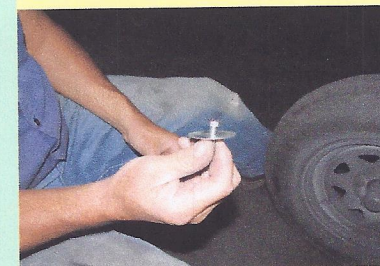

Install bolt & large washer (4) places

In this picture you can see 3 of the bolts and the
2 extra nut plates

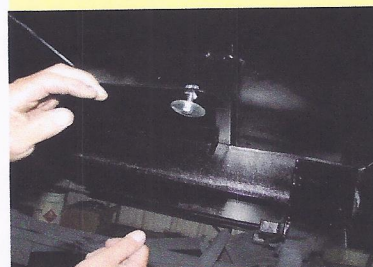


Routing of wire



Leave a little slack

tie wrapping

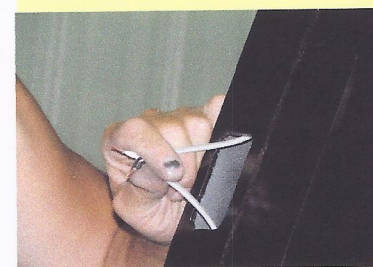


tie wrapping



Loop extra wire and use small tiewrap to hold in place



Make sure the unused end of hoses are plugged

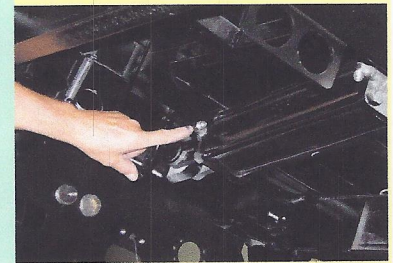


You need an 11/16 & 3/4 wrench

Face fittings towards front long hose will go to rear fitting

Hose over tube



Pictures showing routing of hose

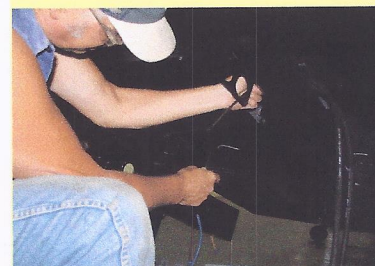




Tie hoses together

Pictures showing routing of hose over tube, channel, ect.


Pictures showing routing of hose over tube,
channel, ect.

Zip tie in front

Methods of pinstripping

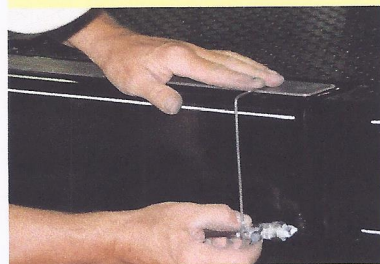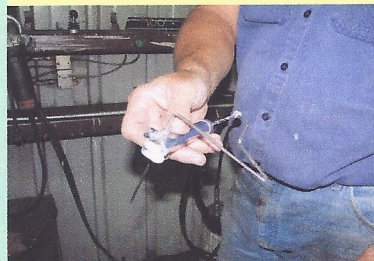
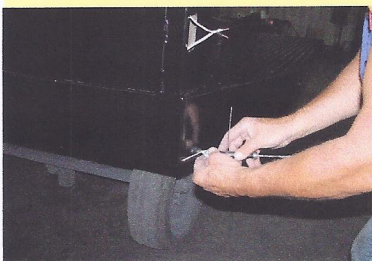


TURN
90

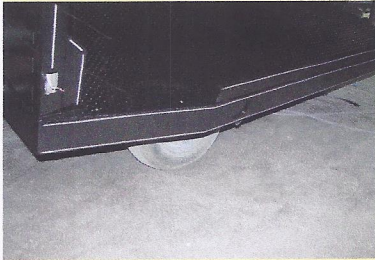


Install mud flaps







Install side rails

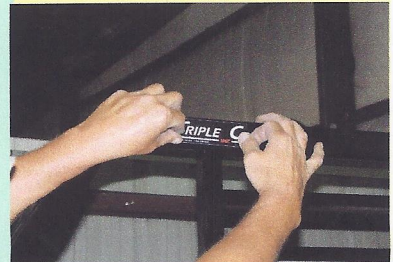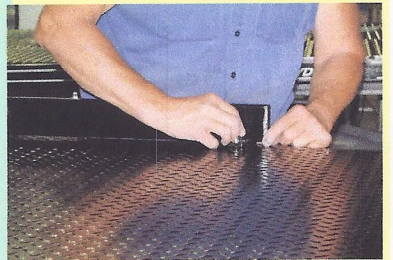


Wrong decal in photos should be Prospear

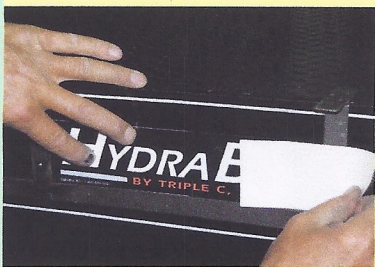

Wrong decal in photos should be Prospear

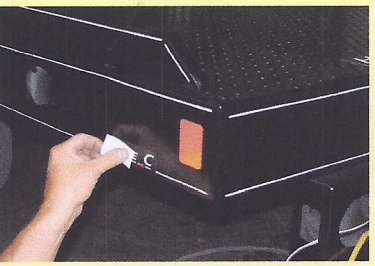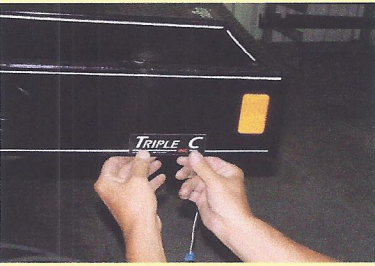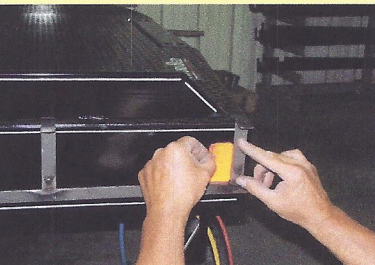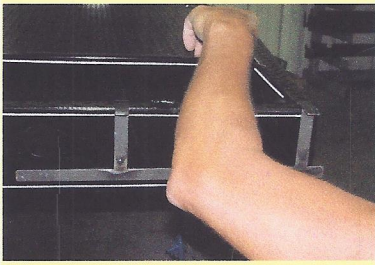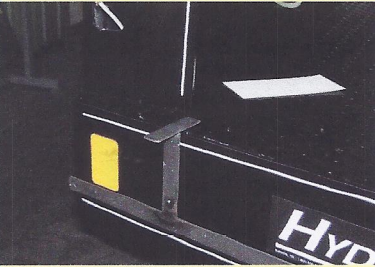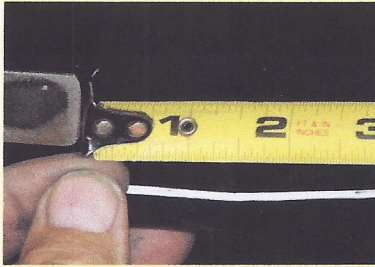


Wrong decal in photos should be Prospear

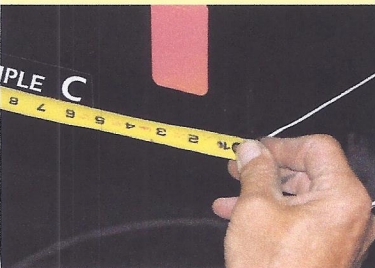



Tie wrap wires

Install shipping board

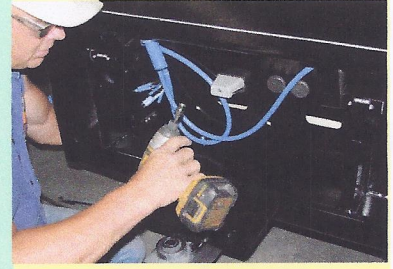

Shipping board behind rear assy

Fill out tag make sure serial numbers are right

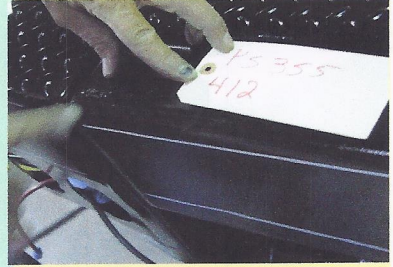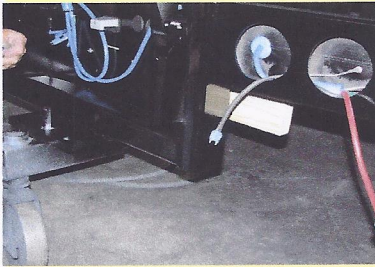

Fill out log

Picture of log



Attach tag

Photos with corrected decals



Front side rail in place

