
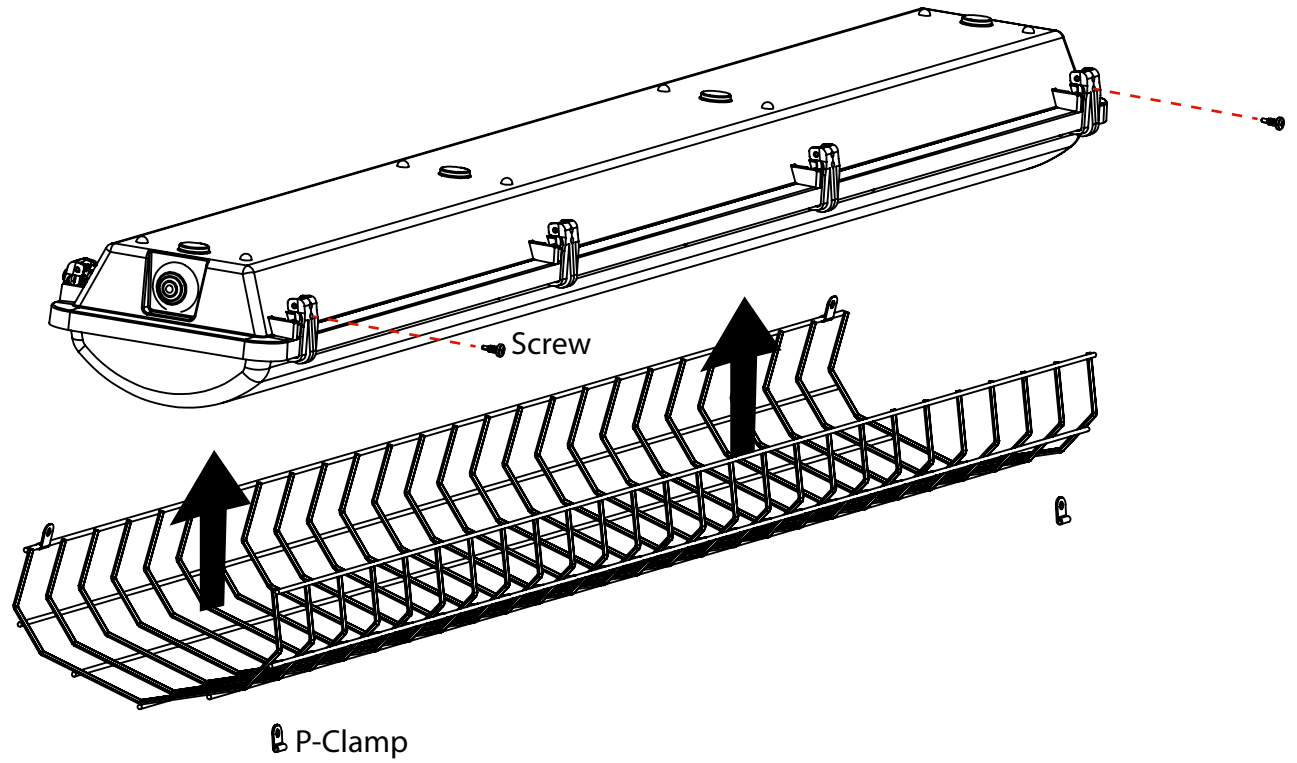


FINISHED INSTALLATION

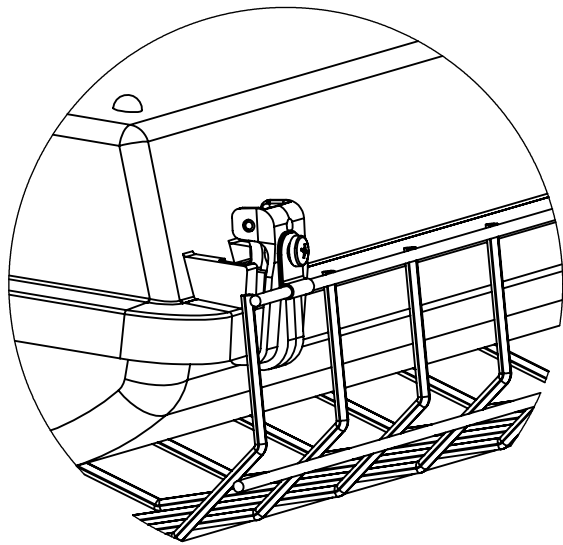

1. Install P-Clamp to wire guard
2. Install screw through P-Clamp into latch to secure.