


## Kingston Installation Instructions

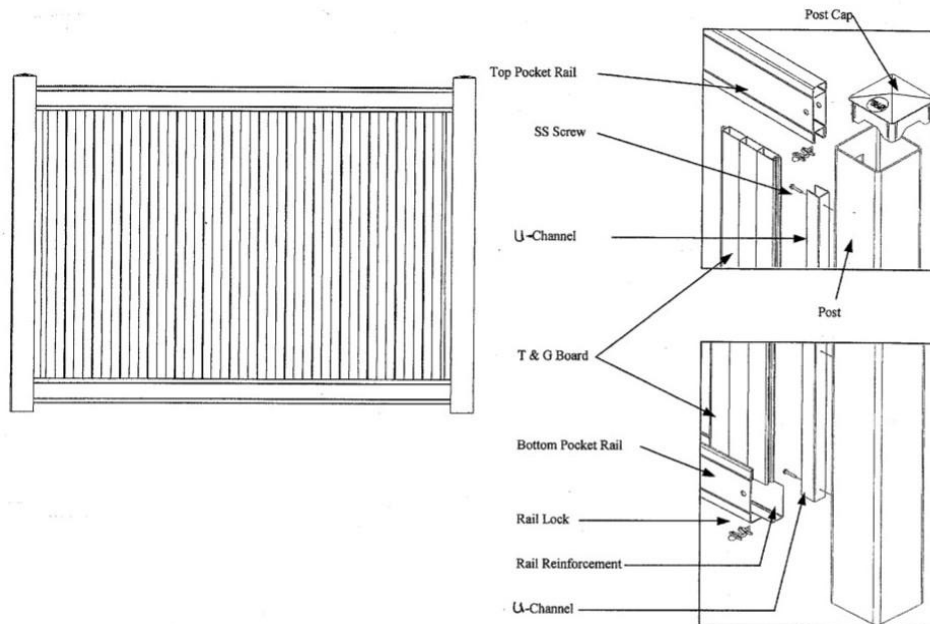

### **Before Starting:**

Predetermine layout and determine elevation and slope changes. Panels will rack approximately 9" in 6 feet and 12" in 8 feet. Posts may need to be customized for stepping down sloped areas. When setting post depth remember that the fence is designed for a 2" space between the bottom rail and the ground.

### **Installation Procedure:**

- 1.) Place postholes on 72" centers for 6' sections and 96" for 8' sections.
- 2.) Center U-channel on posts and attach with SS screws. (1 screw at top and bottom, one screw approximately every 16")
- 3.) Slide aluminum reinforcement channel into the bottom rail.
- 4.) Place rail locks into bottom pocket rail and lock into post.
- 5.) Slide T&G boards into place. When the T&G boards are completely loaded, place rail locks in top rail and lock into place.

### **Rail Lock Installation:**

