



Set Out Details - Asphalt/Fibreglass Shingles

136 Multifit External Fascia

"NEW: Woodgrain Embossed Fascia Available Now!"

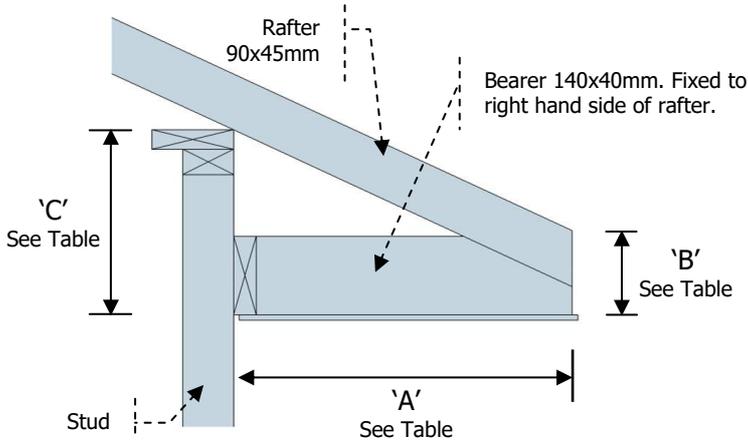

Gable End

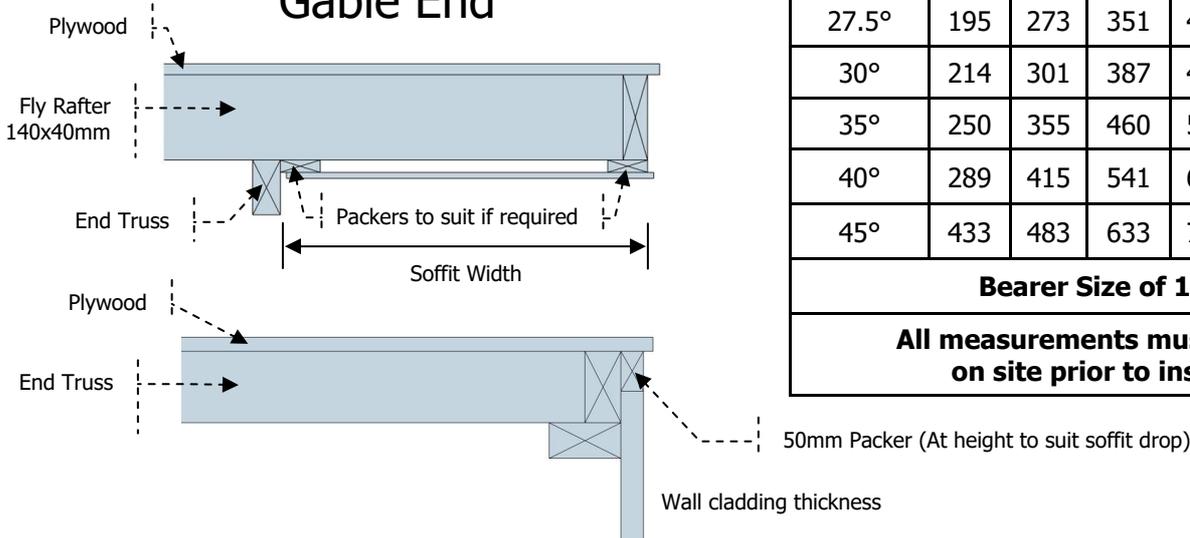

Roof Pitch (Degrees)	Soffit Widths Dimension 'A' (mm)					Fascia Drop Dimension 'B' (mm)
	300	450	600	750	900	
	Soffit Drop Heights Dimension 'C' (mm)					
15°	122	162	203	243	283	135
17.5°	135	183	230	277	324	135
20°	153	208	263	317	372	140
22.5°	167	229	291	353	415	140
25°	181	251	320	390	460	140
27.5°	195	273	351	429	507	140
30°	214	301	387	474	561	145
35°	250	355	460	565	670	150
40°	289	415	541	667	793	155
45°	433	483	633	783	933	160
Bearer Size of 140 x 40						
All measurements must be checked on site prior to installation.						

⚠ Important Set Out Notes:

- Soffit bearer fixed to right hand side of the rafter, looking at the building.
- To ensure birds cannot enter the roof space leave the bottom purlin off until fascia has been installed.
- A 10mm soffit clearance has been allowed for.
- Multifit Panel Fascia System is suitable for use with sloping soffits up to 35°.
- Soffit bearers are required on all hip corners.

Important Product Notes:

- Store product securely on site away from incompatible materials and protect from wind and operating machinery.
- Product surface protected with plastic film should be stored under cover, away from u/v light, and film removed immediately after installation.
- It is a requirement of the products warrantee to obtain and thoroughly read a copy of Roofing Industries handling, storage and installation guide. Available from the supplying branch or alternatively from www.roof.co.nz

Steps To Follow:

- Inform precutter that Multifit External Fascia is being used.
- Keep in contact with the authorised installer in your area of progress/when ready for installation.
- Multifit fascia can be installed to other fascia system set outs, only by a few simple steps. Contact your local installer or Roofing Industries.