



Hard Hat Kit Installation Guide



1-905-304-6100
info@scan-link.com
www.scan-link.com
13 Windward Dr
Unit 204
Grimsby, Ontario
L3M4E8

This **Installation Guide** provides step-by-step instructions for installing the SCAN~LINK Hard Hat Kit. The kit can be installed on either the *interior* or *exterior* of a hard hat, depending on the hard hat model and whether the suspension liner is removable.

How to Install Hard Hat Kit Onto Hard Hat Exterior

Step 1:

Clean any dirt, grease and grime from the exterior of the hard hat.

Step 2:

Apply all **ten (10)** SCAN~LINK Armour Tags, one at a time, to the exterior of the hard hat on a flat surface, at the locations shown in the diagram — ensuring that tags **A, B, C, & D** are placed **1-3" (2.5-8cm)** above the rim of the hard hat.

Step 3:

Confirm tags are secured as shown in STEP 2.

Your hard hat is now SCAN~LINK Armour Ready!

How to Install Hard Hat Kit Onto Hard Hat Interior

Step 1:

Remove hard hat suspension and clean any dirt, grease, or grime from the interior of the hard hat.


Step 2:

Apply all **ten (10)** SCAN~LINK Armour Tags, one at a time, to the exterior of the hard hat on a flat surface, at the locations shown in the diagram — ensuring that tags **A, B, C, & D** are placed **1-3" (2.5-8cm)** above the rim of the hard hat.

Step 3:

Confirm tags are secured as shown in STEP 2, and reinstall hard hat suspension.

Your hard hat is now SCAN~LINK Armour Ready!

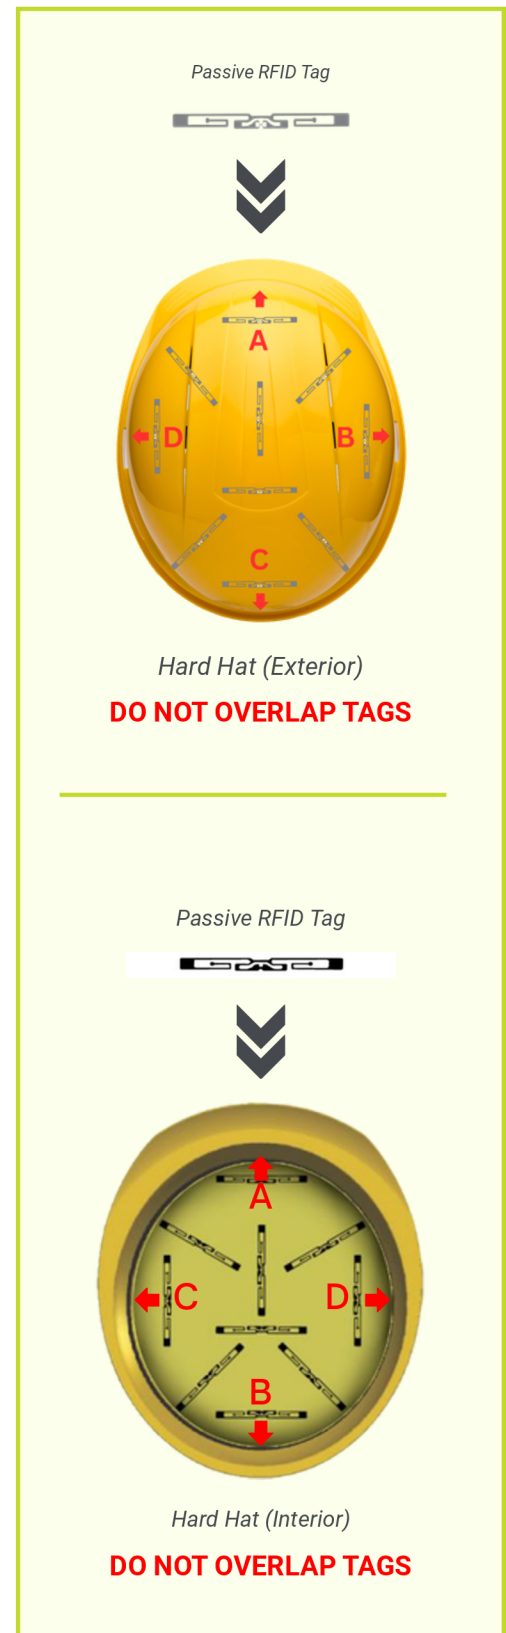

Disclaimer: The SCAN~LINK Armour System™ is not a safety-rated device and must not be relied upon as the sole means of protection. It is designed to enhance operator awareness and to support existing site safety procedures. Safe equipment operation remains the responsibility of the operator and site management at all times.