


INSTALLATION MANUAL

VRM MODULAR DOWNLIGHT RECESSED TRIM

VRM6W 6W 220-240VAC IP44	VRM9W 9W 220-240VAC IP44	VRM15W 15W 220-240VAC IP44	IP20	50000 HOURS	CRI ≥ 80	RoHS	CE
-----------------------------------	-----------------------------------	-------------------------------------	------	-------------	----------	------	----

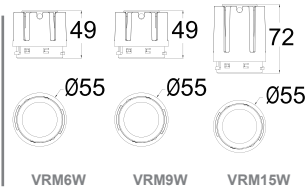

A

Turn off the power.

B

Prepare the ceiling.
Open a hole according to the cutout dimension.


C

1- Connect the input end of the driver to the power source wires, and then insert the driver into the opening hole
2- Connect the driver wires and Lamp wires

D

Fold up the wire spring of the lamp, then install the lamp to the hole opened in the ceiling, and then slowly push the lamp up. Turn ON the power, installation completed.

THIS INSTALLATION WORKS FOR THE FOLLOWING TRIMS

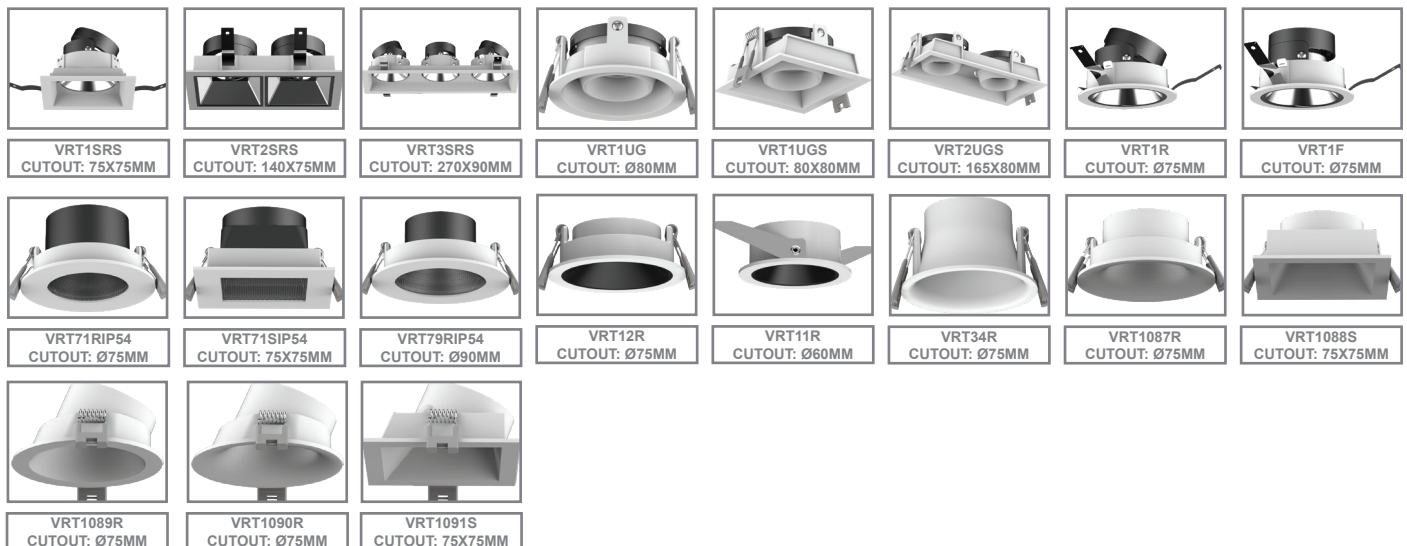


- Always disconnect the power supply before installing or performing any maintenance operations.
- Installation should be carried out by a suitably qualified person in accordance with good electrical practice and the appropriate national wiring regulations.
- These luminaires are widely used in commercial lighting, home decoration lighting, art gallery and museums.
- Only can be touched after 3 minutes later when power off, so as to avoid burns.
- Dismantling and refit are forbidden
- Installation on inflammables is forbidden.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

INSTALLATION MANUAL

VRM MODULAR DOWNLIGHT TRIMLESS TRIM

VRM6W 6W 220-240VAC IP44	VRM9W 9W 220-240VAC IP44	VRM15W 15W 220-240VAC IP44	IP20	50000 HOURS	CRI ≥ 80	RoHS	CE
--	--	--	-------------	--------------------	-----------------	-------------	-----------

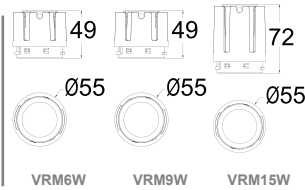

A

Turn off the power.

B

Prepare the ceiling.
Open a hole according to the cutout dimension.

C

LED Driver

1. Connect the input end of the driver to the power source wires
2. then insert the driver into the opening hole

D

Insert built-in fitting into the ceiling and fix it with screws

E

Plaster ceiling surround built-in fitting

C

Driver wire
lamp wire

Connect the driver wires and Lamp wire e


F

Insert the lamp into the built-in fitting into the ceiling and fix

G

Turn ON the power, installation completed.

THIS INSTALLATION WORKS FOR THE FOLLOWING TRIMS

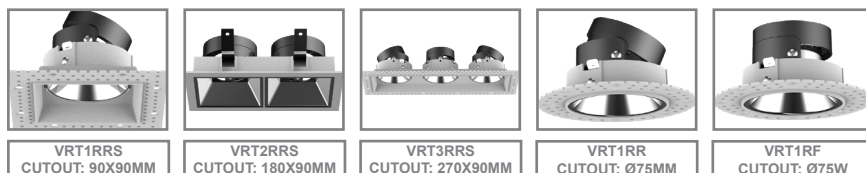

- Always disconnect the power supply before installing or performing any maintenance operations.
- Installation should be carried out by a suitably qualified person in accordance with good electrical practice and the appropriate national wiring regulations.
- These luminaires are widely used in commercial lighting, home decoration lighting, art gallery and museums.
- Only can be touched after 3 minutes later when power off, so as to avoid burns.
- Dismantling and refit are forbidden
- Installation on inflammables is forbidden.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.