





SMARTen (CAT6A) STP HD Keystone Jack Installation Instructions

Instruction Sheet
4563130
REV. A.2

Package Content :

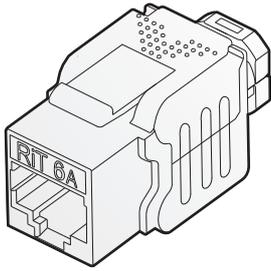

Keystone Jack

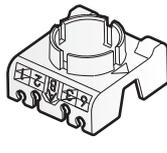


Cap




Cable-Tie

STP/FTP Cable
22-24 AWG

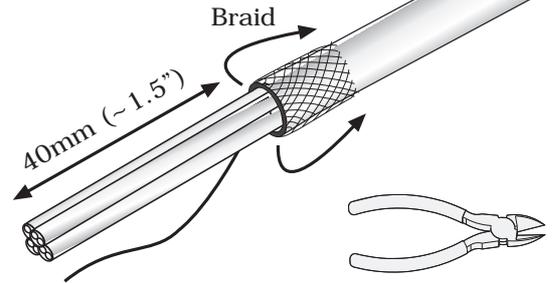

1


Wrap drain wire
around the cable

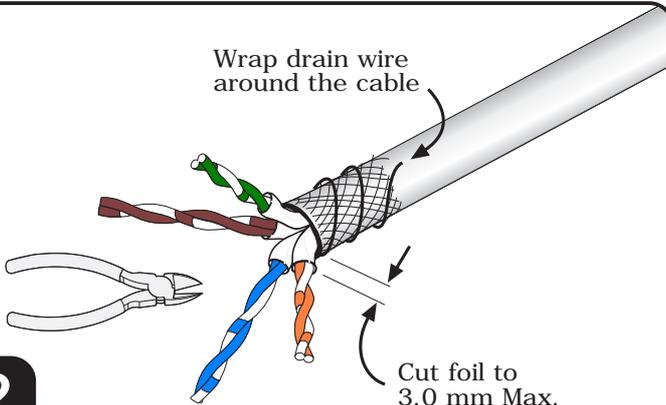

2


Cut foil to
3.0 mm Max.

T568A/B

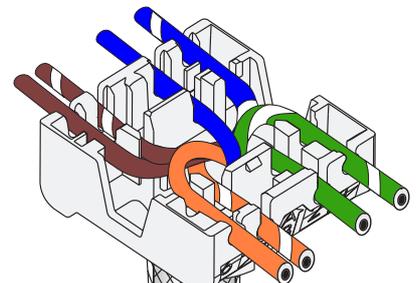


3

Arrange the wires
(T56B is Shown)

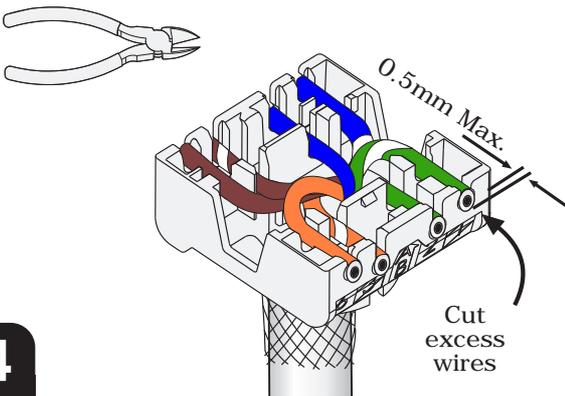


4

0.5mm Max.
Cut
excess
wires

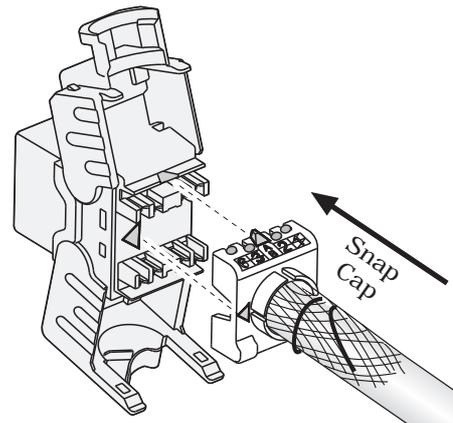


5

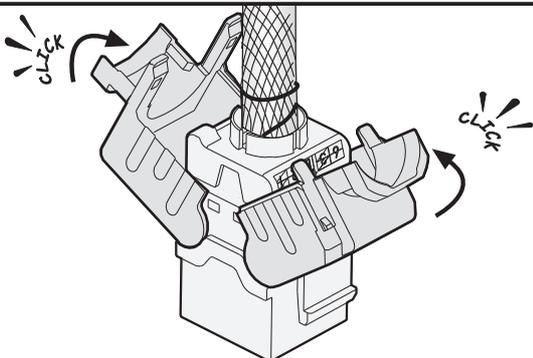

6

Hinge & Lock
side covers

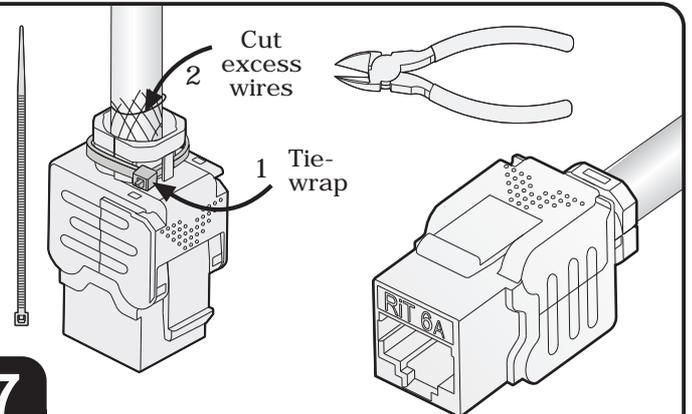

7

2
Cut
excess
wires

1
Tie-
wrap



SMARTen (CAT6A) STP HD Keystone Jack Installation Instructions (Cont.)

Instruction Sheet 4563130
REV. A.2

To assist safe installations, comply with the following:

- A. Never install telephone wiring during a lightning storm.
- B. Never install telephone jacks in wet locations unless the jack is specifically designed for use in wet locations.
- C. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- D. Use caution when installing or modifying telephone lines.

Notice:

1. Equipment is not intended to be connected to telecommunications network with voltages which are higher than typical telecom voltages (150Vrms to ground, 200Vp, 300Vp-p).



RiT International Headquarter

Tel: +972.77.270.7270

Fax: +972.3.647.4115

E-mail: mkt@rittech.com

RiT Office in China

Tel: +86.21.6445.3181

E-mail: marketing@rittech.com.cn

RiT Rep. in India

Tel: +91.22.611.0352

E-mail: mktg.india@rittech.com