


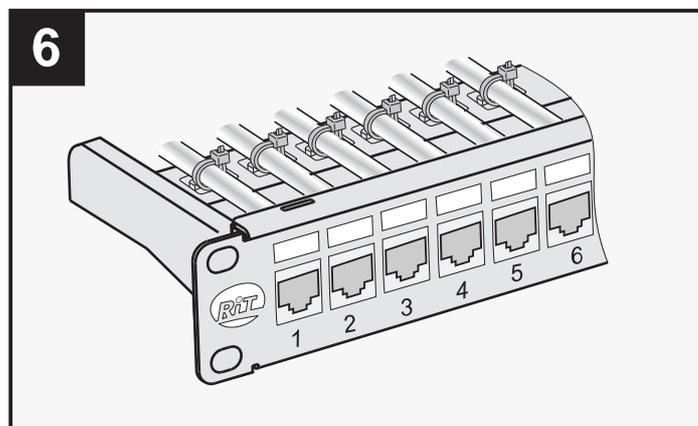
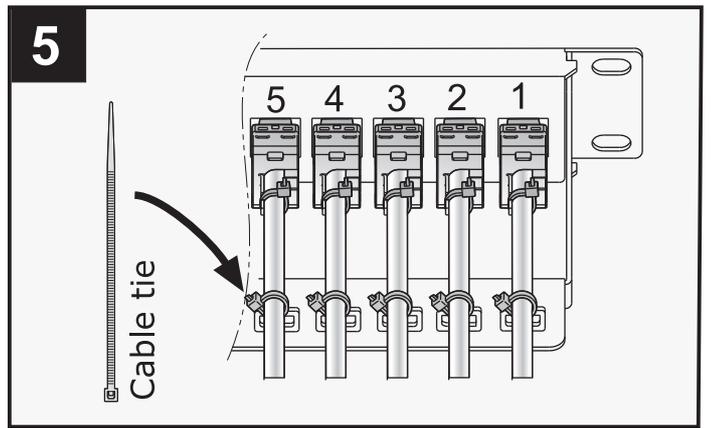
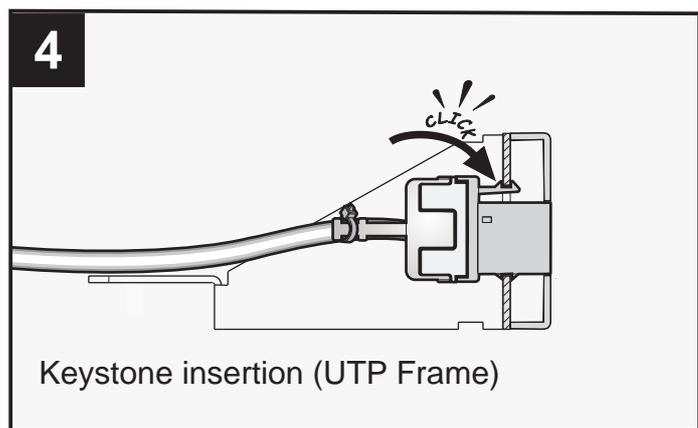


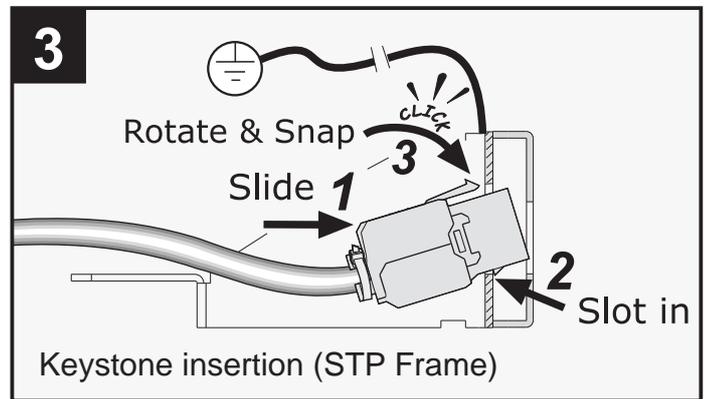


Keystone Copper Frame UTP/STP 24 Installation Instructions

Instruction Sheet
4563270
Rev A.0

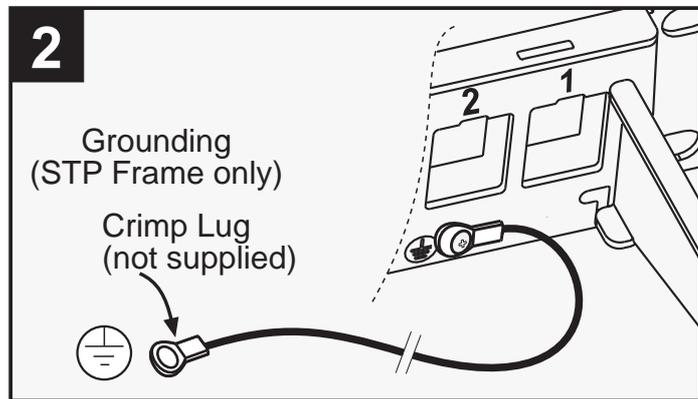

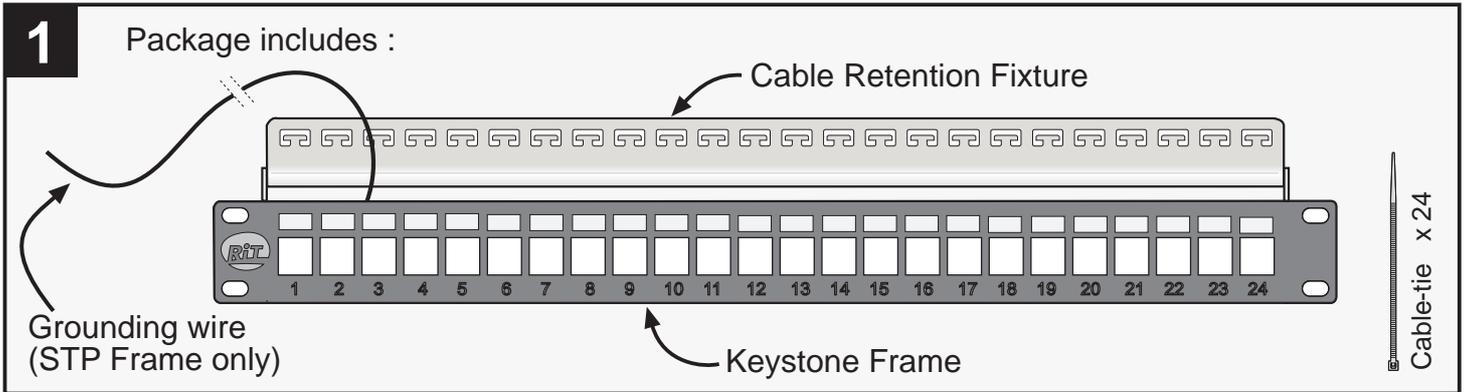

Keystone Copper Frame UTP/STP 24 Installation Instructions (Cont.)

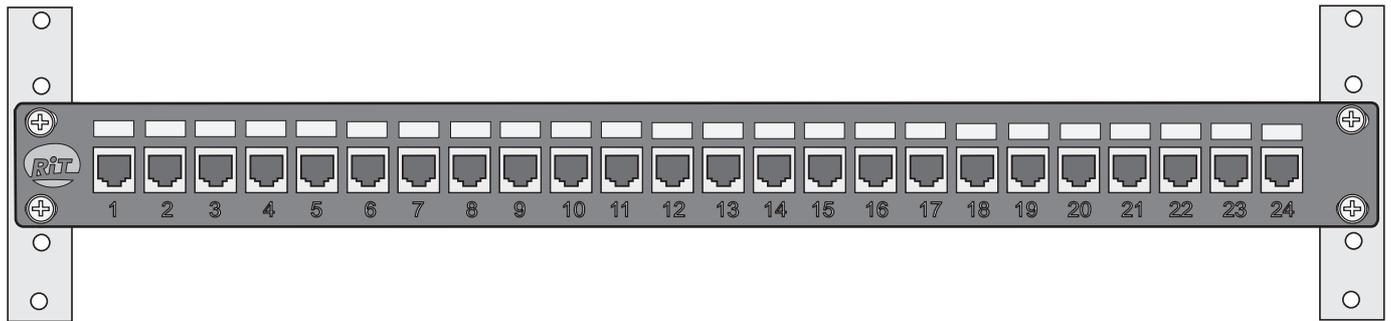

To assist safe installations, comply with the following:

- A. Never install telephone wiring during a lightning storm.
- B. Never install telephone jacks in wet locations unless the jack is specifically designed for use in wet locations.
- C. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- D. Use caution when installing or modifying telephone lines.

Notice:

1. Equipment is not intended to be connected to telecommunications network with voltages which are higher than typical telecom voltages (150Vrms to ground, 200Vp, 300Vp-p).



RiT International Headquarter

Tel: +972.77.270.7270

Fax: +972.3.647.4115

E-mail: mkt@rittech.com

RiT Office in China

Tel: +86.21.6445.3181

E-mail: marketing@rittech.com.cn

RiT Rep. in India

Tel: +91.22.611.0352

E-mail: mktg.india@rittech.com