


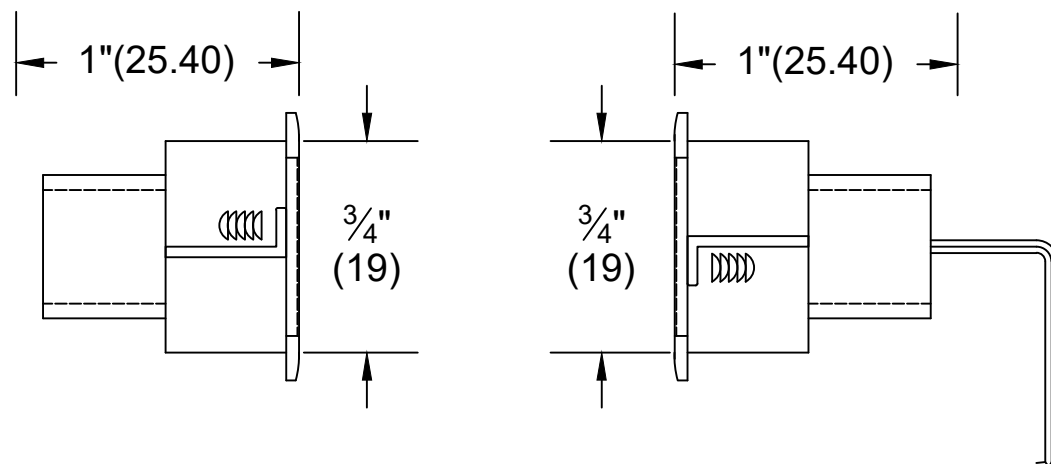

Installation Instruction:

1. Drill a hole $\frac{3}{4}$ " in diameter and 1" deep for the contact
2. Drill a hole $\frac{3}{4}$ " in diameter and 1" deep for the magnet. "See the illustration above".
3. Press the magnet into the door and then push the contact into the door frame.
4. Connect the NC and COM from the contact to the applicable circuit.

The illustration and technical description in this cut sheet is current as of the date in version date on the right. Cal-Royal Product reserves the right to, and may, on occasions, make changes and/or improvements in designs and dimensions without prior notice.

	6605 Flotilla Street City of Commerce CA 90040 USA Tel.# (323) 888-6601 Fax.# (323) 888-6699 WEB SITE: CAL-ROYAL.COM Email: sales@cal-royal.com	ITEM NO.	DESCRIPTION :	NOT TO SCALE	UNIT	Prepared By:	DATE	DWG. NO.
		DPMS-75	Door Position Magnetic Switch	PAGE 1 OF 1	PRIMARY DIMENSION SHOWN IN INCHES, DIMENSIONS IN () ARE MM	BBT / CMT / CVL	03/31/2022	ELG8006
								REV - - -