



WARDROBES



ABRA's Snap Lock™

ABRA's Snap Lock™ Wardrobes are elegant, practical and packed with features that make them a lifelong, trouble free system.

The bumper strip runs the entire length of the door stiles absorbing shock and preventing wall scuffing. This can be colour coordinated, enabling it to blend in discreetly, or make a statement by having a contrasting colour.

A clever V design groove sill-track glides silently open and shut and more importantly, prevents dust from, contaminating wardrobe contents.

The simple turn of a screw on top of the rollers allows you to accurately align doors with the walls every time.

The patented Snap Lock™ corner stake, in combination with the interlocking roller, makes this system one of the strongest frame assemblies you can buy. No screws or rivets to work loose.

Home Improvement System

BUILD



STANDARD 92MM SUITE

A popular feature on the Standard Suite is a streamline Sure-grip handle on the stiles.

The head-tracks have been designed to be reversible should they ever be inadvertently damaged




MICRO 72MM SUITE

The Micro Suite is the perfect sliding door replacement for cumbersome swinging doors.


The unique design of the side styles easily supports doors up to 3.1 metres tall.

“Elegance, robust design and top quality materials make Snap Lock™ your number one”

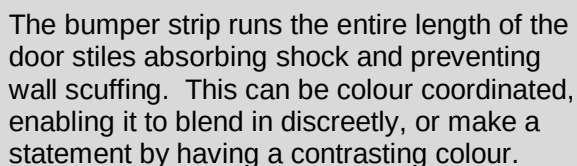


The bumper strip runs the entire length of the door stiles absorbing shock and preventing wall scuffing. This can be colour coordinated, enabling it to blend in discreetly, or make a statement by having a contrasting colour.

A clever V design groove sill-track glides silently open and shut and more importantly prevents dust from contaminating wardrobe contents.

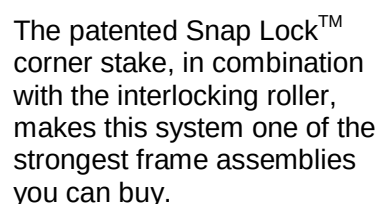The patented Snap Lock™ corner stake, in combination with the interlocking roller, makes this system one of the strongest frame assemblies you can buy.

No screws or rivets to work loose!

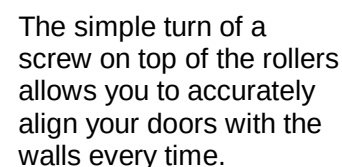

The simple turn of a screw on top of the rollers allows you to accurately align your doors with the walls every time.

ABRA BUILD

BRISBANE, QUEENSLAND

20-24 Saltwater Circuit,
Narangba, Queensland,
Australia 4504

Tel: +61 7 5316 3500

Fax: +61 7 5316 3501

Email: sales.qld@abra.net.au

MELBOURNE, VICTORIA

118-120 Freight Drive,
Somerton, Victoria,
Australia 3062

Tel: +61 3 9308 5499


Fax: +61 3 9305 1433

Email: sales.vic@abra.net.au

BUILD




WARDROBE SECTIONS

PRODUCT CODE	DESCRIPTION	LENGTH	FINISH
	SL-2 Snap Lock Top/Bottom Rail	4.80	Mill finish Matt Natural Powder Coat *
	SL-5 Snap Lock Sill Bottom Track	4.88	Mill finish Matt Natural Powder Coat *
	SL-6 Snap Lock Head Top Track	4.88	Mill finish Matt Natural Powder Coat *
	SL-9 Midrail Wardrobe	4.80	Mill finish Matt Natural Powder Coat *
	SL-14 Snap Lock Side Sash	4.20 4.80	Mill finish Matt Natural Powder Coat *
	SL-3429 Snap Lock Flush Mount Jamb	2.75	Mill finish Matt Natural Powder Coat *

Powder Coat Please refer colour chart for available finishes*






WARDROBE SECTIONS

PRODUCT CODE	DESCRIPTION	LENGTH	FINISH
	SL-3430 Snap Lock Return Jamb	2.75	Mill finish Matt Natural Powder Coat *
	SLM-5 Snap Lock Micro Sill Bottom Track	4.88	Mill finish Matt Natural Powder Coat *
	SLM-6 Snap Lock Micro Head Top Track	4.88	Mill finish Matt Natural Powder Coat *
	SLM-7 Snap Lock Micro Triple Head Track	4.88	Mill finish Matt Natural Powder Coat *
	SLM-8 Snap Lock Micro Triple Track Sill	4.9	Mill finish Matt Natural Powder Coat *
	SLM-10 Snap Lock Micro Sill Leg	4.80	Mill finish Matt Natural Powder Coat *

Powder Coat Please refer colour chart for available finishes*



WARDROBE SECTIONS

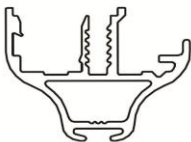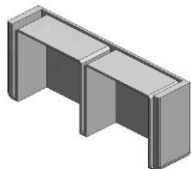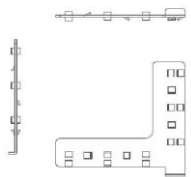PRODUCT CODE	DESCRIPTION	LENGTH	FINISH
	SLM-14 Snap Lock Micro Side Sash	4.20	Mill finish
		4.80	Matt Natural Powder Coat *
	SLM-3429 Snap Lock Micro Flush Mount Jamb	2.75	Mill finish Matt Natural Powder Coat *
	SLM-3430 Snap Lock Micro Return Jamb	2.75	Mill finish Matt Natural Powder Coat *
	SLM-5-CAPLH Micro S/Lock Sill Cap Left Hand		White Opaque
	SLM-5-CAPRH Micro S/Lock Sill Cap Right Hand		White Opaque
	SLM-6-CAP Micro S/Lock Head Track CAP		White Opaque
	SL-CS Corner Stake		

Powder Coat Please refer colour chart for available finishes*



WARDROBE SECTIONS

PRODUCT CODE	DESCRIPTION	LENGTH	FINISH
	SL-MWH Snap Lock Wheels Metal		
	SL-TS Top Slide Moulded Plastic		
	3318 Glazing Channel 4.0mm		White Birch White Frost Black Frost
	Glazing Channel 6.0mm		
	3318 Glazing Channel 7.5mm		White Birch White Frost Almond Ivory Black
	3322 Bumper Strip		White Birch White Frost Almond Ivory Black



WARDROBE SECTIONS

PRODUCT CODE	DESCRIPTION	LENGTH	FINISH
	3333 Rigid Wedge 1.0mm	3.70	Black
	MICROBS Micro Bumper		White Birch White Frost Almond Ivory Black
	SLM-TS Snap Lock Micro Top Slide Plastic		
	SLMF-148 Frameless Stile Bars	4.80	
	SLMF-2 Frameless Top/Bottom Rail	4.80	
	SLMF-TAPE Mirror Mounting Tape 23M Roll		



ABRA
ALUMINIUM

- When service matters -

SNAP LOCK WARDROBE

Assembly Information




Visit our Website: www.abra.net.au

SNAP LOCK ROBE ASSEMBLY INSTRUCTIONS FOR STANDARD AND MICRO

Although the **SNAP LOCK ROBE** assembly is simple in its manufacturing process, these are some helpful hints which will assist in fabrication. Following the easy steps listed below will prove how simple the system really is.

1. Using the cutting formula provided with your price list, calculate the sizes required for both the aluminium frame as well as the panel/mirror that the frame is to go around.
2. Once you have cut the aluminium to size, the corner stakes should then be tapped into the ends of each side stile. Do not hit the top of the corner stake sticking out of the side stile as it will bend. While there is no left or right corner stake, there is a curved lip on one end. This lip hooks around the end of each side stile.

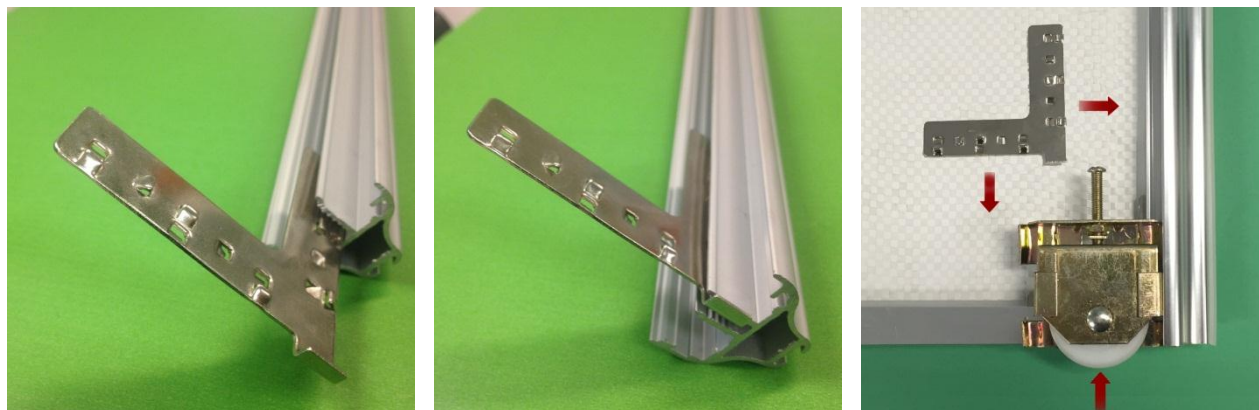

3. Your panel or mirror when cut to size should be face down on the assembly bench.
4. When using mirror, the 4mm glazing channel should be put around the edge of the mirror. Start at the centre of one end and continue back to where you started. Ensure a neat cut to the glazing channel so that the two ends meet without leaving any gap.
5. When using a 7.5mm board, a 7.5mm channel will be required and the same process as the 4mm mirror should be followed.
6. When using 10mm gyprock, the snap lock stile has been designed to grip onto the gyprock without the use of wedges.
If the gyprock is thinner than 10mm, you can use a 1mm wedge to hold it in place. This is also required when using 9mm craftwood.
7. It is recommended that the top and bottom rails are tapped into place first. This process will centre where the side stiles are to go.
8. Now that the top and bottom rail are in place, line up the side stiles by feeding the corner stakes at either end into the top and bottom rail. By doing this, the side stiles will be held in place while you tap them onto the panel/mirror.

9. Once the frame is around the panel/mirror, line the wheel up where it slides into the side stile. The wheel is designed to slide into the side stile to give the frame extra strength. We recommend that the wheel is removed before positioning the carriage into place. Gently tap the carriage so the side tags slide into the stile. The bottom tag will clip over the rail of the door holding it firmly in place. Replace the wheel into the metal carriage.

10. The top nylon guides are designed to be fitted the same way as the wheel is. The sides of the guide slide into the side stile and the lip on the underside of the guide when tapped into position will clip onto the top rail.



The cutting formulas and assembly instructions are used as guidelines. It is possible to manipulate the cutting and assembly formulas to further suit your fabrication needs. For example, the aluminium can be cut to achieve great overlaps, or more adjustment in the height can be created by the changes you make to the original cutting formulas.

ABRA
ALUMINIUM

BRISBANE ,QUEENSLAND

20-24 Saltwater Circuit,
Narangba, Queensland,
Australia 4504

Tel: +61 7 5316 3500

Fax: +61 7 5316 3501

Email: sales.qld@abra.net.au

MELBOURNE,VICTORIA

118-120 Freight Drive,
Somerton, Victoria
Australia 3062

Tel: +61 3 9308 5499

Fax: +61 3 9305 1433

Email: sales.vic@abra.net.au

Home Improvement System

Visit our Website: www.abra.net.au


SNAP LOCK SYSTEM

CUTTING LIST FOR STANDARD SUITE

ient:	Job No:
	Date:
Idress:	Mirror: Panel:
	Aluminium Finish:
	Date required:

WT

0

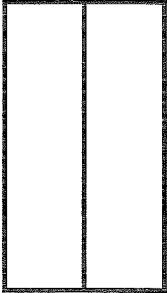

H

0

ALUMINIUM CUTTING CHART - 2 DOORS		
SECTION	LENGTH	QTY
HEAD SECTION	-2	1
SILL SECTION	-2	1
TOP & BOTTOM	-25	4
STILE SECTION	-35	4

HEIGHT

WIDTH

MIRROR CUTTING

-47
-5

WB


0

PANEL CUTTING

-45
-3

WT

0

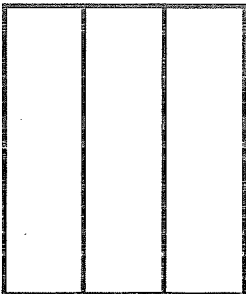

H

0

ALUMINIUM CUTTING CHART - 3 DOORS		
SECTION	LENGTH	QTY
HEAD SECTION	-2	1
SILL SECTION	-2	1
TOP & BOTTOM	-25	6
STILE SECTION	-35	6

HEIGHT

WIDTH

MIRROR CUTTING

-47
-5

WB


0

PANEL CUTTING

-45
-3

WT

0

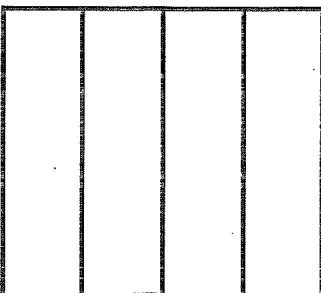

H

0

ALUMINIUM CUTTING CHART - 3 DOORS		
SECTION	LENGTH	QTY
HEAD SECTION	-2	1
SILL SECTION	-2	1
TOP & BOTTOM	-25	8
STILE SECTION	-35	8

HEIGHT

WIDTH

MIRROR CUTTING

-47
-5

WB

0

PANEL CUTTING

-45
-3