
2INCHES OFF OF 6M3K PART NUMBER 3INCHES OFF OF 8M3K PART NUMBER

HYDRABED HOSE ASSEMBLIES

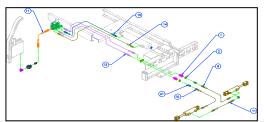

Hose Assemblies rev C 8/1/2014

HB-3100	Ī				0	
Part No.	l Qty. Per	Hose Cut Length	Hose Fitting	Hose Fitting	Hose Fitting Adapter	Location
8M3K-15.5	4(y, Fe)	12-1/2"	8-10FJX	8-10-FJX	NONE	return to Husco V
8M3K-72.0	2 OR 4	69"	8-8FJX	8-8MB	4250-15	Valve to QC
6M3K-21.5	1	19-1/2"	6-6MB	6-8MB	8010-15	cylinder to cylinder
6M3K-36.0	1	34"	6-6FJX	6-6MB	NONE	DS rod end To
6M3K-45.0A	1	43"	6-6MB	6-8MB	8010-15	PA rod end to QC
6M3K-42.0	1	40"	6-8FJX	6-8FJX	NONE	ML to Valve
6M3K-71.0A	1	69"	6-8FJX	6-8FJX	NONE	ML to Valve
HB-3200		- 03	0 0.3/	0 013/1	NONE	TVIE CO VAIVE
Part No.	Qty. Per	Hose Cut Length	Hose Fitting	Hose Fitting	Hose Fitting Adapter	Location
8M3K-15.5	1	12-1/2"	8-10FJX	8-10-FJX	NONE	return to Husco V
8M3K-90.5	2 OR 4	87-1/2"	8-8FJX	8-8MB	4250-15	Valve to QC
6M3K-21.5	1	19-1/2"	6-6MB	6-8MB	8010-15	cylinder to cylinder
6M3K-36.0	1	34"	6-6FJX	6-6MB	NONE	DS rod end To
6M3K-45.0A	1	43"	6-6MB	6-8MB	8010-15	PA rod end to QC
6M3K-59.0	1	57"	6-8FJX	6-8FJX	NONE	ML to Valve
6M3K-80.0	1	78"	6-8FJX	6-8FJX	NONE	ML to Valve
HB-3250			-			
Part No.	Qty. Per	Hose Cut Length	Hose Fitting	Hose Fitting	Hose Fitting Adapter	Location
8M3K-15.5	1	12-1/2"	8-10FJX	8-10-FJX	NONE	return to Husco V
8M3K-90.5	2 OR 4	87-1/2"	8-8FJX	8-8MB	4250-15	Valve to QC
6M3K-28.5	1	26-1/2"	6-6MB	6-8MB	8010-15	cylinder to cylinder
6M3K-46.5	1	44-1/2"	6-6FJX	6-6MB	NONE	DS rod end To
6M3K-49.5	1	47-1/2"	6-6MB	6-8MB	8010-15	PA rod end to QC
6M3K-59.0	1	57"	6-8FJX	6-8FJX	NONE	ML to Valve
6M3K-80.0	1	78"	6-8FJX	6-8FJX	NONE	ML to Valve
		, 0	0 01 370	0 01 37	INOINE	IVIE to valve
HB-3300			•			IVIZ to valve
Part No.	Qty. Per	Hose Cut Length	Hose Fitting	Hose Fitting	Hose Fitting Adapter	Location
Part No. 8M3K-15.5	1	Hose Cut Length 12-1/2"	Hose Fitting 8-10FJX	Hose Fitting 8-10FJX	Hose Fitting Adapter NONE	Location return to Husco V
Part No. 8M3K-15.5 8M3K-101.0		Hose Cut Length 12-1/2" 98"	Hose Fitting 8-10FJX 8-8FJX	Hose Fitting 8-10FJX 8-8MB	Hose Fitting Adapter NONE 4250-15	Location return to Husco V Valve to QC
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5	1 2 OR 4 1	Hose Cut Length 12-1/2" 98" 19-1/2"	Hose Fitting 8-10FJX 8-8FJX 6-6MB	Hose Fitting 8-10FJX 8-8MB 6-8MB	Hose Fitting Adapter NONE 4250-15 8010-15	Location return to Husco V Valve to QC cylinder to cylinder
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0	1 2 OR 4 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34"	Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB	Hose Fitting Adapter NONE 4250-15 8010-15 NONE	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A	1 2 OR 4 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43"	Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8MB	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0	1 2 OR 4 1 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43" 67"	Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8MB 6-8MB	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0 6M3K-90.0	1 2 OR 4 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43"	Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8MB	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0 6M3K-90.0 HB-3350	1 2 OR 4 1 1 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43" 67" 88"	Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 6-8FJX	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8MB 6-8FJX 6-8FJX	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE NONE	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0 6M3K-90.0 HB-3350 Part No.	1 2 OR 4 1 1 1 1 1 1 1 1 1 Cty. Per	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43" 67" 88"	Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 6-8FJX Hose Fitting	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8MB 6-8FJX 6-8FJX Hose Fitting	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE NONE Hose Fitting Adapter	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0 6M3K-90.0 HB-3350 Part No. 8M3K-15.5	1 2 OR 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43" 67" 88" Hose Cut Length 12-1/2"	Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE NONE NONE Hose Fitting Adapter NONE	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location return to Husco V
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0 6M3K-90.0 HB-3350 Part No. 8M3K-15.5 8M3K-101.0	1 2 OR 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 2 OR 4	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43" 67" 88" Hose Cut Length 12-1/2" 98"	Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8FJX	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8MB	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE Hose Fitting Adapter NONE 4250-15	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location return to Husco V Valve to QC
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0 6M3K-90.0 HB-3350 Part No. 8M3K-15.5 8M3K-101.0 6M3K-28.5	1 2 OR 4 1 1 1 1 1 1 1 1 1 1 1 1 2 OR 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43" 67" 88" Hose Cut Length 12-1/2" 98" 26-1/2"	Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8FJX 6-6MB	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8MB 6-8MB	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE Hose Fitting Adapter NONE 4250-15 8010-15	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location return to Husco V Valve to QC cylinder to cylinder
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0 6M3K-90.0 HB-3350 Part No. 8M3K-15.5 8M3K-101.0 6M3K-28.5 6M3K-46.5	1 2 OR 4 1 1 1 1 1 1 1 1 2 OR 4 1 1 2 OR 4 1 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43" 67" 88" Hose Cut Length 12-1/2" 98" 26-1/2" 44-1/2"	Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8MB 6-8MB	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE Hose Fitting Adapter NONE 4250-15 8010-15 NONE	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location return to Husco V Valve to QC cylinder to cylinder DS rod end To
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0 6M3K-90.0 HB-3350 Part No. 8M3K-15.5 8M3K-101.0 6M3K-28.5 6M3K-46.5 6M3K-49.5	1 2 OR 4 1 1 1 1 1 2 OR 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43" 67" 88" Hose Cut Length 12-1/2" 98" 26-1/2" 44-1/2" 47-1/2"	Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8MB 6-8MB 6-8MB	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0 6M3K-90.0 HB-3350 Part No. 8M3K-15.5 8M3K-101.0 6M3K-28.5 6M3K-46.5 6M3K-49.5 6M3K-69.0	1 2 OR 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43" 67" 88" Hose Cut Length 12-1/2" 98" 26-1/2" 44-1/2" 47-1/2" 67"	Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-6FJX	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8FJX 6-8FJX 4-8FJX Hose Fitting 8-10FJX 8-8MB 6-8MB 6-8MB 6-8MB 6-8MB 6-8MB 6-8MB	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0 6M3K-90.0 HB-3350 Part No. 8M3K-15.5 8M3K-101.0 6M3K-28.5 6M3K-46.5 6M3K-49.5 6M3K-69.0 6M3K-90.0	1 2 OR 4 1 1 1 1 1 2 OR 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43" 67" 88" Hose Cut Length 12-1/2" 98" 26-1/2" 44-1/2" 47-1/2"	Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8MB 6-8MB 6-8MB	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0 6M3K-90.0 HB-3350 Part No. 8M3K-15.5 8M3K-101.0 6M3K-28.5 6M3K-46.5 6M3K-49.5 6M3K-69.0 6M3K-90.0 HB-3550	1 2 OR 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43" 67" 88" Hose Cut Length 12-1/2" 98" 26-1/2" 44-1/2" 47-1/2" 67" 88"	Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-6FJX 6-6MB	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8MB 6-8MB 6-8MB 6-8MB 6-8MB 6-8MB 6-8MB	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE Hose Fitting Adapter NONE 4250-15 8010-15 NONE 4250-15 8010-15 NONE 8010-15 NONE NONE	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve ML to Valve
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0 6M3K-90.0 HB-3350 Part No. 8M3K-15.5 8M3K-101.0 6M3K-28.5 6M3K-46.5 6M3K-49.5 6M3K-69.0 6M3K-90.0 HB-3550 Part No.	1 2 OR 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43" 67" 88" Hose Cut Length 12-1/2" 98" 26-1/2" 44-1/2" 47-1/2" 67" 88" Hose Cut Length	## Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX ## Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 6-8	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8MB 6-8MB 6-8MB 6-8MB 6-8MB 6-8MB 6-8MB 6-8MB 6-8MB	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE Hose Fitting Adapter NONE 4250-15 8010-15 NONE 4250-15 8010-15 NONE 8010-15 NONE Hose Fitting Adapter	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location Location Location
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0 6M3K-90.0 HB-3350 Part No. 8M3K-15.5 8M3K-101.0 6M3K-28.5 6M3K-46.5 6M3K-49.5 6M3K-90.0 HB-3550 Part No. 8M3K-15.5	1 2 OR 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43" 67" 88" Hose Cut Length 12-1/2" 98" 26-1/2" 44-1/2" 47-1/2" 67" 88" Hose Cut Length	## Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 6-8FJX ## Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 6	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8MB 6-8MB 6-8MB 6-6MB 6-8MB 6-8FJX 6-8FJX Hose Fitting	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE Hose Fitting Adapter NONE 4250-15 8010-15 NONE 4250-15 8010-15 NONE 8010-15 NONE Hose Fitting Adapter NONE	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location return to Husco V Valve to QC return to Husco V Location return to Husco V
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0 6M3K-90.0 HB-3350 Part No. 8M3K-15.5 8M3K-101.0 6M3K-28.5 6M3K-46.5 6M3K-49.5 6M3K-90.0 HB-3550 Part No. 8M3K-15.5	1 2 OR 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43" 67" 88" Hose Cut Length 12-1/2" 98" 26-1/2" 44-1/2" 47-1/2" 67" 88" Hose Cut Length 12-1/2" 126"	## Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX ## Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 6-8FJX 6-8FJX 6-8FJX 8-8FJX 8-8FJX 8-10FJX 8-8FJX 8	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-6MB 6-8FJX 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8MB 6-8HJX 6-8FJX 6-8FJX 6-8FJX 8-8MB	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE 8010-15 NONE Hose Fitting Adapter NONE 8010-15 NONE NONE NONE NONE 4250-15	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location return to Husco V Valve to QC
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0 6M3K-90.0 HB-3350 Part No. 8M3K-15.5 8M3K-101.0 6M3K-28.5 6M3K-46.5 6M3K-69.0 6M3K-90.0 HB-3550 Part No. 8M3K-15.5	1 2 OR 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43" 67" 88" Hose Cut Length 12-1/2" 98" 26-1/2" 44-1/2" 47-1/2" 67" 88" Hose Cut Length 12-1/2" 26-1/2"	## Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX ## Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 8-10FJX 8-8FJX 6-6MB 8-10FJX 8-8FJX 6-6MB 6-6FJX 8-8FJX 6-6MB 8-10FJX 8-8FJX 6-6MB 8-66MB 8-6	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8MB 6-8MB 6-8MB 6-8MB 6-8MB 6-8FJX 6-8FJX Hose Fitting	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE Hose Fitting Adapter NONE 8010-15 NONE NONE NONE NONE NONE NONE NONE 1000-15 NONE NONE 1000-15 NONE NONE NONE 1000-15 NONE 1000-15 NONE 1000-15 NONE 1000-15 NONE 1000-15 NONE	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve Location return to Husco V Valve to QC cylinder to cylinder Valve ML to Valve ML to Valve ML to Valve Cocation return to Husco V Valve to QC cylinder to cylinder
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0 6M3K-90.0 HB-3350 Part No. 8M3K-15.5 8M3K-101.0 6M3K-28.5 6M3K-46.5 6M3K-69.0 6M3K-90.0 HB-3550 Part No. 8M3K-15.5 6M3K-40.5 6M3K-90.0 BM3K-15.5 6M3K-40.5 6M3K-90.0 BM3K-15.5 8M3K-15.5	1 2 OR 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43" 67" 88" Hose Cut Length 12-1/2" 98" 26-1/2" 44-1/2" 47-1/2" 67" 88" Hose Cut Length 12-1/2" 47-1/2" 47-1/2" 47-1/2" 47-1/2" 47-1/2" 47-1/2" 47-1/2" 47-1/2" 47-1/2"	## Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX ## Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 6-8FJX ## ## ## ## ## ## ## ## ## ## ## ## ##	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-6MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8MB 6-8FJX 6-8FJX 6-8FJX 6-8FJX 6-8FJX 6-8FJX 6-8FJX	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE Hose Fitting Adapter NONE 8010-15 NONE	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve Location return to Husco V valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location return to Husco V Valve to QC cylinder to cylinder DS rod end To
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0 6M3K-90.0 HB-3350 Part No. 8M3K-15.5 8M3K-101.0 6M3K-28.5 6M3K-46.5 6M3K-69.0 6M3K-90.0 HB-3550 Part No. 8M3K-15.5 6M3K-40.5 6M3K-90.0 HB-3550 Part No. 8M3K-15.5 6M3K-40.5 6M3K-90.0 BM3K-15.5 8M3K-15.5 8M3K-15.5	1 2 OR 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43" 67" 88" Hose Cut Length 12-1/2" 98" 26-1/2" 44-1/2" 67" 88" Hose Cut Length 12-1/2" 47-1/2" 67" 44-1/2" 47-1/2" 44-1/2" 47-1/2" 44-1/2" 47-1/2"	Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 6-6MB 6-8FJX 6-8FJX 6-8FJX 6-8FJX 6-8FJX 6-8FJX 6-8FJX	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8MB 6-8MB 6-8MB 6-8MB 6-8FJX Hose Fitting	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE Hose Fitting Adapter NONE 8010-15 NONE NONE NONE NONE NONE NONE NONE 1250-15 NONE NONE 8010-15 NONE 4250-15 8010-15 NONE 8010-15	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve Location return to Husco V valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end To PA rod end To PA rod end To PA rod end To
Part No. 8M3K-15.5 8M3K-101.0 6M3K-21.5 6M3K-36.0 6M3K-45.0A 6M3K-69.0 6M3K-90.0 HB-3350 Part No. 8M3K-15.5 8M3K-101.0 6M3K-28.5 6M3K-46.5 6M3K-69.0 6M3K-90.0 HB-3550 Part No. 8M3K-15.5 6M3K-40.5 6M3K-90.0 BM3K-15.5 6M3K-40.5 6M3K-90.0 BM3K-15.5 8M3K-15.5	1 2 OR 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Hose Cut Length 12-1/2" 98" 19-1/2" 34" 43" 67" 88" Hose Cut Length 12-1/2" 98" 26-1/2" 44-1/2" 47-1/2" 67" 88" Hose Cut Length 12-1/2" 47-1/2" 47-1/2" 47-1/2" 47-1/2" 47-1/2" 47-1/2" 47-1/2" 47-1/2" 47-1/2"	## Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX ## Hose Fitting 8-10FJX 8-8FJX 6-6MB 6-6FJX 6-6MB 6-8FJX 6-8FJX ## ## ## ## ## ## ## ## ## ## ## ## ##	Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-6MB 6-8FJX 6-8FJX Hose Fitting 8-10FJX 8-8MB 6-8MB 6-6MB 6-8MB 6-8FJX 6-8FJX 6-8FJX 6-8FJX 6-8FJX 6-8FJX 6-8FJX	Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE Hose Fitting Adapter NONE 4250-15 8010-15 NONE 8010-15 NONE NONE Hose Fitting Adapter NONE 8010-15 NONE	Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve ML to Valve Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve Location return to Husco V valve to QC cylinder to cylinder DS rod end To PA rod end to QC ML to Valve Location return to Husco V Valve to QC cylinder to cylinder DS rod end To PA rod end To

2INCHES OFF OF 6M3K PART NUMBER 3INCHES OFF OF 8M3K PART NUMBER

				•	
Part No.	Qty. Per	Hose Cut Length	Hose Fitting	Hose Fitting	Hose Fitting Adapter
PR096	1	93"	8-10FJX	8-10FJX	NONE
PR139	1	136"	8-10FJX	8-10FJX	NONE
PR147	1	144"	8-10FJX	8-10FJX	NONE
PR161	1	158"	8-10FJX	8-10FJX	NONE
PR176	1	173"	8-10FJX	8-10FJX	NONE
PR200	1	197"	8-10FJX	8-10FJX	NONE
FEEDER HOSE A	SSEMBLIES	•			
Part No.	Qty. Per	Hose Cut Length	Hose Fitting	Hose Fitting	Hose Fitting Adapter
8M3K-24.0	2	21"	8-8FJX	8-10FJX	NONE
8M3K-177.0	2	174"	8-8FJX	8-10FJX	NONE
PHD HOSE ASSI	EMBLIES				
Part No.	Qty. Per	Hose Cut Length	Hose Fitting	Hose Fitting	Hose Fitting Adapter
8M3K-122.0A	2	119"	8-8FJX	8-8MBX	8010-15
<u></u>					
TM-2000 HOSE	ASSEMBLIE	ES .			
Part No.	Qty. Per	Hose Cut Length	Hose Fitting	Hose Fitting	Hose Fitting Adapter
6M3K-34.0	1	32	6-6FJX	6-6MB	NONE
6M3K-72.0	2	70	6-6MB	6-8MB	8010-15

	41/55		4.0054.01	
ы	$\Delta K + R$	$H() \setminus F$	ΔSSFMRI	IF\

Part No.	Qty. Per	Hose Cut Length	Hose Fitting	Hose Fitting	Hose Fitting Adapter
6M3K-50.5 A	1	48-1/2"	6-6FJX	6-6FJX	NONE
6M3K-53.5	1	51-1/2"	6-6FJX	6-6FJX	NONE
6M3K-55.5	2	53-1/2"	6-6FJX	6-6FJX	NONE
6M3K-71.5	2	69-1/2"	6-6FJX	6-6FJX	NONE
8M3K-11.0	1	8"	8-10FJX	8-8MB	4250-15
8M3K-39.0	1	36"	8-10FJX	8-8MBX	8010-15

QCF HOSE ASSEMBLIES

Part No.	Qty. Per	Hose Cut Length	Hose Fitting	Hose Fitting	Hose Fitting Adapter
8M3K-103.0	2	100	8-8FJX	8-8FJX	NONE

PB-X106 ASSEMBLIES

Part No.	Qty. Per	Hose Cut Length	Hose Fitting	Hose Fitting	Hose Fitting Adapter
8M3K-103.0	2	100"	8-8FJX	8-8FJX	NONE
8M3K-28.0	1	25"	8-8FJX	8-8MBX	8010-15

2INCHES OFF OF 4M3K PART NUMBER

PRO SPEAR HOSE ASSEMBLIES

PS-100

Part No.	Qty. Per	Hose Cut Length	Hose Fitting	Hose Fitting	Hose Fitting Adapter
4M3K-90.0	1	88"	4-6FJX	4-6FJX	NONE
4M3K-99.0	1	97"	4-6FJX	4-6FJX	NONE

PS-2X0

Part No.	Qty. Per	Hose Cut Length	Hose Fitting	Hose Fitting	Hose Fitting Adapter
4M3K-97.0	1	95"	4-6FJX	4-6FJX	NONE
4M3K-106.0	1	104"	4-6FJX	4-6FJX	NONE

PS-3X5

Part No.	Qty. Per	Hose Cut Length	Hose Fitting	Hose Fitting	Hose Fitting Adapter
4M3K-108.0	1	106"	4-6FJX	4-6FJX	NONE
4M3K-117.0	1	115"	4-6FJX	4-6FJX	NONE

PS-555

Part No.	Qty. Per	Hose Cut Length	Hose Fitting	Hose Fitting	Hose Fitting Adapter
4M3K-129.0	1	127"	4-6FJX	4-6FJX	NONE
4M3K-137.0	1	135"	4-6FJX	4-6FJX	NONE

PS QCR

Part No.	Qty. Per	Hose Cut Length	Hose Fitting	Hose Fitting	Hose Fitting Adapter
4M3K-6.0	1	4"	4-6FJX	4-6FJX	NONE
4M3K-10.0	1	8"	4-6FJX	4-6FJX	NONE
4M3K-18.0	1	16"	4-6FJX	4-6FJX	NONE
4M3K-24.0	1	22"	4-6FJX	4-6FJX	NONE

