

GENESIS



Raise and Lower Change Table




Operation & Maintenance Manual

Model – JK100



Contents

Contents	2
Introduction and Specifications	3
Operation and General Information	4 – 5
Controls – User Interface Guide	6 – 7
<ul style="list-style-type: none"> - Setup - Alarms - Reset - Height Adjustment - Setting Memorised Position (Option) - Remote Handset Operation 	
Maintenance	8
Cleaning	8
Warranty	9
Parts List	10

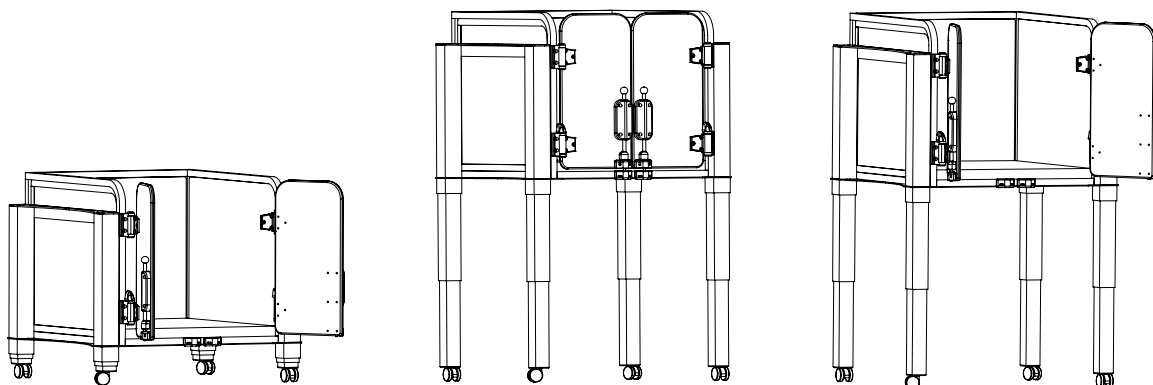

Introduction

The Genesis Raise and Lower change table was designed, manufactured and tested in Australia.

Genesis Safety designed the change table to mitigate the likelihood of carers developing lifting associated injuries, by eliminating the need to lift toddlers and children onto a conventional, bench-height change table.

The Genesis Safety Change Table also reduces the potential for falls related injuries to children, by eliminating the use of change table access stairs.

A full safety surround is fitted to each change table, including a simple magnetic latching door system for extra security.

Specifications

Total Mass	65kg
Safe Working Load	60kg
Maximum Child Weight	30kg
Minimum Lowered Height (from floor to top of mattress)	23cm
Maximum Raised Height (from floor to top of mattress)	88cm
Internal Width	65cm
Internal Depth	78cm
Side Height from top of mattress	55cm
Overall size when fully raised	86cm W x 80cm D x 145cm H
Overall size when lowered.....	86 cm W x 80 cm D x 79 cm H
Raise/Lower Speed.....	11 / 14 sec
Castors – 65mm diameter twin wheel, lockable	
Safety skirt fitted to prevent access under the change table	
Mains powered, low voltage electrically operated raise and lower function	

Note/Warning: This device is only to be used / connected to an RCD protected mains power outlet.

Operation & Information

The Genesis Safety Change Table is supplied fully assembled and ready to use.

After unpacking and installing the change table, simply plug the power lead into a mains power outlet.



The change table is supplied with a control panel attached to the side of the unit and a wireless remote handset that are used to control the raise and lower function of the table.



Control Panel with Wireless Remote Handset



Castor wheels with lock tab

Once the power is turned on, the Genesis Safety Change Table needs to be setup for operation. Simultaneously press and hold the Raise  and Lower  buttons on the control panel (Reset function) until the change table is completely lowered or a “Beep” sound is heard.

Note: Make sure the area around and above the change table is clear and there are no objects that could encounter / catch or be struck by the change table as it raises or lowers.

Warning: Make sure the power outlet, plug and power lead are clear of the change table as it raises and lowers so they are not caught or struck by the table structure.

The Raise and Lower buttons of the wireless remote handset can now also be used to raise and lower the change table. If the remote handset does not operate, please consult the TC22 Connection and Pairing instructions on page 7.

Make sure that all 4 castor wheels are locked when the change table is positioned in the desired location. Each castor wheel has a locking tab - the tab needs to be pressed down to lock the wheel. (See above photo)

The Genesis Safety Change Table front doors utilise magnetic safety latches. To open the door, pull up the knob of the latch.

When closing the door, the latch will automatically lock to hold the door closed.



Note: Always check the doors are securely closed / latched prior to raising or lowering the change table. The change table must have the doors in the closed position when raising or lowering. **Always ensure the slots of the lower latches are free of any dirt or debris.**

Operation & Information

The Genesis Safety Raise and Lower Change Table is designed to reduce the need to lift infants and children for nappy changes.


Prior to use ensure the table is positioned at a reasonable distance from benches, cupboards, power points and light switches or any object that the table could encounter when moving.

The operation sequence is as follows:



- Prior to use make sure everything required to perform the change is located within easy reach of the change table.
- The change table should be positioned at its lowest height.
- Open the doors to the change table, invite the child to enter.
- Once the child is sitting or lying on the base of the mattress in the change table, close the doors and check they are securely latched.
- Raise the change table to your ideal height by pressing and holding the Raise  button on either the control panel or remote handset.
- When the change table reaches the ideal height, release the button and the change table will stop.
- Open the change table doors, making sure the child is calm and in a seated or lying position.
- Perform the change.
Note: Do not depart from the front area of the change table while the doors are open. Always maintain contact with the child to prevent possibility of the child falling from the change table.
- Once the change has been done, close the doors and check they are securely latched.
- Check that everything is clear around the change table prior to lowering it.
- Press and hold the Lower  button on either the control panel or the remote handset until the change table is at its lowest height.
- Open the doors and allow the child to exit the change table.

Controls Information

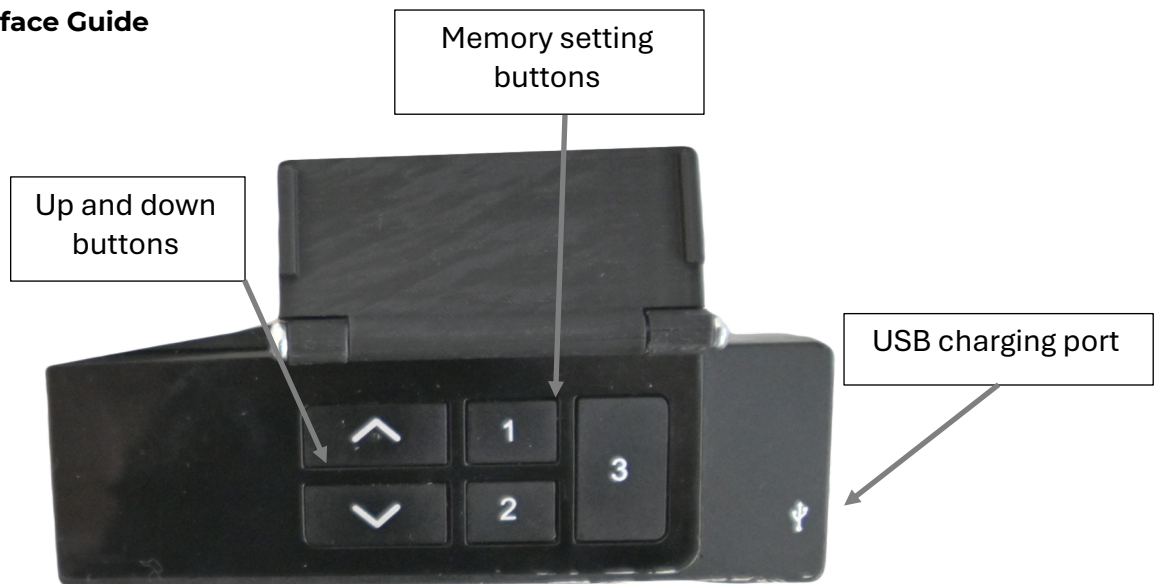User Interface Guide





Reset Function

Simultaneously press Raise  and Lower  buttons for 3 seconds. Continue pressing the buttons until both columns are in the lowest position. When finished, the control box will make a “beep” sound, and the buttons can be released.

Note: Users must perform a reset when operating the change table for the first time.



Adjusting the height

Raise  or Lower  button until the change table is at the desired height.

Setting a Memory Position

The change table supports a maximum of 3 memory positions.

To set a memorised position:

1. Adjust change table to the desired height.
2. Press the preferred memory button (1, 2 or 3) with the Raise  or Lower  button for 2 seconds.
3. Press and hold button 1, 2 or 3 to move the change table to the memorised position.

Wireless Remote Handset

Pairing Instructions

1. Make sure the blue light on the pick-up sensor is solid blue illuminated.
The sensor is located under the base of the change table.
2. Press and hold buttons 1 and 2 simultaneously for 20 seconds to pair the system.
3. The blue light of the pick-up sensor will flash twice to show that the handset is paired.
4. The raise or lower button can now be used to raise and lower the change table.



Maintenance

The Genesis Safety Change Table is designed with very low maintenance requirements.

Monthly (Minimum recommendation):

- Clean the column sides (outside of the column legs) with the change table in the fully raised position using a wipe or limited soapy water on a cloth. Wipe the column legs with a dry cloth immediately after cleaning.
- Visually check the power lead and plug for damage – if any damage is detected, the change table should immediately be unplugged and not used until a suitably qualified electrician has checked or replaced the power lead.
- Check the door catches and hinges for operation and that all retaining bolts are secure.
- Remove any material from the magnetic latch base slot. These are located on the lower rail of the unit.
- Check the castor wheels and locking mechanisms.
- Check the overall condition of the yellow safety skirt. Make sure it is securely fitted and that there are no holes or tears.

Cleaning

The Genesis Safety Change Table requires periodic cleaning and disinfecting of all surfaces. This includes the steel / powder coated framework, acrylic plastic doors and side panels, vinyl covered mattress and mattress base board, change table legs and safety surround skirt.

All surfaces can be cleaned using normal household cleaner, hospital grade or commercial grade spray cleaner / disinfectant or wipes. All areas must be wiped dry using a clean dry cloth after cleaning.

Alternatively use warm soapy water with a sponge or wash cloth. These must be wrung out to minimise the amount of liquid used to clean the surfaces. A clean dry cloth or towel must be used immediately after washing to dry all surfaces.

Note: When cleaning the change table or mattress, it must not be immersed in water or liquid. The unit must be kept in a dry environment.



Warranty Against Defects

The Genesis Safety Change Table is covered by warranty provided it is used as designed.

Genesis Safety in conjunction with the manufacturer (Deutscher Healthcare) will repair or replace, free of charge, any part of the steel frame that is defective in materials or workmanship (or both) for a period of 10 years from purchase date.

The lift legs (actuators), control box, handset control switch, wireless remote-control unit and associated electrical components are covered by the manufacturer warranty (TiMotion Australia) for a period of 3 years.

These warranties do not cover normal wear and tear, misuse, neglect, accidental damages or overloading. Warranty will not be honoured if cleaning and / or maintenance is not performed as specified in this manual.


Warranty will not be covered if non-genuine parts have been used or repairs or modifications have been made without the manufacturers written authority.

This warranty does not obligate the manufacturer, agent or dealer to cover transport costs incurred in the repair or replacement of any defective part or any other costs associated with making a warranty claim.

Our products come with guarantees that cannot be excluded under the Australian Consumer Law. The benefits of this warranty are in addition to other rights and remedies under the law in relation to the goods and services to which this warranty relates.

Any fault or issue detected must be reported to the company or dealer that the item was purchased from.

Spare Parts

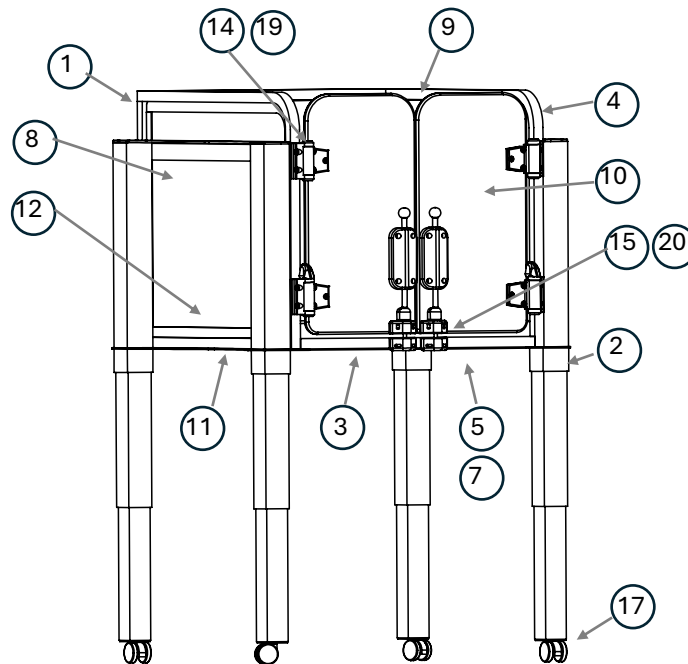

Item Number	Part Number	Part Description
1	5056	25mm square plastic plug
2	TL20SR	TiMotion actuator – Telescopic lift leg
3	TC22	TiMotion control box
4	TDH18P	TiMotion handset control unit
5	TWD1	Remote handset sensor
6	TFH22	Remote handset
7	TBB9	Optional battery backup
8	7264	Clear acrylic plastic table side wall
9	7265	White acrylic plastic back wall
10	7246	Clear acrylic plastic front door
11	7259	Plywood floor sheet
12	7260	Mattress
13	7280	Safety skirt
14	7279	Self-closing safety door hinges (2pcs per set)
15	7278	Magnetic door latch
16	TBA	Magnetic latch extension unit
17	7272A+7271	Castor wheel complete with mount stem
18	5707	Mains power lead
19	7281	Hinge bolt and screw set
20	7282	Door latch bolt and screw set

All parts, accessories and information are subject to change without notice.

Optional / Additional Accessories



Wire Carry Basket



This basket mounts onto the side of the change table to hold nappies, wipes, cleaner, creams, etc.

Item Number	Part Number	Part Description
21	3616	Complete kit = Basket + 2 x mounting clips

Contact

Genesis Safety Pty Ltd

Email: _____

Phone: _____

Deutscher Healthcare Pty Ltd

Manufacturer – Contact for technical assistance, sales, spare parts, etc.

731 Creswick Road, Wendouree Victoria 3355

Phone: 03 5339 5708 opt 1

Email: sale@deutscher.com.au

Thank you for your purchase



GENESIS

SAFETY

Raise and Lower Change Table

www.genessafety.com.au

