




**GENESIS  
INTERNATIONAL**

**SHERLOCK**

**INFRA-RED REFRIGERANT GAS SENSOR**

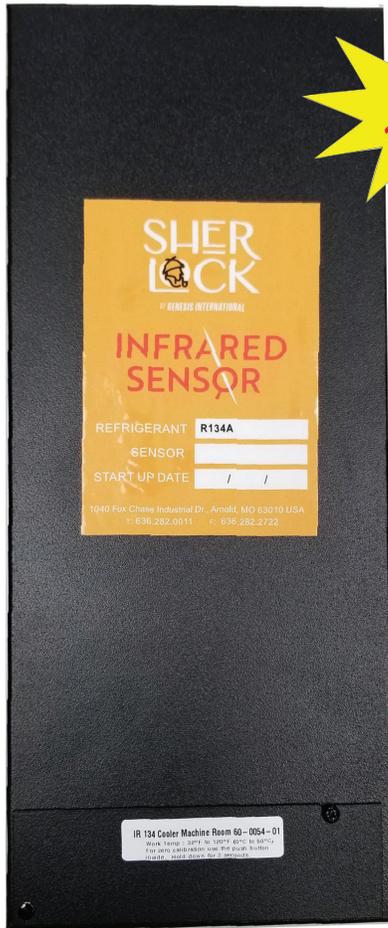

The **SHERLOCK NON-DISPERSIVE INFRARED REFRIGERANT GAS SENSOR** was designed to monitor for the presence of refrigerant gases within an enclosed space. The sensor is mounted within the space to be monitored and connected by cable to a **SHERLOCK, Wizard** or EMS System. Each sensor is calibrated to a specific refrigerant gas. The IR comes in two different styles depending upon the monitoring environments: machine room and cold room for refrigerated applications in NEMA 3R Aluminum (Pictured).

The IR Sensor is a reliable method of monitoring for refrigerant gas leaks in environments that have air quality problems. The IR sensor will eliminate many false alarms in environments that contain gasoline, diesel, and propane exhaust and fumes from solvents, paints, cleansers, and others (Please call Genesis Customer Support for more information).

**SPECIFICATIONS**

**ENCLOSURE RATING** NEMA 3R Aluminum, Black Powder Coat

**DIMENSIONS** 12.86 x 4.8 x 2.44  
Inches (mm) (327 x 122 x 62)

**OPERATING ENVIRONMENT**

**TEMPERATURE**

Machine Room Model 32° - 120°F (0° - 50°C)  
Freezer Room Model -40° - 120°F (-40° - 50°C)

**HUMIDITY**

0 - 90% RH Non-Condensing

**POWER INPUT**

*Sherlock / Wizard* 12VDC, 0.4 A  
*Stand-Alone* 12V DC - 32V DC Switching

**OUTPUTS (Standard)** Current Driven Sherlock/Wizard  
4 to 20 mA (Standalone Sensor)  
(Contact Genesis for custom outputs for the stand-alone)

**RANGE (Parts Per Million, PPM)**

*Sherlock/Wizard* 0 - 1500\* (Control Dependent)  
*Stand-Alone* 0 - 1032\*

\*Minimum effective range due to noise is 10 - 15ppm.

**SENSITIVITY**

±1 ppm at 77°F (25°C), 45% RH

**RESOLUTION**

1 ppm

**RESPONSE TIME**

Under 30 Seconds

**CALIBRATION**

Every 6 Months

**WARM-UP TIME**

Readings will stabilize in 3 hours  
(Up to 18 Hours in Cold Room Applications)

**LIFE EXPECTANCY**

Average of 5 to 7+ years in normal environments

**APPLICATIONS**

Typical applications include:

- Wineries
- Bakeries
- Refrigerated Rooms
- HVAC Chiller Equipment Rooms
- Refrigeration Mechanical Rooms
- Food Processing Plants

**AVAILABLE GAS SENSORS**  
(Part Numbers may have a "-00" or "-01 Suffix)

**Machinery Room/Walk-In Cooler Application**

- |                   |                                   |                   |
|-------------------|-----------------------------------|-------------------|
| R11 - 60-0057     | R12 - 60-0104                     | R22 - 60-0053     |
| R23 - 60-0232     | R32 - 60-0562                     | R123 - 60-0137    |
| R125 - 60-0466    | R134a - 60-0054                   | R401a - 60-0465   |
| R402a - 60-0231   | R404a - 60-0052                   | R407a - 60-0223   |
| R407c - 60-0214   | R407f - 60-0514                   | R408a - 60-0184   |
| R409a - 60-0066   | R410a - 60-0165                   | R422d - 60-0546   |
| R424a - 60-0469   | R434A - 60-0554                   | R438a - 60-0246   |
| R448a - 60-0544   | R449A - 60-0552                   | R500 - 60-0067    |
| R502 - 60-0059    | R507 - 60-0061                    | R513a - 60-0542   |
| R514a - 60-0550   | R454A - 60-0560                   | R454B - 60-0558   |
| R454c - 60-0561   | R515B - 60-0564                   | R1233zd - 60-0548 |
| R1234yf - 60-0551 | Ammonia/NH <sub>3</sub> - 60-0095 |                   |


**Extended Temperature/Freezer Application**

- |                                   |                 |                 |
|-----------------------------------|-----------------|-----------------|
| R11 - 60-0058                     | R22 - 60-0047   | R402a - 60-0142 |
| R404a - 60-0051                   | R407a - 60-0526 | R407c - 60-0473 |
| R407f - 60-0528                   | R408a - 60-0065 | R410a - 60-0530 |
| R438a - 60-0464                   | R448a - 60-0545 | R449a - 60-0553 |
| R500 - 60-0068                    | R502 - 60-0060  | R507 - 60-0062  |
| Ammonia/NH <sub>3</sub> - 60-0096 |                 |                 |


Please contact Genesis if your sensor type is not listed.

**NEMA 3R ALUMINUM, SUFFIX, "-00" OR "-01" 12-15-25**

## DIMENSIONS

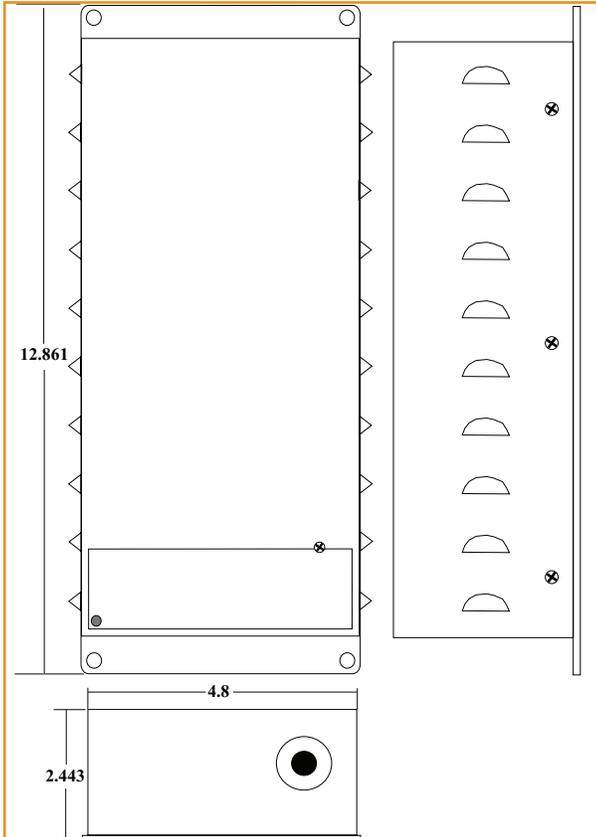

## MOUNTING

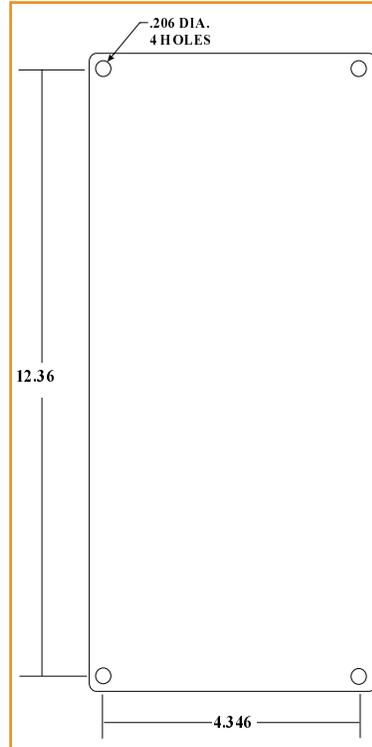

**Sensor Placement** -- The Sherlock IR Sensor must be placed in locations where a refrigerant leak is likely to occur and where leaked refrigerant gas is likely to concentrate so as to provide warning of a potentially hazardous condition. Mounting locations are dependent upon the application and the refrigerant gas to be monitored. For Halocarbon refrigerants such as R11, R22, R123, R134a, R404a, etc... Place the sensor 18 to 24 inches off the floor. For Ammonia, place the sensor 18 to 24 inches from the ceiling.

### **HVAC/Refrigeration Machinery Room**

-- Prior to placement of the IR

Sensor, the room air currents need to be determined. The maximum air flow rate past the sensor should not exceed 3 feet per second.


**Mounting** - The sensor must be mounted with the wire terminal blocks oriented to the lower right and the sampling chamber in a vertical position. Failure to mount the sensor in this fashion may result in inaccurate readings and can allow moisture to enter the housing and destroy the sensor.




**WARNING!!!!** The infrared sensor is not to be applied into all refrigerated storage applications where other toxic gases are used in the same room. Some installations are not suitable for Infrared technology. Misapplication may result in damage to sensor. Contact the factory for a specific list of approved applications.

## TYPICAL WIRING DIAGRAMS

### SHERLOCK / WIZARD

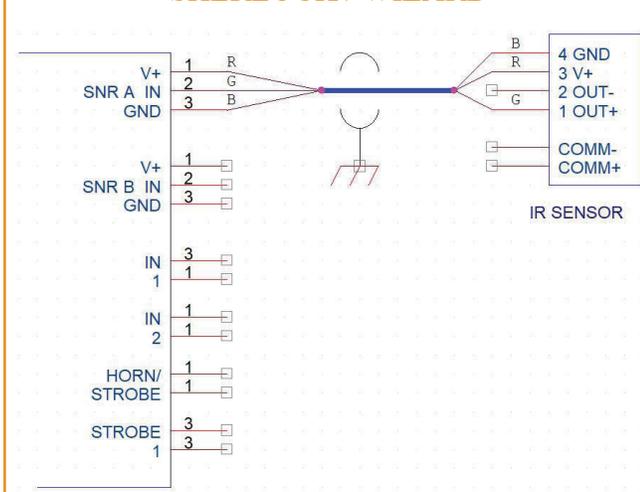

### STAND ALONE (PLC, BAS)

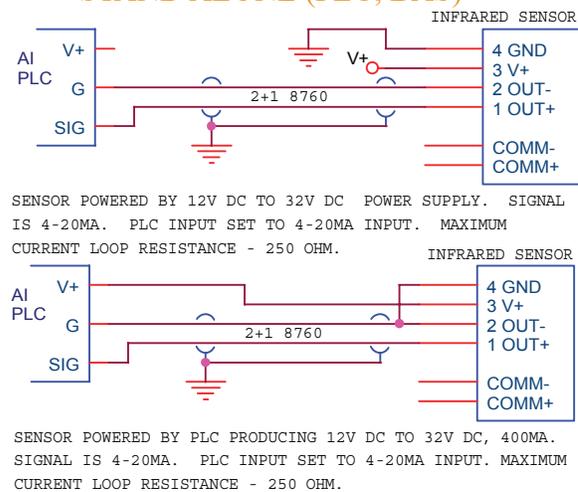

# GENESIS INTERNATIONAL

1040 Fox Chase Industrial Dr.  
Arnold, MO 63010  
Tel: 636-282-0011 Fax: 636-282-2722

Web: [www.Genesis-International.com](http://www.Genesis-International.com)  
E-Mail: [Mail@Genesis-International.com](mailto:Mail@Genesis-International.com)