


WaveCAST Hearing Assistance: Quick Start Guide

WaveCAST Hearing Assistance lets you access our audio feed in the church through Bluetooth-enabled hearing aids, Bluetooth earbuds, or wired earbuds. If you need hearing assistance and do not have one of these devices, please ask an usher for a hearing assistance device and return it after the service.

1. Install the WaveCAST App

- Before you arrive, download **WaveCAST Audio Receiver** from the Apple App Store or Google Play. Search for “WaveCAST,” then scroll until you find the correct app. The WaveCAST app will look like this.

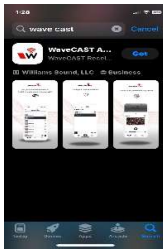

- If you have not downloaded the app yet, go to Step 2 below first. After joining the network, you can download the app.

2. Connect to the Venue Wi-Fi

- Open your device settings and select Wi-Fi.
- Select the **BrutonHA** network, then enter **BrutonHA** as the password.

3. Select the Audio Channel

- Open the WaveCAST app.
- Select the available channel for the event or room. It will look like this.

4. Listen

- Connect your Bluetooth hearing aids, Bluetooth earbuds or headphones, or wired headphones.
- Adjust the volume in the app or with your phone's volume controls.