

Index

EXTENDING WHEELBASE/MOVING AXLE.....	1
Frame Extension.....	1
Alterations.....	1
Frame.....	1
Altering the Wheelbase.....	2
Frame Splice Location.....	2
Frame Splice Preparation.....	3
Frame Splice Procedure.....	4
Extending the Frame (Rear Overhang).....	7
Holes.....	8
Crossmembers.....	9
Analyzing Frame Failure Causes	10
Collisions	10
Excessive Bending Moment.....	10
Localized Stress Concentration	10
Attaching Reinforcements	12
Terminating Reinforcements.....	13
Frame Repair and Reinforcement:	
General Rules	13
Welding	13
Welding Equipment	14
Welding Methods.....	15
Dissimilar Metals.....	15
Driveshaft (Propshaft) Extension	16
Driveshaft Extension Design	16
Two-Piece Driveshaft Bearings	17
Universal Joint Angles and Phasing.....	18
Multiple-Piece Driveshaft Alignment Procedure	19

(continued on next page)

Index (cont'd)

BODY MOUNTING.....	20
General Requirements	20
Body Mounting Considerations	21
Body/Equipment Attachment Methods.....	21
Body Mounting Fasteners	22
Prevailing Torque Nuts (PTN).....	23
NTEA Recommended Body-Mounting Practices	23
Type 1 – U-Bolt/Threaded Rod and End Plate	23
Type 2 – Brackets and Pinch Bolts	23
Type 3 – Rigid Mounting (Service/Utility)	23
Type 4 – Shear Plate Mounted	23
NTEA Body Classifications.....	24
Shear Plate Attachments	28
FUEL SYSTEMS.....	29
Fuel Fill.....	29
Fuel Lines.....	30
Fuel Tanks	31
Auxiliary Fuel Tanks	32
Diesel Exhaust Fluid (DEF) System	32
BRAKES.....	33
General Requirements	33
Federal Standards and Regulations	33
Modification Checklist	33
Brake Lines.....	34
Parking Brake Systems.....	35
Electronic Dynamic Rear Proportioning (DRP)	36

Index (cont'd)

EXHAUST SYSTEM	37
Exhaust System Design	37
Routing	39
Shielding	39
Undercoating	39
SUSPENSION SYSTEM.....	40
General Requirements	40
Front Suspension.....	40
Rear Suspension.....	40
WHEELS AND TIRES	41

Extending Wheelbase/Moving Axle

Frame Extension

The frame extension is designed to maintain structural rigidity and performance while minimizing cost and part/assembly complexity. General Motors has conducted extensive engineering analysis of the frame with the objective of replicating base frame thickness for optimum dynamic performance. This analysis is the basis for recommendations on frame construction sections, section modules, metal thickness and specifications.

The frame extension must overlap the existing frame to ensure adequate strength in the tie-in areas. These areas are vehicle stress risers, subject to significant loads even during normal vehicle use. SVMs, therefore, should make every attempt to ensure consistent installation in the tie-in areas.

Alterations

When modifying the wheelbase, SVMs assume full responsibility for:

- compliance with applicable motor vehicle safety standards
- warranty on items such as driveshafts, universal joints, center bearings and rear transmission tailshaft, transfer case and transmission case fractures, output shaft bushings, bearings, brakes, fuel systems and any other related component failures.

Additionally, the modifier's owner manual must alert the customer that parts for the reworked area(s) are not available through the General Motors service parts system.

Frame

The SVM is responsible for any alterations to the frame assembly, including hole drilling, welding and modifications of any type.

The SVM must also assume complete responsibility for reliability, performance and compliance to applicable FMVSS requirements.

This section outlines GM-recommended procedures and precautions for proper installation of special bodies and/or equipment on frames. Failure to follow these recommendations could result in serious damage to the basic vehicle.

Flanges

GM does not recommend drilling holes in frame flanges. Drilled holes in frame flanges will reduce fatigue life significantly. See Figure 10, page 9.

Holes

When drilling holes for mount brackets, supports and outriggers in the frame rail vertical side wall, SVMs should observe the following recommendations:

- Material between the edge of the hole and inside of upper or lower flange must not be less than 37 mm (1.5 in.).
- The minimum edge distance between any two holes must be larger than twice the diameter of the larger hole.
- No hole should exceed 20 mm (0.75 in.) in diameter.

(continued on next page)

Extending Wheelbase/Moving Axle (cont'd)

Altering The Wheelbase – Frame Splice Location

General Motors recommends splicing in a straight segment of the frame rail, just forward of the rear spring front hanger bracket (see Figure 1). This is the optimum location for maintaining frame strength and integrity. It also maintains minimum weld spacing from hanger bracket rivet, preventing hole/rivet shrinkage deformation. Other advantages to this location are:

- Requires minimal exhaust, fuel, brake and electrical modifications.
- Minimizes driveline modification issues from excessive angles and misalignment.



Avoid altering chassis wiring. When shortening the wheelbase, simply secure a gentle bend or loose coil in the wiring.



Avoid cutting on uneven sections of the frame, such as frame forms or irregular bends and depressions.



General Motors highly recommends selecting a cut location approximately 203 mm (8 in.) forward of the rear spring front hanger bracket whenever possible. If using another location with the splice zone, SVMs should complete a stress analysis.

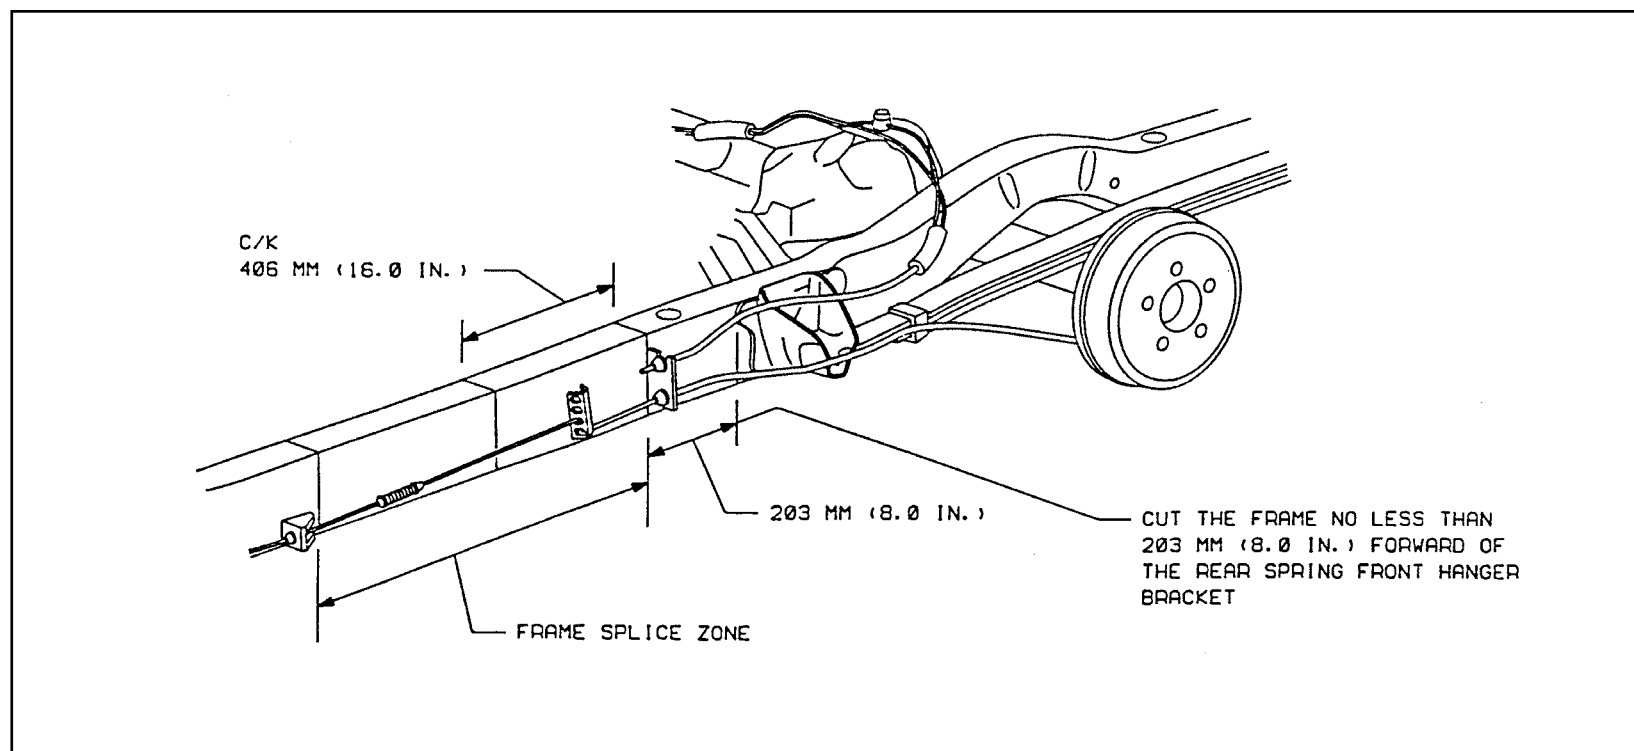


Figure 1

(continued on next page)

Extending Wheelbase/Moving Axle (cont'd)

Frame Splice Preparation

The following steps are recommended as preparations for altering the wheelbase:

1. Disconnect the battery (negative cable first), if not already done.
2. All OEM frames are dipped in wax for improved corrosion protection. Before beginning any welding operation, locally remove the wax using one of the following methods:
 - Steam
 - Hot water at approximately 500 PSI
 - Scrape and then use mineral spirits to wipe off any remaining wax.
3. Choose a cutting location that will be able to withstand any outer reinforcements that will be added in later operations. The reinforcement should extend beyond either end of the frame insert by a minimum of 152 mm (6 in.).
4. Scribe or mark the frame for cutting (Figure 2). Record all dimensions for gauging or fixturing on the Frame Splice Process Check-List.
5. Attach a cutting fixture/rest to the frame for increased cutting accuracy.
6. Medium Duty vehicle with I-beam front axles: Use the correct tie rod arms when significant shortening or lengthening is planned. Consult the General Motors Parts Catalog for the proper selection.

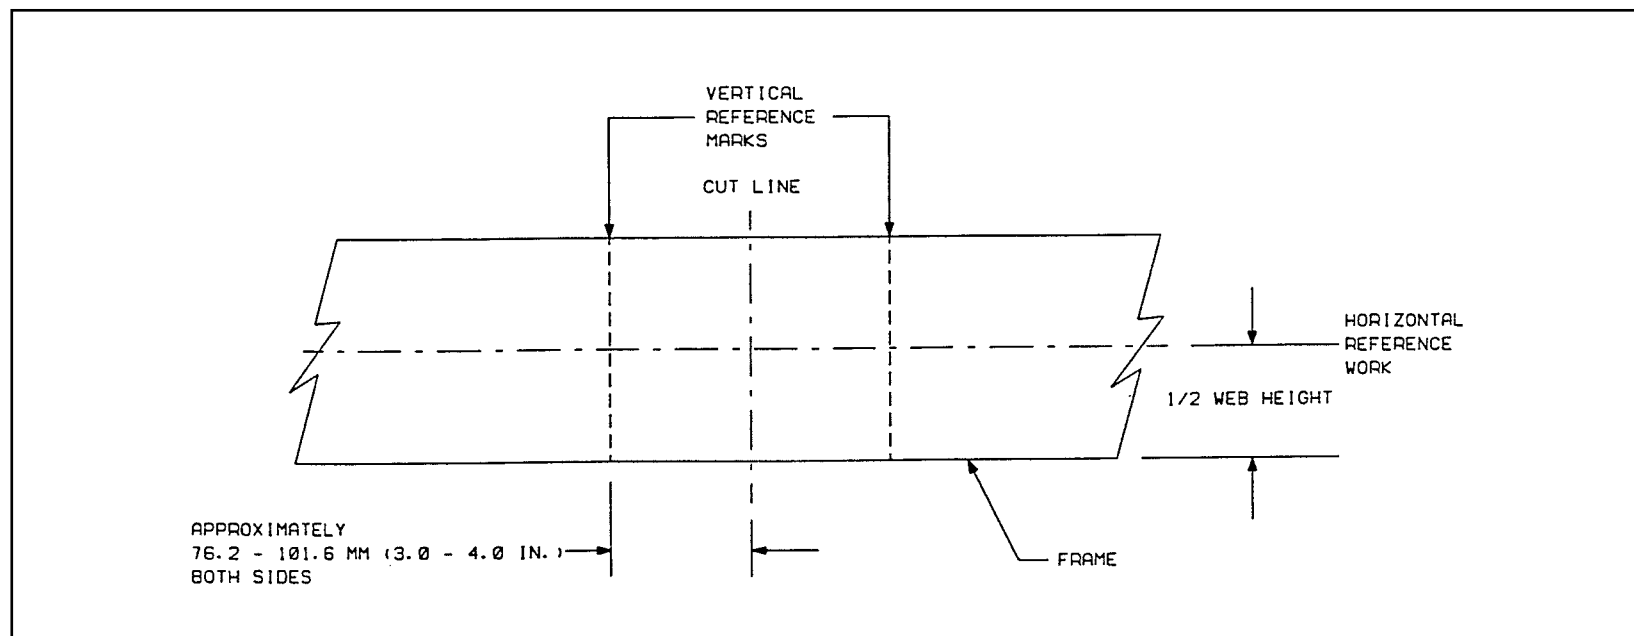


Figure 2

(continued on next page)

Extending Wheelbase/Moving Axle (cont'd)

Frame Splice Procedure

Use the following procedure for splicing the frame:

1. Locate a specific frame splice cut location, observing the location guidelines already outlined. Cut the frame within the frame splice zone.
2. Grind cut edges of the frame smooth for line-to-line fit. This ensures a good fit and clean metal surface for the welding operation.

! Frame inserts must be the same dimensional shape, metal gauge/thickness, material type and yield strength as the original frame side member.

3. Chamfer the outside edge of both the frame and the insert at a 30-degree angle, leaving 1/2 of the thickness (Figure 3).
4. Relocate rear frame section of the vehicle to install frame insert when lengthening.
5. Fixture and clamp the insert to ensure correct alignment (Figure 4). Make dimensional checks against predetermined reference marks (as shown earlier in Figure 2) to prevent possible error.

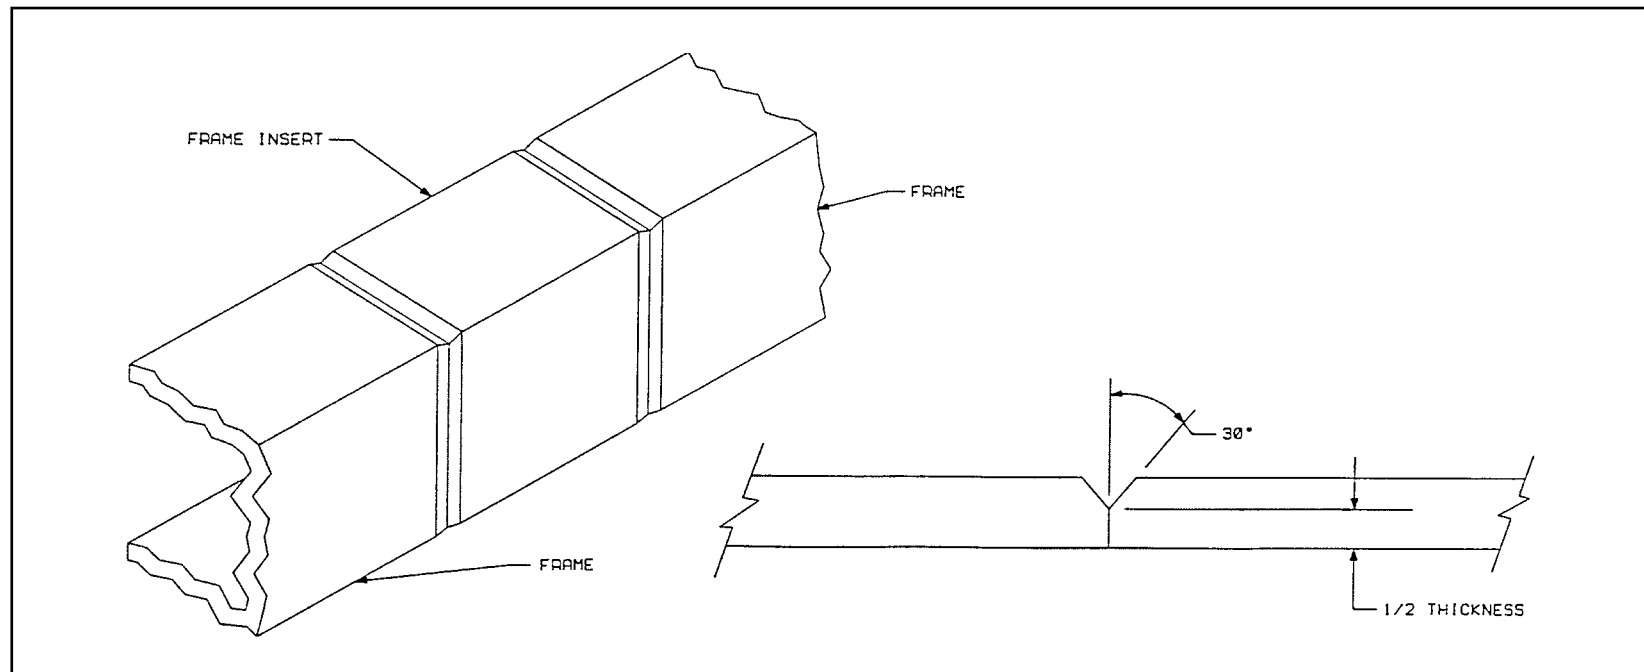


Figure 3

(continued on next page)

Extending Wheelbase/Moving Axle (cont'd)

6. Tack weld runoff blocks to the edge of the upper and lower flanges of the frame and frame insert (Figures 5 and 6). This helps to eliminate joint edge burnout and prevent joint movement during butt welding.
7. Butt weld the outside edges of the frame insert to the frame. Grind visible welds on both sides to parent metal.
8. Butt weld the outside of the joint with a single pass — vertical up (Figure 5). Butt welds on the inside surface of the frame should also be done with a single pass (Figure 6).

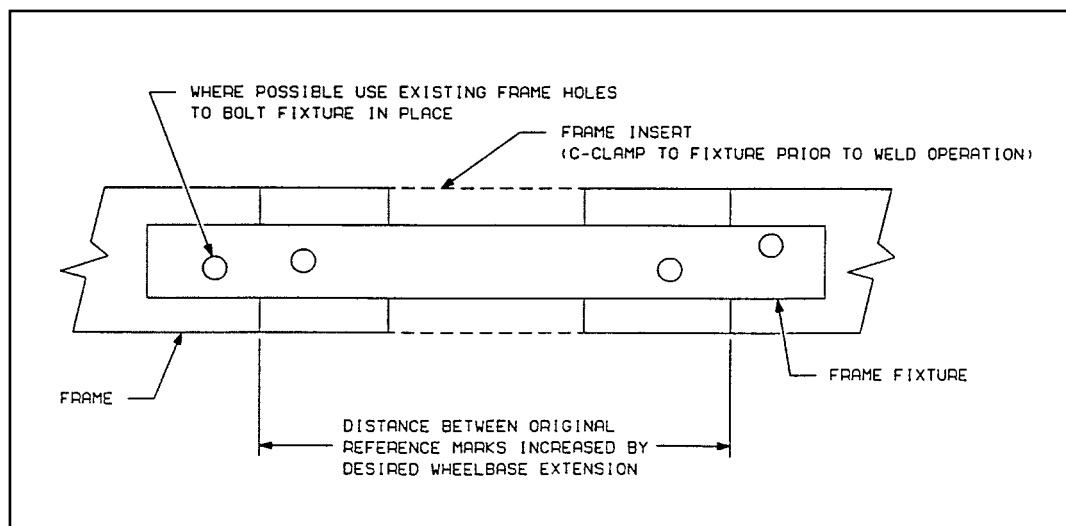


Figure 4

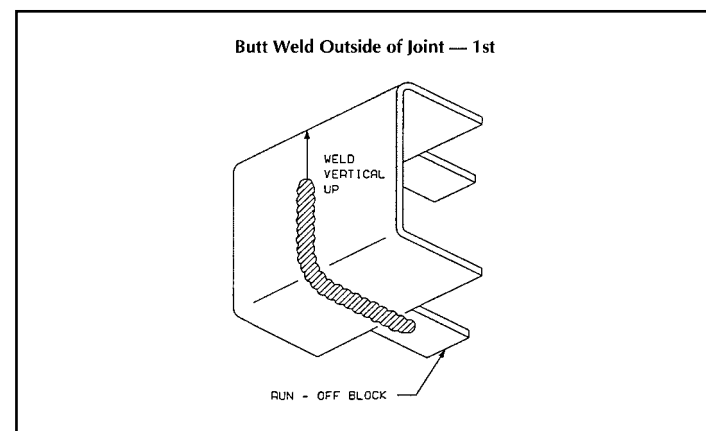


Figure 5

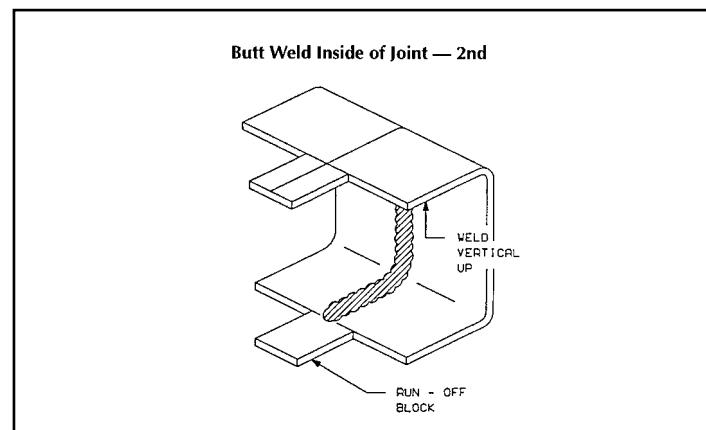


Figure 6

(continued on next page)

Extending Wheelbase/Moving Axle (cont'd)

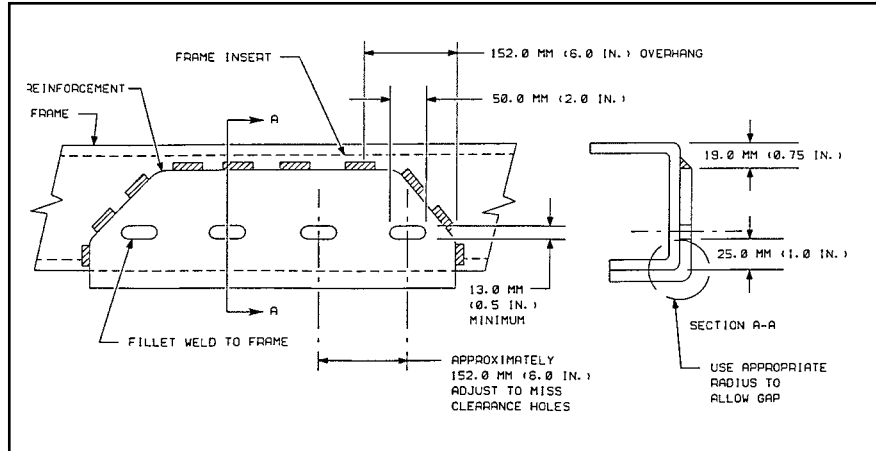


Figure 7

! Variations in equipment and welding materials make it difficult to recommend specific amperage, electrode specifications and welding speed. Therefore, SVMs should have a qualified welder or consulting service establish and test this procedure. Standard industrial practices apply.

9. Visually inspect all welds for defects. This will ensure high-quality welds which are critical to joint integrity.
10. Remove runoff blocks and chip or grind the joint smooth. The outside surface of the frame weldment must be as smooth as the rest of the frame to allow flush fit for reinforcement attachment. Make sure that grind marks are parallel to the length of the frame. The finished joint should be of the same thickness as the sidemember.

! The outer reinforcement length is defined by the splice location and length of the insert, with a minimum 152 mm (6 in.) overlap on each end. The reinforcement must not encroach on the rear leaf spring front hanger bracket.



Avoid welding closer than 50.8 mm (2 in.) to this area. Doing so could shrink the spring bracket rivets, resulting in a loose joint.

Refer to Figures 7 and 8 for clarification throughout this section. The illustration in Figure 7 shows an acceptable reinforcement and weldment method. The method shown in Figure 8, however, is preferred because:

- The slots are smaller and can be more easily positioned to avoid clearance holes in the frame.
- Chamfered sides diminish stress concentrations in corners which can cause cracks to develop in the weld.

Use an L-shaped reinforcement made of the same material and thickness as the frame. Reinforcement height must allow for the weldment, but not exceed the tangent of the radius for the bend at the upper flange of the frame.

The inside radius of the reinforcement must be smaller than the outside radius of the frame so as to provide a gap at the bend.

11. Add holes to the reinforcement to provide clearance for all fasteners, rivets or retention clips in the frame sidemember.

Any frame identification number or VIN which would be lost when the wheelbase is stretched or shortened must be duplicated on the reinforcement or sidemember of the finished frame.

(continued on next page)

Extending Wheelbase/Moving Axle (cont'd)

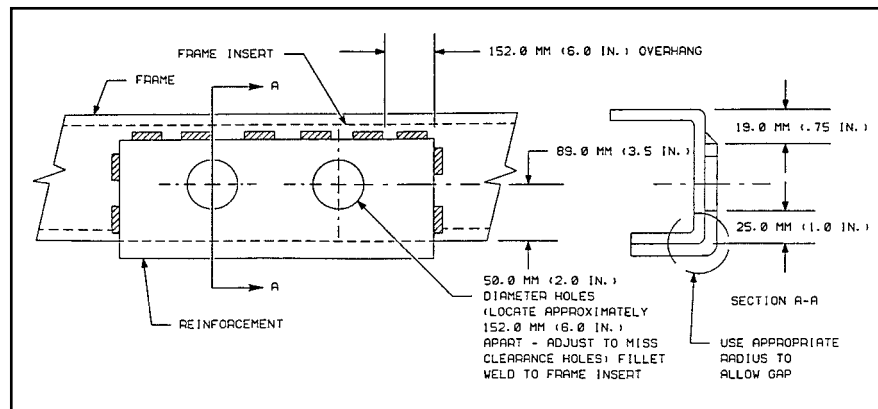


Figure 8

Secure the L-shaped reinforcement with clamps to the outside of the frame rail. There should be no visible gaps between the frame rail and the reinforcement other than at the bend. Fillet weld the reinforcement to the frame rail, using a skip weld technique. That is, a 50.8 mm (2 in.) weld followed by an equal space continuously along the span of the reinforcement.

Leave corners, bends and radii free to flex. Welding in these locations creates stress risers that can often lead to cracks in the weld.



Do not weld at the lower flange of the frame, either on the flange or at the edge.



For the final weld operation, fillet weld the reinforcement slots or holes to the frame. It is acceptable, but not necessary, to fillet weld the entire circumference of the slots or holes. Adding a fillet weld on the bottom half (180 degrees) only will provide sufficient strength.

After final welding, reapply undercoating to the exposed portion of the frame unless the area to be covered is closer than 305 mm (12 in.) from any exhaust component. For components falling within this area, use paint rather than undercoating to provide corrosion protection.

Extending The Frame (Rear Overhang)

When lengthening rear frame extensions, SVMs must exercise great caution to avoid adversely affecting vehicle performance in the following areas:

- Excessive rear extensions allow customer opportunity to significantly unload the front end of the vehicle. This can result in customer dissatisfaction with vehicle braking and/or steering and handling.
- Rear frame extensions must be long enough to protect vulnerable components, such as fuel tanks, and short enough to avoid a negative effect on approach, departure and brake-over angles.

For guidelines on frame wax (corrosion protection) removal, refer to "Altering the Wheelbase" on page 3 in this section.

(continued on next page)

Extending Wheelbase/Moving Axle (cont'd)

Holes

It is important to locate holes in the least critical area possible. In high-load areas, place holes near the neutral axis of the side rail or horizontal center line of the web.

The illustration in Figure 9 was taken from a laboratory test conducted to study stress at a hole under beam loading. In this test, the section was covered with photo stress plastic which shows stress through color fringes when viewed under polarized light.

The illustration shows a channel-section siderail loaded vertically as a beam. This type of loading stretches the lower half of the section and compresses the top half as indicated by the arrows. There are two holes in the lower half, the uppermost of which is located about one-third of the rail depth up from the bottom flange. Stress at the bottom of this hole is approximately equal to the stress in the flange. Any hole located less than this distance from the bottom flange will have significantly higher stress than the flange. Figure 10 illustrates these principles more specifically.

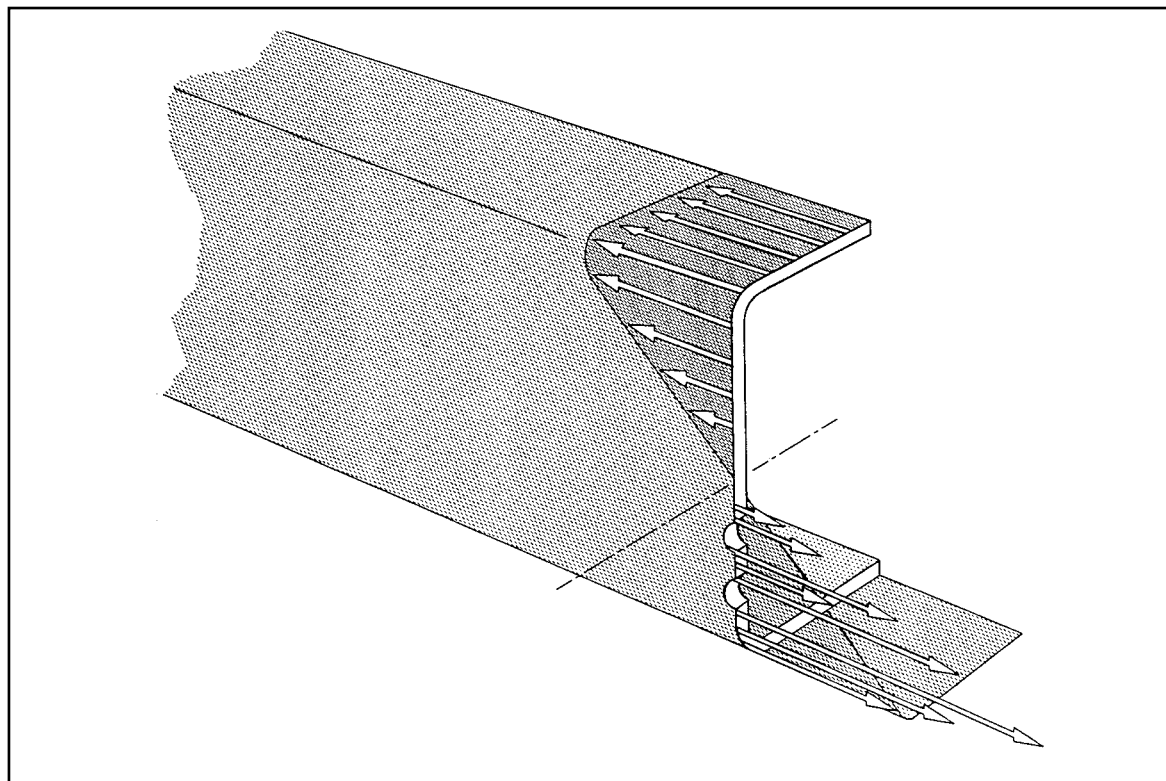


Figure 9

(continued on next page)

Extending Wheelbase/Moving Axle (cont'd)

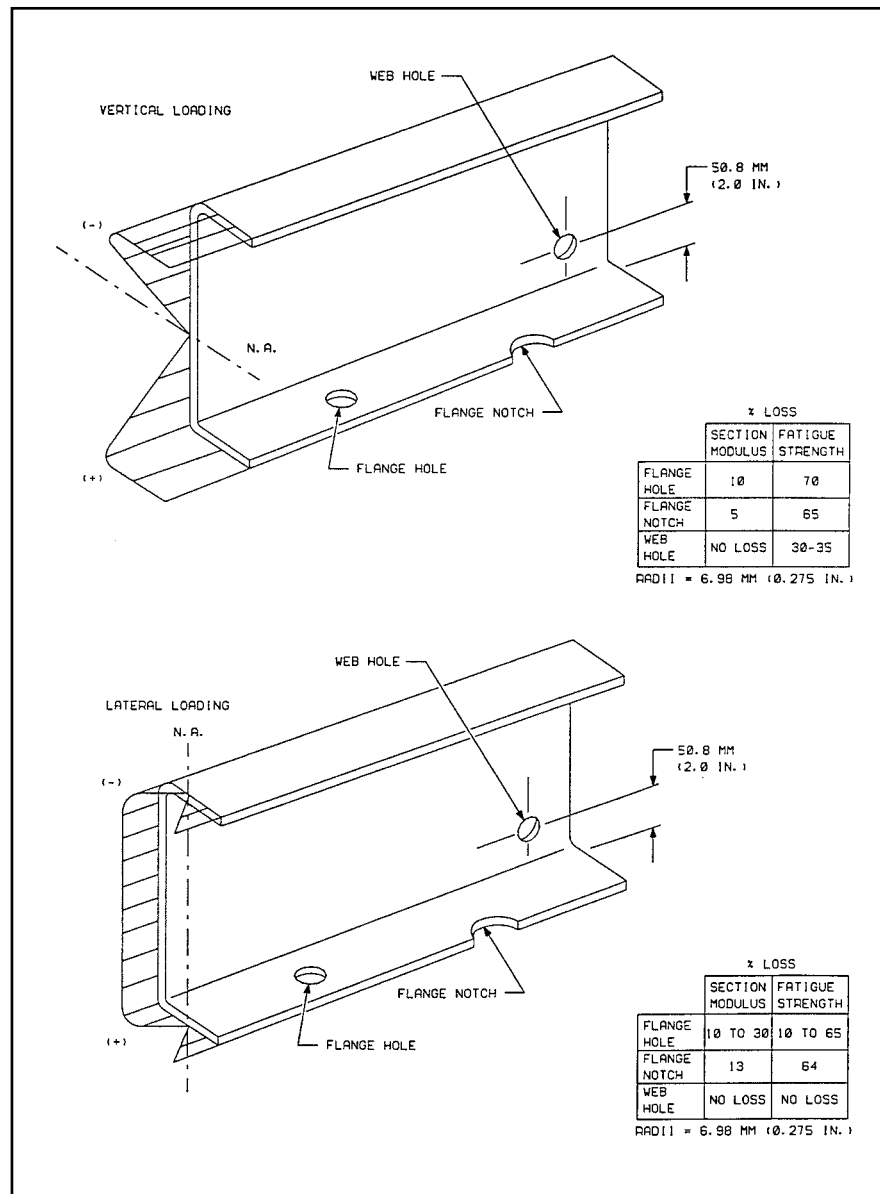


Figure 10

To avoid premature failure, SVMs should observe these general guidelines:

- Use existing holes wherever possible.
- Locate holes no closer to the top or bottom flange than existing holes placed by the chassis manufacturer.
- Avoid placing holes in the lower one-third of the web in the area immediately behind the cab.

Crossmembers

Additional frame crossmembers are required whenever a two- or three-piece driveshaft is used to support the center bearing and shaft. Crossmember design should meet the following criteria:

- Adequate vertical stiffness to prevent resonance with prop shaft imbalance excitation in the vehicle speed range.
- Adequate strength to support the weight of the prop shaft and support bearing, with respect to maximum vertical acceleration of the prop shaft. (Note: Crossmember has adequate strength if stiffness requirement is met.)
- Crossmembers should be rigidly welded, bolted or riveted to the frame rails.
- Designed to avoid retention and other foreign matter.
- Should not protrude excessively below the underbody and frame rails to prevent reduction in ramp break-over and ground clearances.

(continued on next page)

Extending Wheelbase/Moving Axle (cont'd)

Analyzing Frame Failure Causes

In some cases, such as a vehicle collision, the reason for frame failure is easily apparent. In others, however, determining the cause is considerably more difficult. Frame failures can generally be traced to one of three reasons:

- Vehicle collision
- Excessive bending moment
- Localized stress concentration

Collisions

Failures caused by collisions should be repaired using proper methods and reinforcements as necessary.

Excessive Bending Moment

Overload, improper weight distribution or vehicle misapplication can cause excessive bending moment failures. This type of failure occurs at different areas on different types of vehicles.

Localized Stress Concentration

Localized stress concentration failures may result from bending moment stresses. However, stress levels would not be high enough to cause any difficulty without localized stress concentration points. Localized stress concentration points may be caused by:

- poor body or fifth wheel mountings
- special equipment or accessory installation
- improper welding or welding methods
- improper reinforcements
- loose bolts or rivets
- defective material

They may also result from high bending loads, coupled with severe torsional loads (e.g., off-road applications).

Fifth Wheel Installation

General Motors recommends attaching fifth wheel or body mounting to the frame rail web section, not through flanges. Refer to the GM Body Builders Manual for proper installation procedures.



Using U-bolts to attach fifth wheels or bodies is not an approved installation method. Doing so may result in the development of high-stress concentration.

Special Equipment/Accessory Installation

Installing special equipment or accessories can cause high-stress concentrations due to the attachment method or their added weight.

- Never drill holes through flanges.
- Avoid drastic changes to section modulus. Section modulus changes usually occur when large mounting plates are added to support special equipment.
- Avoid mounting heavy equipment across the flanges or on side-rail webs. Doing so may result in stress concentration high enough to cause failure of the nearest crossmember, bracket or other frame stiffener or through a nearby hole in the frame flange.

(continued on next page)

Extending Wheelbase/Moving Axle (cont'd)

Improper welding or welding methods are a major cause of stress concentration points, which may ultimately result in frame failure. Refer to general welding instructions outlined under “Welding” on page 13 in this section.

Reinforcements

Using improper reinforcements or attachment methods may create localized stress concentrations. This may actually reduce the frame load-carrying capacity to below that of the original frame (i.e., before adding reinforcements). There are five basic types of reinforcement (see Figure 11). Their descriptions follow.

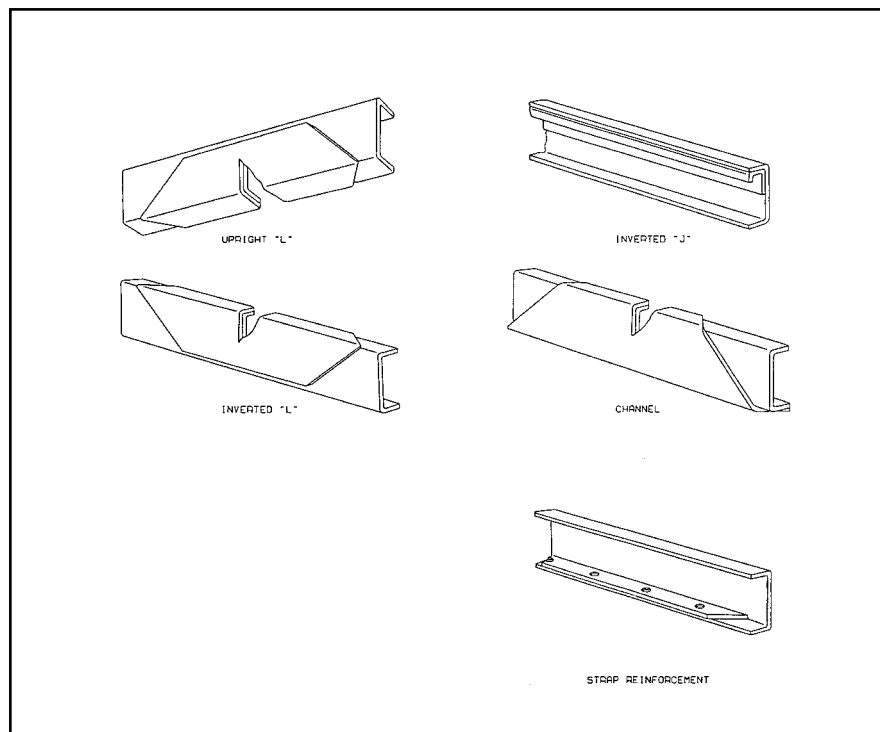


Figure 11

Upright “L” reinforcements should be used in maximum stress locations, at the bottom of the lower flange and where buckling of the upper flange is not a problem. They may be placed either inside or outside the frame side rail. The upright “L” reinforcement is quite versatile and may be used as full-length or short localized reinforcement. However, it may be limited by the configuration of the frame or spring hanger brackets.

Inverted “L” reinforcements also may be used inside or outside of the frame rail. They are recommended where maximum stress is transferred to the upper flange, for example dump trucks with the box in the raised position. This type of reinforcement is easily adapted to frame and hanger bracket designs which prohibit using an upright “L” reinforcement or where the upper flange is subject to buckling.

Channel reinforcements can be used for full-length or localized reinforcement and can be installed inside or outside the frame side rail. Two major disadvantages are their added weight and required installation time. It may also be difficult to place the channel inside or over the existing rail due to manufacturing tolerances, crossmembers or mounting brackets.

Strap reinforcements may be used to increase the section modulus of a frame that has been weakened by prior damage and repair. In such cases, strap reinforcements provide the additional modulus required to return the frame to its original strength. Strap reinforcements are plug-welded at intervals of 152 to 203 mm (6 to 8 in.). Plug welds must be no closer than 19 mm (0.75 in.) to the edge of the frame flange. Do not weld across the end or along flange edges. Edges should be cut at an angle.

(continued on next page)

Extending Wheelbase/Moving Axle (cont'd)

Inverted “J” reinforcements are designed to increase flange strength and prevent flange buckling under high torsional inputs or shock loading. Use only a spaced bolt pattern to attach this type of reinforcement to the web.

Attaching Reinforcements

Procedures for attaching reinforcements may vary depending on materials. However, SVMs should observe the following general guidelines.

- General Motors recommends attaching reinforcements with Grade 8 bolts and hardened, flat washers (not rivets) because most field service outlets do not have proper riveting equipment.
- Do not attach reinforcements (except strap type) to flanges except in cases where mounting bracket or crossmember holes already exist in the frame flange.
- Stagger plug welds in a 203-254 mm (8-10 in.) pattern when attaching reinforcements to the web section (Figure 12).
- In some cases, it is permissible to plug-weld strap reinforcements to the flange at 152-203 mm (6-8 in.) intervals to increase section modulus. **Note:** This is a highly specialized procedure and should be performed by only fully-trained personnel.

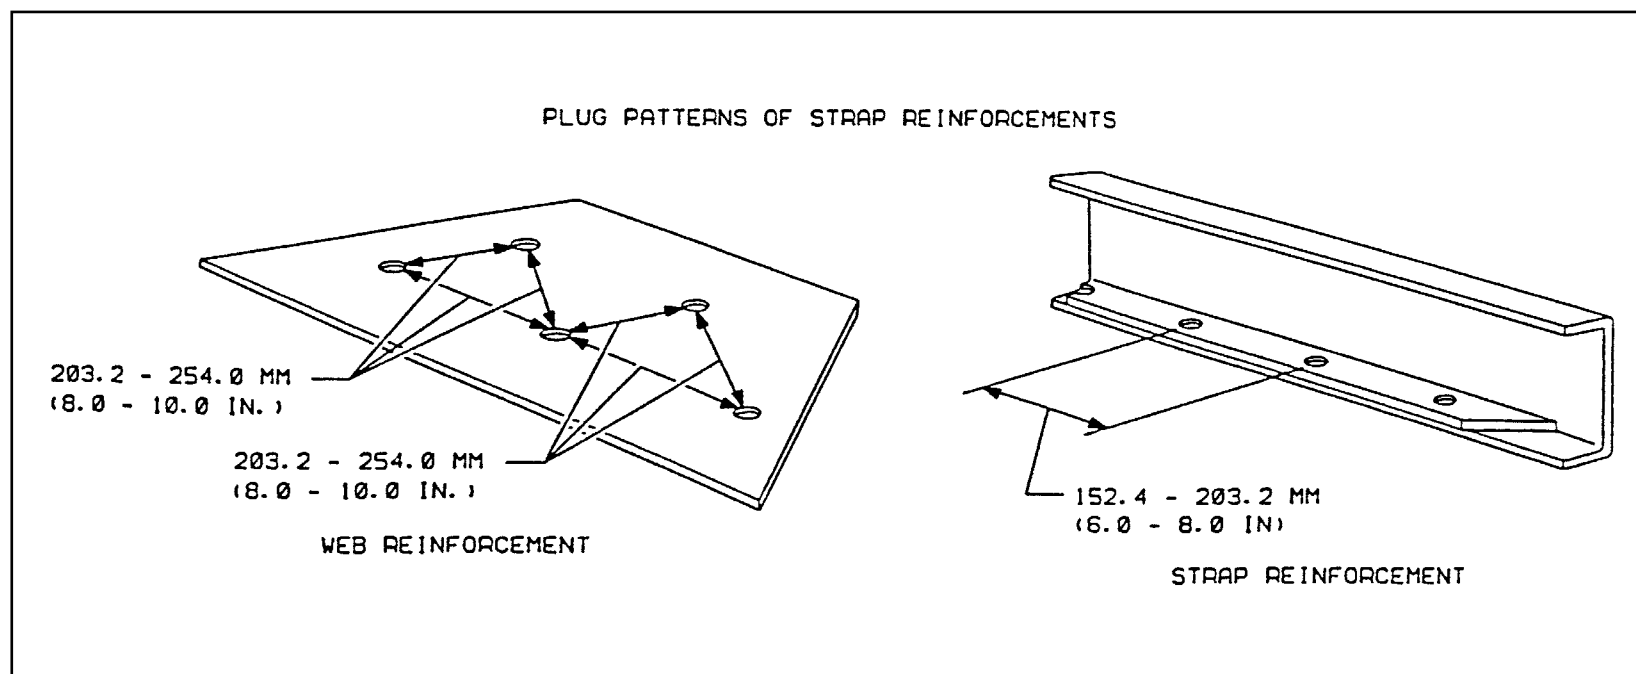


Figure 12

(continued on next page)

Extending Wheelbase/Moving Axle (cont'd)

Terminating Reinforcements

To prevent localized stress concentration, reinforcements must be properly terminated. Reinforcement ends must be tapered or stress relieved. Tapers should not exceed 45 degrees.



When using several reinforcements together, stagger them so that their ends overlap by 203-255 mm (8-10 in.).

Frame Repair and Reinforcement: General Rules

Specific frame repair and reinforcement procedures vary depending on circumstances and materials. The general guidelines outlined here, however, are very important and apply to virtually all repair and reinforcement situations.

- Always identify the material that makes up the base rail. Reinforcement should be of the same or better material than the base rail.
- Make sure that only fully trained, qualified specialists perform frame straightening and other repairs.
- Always try to identify the cause of the failure.
- Do not attach fifth wheels or body and accessory mountings through frame flanges. Refer to GM Body Builders Manual for additional information.
- Do not drill holes in top or lower flanges.
- Use only proper electrodes as specified for base rail material when welding is necessary.
- Do not use oxyacetylene welding equipment on frames.
- Do not weld reinforcements across the frame flanges.
- Do not weld within 19 mm (0.75 in.) of the edge of a frame flange.

- Remove all notches or weld buildups from flange edge when repairing a broken frame.
- Do not weld cast brackets to frame.
- Do not weld flanges of cracked reinforcements and base rails together.
- Do not patch cracks. Make correct repair and reinforce the area.
- Always scarf reinforcement ends to provide adequate stress relief.
- Always stagger ends of reinforcements by a minimum of 203 mm (8 in.) apart.
- Before welding, disconnect negative battery cable to prevent possible electrical damage to generating system.

Welding

Welding is an excellent attachment or repair method. SVMs, however, must be very careful to use proper welding procedures. Inferior welds and improper methods can cause further frame damage and additional reinforcements may be required later to prevent the problem from reoccurring. Refer to the specifications table in Figure 13 for proper welding electrode identification and usage.



Prior to any welding, disconnect all negative (ground) cable(s) from all battery(ies).

(continued on next page)

Extending Wheelbase/Moving Axle (cont'd)

FRAME SPECIFICATIONS				
ELECTRODE CHARTS				
Electrodes E-7011 E-7016 E-7018 E-11016 E-11018				
Flat Welding				
Available Sizes	Current Range	Arc Voltage		
5/64" x 9"	30-60	20-22		
3/32" x 12"	45-80	21-23		
1/8" x 14"	80-115	21-23		
5/32" x 14"	125-165	22-24		
3/16" x 14"	160-200	22-24		
7/32" x 18"	200-250	23-25		
1/4" x 18"	250-320	23-25		
5/16" x 18"	325-400	24-28		
Overhead Welding				
3/32" x 12"	45-75	20-22		
1/8" x 14"	80-125	20-24		
5/32" x 14"	120-190	21-24		
3/16" x 14"	150-240	21-24		

S.A.E. 950 HIGH STRENGTH LOW ALLOY STEEL		
Trade Name	Type	Source
N-A-X.....	—	Great Lakes Steel
Jalten.....	#1	Jones & Laughlin Steel Company
Republic Double Strength.....		Republic Steel Company
Republic "50"	—	Republic Steel Company
Yoloy.....	"S"	Youngstown Steel & Tube Company
Man-Ten.....	—	U.S. Steel
Medium-Manganese.....	—	Bethlehem Steel Company
Tri-Ten.....	"E"	U.S. Steel

HIGH PERFORMANCE STEEL	
Trade Name	Source
Van "80"	Jones & Laughlin Steel Company

HEAT TREAT	
Trade Name	Source
1132 Die Quench	A.O. Smith

PLUG WELD CHART		
Thickness of Material	Diameter of Plug	Depth of Plug
1/4	3/4	1/4
3/8	1	3/8
1/2	1-1/8	7/16
5/8	1-1/4	1/2
3/4	1-3/8	9/16
1	1-1/2	9/16

ELECTRODE USAGE WITH FRAME MATERIAL			
Material	1023-950	High Performance (Van "80")	Heat Treat
Type or Electrode.....	E-7011	E-11016	E-11016
	E-7016	E-11018	E-11018
	E-7018		

Welding Equipment



Never use oxyacetylene to weld frame rails.

Several different types of welding machines are used to weld on frame rails. Following are the three most commonly used machines and their advantages.

- **DC (Rectifier Type)** — This machine has no moving parts, and thus requires very little service. The chances of arc blows are also greatly reduced.
- **DC (Motor-Generator Type)** — This machine's principle advantage is its self-contained power supply, which makes it readily portable. It has very good voltage variation control and can be used with all types of electrodes.
- **AC** — Of the commonly used welding machines, this is the least expensive. It also has a lower possibility of arc blows. However, the operator may have difficulty striking an arc when using small electrodes.

For all-purpose welding, GM recommends using a machine with a 350-ampere minimum capacity.

Figure 13

(continued on next page)

Extending Wheelbase/Moving Axle (cont'd)

Welding Methods

Four basic welding types (Figure 14) are used to repair and reinforce frame rails. These methods can be used with any type of material.

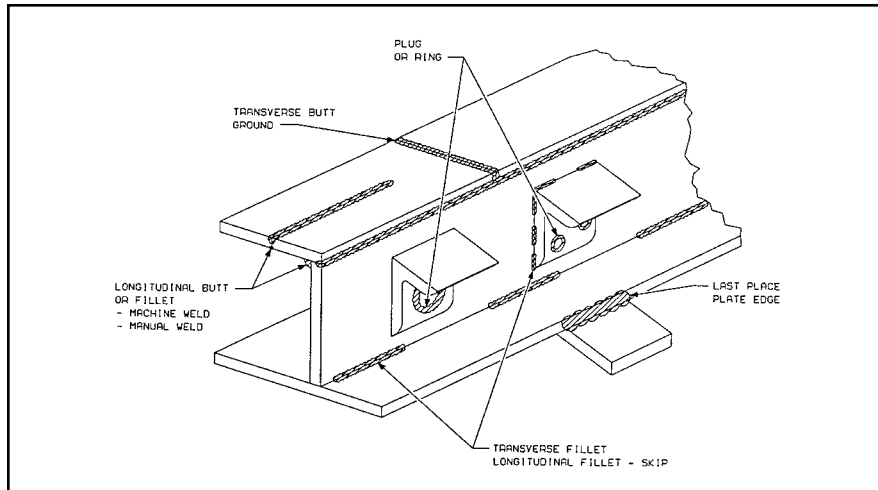


Figure 14

- **Continuous Fillet (Longitudinal Butt) Weld** — This is used to weld a continuous bead along a reinforcement on the frame rail web section, or to add gussets or plates to crossmembers. Continuous fillet welds should never be made across frame flanges or along their inside edges. When welding in a flat position, use high range of electrode current. For welding overhead or in difficult areas, use low range of electrode current. Use the voltage specified for the electrode.
- **Groove Welding** — This basic repair weld is also called transverse butt ground welding. It is applied after grounding the surface for good penetration. When welding cracks, make sure to cross either the upper or lower flanges. Weld completely and then grind off excess weld to remove notches or weld buildup on the flange edge. Use medium range of electrode current.

- **Plug Welding** — Plug (or ring) welds are good for attaching reinforcements because they eliminate the possibility of loose-fitting bolts. Be careful, however, to properly place plug welds in different types of reinforcements. GM highly recommends E-7018 electrode for plug welding because of its good penetration and light coating. Use high range of electrode current and appropriate voltage for flat or vertical plug welds. Overhead plug welding is very difficult. Do not use this method unless other approaches are impractical. Then use high range for first pass and complete plug at medium range. Refer to plug weld table (Figure 13) for hole size to use for material thickness variations.
- **Stitch (Intermittent Fillet) Welding** — This type is also called transverse or longitudinal fillet. It is not generally used on frames because continuous fillet welding provides better attachment. Stitch weld when warp and heat control is critical, using medium range of electrode chart.

For all types of welding, make sure to:

- Connect welding machine ground cables as close to work area as possible.
- Use smaller diameter electrode whenever possible, and make several passes rather than large diameter and single passes.

! Vehicle load capacity depends on strength and rigidity. For effective repairs, make sure that frame service is performed only by qualified personnel using proper materials and equipment.

Dissimilar Metals

To prevent a chemical reaction, apply a barrier coating of good corrosion-inhibiting compound to all faying surfaces of dissimilar metals. Remove old sealer with a putty knife.

! Before stripping the vehicle down for repair, make sure to support the frame on a smooth, level floor. This will permit frequent checking for alignment during the straightening and replacement process.

(continued on next page)

Extending Wheelbase/Moving Axle (cont'd)

Driveshaft (Propshaft) Extension

The driveshaft can be extended, using a single-length or multiple-piece driveshaft. It is important to develop and follow proper design and installation guidelines for this process.

Driveshaft Extension Design

The most important objective is to design driveshaft extensions that efficiently transfer power from the transmission to the rear axle assembly (Figure 15). For higher durability and reliability, General Motors recommends using only graphite driveshafts manufactured with driveline tubing.

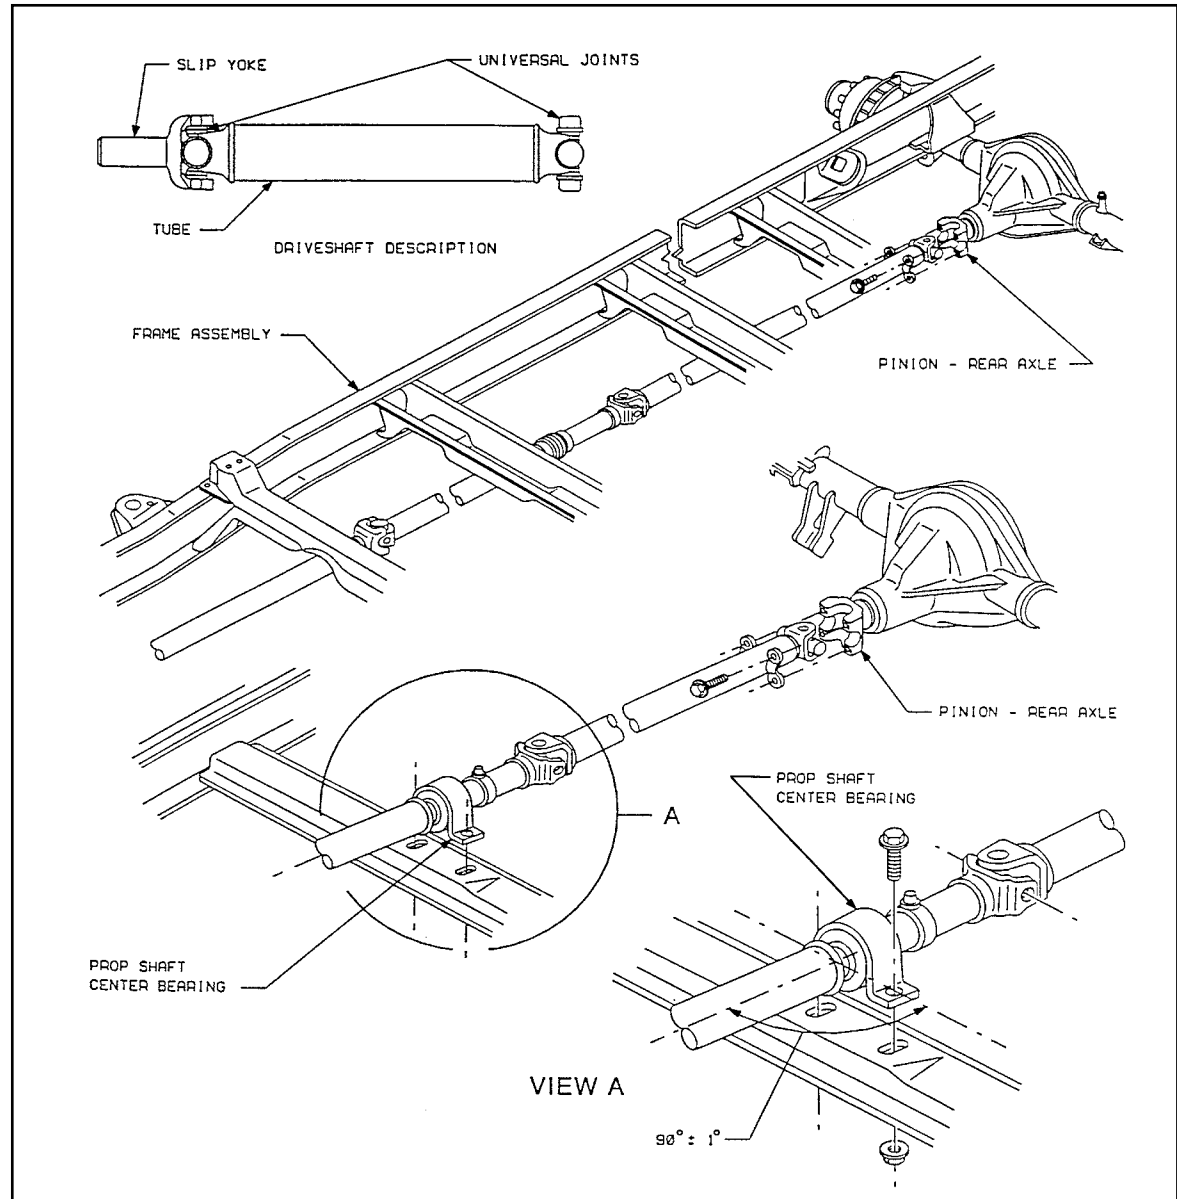


Figure 15

(continued on next page)

Extending Wheelbase/Moving Axle (cont'd)

Two-Piece Driveshaft Bearings

For two- or three-piece driveshaft applications, use an in-line bearing assembly. Figure 16 shows a typical two-piece driveshaft.

Recommended bearing locations vary with vehicle stretch length. If the driveshaft exceeds 1,524 mm (60 in.), use a two-piece assembly with an in-line bearing assembly. Keep the driveshaft lengths as close to equal as possible.

- SVMs should devise a gauge by which to measure driveshaft alignment angles for front and rear shafts. For smooth operation, the front must align with the rear shaft in both side and plan views (Figure 17). Check for this vertically and along the horizontal center line (Figure 18).

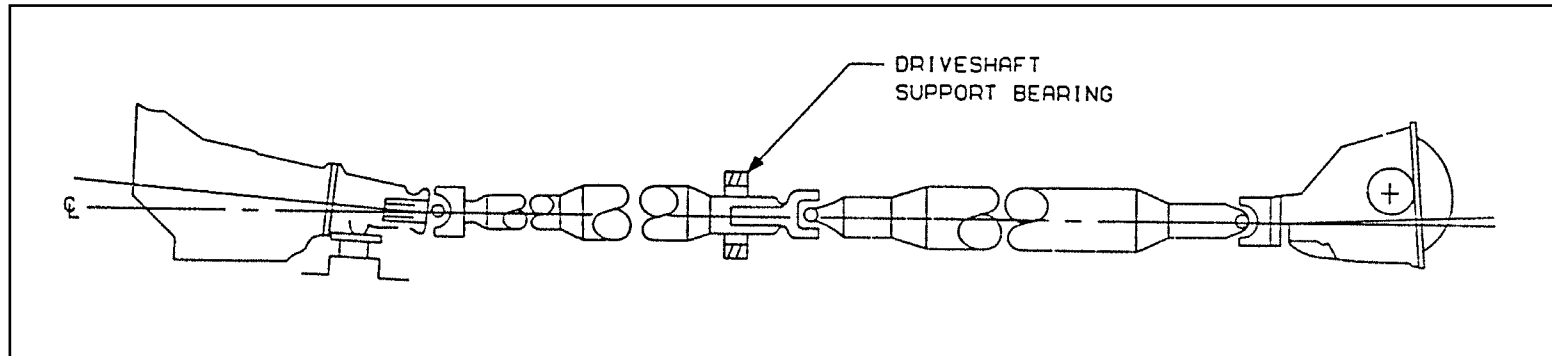


Figure 16

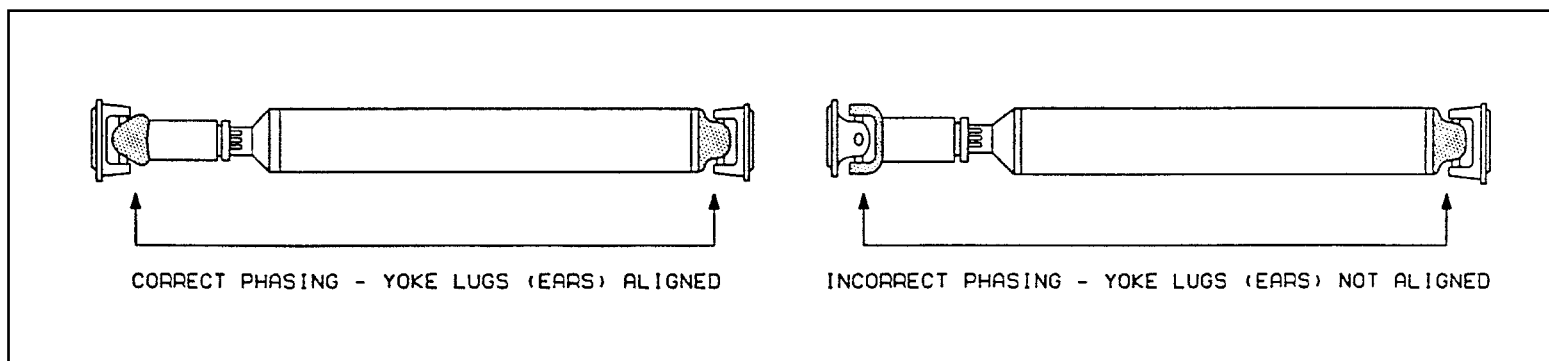


Figure 17

(continued on next page)

Extending Wheelbase/Moving Axle (cont'd)

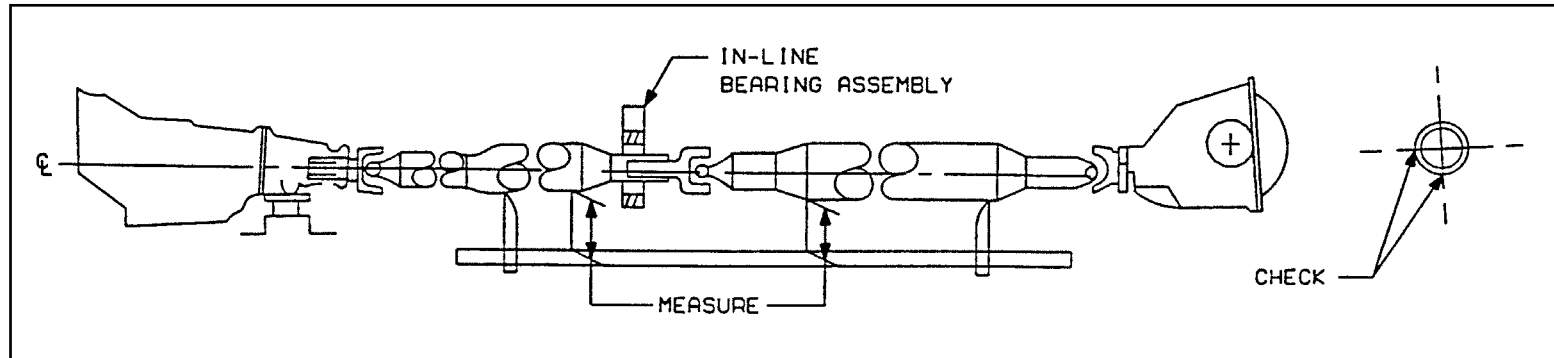


Figure 18

- For maximum support, mount bearing assembly to a cross-member. Final driveshaft alignment must allow vertical and horizontal bearing adjustment.
- Make sure to protect the in-line bearing from common operating conditions such as weather and road debris. General Motors recommends mounting a protective bridge between the bearing assembly and the ground. Fasten the bridge with bolts to facilitate serviceability.
- Splicing driveshaft tubes is not recommended. Splice welds create irregularities on inner and outer surfaces, making it difficult to balance the driveshaft. Additionally, splice welding may cause embrittlement, increasing the possibility of driveshaft failure.
- Protect the driveshaft and universal joints from common operating conditions (e.g., potholes), by mounting heavy-duty frame cross-members between the driveshaft and the road surface.
- The driveshaft should be dynamically balanced at 25/65 mph (40-105km).



Use only General Motors or equivalent parts for driveshaft installation and service.

For additional information, refer to SAE J901 (Universal Joint and Driveshafts — Terminology — Application).

Universal Joint Angles and Phasing

When an ordinary universal joint is operated at an angle, the driven yoke fluctuates slightly in speed as the joint rotates. That is, although the driving yoke rotates at a constant speed, the driven yoke speeds up and slows down twice per revolution. This fluctuation of the driven yoke is in direct proportion to the angle through which the universal joint is operating. The greater the angle, the greater the fluctuation. This fluctuation and resulting vibration can be eliminated by phasing the universal joints at each end of the shaft so that the alternate acceleration and deceleration of one joint is offset by equal and opposite accelerations of the other joint. Correct phasing is achieved by aligning the universal joint lugs on each end of the shaft (refer back to Figure 17).

(continued on next page)

Extending Wheelbase/Moving Axle (cont'd)

Universal Joint Angles and Phasing (cont'd)

To allow the propshaft to operate as smoothly as possible, make sure that the input universal joint is approximately equal and opposite to the output universal joint angle. That is, the downward angle (a) of the transmission output shaft, relative to the driveshaft axis must be equal to the downward angle (b) of the pinion as shown in Figure 18. (**Note:** Angles shown are exaggerated for clarity.) To allow the best compromise for the pinion angle as it changes because of vehicle loading, acceleration and ride motion, these angles are determined and set at the factory. This eliminates the need for adjustment by the SVM.

Universal joints are designed to operate safely and efficiently within a 3-degree joint angle. Exceeding this design limit may break the joint or cause excessive driveline vibration.

Multiple-Piece Driveshaft Alignment Procedure

The bearing supporting the driveshaft must be positioned vertically and laterally so that driveshaft segments are all in a straight line between the transmission output yoke and differential input flange. The following recommended procedure should enable SVMs to properly align the driveshaft, regardless of build variation.

1. After extending the vehicle, install the driveshaft bearing support crossmember (without the driveshaft or support bearing).
2. Position the vehicle on a drive-on hoist or otherwise allow it to rest fully on the tires, so that the rear suspension is at curb height.
3. Attach one end of a string from the center of the transmission spline as indicated to the center of the pinion attachment flange. Pull string taut.
4. Measure the vertical distance from the center of the bearing mounting area of the crossmember to the string (dimension H, Figure 19).
5. With a square just contacting the string in the lateral directions, mark the crossmember to indicate the correct lateral position of the center of the bearing.
6. Add shims under the bearing so that the center height of the bearing is equal to the measurement taken in step 5. Mark the base of the bearing to indicate its lateral center.
7. Remove string. Install bearing and driveshaft with shims under the bearing so that its center aligns laterally with the mark on the crossmember. The bearing center should be at the same point as the string. For vehicles requiring more than one bearing support, perform this procedure for each bearing.

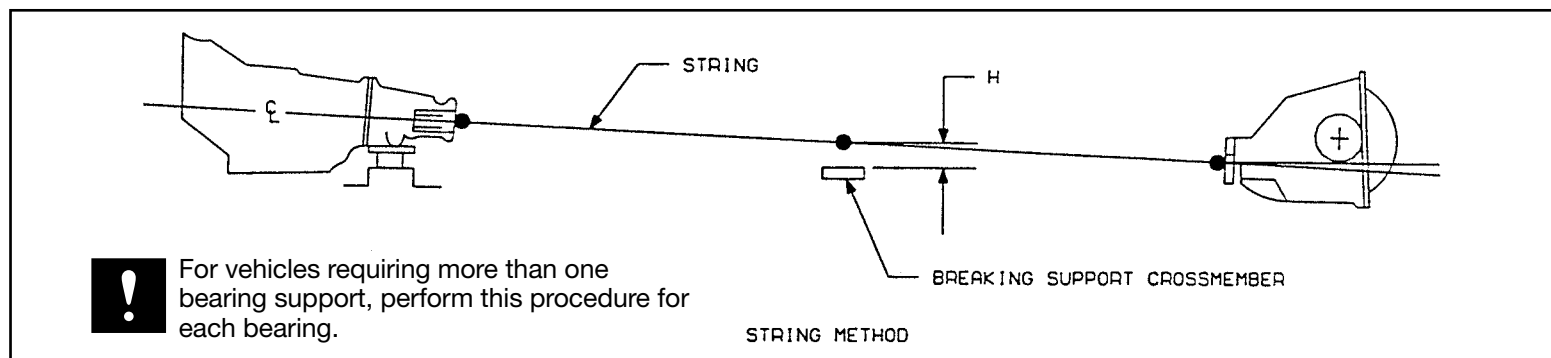


Figure 19

(continued on next page)

Body Mounting

Optimum body-mount location varies by frame wheelbase length. The best locations, for effective isolation from road vibration, are those closest to frame crossmembers and underbody crossbars. For optimum load-distribution isolation, additional body mounts should be no farther apart than 762 mm (30 in.). When designing and locating body mounts, SVMs should also consider serviceability and the recommendations outlined in the “General Requirements” section that follows.

General Requirements

To maintain base vehicle performance, it may be necessary to add, change or move body mounts along the frame. General Motors recommends the following practices for SVM-added body mounts:

- Use only GM or equivalent body mounts. Use OEM rubber body isolators, frame/body rails and/or outrigger brackets on the frame vertical side web.
- Avoid mounting bodies directly to the top of the frame. Doing so restricts frame torsional flexibility. It may also promote body cracking and provide a direct path for chassis noise, vibration and harshness (NVH). Figure 20 shows typical body mounts.
- Never weld body supports directly to the frame flanges. Do not weld body structures directly to frame extensions behind the rear suspension. Use consistent body attachment methods along the entire frame length.
- Use reinforcements or filler blocks where mounting devices may deform frame flanges. Mounting devices must be locked units that minimize loosening, but can be retightened if necessary. Use grade 8 PTN nuts.
- Correctly position all body mounts directly under cargo body crossmembers or longitudinal members to prevent body fatigue failures.

- Ambulance and other sensitive-cargo bodies require reduced stress on the body and frame. To accomplish this, minimize height above the frame and isolate the compartment from noise and vibration. Use full-floating, automotive style rubber body mounts or other chassis manufacturer-approved body mount systems. For bodies up to 3708 mm (146 in.) in length, install a minimum of four per side; for longer bodies, at least five per side.

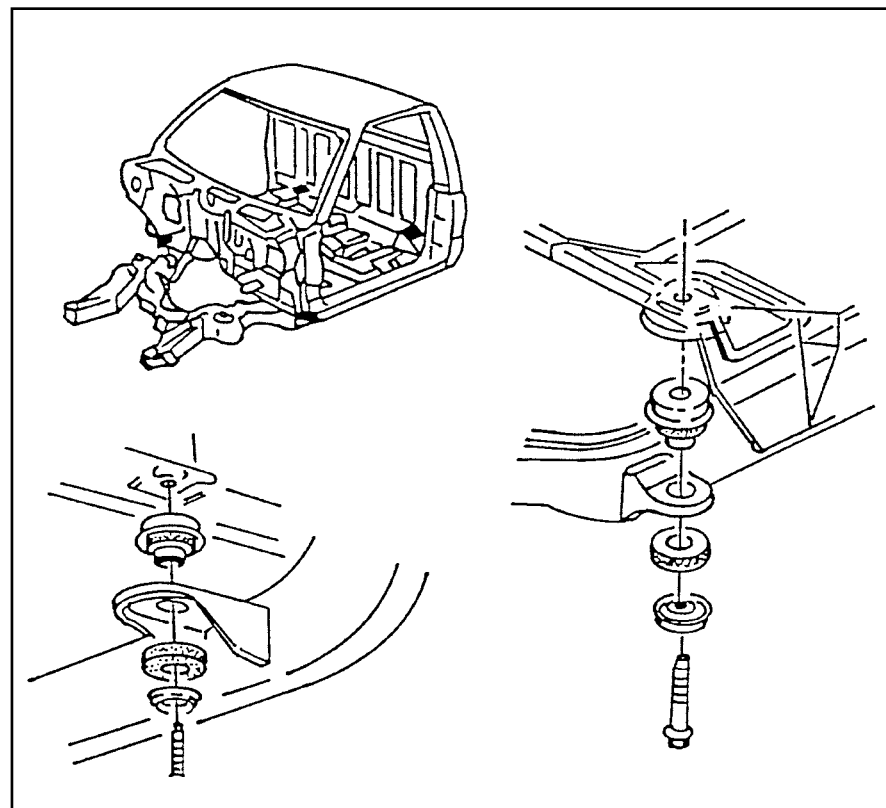


Figure 20

(continued on next page)

Body Mounting (cont'd)



Design body-mounting schemes that comply with recommended GM guidelines (see GM Body Builders Manual), NTEA Industry Standards and Federal Government Mil-Std Specifications.

Body Mounting Considerations

To ensure ease of maintenance and service, SVMs must provide access to frame crossmember located over the transmission, rear shock absorber crossmember, all batteries, and the fuel tank. There should also be adequate clearance between the rear tires and the body structure to prevent interference with suspension movement.

GM also recommends the following:

- Avoid installing equipment such as loading cranes and supplementary tanks on only one side of the vehicle.
- Position body sub-frame evenly on the vehicle side rail top flanges. Taper the forward ends of the body mounting frame side member to provide a smooth transition to the vehicle chassis frame.
- Avoid using welding straps or other structures between the body and frame that can ground out the elastomeric body mounting system. SVMs should use rubber shock isolation dampers (“hockey puck” discs) which are designed for higher control of quality, durability, squeak and rattle.
- Avoid body mount designs and modifications/ additions that interfere with travel of the axle or leaf spring up to the full metal jounce position.

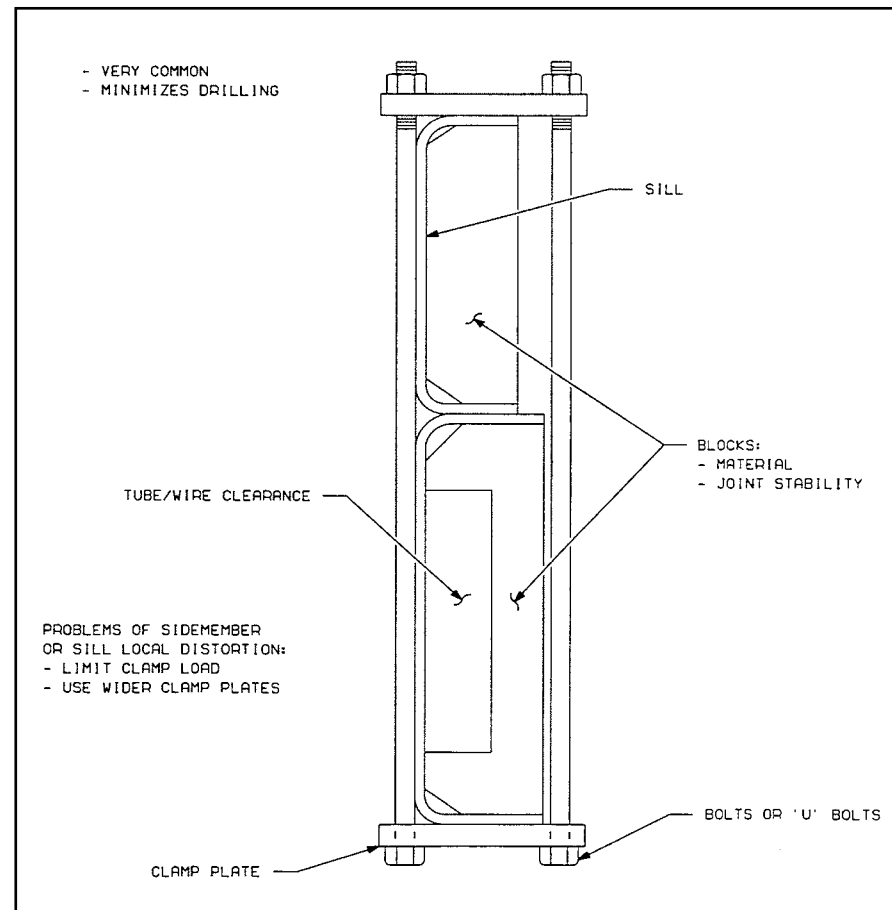


Figure 21

Body/Equipment Attachment Methods

Using U-bolts and clamping eliminates the need to drill and weld the frame, and is generally the least expensive attachment method. When using this method, be sure to block the channel side rail to prevent the flange from collapsing when the U-bolts are tightened (see Figure 21).

(continued on next page)

Body Mounting (cont'd)

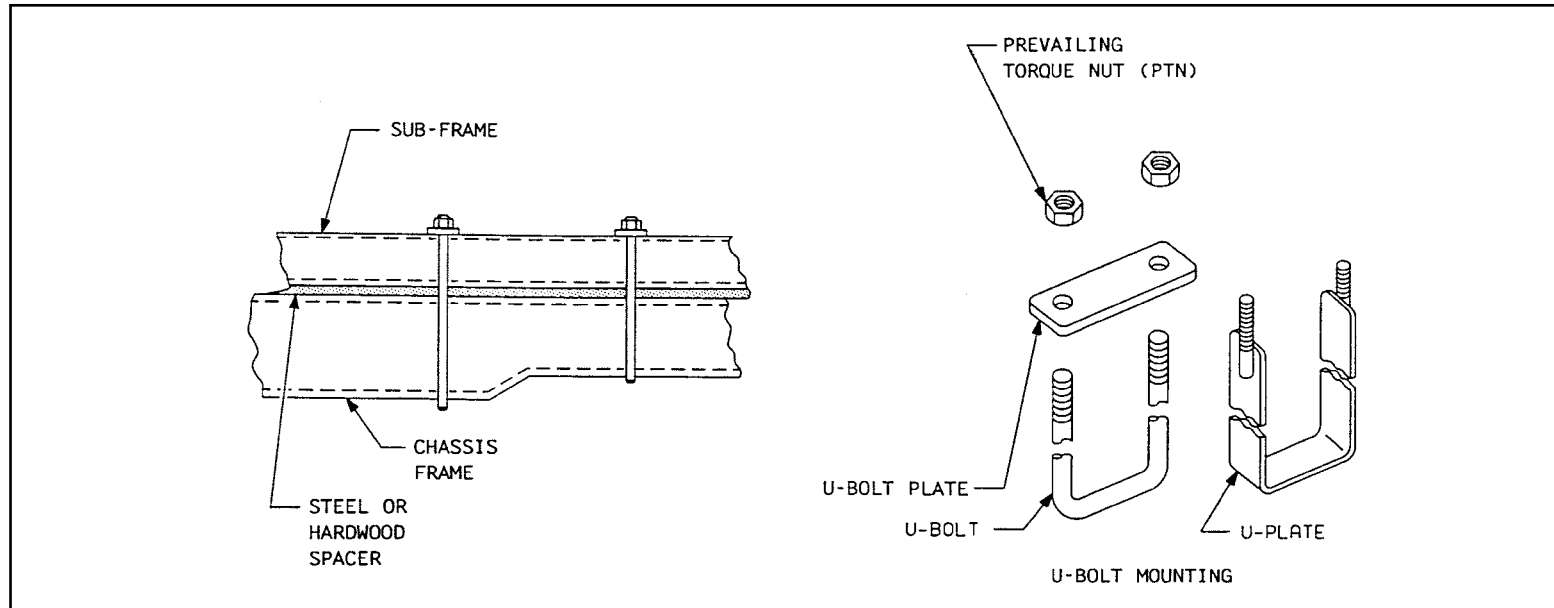


Figure 22

Use spacers between the subframe and the chassis frame as shown in Figure 22. Make sure that spacers do not interfere with plumbing or wiring routed along the frame rail and do not weld them to the frame flanges. Metal spacers are preferred as wood can shrink and drop out.

Clamping devices offer potential savings in both cost and installation time. Some equipment manufacturers have already incorporated clamped attachments into their designs because of these benefits. Since U-bolts and clamping devices depend on friction and a maintained clamping force for attachment, a positive bolted connection should also be used for security.

Bolted attachments are generally preferred over welding because they retain more strength and are more easily serviced.

Body Mounting Fasteners

SVMs should observe the following recommendations for body mounting fasteners:

- Use PTN fasteners instead of double nuts.
- Provide maintenance labels/decals wherever practical.
- Shear plates should be located at rear of frame rail and body longitudinal crossmember. Attachment, aft of rear spring rear shackle bracket.
- Use steel (not wood) anti-crush (fabricated vertical) spacers to protect flanges.
- Use Grade 8 bolts/PTN nuts on shear plates.
- Choose elastomeric rubber that meets critical damping requirements.
- Do not weld in high-stress areas.

(continued on next page)

Body Mounting (cont'd)

Prevailing Torque Nuts (PTN)

Prevailing torque nuts (PTN) have an interference fit on the threads. The interference fit prevents the nut from loosening after it is tightened, eliminating the need for cotter pins or lock washers. PTN fasteners are recommended for several body-mounting applications.

NTEA Recommended Body-Mounting Practices

The National Truck Equipment Association (NTEA) advises that proper body mounting practices and materials are necessary in order to avoid damaging the frame side rail and body. This can occur when load and chassis movement cause uneven distribution of stress and strain.

Attention to proper mounting and specifications is also critical to maintaining vehicle ride and handling characteristics.

The NTEA Body Practices Subcommittee has reviewed the mounting methods of several chassis manufacturers and has identified four general types.

Type 1 — U-Bolt/Threaded Rod and End Plate This mounting method uses U-bolt/threaded rod and end plate to secure the body's longitudinal mounting rails to the chassis frame. Fillers or strips of hardwood or hard rubber act as cushions between the longitudinal mounting rails and the chassis frame. Secure the filler to frame or rail with steel banding or equivalent. The hardwood filler should taper approximately 1 inch per foot, starting at the front end and extending about 300 mm (11.8 in.) back. The first tie-down should be positioned no more forward than the rear edge of the taper. For longitudinal body control, secure the shear plates with grade 8 bolts or weld them to the longitudinal mounting rails. Prevailing torque nuts are preferred in all threaded connections over double nuts. Spacers (preferably metal) placed between the flanges of both the longitudinal mounting rail and the frame at each tie-down will prevent the

flanges from collapsing. Two guide plates (see Figure 23, on page 24), one on each side at the front, will prevent lateral shifting of the body.

This type of mounting is generally suitable for non- or semi-rigid bodies.

Type 2 — Brackets and Pinch Bolts In this method, fabricated and/or formed brackets of angles are welded and/or bolted to the longitudinal mounting rails and bolted to the chassis frame. A bolt pinches the brackets together to secure them. A filler, cushion or strip (preferably of hard rubber) may be used between the longitudinal mounting rails and the chassis frame. If so, it should be secured to prevent loss or movement.

SVMs should specify the zone or area between the back of the cab and rear axle(s) where spring mounts should be used. Shear plates should be bolted or welded to the body longitudinal mounting rails and bolted to the chassis web, but not in top flanges. (**Note:** Use grade 8 fasteners to secure the shear plates.)

Prevailing torque nuts are preferred in all threaded connections (instead of double nuts).

Type 3 — Rigid Mounting (Service/Utility)

This category includes industry practice of hard attachment to frame flanges using already existing holes, such as the OEM pickup box attachment points. It is intended only for vehicles under 15,000 pounds GVWR with service/utility bodies.

Type 4 — Shear Plate Mounted

This mounting type is used to attach non-rigid subframes to OEM frames (Figure 23). Non-rigid body types include platform, stakebed, dump, rollback carriers and open-top grain/livestock bodies.

Body Mounting (cont'd)

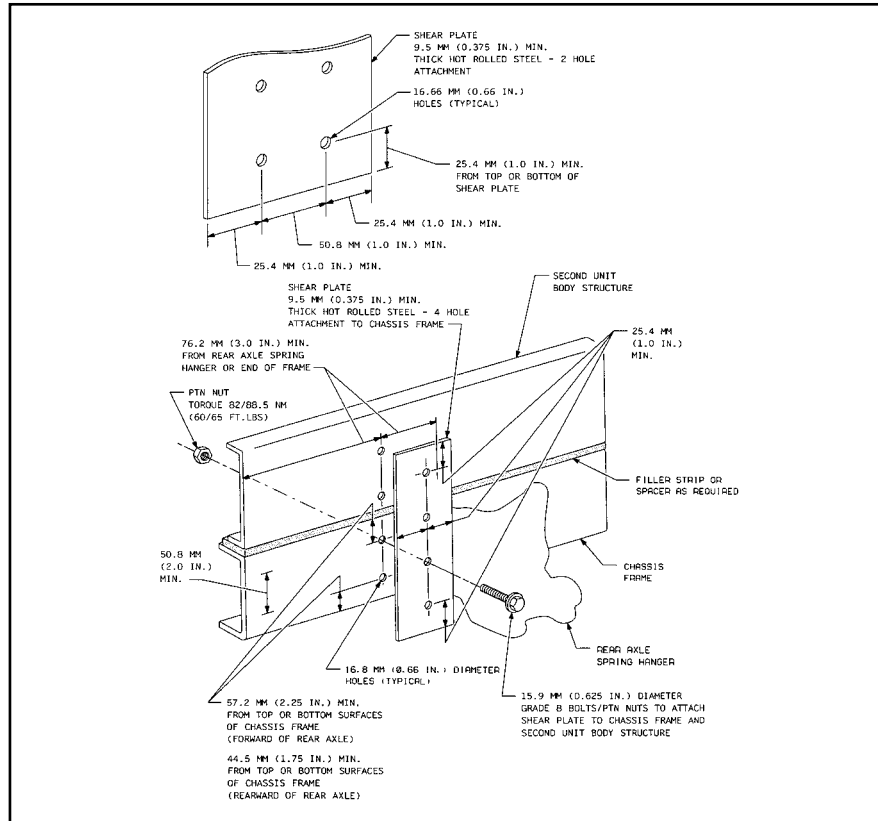


Figure 23

NTEA Body Classifications

The NTEA Body Practices Subcommittee defines vehicle body types in terms of torsional rigidity, grouping them into four basic categories:

- Non-rigid
- Semi-rigid
- Rigid
- Super rigid

The degree of rigidity determines the appropriate attachment method. The table below lists the torsional rigidity of selected body types.

Torsionally Flexible Bodies

Bodies with wood or metal sill construction are considered torsionally flexible. When mounting torsionally flexible bodies, consider the following points:

- The sill should rest directly and squarely on frame side rails. Wood sills must be chamfered 13 mm (0.5 in.) at the front end, tapering to meet the frame approximately 300 mm (11.8 in.) from front end of sill (see Figures 24 and 25).

Torsional Rigidity Of Selected Body Types				
Body Mounting	Non-Rigid	Semi-Rigid	Rigid	Super Rigid
Service				
High/with Top			•	
Low/without Top		•		
Platform	•			
Dry Freight Van Body				
Rollup Door		•		
Swing Door			•	
Refrigerated Bodies			•	
Dump Bodies	•			
Wreckers		•		
Rollback Carriers	•			
Refuse Packers				•
Recycling Sorters		•		
Tank				•
Grain/Livestock-Open Top	•			
Livestock-Closed/Multideck		•		
V-Box Spreader - Feed/Seed/Fertilizer				
Mixer	Determined by Manufacturer			

(continued on next page)

Body Mounting (cont'd)

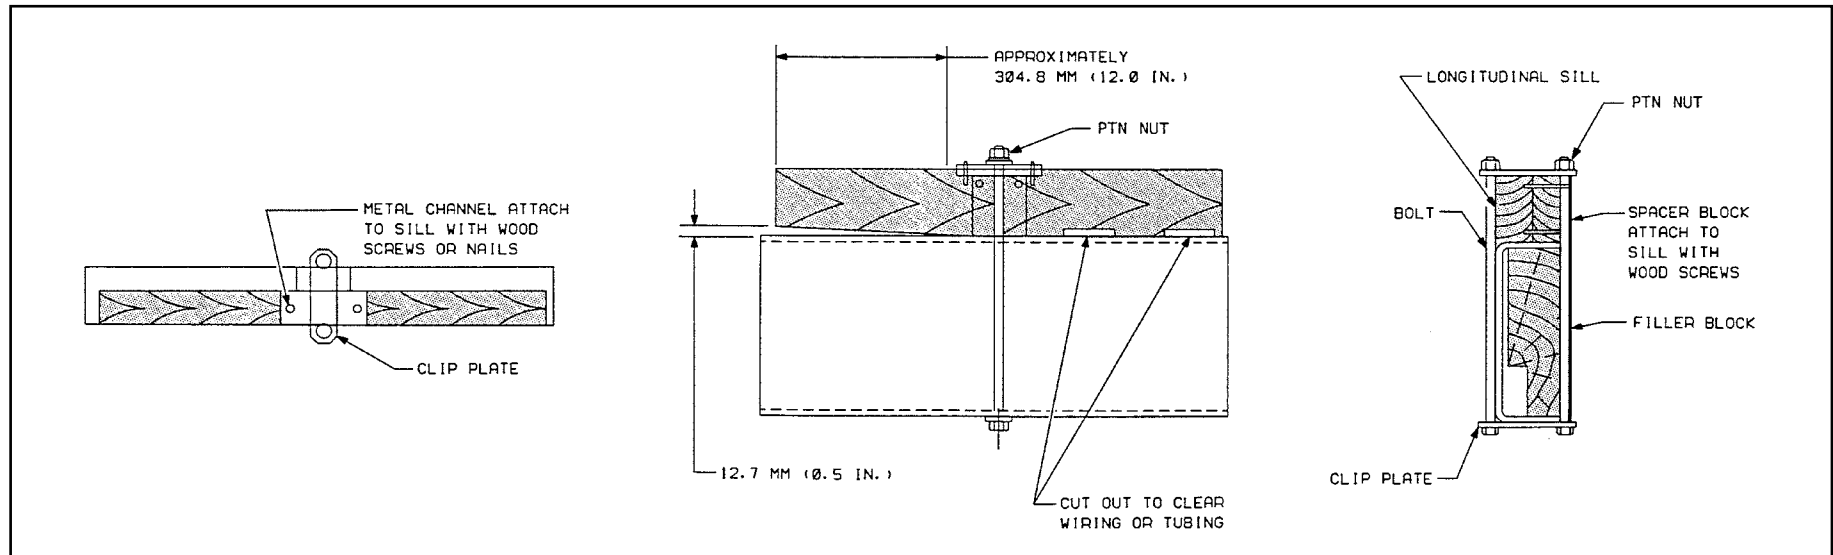


Figure 24

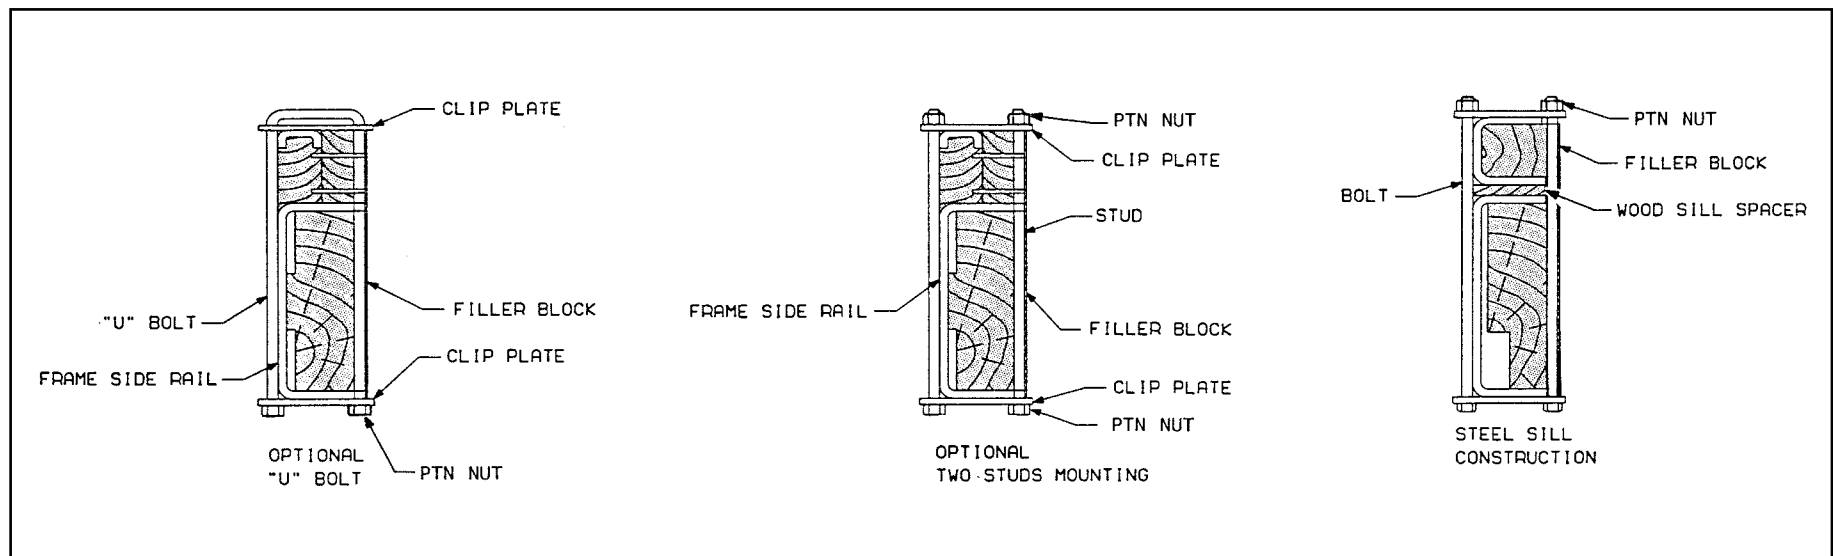


Figure 25

Body Mounting (cont'd)

- Sills must not overhang outside of frame. If wood sill is not as wide as frame flange, install spacer blocks at hold-down. Wood grain of blocks should be parallel (up and down) with hold-down.
- Shear plate fasteners, 13 mm (0.5 in.) minimum diameter, must be located near rear of body sills. On bodies with wood sill construction, upper and lower shear plate

brackets must have a clearance of at least 5 mm (0.18 in.) before final attachment of shear bolt (see Figure 26). On bodies with steel sills, upper shear plate bracket may be bolted or welded to sill. Clearance between upper and lower brackets should be a minimum of 1.5 mm (0.06 in.) before final attachment of shear plate. Installing shear plates is optional with steel body sills.

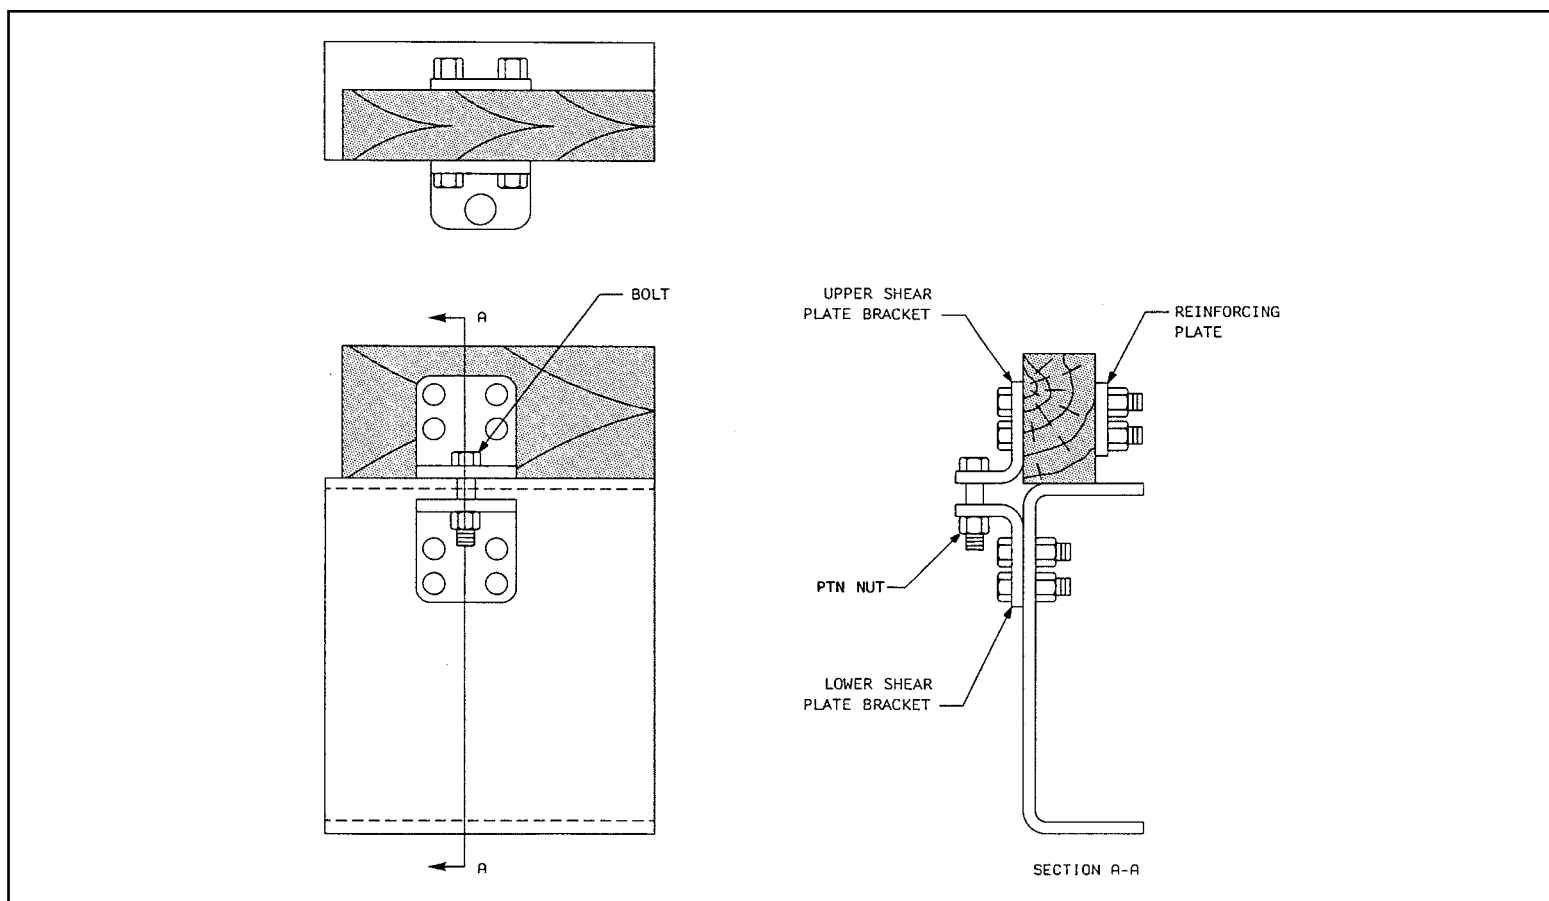


Figure 26

Body Mounting (cont'd)

Rabbit grooves at the top of longitudinal wood sills (Figure 27) to allow sheet metal channels of 1.7 mm or No. 14 gauge minimum at each mounting. Use 6 mm (0.25 in.) minimum flat plate. Metal channels or flat plate should extend approximately 25 mm (1 in.) beyond the clip plate.

- On non steel-sill bodies, use a hardwood spacer between the sill and frame side rail. The spacer must be at least 19 mm or 0.75 in. thick (i.e., chamfered 13 mm/0.5 in. at the front end, tapering to meet frame 300 mm/12 in.). A wood spacer is not necessary if steel sill body is used.
- Mountings must be spaced to clear suspension and any other parts attached to frame side rail. Use two long bolts, studs or U-bolts 13 mm (0.5 in.) minimum diameter for each mounting. One mounting should be located at the front end of sill (at or as close to rear end of taper

as possible), one near the rear end and others should be spaced as nearly equally as possible between front and rear mountings. Do not mutilate the frame side rails in any way to accommodate mountings.

- Use clip plates (approximately the same thickness as mounting bolt diameter) at top and bottom of mounting bolts. When U-bolts are used, the contour at top of the U-bolt should fit against the clip plate. Plate may be notched instead of using holes (refer back to Figure 25).
- Use a block of hard, dry wood with grain running up and down between flanges of frame side rail at each mounting. Block should extend beyond width of frame flanges and should be grooved. Mounting bolt fitted into groove will hold block in place. Where steel body sills are used, a similar block is required between sill flanges.

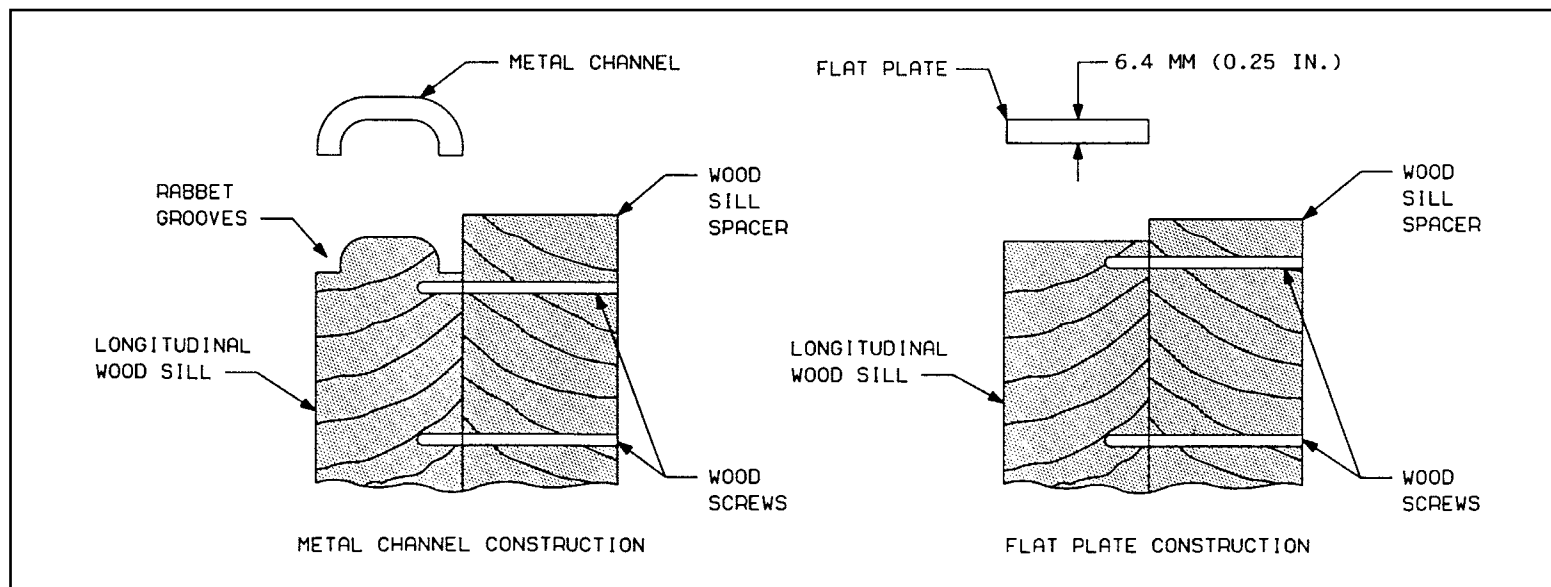


Figure 27

Body Mounting (cont'd)

Torsionally Rigid Bodies

Because of their solid construction, torsionally rigid bodies require a more flexible mounting. Spring-loaded body mountings provide optimum frame and body life.

When mounting a body of this type, SVMs should follow these guidelines:

- Use a hardwood spacer, with a minimum thickness of 19 mm (0.75 in.) between the body sill and frame side rail. Make sure the spacer is chamfered 13 mm (0.5 in.) at the front end and tapered to meet the frame approximately 300 mm (11.8 in.) from the front end of the spacer.
- Use a body guide (ribbed for extra strength), as shown in Figure 28, to restrict lateral movement of the body and relieve shear stress on mountains. Bolt or weld the body guide to the body sill near front end of the body. It should extend below the body sill and contact the wear plate bolted to the frame side rail.
- Use spring-loaded, angle-type mountings (Figure 28). They may be bolted or welded to the body sill. However, always use bolts to attach them to the frame side rail. Do not weld directly on the frame side rail. Position mountings to allow a clearance of at least 6 mm (0.25 in.) between upper and lower brackets. Use SAE Grade 8 or Class 10.9 metric bolts with PTN nuts. Spring-loaded mounting bolts also require PTN nuts. The springs should be as short as practical, allowing preloading which will help prevent excessive “body roll” during operation, and a minimum of 25 mm (1 in.) at the front of the body before becoming solid.

Trunnion-type body mountings also provide flexibility and are acceptable substitutes for the spring-loaded type.

- Locate bolts (13 mm/0.5 in. minimum diameter) near the rear of the body sills. Before final attachment, make sure to allow clearance of at least 1.5 mm (.06 in.) between upper and lower shear plates.

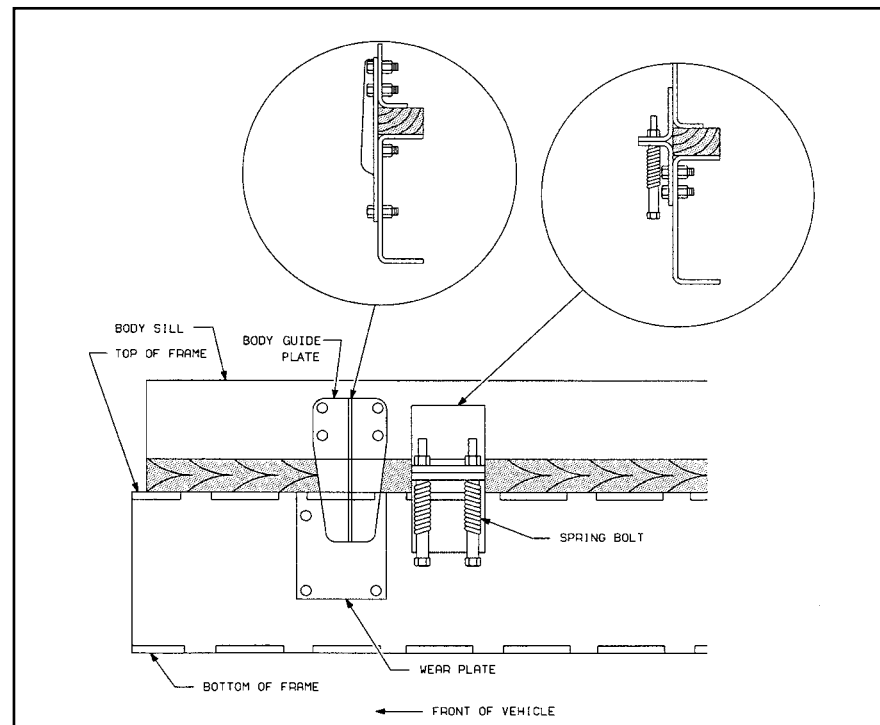


Figure 28

Shear Plate Attachments

Whenever possible, use existing holes to attach shear plates to the frame side rails. When additional holes are required, make sure they are no larger than 20 mm (0.75 in.) in diameter. Drill holes at least 63.5 mm (2.5 in.) apart, in web area only (not in top/bottom flanges).

For holes drilled forward of the rear axle, make sure their centers are no closer than 63.5 mm (2.5 in.) from the top or bottom flanges, and 89 mm (3.5 in.) from any suspension attachments.

For holes drilled rearward of the rear axle, the centers must be at least 51 mm (2.0 in.) from the top or bottom flange and 89 mm (3.5 in.) from suspension attachments.

Fuel Systems

The fuel system includes the fuel tank, metering, lines (including purge control solenoids) and canister(s). Proper sealing is critical to the integrity and overall operation of the fuel system. The SVM assumes complete responsibility for any modifications or alterations to the fuel system. This includes responsibility for system reliability and performance as well as compliance to FMVSS 301 (CMVSS 301).



General Motors recommends that SVMs DO NOT ALTER THE FUEL SYSTEM IN ANY WAY. When delivered, the vehicle fuel evaporative emission control equipment is certified in compliance with Federal and California Vehicle Emission Standards. Any alteration to systems or components and their location could void compliance.

Systems include:

- Fuel tank, metering unit, lines including purge control solenoids and canister or canisters.

Environment Includes:

- Heat sources, heat shields, system component relocation.

Fuel Fill

General Motors recommends the following fuel-fill guidelines:

- Fuel tank filler pipe location should be so situated and constructed as to prevent gasoline vapor from emitting to vents of pilot flamed devices.

- Locate and mount the fuel tank filler pipe so as to prevent vapor from entering the body and engine compartment air inlets.
- Maintain a clearance of at least 76 mm (3 in.) between the filler pipe/vent hose and body components.
- Properly route and secure the filler pipe and vent hoses to prevent failure due to wear and fatigue.
- Make sure that filler pipe/vent hose lines have a gravity fuel flow to the tank at all times.
- Verify that there are no fuel traps in the filler pipe or vent hoses.
- Make certain that any added hose is suitable for the type of fuel used (gasoline or diesel).
- Provide a ground strap to ensure that electrical ground connection is made.
- Alterations of fuel line routings could affect the completed vehicle and are, therefore, not desirable. The complete fuel system must comply with FMVSS 301 as well as Federal and C.A.R.B. vapor emission requirements. Fuel Fill / Vent pipe hoses should be trimmed to hose retaining beads (when present); hoses should be secured with approved hose clamps at proper torque specs. A minimum of 8.0 inches of fill hose should be maintained between the filler neck and the fuel tank interfaces. Fill pipe ends must be free of burrs.

For additional information on Fuel Fill and Fuel Systems refer to the GM U.I. Body Builders Manual.

Fuel Systems (cont'd)

Fuel Lines

When adding components near the fuel-line area, be sure to provide a minimum clearance of 305 mm (12 in.) to the exhaust system or install a protective metal shield. Use only GM-approved fuel line assembly suppliers and components.



Replace damaged fuel lines. Never attempt to use or repair a fuel line that has been kinked.

General Motors also recommends the following precautions:

- Be careful not to bend fuel lines and avoid routing them near sharp edges and protruding objects. Clip fuel lines to chassis, spacing the clips every 600 mm or less. Metal clips should have plastic or rubber liners.
- Use corrosion-resistant steel tubing with short sections of approved electrically conductive hose to connect components. Steel tube ends should be beaded for hose retention. Replace the entire tube at the new required length. Do not cut. (See Fuel Line Material specification UNSG10080/UNSG10100 Cold Rolled Steel, also identified as GM 124-M.)
- An in-tank pump pressurizes the fuel supply. Do not use coupled hose, nylon quick connects or clamped hose. Make sure that fuel-return system lines are not blocked and hoses not pinched.
- Before adding extensions, clamp remaining fuel lines to prevent contamination during vehicle conversion (Figure 30).
- Avoid exposing fuel system components and lines to high temperatures such as those that may occur during welding. Doing so may cause system damage. After modification, use a fuel system prime tool to activate the fuel pump. Cranking the engine to prime the fuel system creates a heavy drain on the battery.

All engines require a fuel return system which returns excess fuel from the injection pump and injector nozzles back to fuel tanks. Care should be taken that these lines are not blocked nor their hoses pinched. The engine may run poorly or stall if these lines are restricted or blocked.

All gasoline engine vehicles are equipped with fuel evaporative emission control equipment which is certified to be in compliance with the Federal or applicable California Vehicle Emission Standards. Alterations to fuel tank and metering unit, lines, canister or canisters, canister filters, canister purge control valves, relay switches, tank auxiliary vent valve, engine speed controller, or other devices/systems are therefore not allowable since vehicle adherence to C.A.R.B. and Federal regulations may be affected.

Diesel powered vehicles incorporate water drain provisions in the fuel system. These valves are only to be opened when removing water and contaminants from the fuel system.

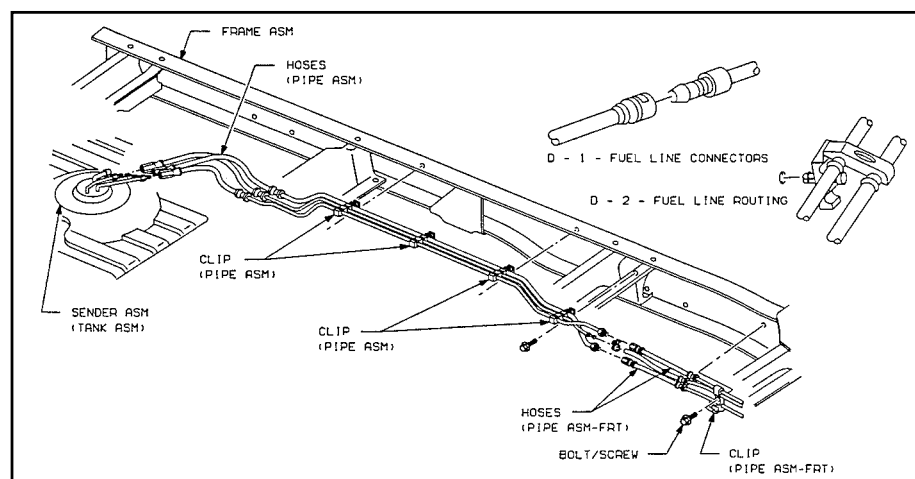


Figure 29

(continued on next page)

Fuel Systems (cont'd)

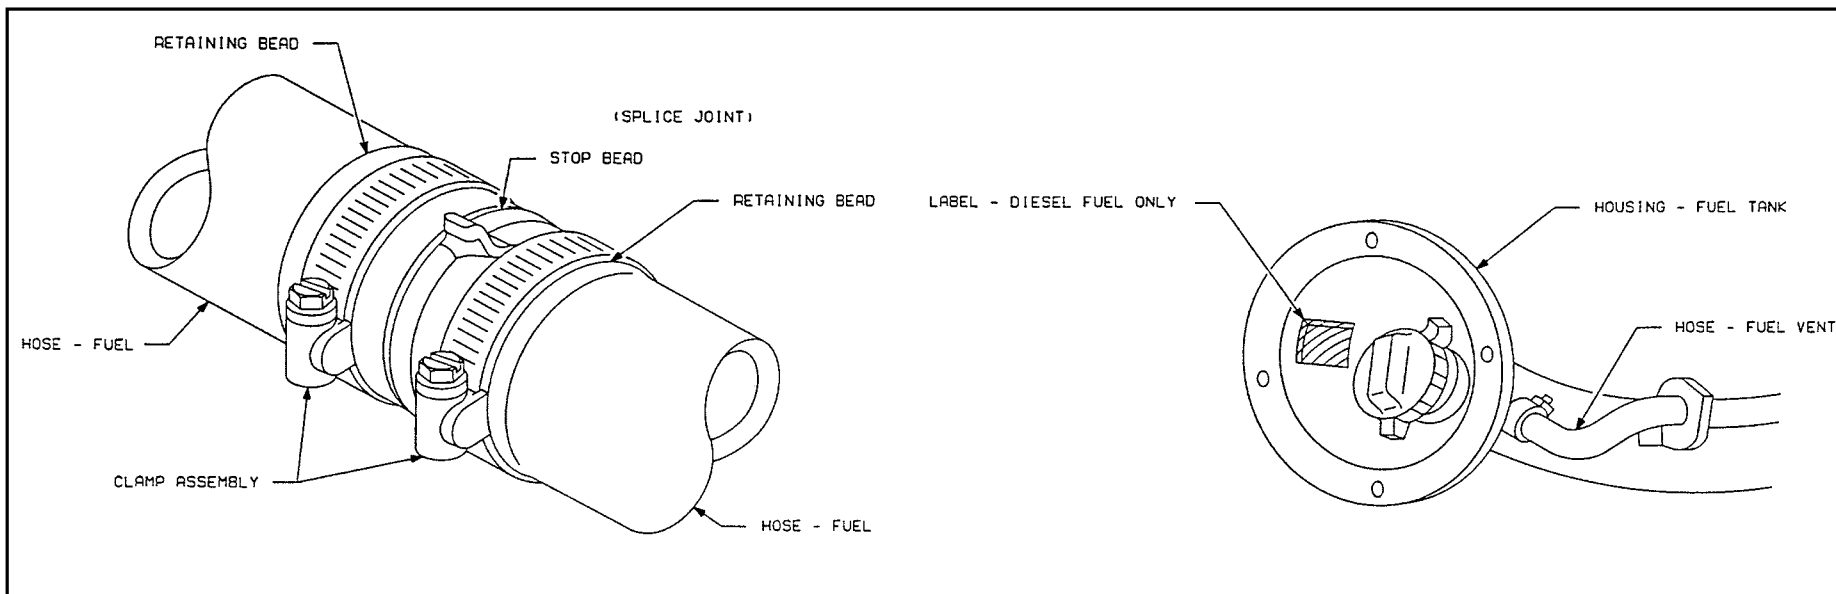


Figure 30

Fuel Tanks

After conversion is complete, the fuel system must be fully functional. Do not modify the fuel tank or use non-OEM fuel tanks on any ambulance vehicles. Use only specific OEM (not aftermarket) fuel caps. Provide minimum clearance of 51 mm (2 in.) between the fuel tank and the top, front, rear and sides of body and other supports.

Other recommendations are:

- Do not apply undercoating to fuel tanks.
- Make sure to point bolts, screws and other potentially damaging objects away from the fuel tank. Shield all such projections to help maintain fuel system integrity in the event of a vehicle crash.

- Diesel-powered vehicles incorporate a water drain provision in the fuel system. Do not open these valves, except to siphon water and contaminants from the fuel system.

Tank may be pressurized to 1.25 PSI maximum to check for final line leakage or for forcing fuel through the system. Pressures greater than this amount may be detrimental and affect tank durability.

Auxiliary Fuel Tanks & Diesel Exhaust Fluid (DEF) System

Auxiliary Fuel Tanks

The use of auxiliary fuel tanks is not recommended. If an auxiliary fuel tank is added, the alterer must take responsibility for compliance with affected motor vehicle safety and emission standards. Also, if an auxiliary fuel tank is added to a gasoline-powered vehicle, the fuel must be drawn through a pipe at the top of the tank (balance line between tanks is not permitted). Venting of auxiliary tank to be provided via purge canister and not to atmosphere. Gasoline fueled vehicles are now equipped with a fuel pump return line. If an auxiliary tank is added, the tank selector valve must include a port which returns fuel to the tank from which the fuel is being drawn. Similarly, addition of another fuel line for an auxiliary fuel user (such as a generator) will require emission revalidation.

In gasoline engines the fuel pump is located in the fuel tank. The battery must be disconnected before starting any work on the fuel system.

Diesel Exhaust Fluid (DEF) System

The Upfitter is responsible for any modifications to the DEF system.

Tank Placement

- Tank movement is not recommended.
- GM has validated the system durability only in the positions as purchased.
- The existing DEF tank mounting hardware can not be altered.
- DEF tank/line surface temps cannot exceed 70C, proper shielding is required.
- The DEF tank can not be mounted in a manner which locates the bottom surface of the tank below the frame rail.
- DEF tanks do not have a drain. Service procedure must be followed if contaminated. (remove and drain).
- DEF Tank cannot be moved on full body vehicles (FMVSS301).

Def Fill Hose Assembly

- Increasing the length not recommended.
- Shorten from tank end is preferred.
- DEF fill location to always be above tank, gravity fed 4 degree angle (min.) with minimal bends.

Fluid Delivery Line

- This line is heated, do not cut or adjust length.
- Carefully coil any extra line and secure to maintain the “as shipped” heated line length. (Use GM clip part #25952656)

Wire Harness

- Do not change/modify the wire harnesses on the DEF tank.
- Carefully coil any extra line and secure.

Brakes

Brakes General Requirements

SVMs must ensure that the brake system functions properly after conversion is complete. Modifying or altering the brake system may require the SVM to recertify compliance with FVMSS 105 and CMVSS 105.

Modifications may also adversely affect the vehicle's braking capacity. Avoid designs, such as special ground-effects packages, which may prevent proper ventilation of the brake system. Also avoid changing the brake main cylinder location,

Federal Standards and Regulations

Brake systems must conform to all federal motor vehicle safety standards and regulations, including:

- FMVSS/CMVSS 105: Hydraulic Service Brake Normal, Emergency and Parking Brake Performance
- FMVSS/CMVSS 106: Brake Hoses — Hydraulic, Air and Vacuum
- FMVSS/CMVSS 116: Motor Vehicle Brake Fluids
For additional information, refer to the following SAE specifications:
- SAE J1401: Road Vehicle — Hydraulic Brake Hose Assembly Use with Non-Petroleum Base Hydraulic Fluids
- SAE J1288: Packaging, Storage and Shelf Life of Hydraulic Brake Hose Assemblies
- SAE J1403: Vacuum Brake Hose
- SAE J1406: Application of Hydraulic Brake Hose to Motor Vehicles

Modification Checklist

For vehicle-specific diagnostic, inspection and service guidelines, refer to the appropriate GM Service Manual. The following checklist will also help SVMs to ensure proper brake system operation after modification.

- Do not splice the park-brake cable.
- Make sure the hydraulic brake system is free of air and hydraulic leaks. Bleed brakes if necessary.
- Ensure that the vacuum booster system or hydroboost system is functional and free of leaks.
- Check the master cylinder fluid level. Fill as necessary.
- Check the power steering fluid level on vehicles equipped with hydroboost brake.
- Make sure that added floor carpeting does not restrict service or parking brake pedal travel.
- Provide at least 51 mm (2 in.) clearance between body- or chassis-mounted components and brake hoses.
- Never change the brake main cylinder location, brake pedal pushrod length or pedal position.
- Verify that the brake warning switch is operative.
- Do not add suspension accessories or make any modification that will change axle loads or trim height. Such changes may provide a false reading to the brake proportioning valve.
- Vehicle weight, weight distribution and center of gravity determine the appropriate proportioning valve.

Brakes (cont'd)

Brake Lines

Cover all brake line extensions with a protective coating to prevent corrosion (use GM specification 123m or equivalent). Construct brake line extensions of steel tubing capable of withstanding operating pressure of at least 2,500 PSI.

Route brake lines along inner frame sections, being careful to avoid sharp edges, protruding objects and short bends. There must be no evidence of brake line twist.

Allow at least 17 mm (0.7 in.) clearance between brake lines and moving components, and at least 13 mm (0.5 in.) between brake lines and vibrating components. Clip brake lines at least every 762 mm (30 in.). Figure 31 shows proper brake-line routing and fastening.



Do not repair kinked or cracked brake lines. Replace all damaged lines with new brake lines.



Do not splice brake lines. Replace entire brake line at new required length.

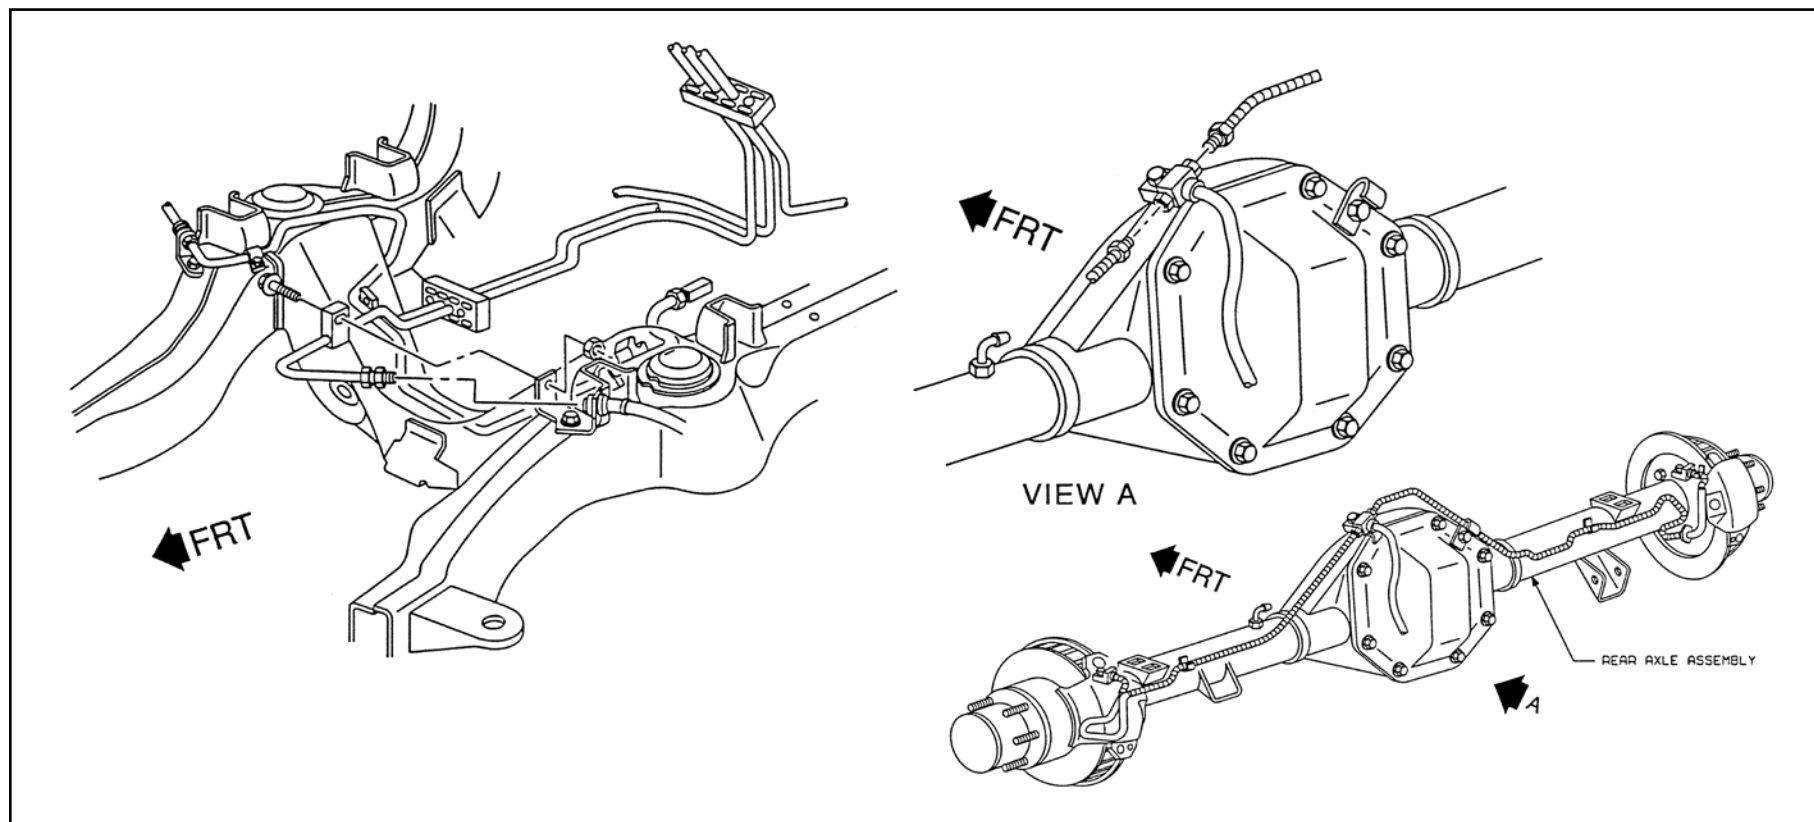


Figure 31

Brakes (cont'd)

Parking Brake Systems

If so equipped, the vehicle's mechanical parking brake system with automatic vacuum release consists of parking brake pedal assembly, vacuum diaphragm, cables and connectors (Figure 32). The parking brake system should be able to withstand at least 400 lbs. of cable tension. General Motors recommends using a one-piece parking brake cable assembly consistent with the base vehicle. For adjustment and testing procedures following installation, refer to the appropriate GM Service Manual.

! Avoid special vehicle designs (e.g., ground-effects packages) that may prevent proper brake system ventilation. Lack of ventilation may lead to shortened brake life.

Additional recommendations are:

- Allow at least 17 mm (0.7 in.) clearance between brake lines and moving components (e.g., steering shaft, shift levers, etc.).
- Allow 13 mm (0.5 in.) clearance between brake pipes and vibrating parts (e.g., front sheet metal, underbody and power brake booster) unless pipes are clipped to these components.
- Use brake line clips spaced at intervals no greater than 762 mm (30 in.).



Do not splice parking brake cable. Replace with new cable at required length only.

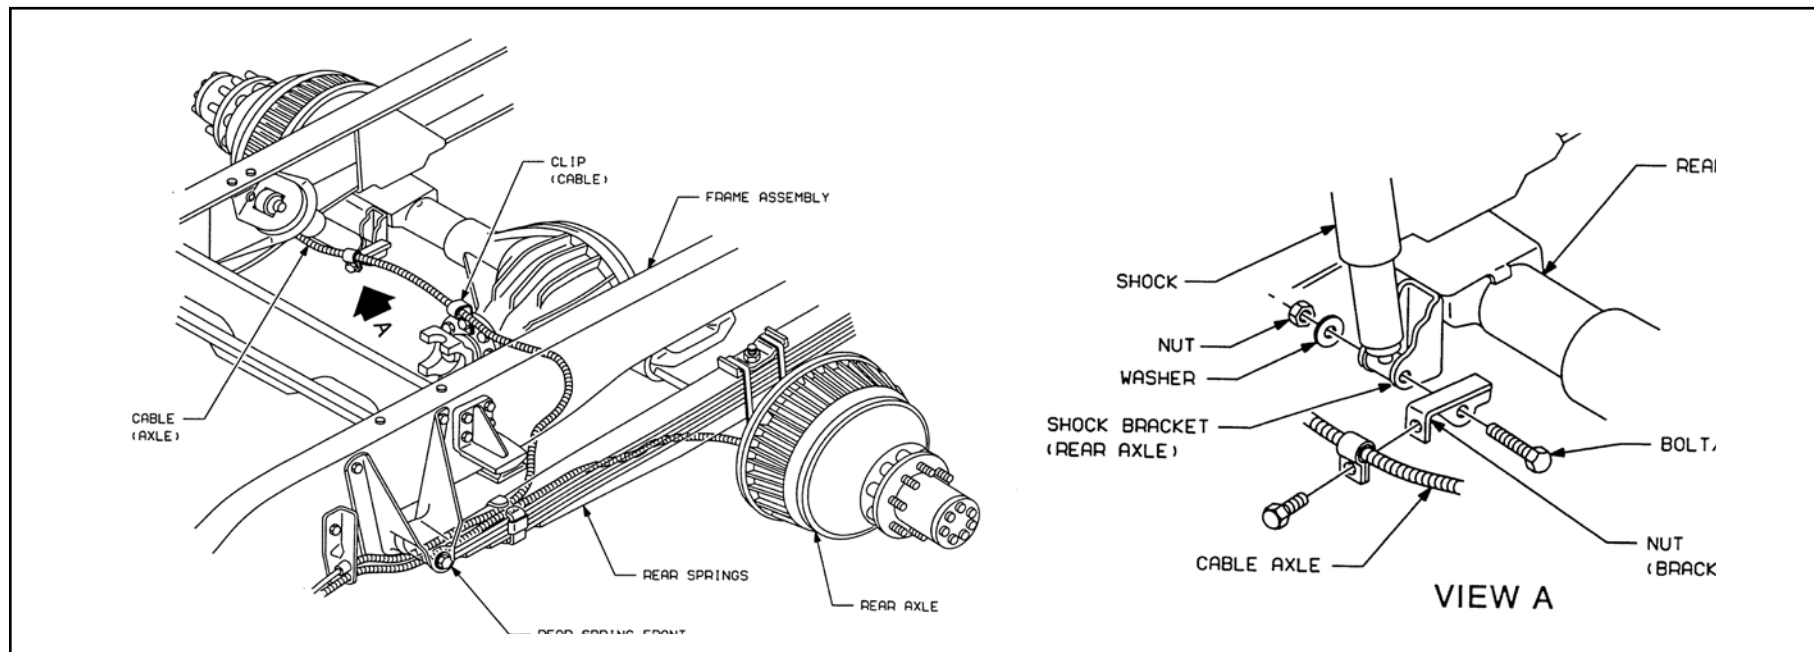


Figure 32

Brakes (cont'd)

Electronic Dynamic Rear Proportioning (DRP)

Electronic Dynamic Rear Proportioning (DRP) allows better utilization of the rear brakes, which reduces brake wear. More over, this better balancing of the brake system as a whole improves brake performance.

Benefits include:

- Good balance with front brakes when truck is heavily loaded or under towing/trailing conditions
- Provides maximum braking forces at rear wheels
- Provides maximum braking forces when braking on an uneven road surface, such as a washboard at an intersection
- Reduced front brake wear
- Better use of rear brakes
- Improved braking performance

Since changes in vehicle mass, mass distribution, and center of gravity determine the appropriate proportioning, the altered vehicle must not exceed GVWR, front and rear GAWR, and stay within the allowable center of gravity range.

Exhaust System

SVMs must be careful to use components and follow procedures that will prevent exhaust fumes from entering any occupant area. Observe the following guidelines:

- Seal all holes and openings through the floor and body.
- Make sure exhaust discharge is unobstructed and directed away from passenger areas.
- With the vehicle in motion, test the tailpipe outlet location to ensure that fumes do not enter the passenger compartment.

! Altering the exhaust outlet or its position, and removal or alteration of noise abatement components may place the vehicle in violation of federal, state or local noise laws. The SVM may have to recertify vehicle compliance with federal, state and local noise emission requirements.

The SVM must assume full responsibility for complying with Environmental Protection Agency (EPA) noise regulations if the exhaust system is modified.

The U.S. Environmental Protection Agency (EPA) has established noise emission standards applicable to vehicles (in general vehicles in excess of 10,000 pounds GVWR capable of transportation of property on a street or highway) manufactured after January 1, 1978, under the provisions of the Noise Control Act of 1972. The standards provide that vehicles manufactured after January 1, 1978, when tested pursuant to EPA's prescribed test procedure, must conform to an 83 dBA level and vehicles manufactured after January 1, 1988 must conform to an 80 dBA level.

The Act and the standards impose legal obligations on vehicle manufacturers and subsequent manufacturers. Questions dealing with what is covered under the definition of

a “vehicle” in the standards and the specific application of the Act or the standards to your business should be discussed with your legal counsel. This is particularly so in light of EPA's broad definition of a “vehicle.”

The standards or interpretations of such standards are subject to change by the EPA. New standards or amendments issued by the Environmental Protection Agency appear in the Federal Register from time to time. You may obtain the Federal Register through the Superintendent of Documents, U.S. Government Building Office, Washington, D.C. 20402.

Various state and local requirements regulate vehicles above and below 10k GVWR. For specific rules, test procedures and permissible noise levels, refer to specific state regulations.

! Exhaust pipe modifications must comply with recently enacted federal EPA regulations regarding exhaust system leaks. (Refer to federal regulations for additional information.)

Exhaust System Design

When designing specialty vehicle exhaust systems, SVMs should observe the general recommendations listed below.

- Make sure that the design maintains:
 - proper design and spacing of the OEM hanger bracket
 - sufficient clearance for thermal expansion of materials
- Use only aluminized 409 stainless steel or aluminized mild steel to lengthen exhaust pipes.
- To avoid excessive exhaust back pressure and resultant loss of engine power, make sure the exhaust pipe has smooth bends and no sharp edges to impede exhaust flow.

(continued on next page)

Exhaust System (cont'd)

Exhaust System Design (cont'd)

- Under extreme operating conditions, exhaust temperatures can exceed 1,600°F, with slightly lower pipe surface temperatures. When adding body components near the exhaust system, be extremely careful to choose components with the appropriate temperature ratings, or provide shielding.

- The exhaust system rotates with the engine. This requires a minimum clearance of 17 mm (0.7 in.) from the floorpan and frame (Figure 33).
- When conversion is complete, check for leaks and restrictions in the exhaust system (Figure 34). Repair as required.

For additional information on exhaust pipe installation, refer to the GM Body Builders Manual.

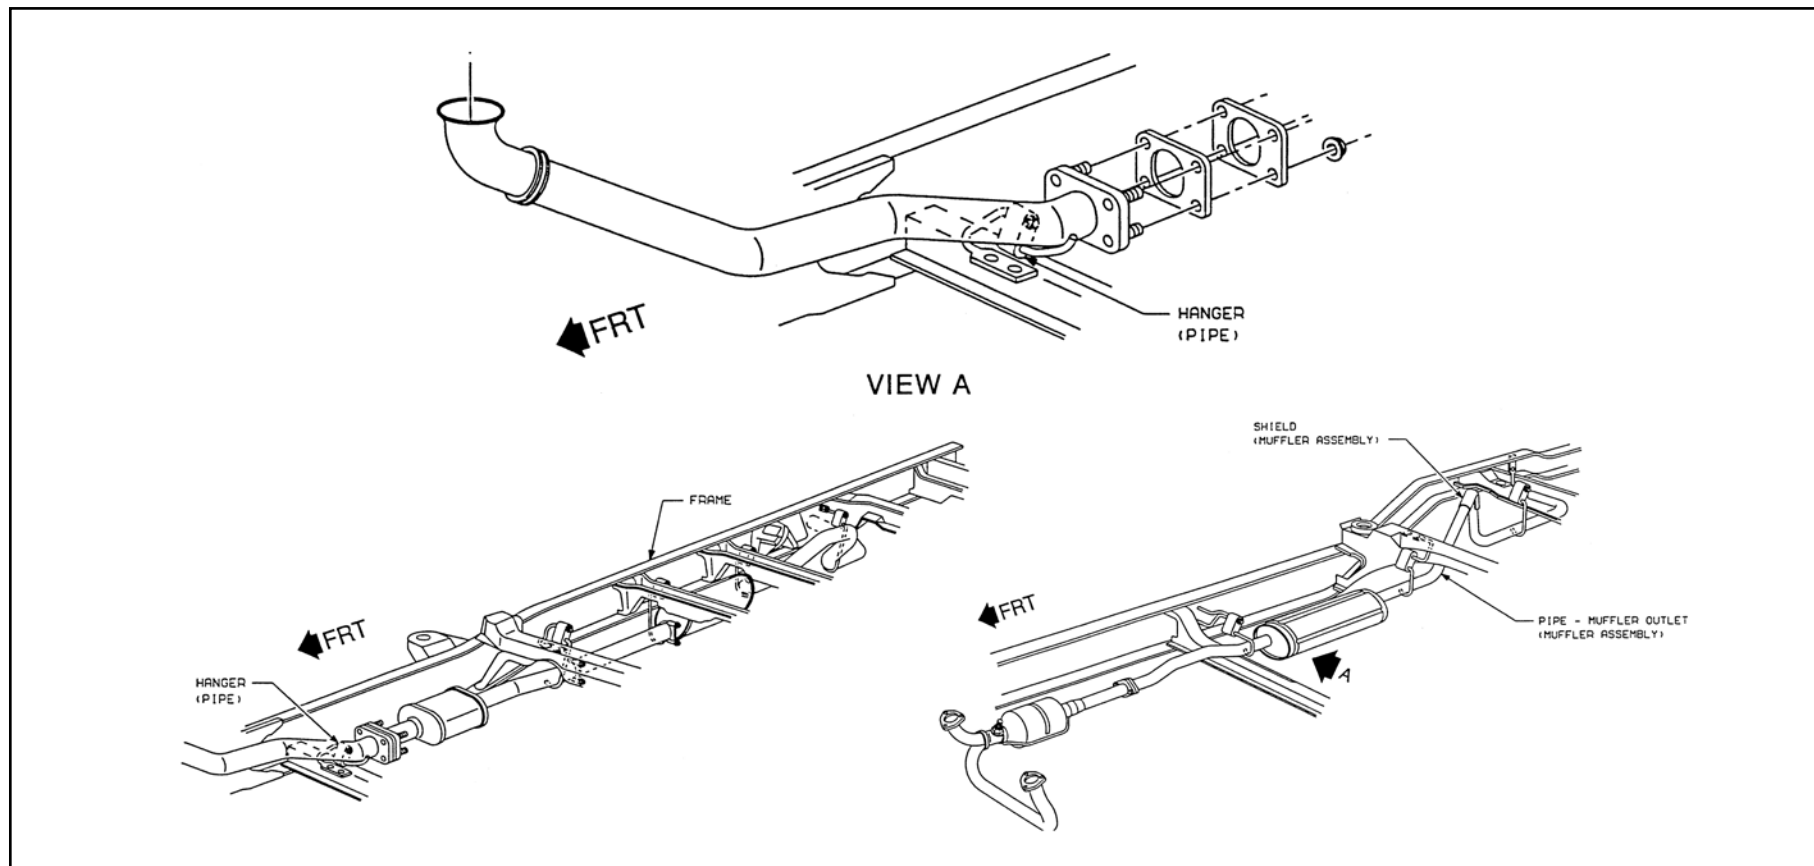


Figure 33

(continued on next page)

Exhaust System (cont'd)

Routing

When determining exhaust routing locations, be sure to consider the thermal expansion of the extension area. Additional guidelines are:

- Tailpipe extensions must extend at least 51 mm (2 in.) outboard of the body side panels.
- Added exhaust hangers should allow expansion without binding up.
- Do not locate tailpipe exit forward of the rear wheels. Test tailpipe location with the vehicle standing still and in motion to ensure that exhaust gases do not enter the passenger compartment through side or rear windows, or underbody seams and holes.
- Weld all connections when adding extensions to existing exhaust systems. Use GM-approved sealers at all slip-joint connections except at the catalytic converter.



Do not route electrical wires, fuel lines or HVAC hoses over the exhaust system.

Shielding

Heat shields are necessary in areas where high exhaust temperatures will affect vehicle component performance. Heat shields should be made of aluminized steel with a minimum 0.9 mm (0.035 in.) thickness.



Do not alter or remove any heat or grass shields from the OEM exhaust system.

Also provide similar shielding to any exhaust component extension. If exhaust pipes are extended rearward directly past the spare tire, install shielding to protect the tire.

Mount heat shields to the underbody and/or exhaust system components (catalytic converter and muffler).

Some vehicles may also require shields for the propshaft hanger bearings.

Undercoating

Do not apply undercoating to:

- Any part of the exhaust system
- Any component within 300 mm (11.8 in.) of the exhaust system

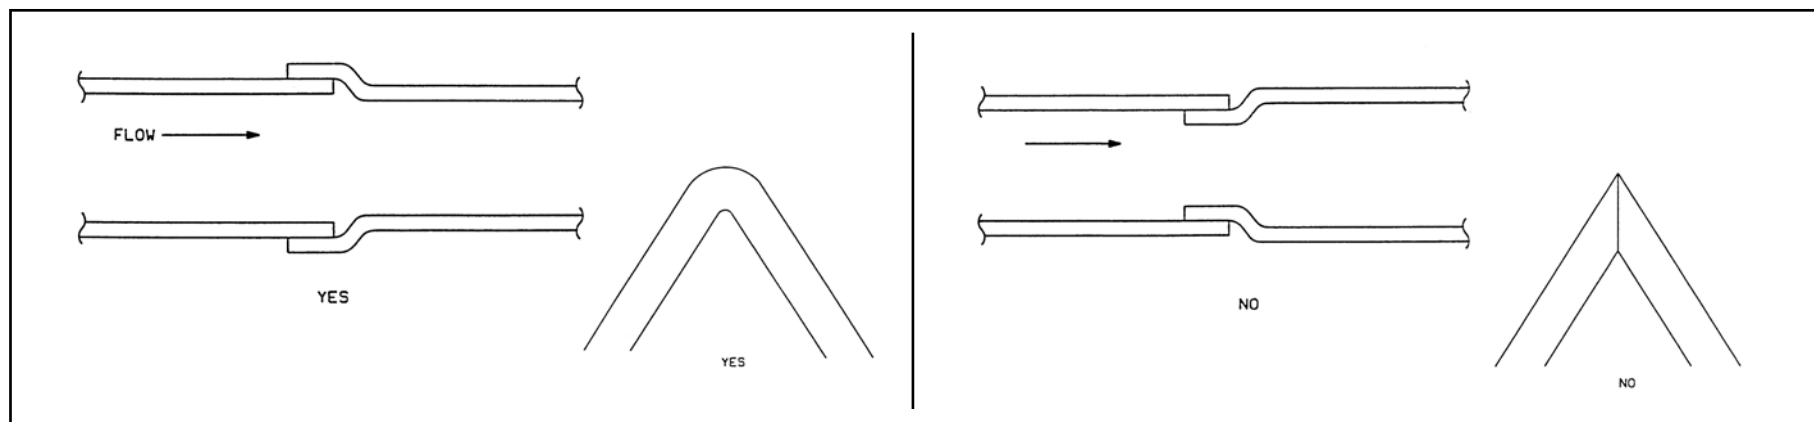


Figure 34

Suspension System

Suspension System General Requirements

SVMs should adhere to the following recommendations:

- Do not weld to any axle assembly.
- Design body and equipment arrangements that allow proper load distribution on both front and rear axles.
- Use designs that consider and maintain lateral load equalization.
- Make sure that the unladen vehicle's center of gravity (after conversion) falls within the limits specified in the FMVSS 105 section of the "Incomplete Vehicle Document".
- Do not route pipes, wiring or related components in suspension component paths of motion. These components include rear axle, springs, shocks, brake pipes and hoses.

Front Suspension

- Since there is a large variation in completed vehicle front weight due to differences in body weight and equipment, the front suspension alignment must be checked and reset after the vehicle is completed. Caster and camber should be set with reference to the "Z" and "D" trim height dimensions. On C3500 HD trucks with I-beams, camber and caster are designed into the axle/suspension and cannot be adjusted.
- See the Service Manual for complete alignment procedure, specifications and measurement of the "Z" and "D" trim height dimensions under the "Diagnosis and Wheel Alignment" sections.

- C/K Models are designed so that camber and caster do not need adjustment unless severe road impact or accident deformation occurs. Toe should be reset after the vehicle is completed and while at normal operating load with trim height as specified.

Rear Suspension

Clearance

- Provide clearance to the body for the suspension, axle, and tires under the following conditions:
 - Axle in full jounce against the metal-to-metal stop
 - Axle at 4.5-degree roll
 - Axle at design position
 - Axle in full rebound
- Allow the following clearance for tire chains:
 - Design for maximum growth tire.
 - Allow 42 mm (1.66 in.) to sides of tire.
 - Allow 64 mm (2.5 in.) to top of tire.
 - Customer notification may be required in some states if chains cannot be used.
- Refer to the GM Body Builders Manual (C/K section) for additional information on clearance to body/chassis and rear suspension.
- Pipes, wiring, conduits and any other related components must not be placed where they cross the path of motion of the rear axle, driveshaft, axle brake pipes, hoses, spring or tires. Such crossing could result in rupture, wear-through, or separation due to normal axle motion.

Wheels And Tires

Since May, 1971, National Highway Traffic Administration regulations have required manufacturers to maintain specific information on tires. This information is used to notify consumers of defective or non-conforming tires. The SVM should consult with an attorney regarding how these regulations apply.

In compliance with these regulations, General Motors keeps records on tires installed on each vehicle it ships. It is important for the SVM to ship the vehicle with OEM tires. Any tire removed from the vehicle during conversion should be replaced.

The SVM is responsible for keeping records on any tire changes made during conversion. All data must correspond to the correct vehicle identification number (VIN). For specific information, refer to Federal Regulation 574.

All tires must meet FMVSS 120 (CMVSS 120) new tire and rim selection regulations. Factory-installed OEM tires and wheels are designed to operate up to full load capacity when tires are inflated to specification.

Other recommendations are:

- Use only the OEM wheels on any ambulance vehicle.
- The OEM lug nut bearing surface should not retain any wheel trim such as wheel simulators.
- Check wheel lug nuts for proper torque. For torque specifications, see the Owner Guide.
- Check tires and inflate to recommended tire pressure. Refer to either the vehicle's tire inflation label or the Owner Guide.

For wheel maintenance guidelines, refer to the appropriate GM Service Manual.