



AffixR 1x chain guide mounting instructions


Many thanks for your purchase of the AeroCoach AffixR chain guide: please read the following instructions carefully as issues caused by failure to adhere to the instructions will not be covered by warranty

Please note:

- You must not drill or modify the AffixR in any way.
- We recommend that the AffixR is installed by a qualified bicycle mechanic.

Installation of AffixR:

- Please use the bolt and nut provided to mount the AffixR to your front derailleur hanger
- The AffixR has angular, horizontal and vertical adjustment to account for different chainlines, simply angle the lower jaws to provide equal spacing either side of the chainring teeth and then tighten to 2.5Nm
- Ensure a gap of no more than 1mm from the highest point of the chainring teeth to the underside of the jaw section
- For noncircular AeroCoach ARC and Aten chainrings rotate the crank to check maximum tooth height and set the AffixR at this height
- Please note the AffixR 1x chain guide is designed for use with 1x chainrings for additional security of chain retention and should not be used with outer shiftable 2x chainrings or extreme non-circular chainrings like Q-rings and OSymmetric
- Do not try to adjust the AffixR position without first fully loosening the bolt that connects the AffixR to the front mech hanger, as this may result in damage to the AffixR

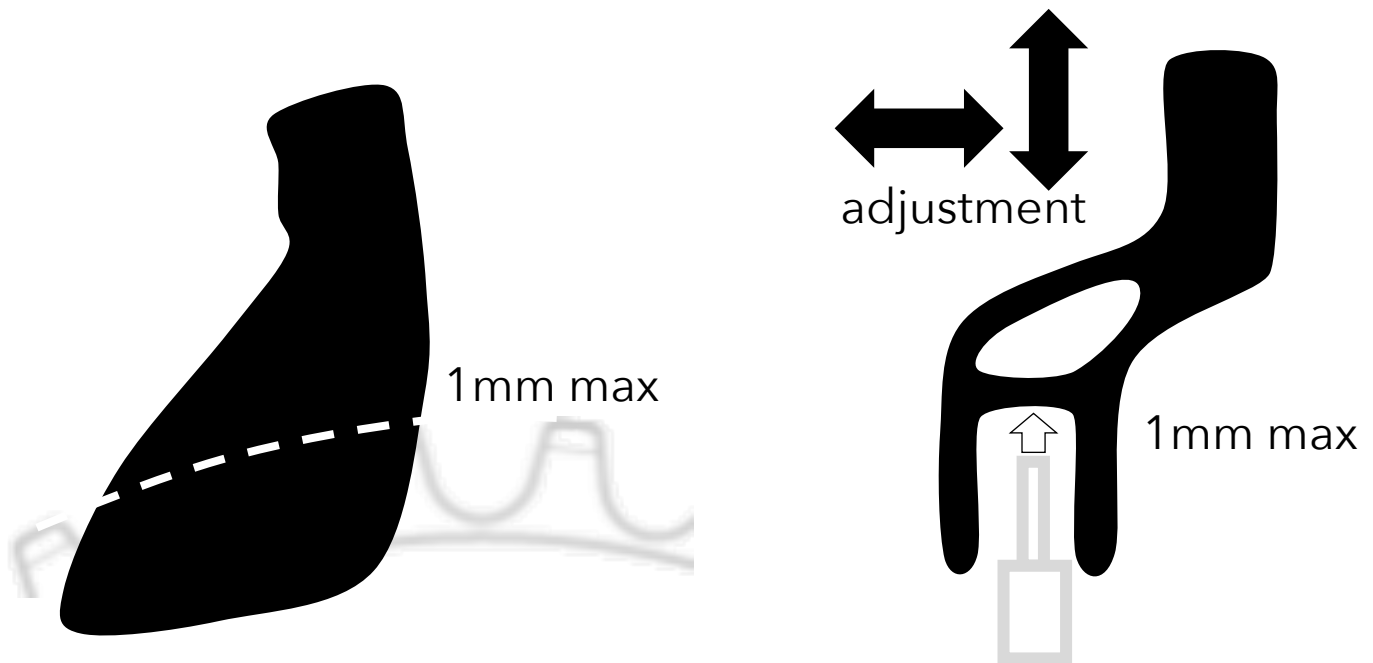

Please check your equipment before each ride - if you see any damage then you should not use the bicycle until it has been inspected

AeroCoach LTD does not accept any liability for issues arising due to non-compliance of these instructions. If you are unsure about the setup of your AffixR chain guide, please contact customerservice@aero-coach.co.uk