



Instruction Manual

4052 • 4075 • 4076

Right Angle Sanders


Getting the most out of your tool.

Please take time to read this manual and pay particular attention to the safety rules we've provided for your protection. Don't forget to send in your owner's registration card. If you have any questions about your tool please call:


1-800-9-BD TOOL
(1-800-923-8665)

4052	7"	Right Angle Sander
4075	7/8"	Wildcat Right Angle Sander
4076	7"	Wildcat Right Angle Sander

(See Figure Below)

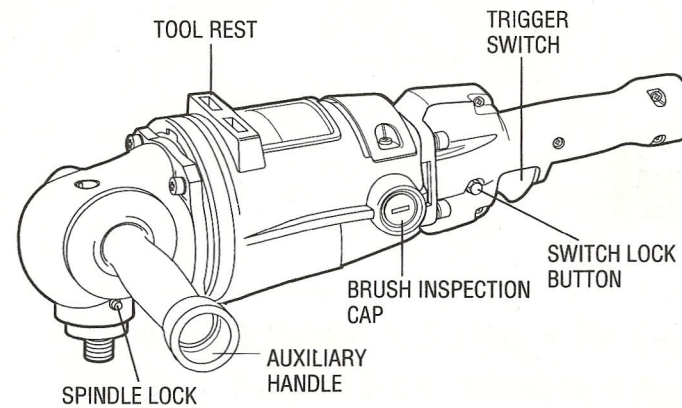

TO CONVERT THE SANDER TO A GRINDER, A GUARD MUST BE INSTALLED. (SEE BELOW)

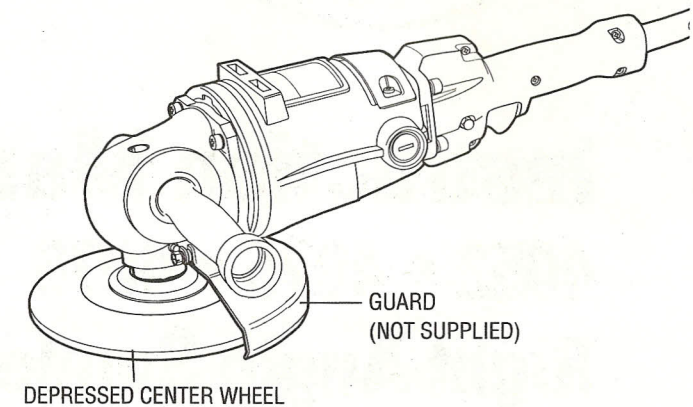

FOR YOUR SAFETY - ALL TOOLS


Important Safety Instructions

WARNING: When using electric tools, basic safety precautions should always be followed to reduce risk of fire, electric shock, and personal injury, including the following:

READ ALL INSTRUCTIONS

Grounding Instructions

This tool should be grounded while in use to protect the operator from electric shock. The tool is equipped with a 3-conductor cord and 3-prong grounding type plug to fit the proper grounding type receptacle. The green (or green and yellow) conductor in the cord is the grounding wire. Never connect the green (or green and yellow) wire to a live terminal. If your unit is intended for use on less than 150 V, it has a plug that looks like that shown in sketch A. If it is for use on 150 to 250 V, it has a plug that looks like that shown in sketch D. An adapter, sketches B and C, is available for connecting sketch A type plugs to 2-prong receptacles. The green-colored rigid ear, lug, or the like, extending from the adapter must be connected to a permanent ground, such as a properly grounded outlet box. No adapter is available for a plug as shown in sketch D. ADAPTER SHOWN IN FIGURES B and C IS NOT FOR USE IN CANADA.

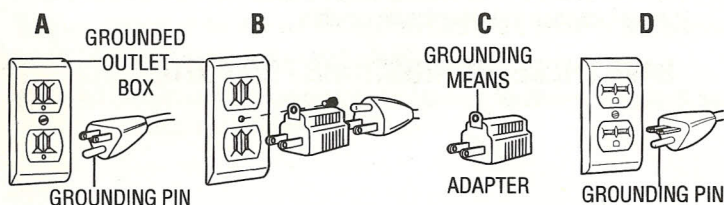

Safety Instructions For All Tools

- **KEEP WORK AREA CLEAN.** Cluttered areas and benches invite injuries.
- **CONSIDER WORK AREA ENVIRONMENT.** Don't expose power tools to rain. Don't use power tools in damp or wet locations. Keep work area well lit. Do not use tool in presence of flammable liquids or gases.
- **GUARD AGAINST ELECTRIC SHOCK.** Prevent body contact with grounded surfaces. For example; pipes, radiators, ranges, and refrigerator enclosures.
- **KEEP CHILDREN AWAY.** Do not let visitors contact tool or extension cord. All visitors should be kept away from work area.
- **STORE IDLE TOOLS.** When not in use, tools should be stored in dry, and high or locked-up place — out of reach of children.
- **DON'T FORCE TOOL.** It will do the job better and safer at the rate for which it was intended.
- **USE RIGHT TOOL.** Don't force small tool or attachment to do the job of a heavy-duty tool. Don't use tool for purpose not intended.
- **DRESS PROPERLY.** Do not wear loose clothing or jewelry. They can be caught in moving parts. Rubber gloves and non-skid footwear are recommended when working outdoors. Wear protective hair covering to contain long hair.
- **USE SAFETY GLASSES.** Also use face or dust mask if operation is dusty.
- **DON'T ABUSE CORD.** Never carry tool by cord or yank it to disconnect from receptacle. Keep cord from heat, oil, and sharp edges.
- **SECURE WORK.** Use clamps or a vise to hold work. It's safer than using your hand and it frees both hands to operate tool.
- **DON'T OVERREACH.** Keep proper footing and balance at all times.
- **MAINTAIN TOOLS WITH CARE.** Keep tools sharp and clean for better and safer performance. Follow instructions for lubricating and changing accessories. Inspect tool cords periodically and if damaged, have repaired by authorized service facility. Inspect extension cords periodically and replace if damaged. Keep handles dry, clean, and free from oil and grease.
- **DISCONNECT OR LOCK OFF TOOLS** when not in use, before servicing, and when changing accessories, such as blades, bits, cutters.
- **REMOVE ADJUSTING KEYS AND WRENCHES.** Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.

- **AVOID UNINTENTIONAL STARTING.** Don't carry tool with finger on switch. Be sure switch is off when plugging in.
- **EXTENSION CORDS.** Use only 3-wire extension cords that have 3-prong grounding-type plugs and 3-pole receptacles that accept the tool's plug. Replace or repair damaged cords. Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. The following table shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gage. The smaller the gage number, the heavier the cord.

Minimum Gage for Cord Sets

Volts		Total Length of Cord in Feet			
120V		0-25	26-50	51-100	101-150
240V		0-50	51-100	101-200	201-300
Ampere Rating		AWG			
More Than	Not more Than				
0	- 6	18	16	16	14
6	- 10	18	16	14	12
10	- 12	16	16	14	12
12	- 16	14	12	Not Recommended	

- **OUTDOOR USE EXTENSION CORDS.** When tool is used outdoors, use only extension cords intended for use outdoors and so marked.
- **STAY ALERT.** Watch what you are doing. Use common sense. Do not operate tool when you are tired.
- **CHECK DAMAGED PARTS.** Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated elsewhere in this instruction manual. Have defective switches replaced by authorized service center. Do not use tool if switch does not turn it on and off.

ADDITIONAL SAFETY INSTRUCTIONS

Sanders and Grinders:

1. Always wear safety goggles or other eye protection when using this tool.
2. When grinding, always keep guard in place.
3. Use only grinding wheels having a maximum operating speed at least as high as "NO LOAD RPM" marked on the tool's nameplate. This precaution also applies to any accessory on any tool.
4. Before using, inspect recommended accessory for cracks or flaws. If such a crack or flaw is evident-discard the accessory! The accessory should also be inspected whenever you think the tool may have been dropped.
5. When starting the tool (with a new or replacement wheel installed) hold the tool in a well protected area and let it run for one minute. If the wheel has an undetected crack or flaw, it should burst in less than one minute. Never start the tool with a person in line with the wheel. This includes the operator.
6. In operation, avoid bouncing the wheel or giving it rough treatment. If this occurs, stop the tool and inspect the wheel.
7. Always use guards with depressed center or flaring cup grinding wheels.
8. Clean your tool out periodically following the procedure on page 7.
9. Some wood contains preservatives such as copper chromium arsenate (CCA) which can be toxic. When sanding these materials extra care should be taken to avoid inhalation and minimize skin contact.

SAVE THESE INSTRUCTIONS FOR FUTURE USE

TOOL OPERATION

Switch

To start the tool, squeeze the trigger switch shown in Figure 1. To turn the tool off, release the switch. The tool can be locked on for continuous use by holding the trigger switch depressed while you depress the switch locking button next to the trigger, as shown in Figure 1. Hold the locking button in as you gently release the trigger. Release the locking button and the tool will continue to run. To turn the tool off from a locked on condition, squeeze and release the trigger once.

Auxiliary Handle





An auxiliary handle is provided with your tool for convenience. The handle can be screwed into either side of the gear case, as shown in Figure 2, and should be used at all times when sanding or grinding.

Sanding With Abrasive Discs

Abrasive discs can be used for smoothing welds, removing rust and paint and general smoothing of rough surfaces.

To install an abrasive disc, follow the steps listed below.

1. TURN OFF TOOL AND DISCONNECT FROM POWER SUPPLY.
2. Push the hub of the disc nut through the hole in the center of the abrasive disc and the backing disc as far as it will go.
3. Install the assembled discs onto the tool spindle, as shown in Figure 3, and engage the disc nut into the disc nut hub.

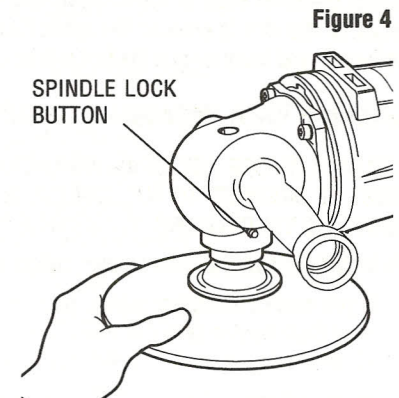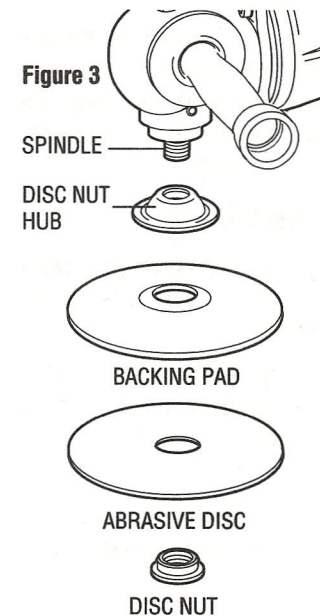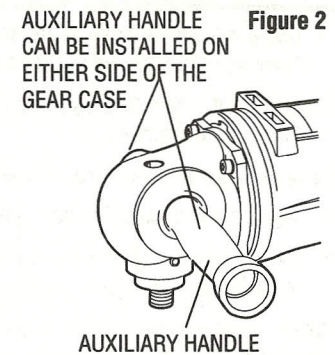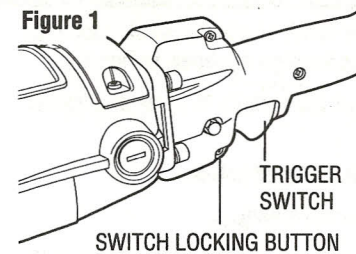

4. Using a glove or cloth to protect your hand, screw the whole assembly clockwise onto the tool spindle as far as it will go as shown in Figure 4.
5. Engage the spindle lock button to lock the spindle in place and tighten firmly. (See Figure 4)

To remove an abrasive disc, follow the steps listed below.

1. Turn off and unplug the tool from the power supply.
2. Using a glove or cloth to protect your hand, turn the assembled discs counterclockwise as you depress the spindle lock button.

When sanding, maintain an angle of 10-15 degrees between the abrasive disc and the surface being sanded, as shown in Figure 5.

If only the outer edge of the abrasive disc is used, a rough cut surface will result. If the disc is pressed flat against the surface, the sanding action will be bumpy and irregular and the tool will be difficult to control.

Grinding With Depressed Center Wheels

CAUTION: BEFORE ANY GRINDING OPERATIONS, THE CORRECT GUARD MUST BE MOUNTED TO THE SANDER. THE MOUNTING OF THIS GUARD CONVERTS YOUR SANDER TO AN ANGLE GRINDER.

To install the guard to your sander, follow the steps listed below.

1. If you cannot determine which guard is the correct one, check with your local B&D service center or call toll free between 8:00 a.m. and 8:00 p.m. ET, seven days a week, 1-800-9-BD TOOL (1-800-923-8665).
2. TURN OFF TOOL AND DISCONNECT FROM POWER SUPPLY.
3. Install the guard as shown in Figure 6. Position the guard skirt between the spindle and the operator.

Figure 5


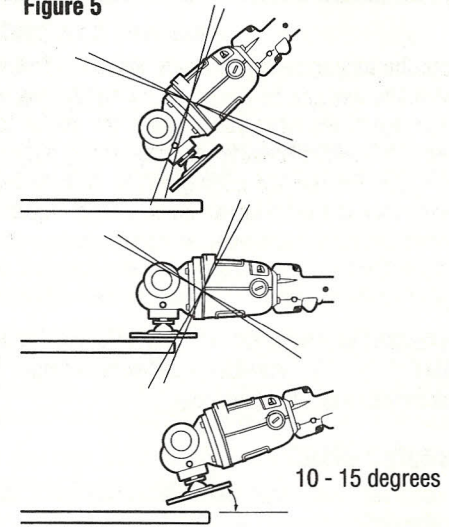


Figure 6

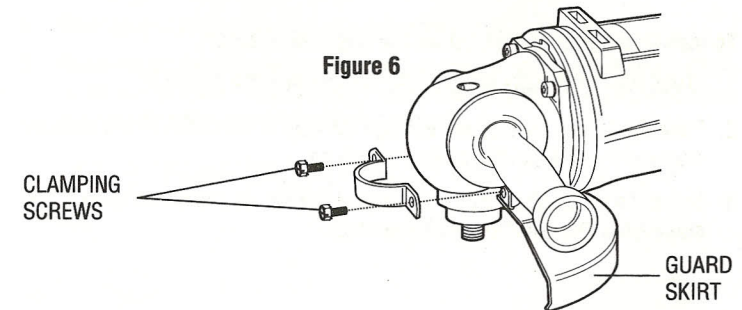

4. Securely tighten the two clamping screws supplied with the guard.

Depressed center wheels can be used for moderate metal removal on flat or contoured surfaces.

To install a depressed center wheel, follow the steps listed below:

CAUTION: NEVER USE DEPRESSED CENTER WHEELS WITHOUT THE PROPER GUARD.


1. TURN OFF TOOL AND DISCONNECT FROM POWER SUPPLY.
2. Be sure the guard is securely attached to the gear case.
3. Install the backing flange onto the tool spindle, as shown in Figure 7.
4. Check rated speed of depressed center wheel. Never use wheel rated at less than speed on the nameplate of the tool.
5. Install the depressed center wheel onto the tool's spindle, as shown in Figure 7.
6. Thread the clamp washer onto the tool's spindle, as shown in Figure 7. Hold the spindle in place with the locking button and tighten with the wrench provided.

To remove a depressed center wheel follow the steps below:

1. TURN OFF TOOL AND DISCONNECT FROM POWER SUPPLY.
2. Engage the spindle lock by depressing the button shown in Figure 7 and loosen the clamp washer using the spanner wrench provided.
3. Examine the depressed center wheel closely for cracks or chips. If either are found, discard the wheel at once.

When using a depressed center wheel, hold the tool so that an angle of approximately 30 degrees exists between the wheel and the surface being ground.

Figure 7

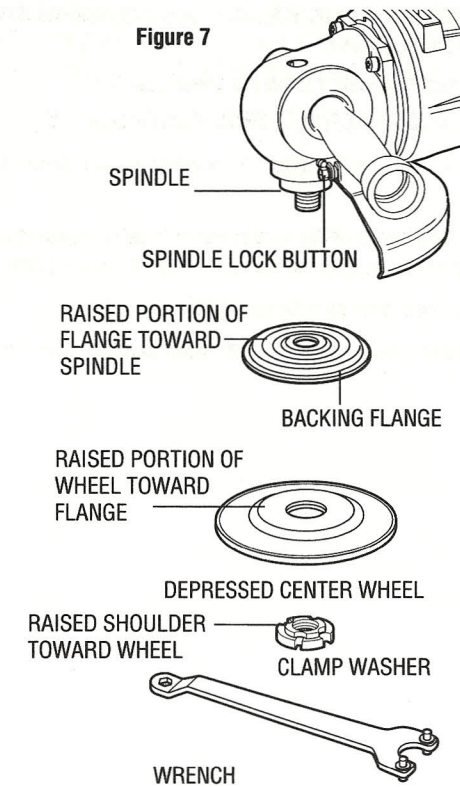

Wire Wheel And Knotted Wire Wheel Brushes

Wire wheels and brushes can be used for removing rust, scale and paint, and for smoothing irregular surfaces.

To install a wire wheel or brush, follow the steps below:

1. TURN OFF TOOL AND DISCONNECT FROM POWER SUPPLY.
2. Rest grinder on its back with the spindle pointing up and remove guard if desired.
3. Ensure that the rated speed of the wire wheel or brush is equal to or greater than the rated speed of the grinder found on the tool's nameplate.
4. Thread brush or wheel onto spindle and tighten securely.

NOTE: Cover your hand with a glove or cloth when handling wire wheels and brushes.

MAINTENANCE

Cleaning

Blowing dust and grit out of the motor housing using compressed air is a necessary regular maintenance procedure. Dust and grit containing metal particles often accumulate on interior surfaces and could create an electrical shock hazard if not frequently cleaned out. **ALWAYS WEAR SAFETY GLASSES.**

CAUTION: Never use solvents or other harsh chemicals for cleaning the non-metallic parts of the tool. Use clean, dry rag only.

Lubrication

B&D tools are properly lubricated at the factory and are ready for use. Tools should be relubricated regularly every sixty days to six months, depending on usage. (Tools used constantly on production or heavy-duty jobs and tools exposed to heat may require more frequent lubrication.) This lubrication should only be attempted by trained power tool repairpersons, such as those at B&D service centers or in other qualified service organizations.

IMPORTANT!

To assure product safety and reliability, repairs, maintenance and adjustment (excluding maintenance described in this manual) should be performed by B&D service centers or authorized service centers, using identical B&D replacement parts.

ACCESSORIES

NOTE: Use accessories recommended per chart below.

Depressed center grinding wheels must fit within the confines of the guard and must be rated higher than the recommended speed as marked on the nameplate.

Recommended accessories for use with your tool are available at extra cost from your distributor or local service center. A complete listing of service centers is included with your tool.

CAUTION: Strands of wire cup brushes may break and fly off while in use. Users and others in the area should wear adequate eye, face and body protection. Use only wire cup brushes that are rated at or greater than the RPM shown on the tool's nameplate.

WARNING: To reduce the risk of injury, always use proper guards when grinding and wear eye protection.

Accessory Type	Notes	Usage
DEPRESSED CENTER WHEEL		Use for moderate metal and masonry removal on flat or contoured surfaces
SANDING DISCS		Use for smoothing welds, and sharp edges, and automotive body work
WIRE CUP BRUSHES	Always wear eye protection and appropriate clothing	Use for rust removal and surface preparation before painting

CAUTION: The use of any non-recommended accessory may be hazardous.

If you need any assistance in locating any accessory call: 1-800-9-BD TOOL (1-800-923-8665) or contact Black & Decker (U.S.) Inc., Consumer Services Department, 626 Hanover Pike, P.O. Box 618, Hampstead, MD 21074.

Every B&D tool is of the highest quality.
If you wish to contact us regarding this product, please call toll
free between 8:00am and 8:00pm ET, seven days a week:

1-800-9-BD TOOL
(1-800-923-8665)

One Year Service/Safety Check

All B&D tools for Industry and Construction are covered under a service/safety check program where B&D will inspect your tool for safety and provide necessary maintenance or repairs, including normal wear and tear parts, for one year, FREE OF CHARGE.

Full Warranty

All B&D tools for Industry and Construction are warranted to be free of any defects in materials or workmanship. Upon thorough examination of tool, B&D will repair or replace, at our option, any product that is determined to be defective.

Conditions

The service/safety check and the warranty do not apply to: repairs made or attempted by anyone other than an authorized B&D service location; misuse, abuse, neglect, improper application of the tool; missing parts; or normal wear and tear (after first year of ownership). Please return the complete unit, transportation prepaid, to any B&D factory owned or B&D authorized service center location (list provided with tool or see yellow pages under "Tools Electric").

YOUR POWER TOOLS MAY BE SERVICED AT THE FOLLOWING B&D SERVICE DEPOTS.

ALBERTA

Edmonton T6E 6H6, 3845 99th St. 403-462-5005

BRITISH COLUMBIA

Vancouver V5M 3Y7, 1735 Boundary Rd. 604-291-9942

MANITOBA

Winnipeg R3H OK3, 934 St. James St. 204-783-7294

NOVA SCOTIA

Halifax B3K 2A4, 6100 Young Street. 902-453-5090

ONTARIO

Brockville K6V 5W6, 100 Central Ave. 613-342-6641

Kanata K2L 1V3, 462 Hazeldean Rd #11 613-831-2332

Glencairn Plaza

London N6E 3A9, 981 Wellington Rd #6 519-649-2407

Markham L3P 3J3, 9275 Hwy 48 Unit 12/13 905-472-6168

Mississauga L4X 1L3, 1480 Dundas St. E #7. 905-277-0011

North York M3J 3G5, 48 Kodiak Cres. 416-635-6740

QUEBEC

Brossard J4W 1M6, 5840 Boul Taschereau 514-462-4881

Montreal H1Y 1B4, 3061 Belanger 514-722-1021

**FOR ADDITIONAL SERVICE LOCATIONS
CALL: 1-800-9- BD TOOL**

YOUR POWER TOOLS MAY BE SERVICED AT THE FOLLOWING B&D SERVICE CENTERS.

ALABAMA:		
Birmingham 35209, 2412 Green Springs Hwy.	205-942-0538	
Mobile 36608, 3831 Airport Blvd.	205-343-6624	
ALASKA:		
Anchorage 99518, 910 West International Airport Rd.	907-563-4664	
ARIZONA:		
Mesa 85202, 535 S. Dobson, Suite 7.	602-461-1074	
Phoenix 85013, 4501 N. 7th Avenue	602-279-6414	
Tucson 85712, 4845 E. Speedway Blvd.	602-323-3388	
ARKANSAS:		
Little Rock 72201, 519 W. Seventh St.	501-372-3040	
CALIFORNIA:		
Anaheim 92806, 540 South State College Blvd.	714-772-4050	
Chula Vista 91910, 309 Broadway	619-420-6350	
Concord 94520, 1500 Monument Blvd., #C2	510-682-4880	
Fresno 93710, 5412 North Blackstone Ave.	209-435-0810	
Long Beach 90805, 2011 South St.	310-422-5825	
Los Angeles 90040, 4820 South Eastern Ave., Suite "L"	213-720-1834	
Riverside 92506, 6215 Magnolia Ave., Suite "B"	909-787-9700	
Sacramento 95825, 2033 Fulton Ave.	916-872-8090	
San Diego 92123, 9270 Clairemont Mesa Blvd.	619-279-2011	
San Jose 95128, 1185 So. Bascom Ave.	408-293-7350	
San Leandro 94578, 15206 E. 14th St.	510-276-1610	
Van Nuys 91411, 14920 Victory Blvd.	818-787-5531	
COLORADO:		
Denver 80219, 1171 S. Federal Blvd.	303-922-8325	
CONNECTICUT:		
Orange 06477, 481 Boston Post Rd.	203-795-3583	
Wethersfield (Hartford) 06109, 662 Silas Dean Hwy.	203-563-5800	
DISTRICT OF COLUMBIA: Washington		
Colmar Manor 20722, 4153 Bladensburg Rd.	301-779-3808	
Falls Church, VA 22046, 344 W. Broad St.	703-533-7313	
FLORIDA:		
Ft. Lauderdale 33334, 799 E. Oakland Pk. Blvd.	305-566-5102	
Ft. Myers 33907, 5224 Bank Street	813-278-1188	
Jacksonville 32205, 920 Cassat Ave.	904-781-2253	
Miami (North) 33168, 13345 N.W. Seventh Ave.	305-681-6658	
Miami (South) 33156, 12233 So. Dixie Hwy.	305-232-9497	
Orlando 32803, 3807 E. Colonial Dr.	407-894-7011	
St. Petersburg 33709, 5635 49th St., N.	813-525-0273	
Tampa 33609, 3432 W. Kennedy Blvd.	813-872-8317	
West Palm Beach 33415, 310 South Military Trail	407-689-3247	
GEORGIA:		
Atlanta (South) 30349, 5330 Old National Hwy.	404-762-8844	
Smyrna 30080, 2550 Cobb Pkwy.	404-956-0869	
Stone Mountain (Atlanta) 30086, 5723 Memorial Dr.	404-292-4714	
HAWAII:		
Honolulu 96819, 330 Sand Island Access Road	808-847-7447	
ILLINOIS:		
Des Plaines (Chicago) 60018, 1277 South Elmhurst Rd.	708-364-5220	
Lincolnwood (Chicago) 60466, 6710 N. Crawford Ave.	708-673-0923	
Lisle (West Chicago) 60532, 2950 Ogden Ave., Unit H	708-717-1075	
Moline 61265, 4433 23rd Ave.	309-762-3000	
Oak Lawn (Chicago) 60453, 6343 W. 95th St.	708-423-7212	
Waukegan 60085, 39 S. Greenbay Rd.	708-249-4390	
INDIANA:		
Evansville 47710, 307 First Ave., Crescent Ctr.	812-425-4269	
Hammond 46323, 7103 Kennedy Ave.	219-845-5100	
Indianapolis 46224, 5999 Crawfordsville Rd.	317-243-8308	

IOWA:		
Des Moines 50310, 3427 Merle Hay Rd.	515-270-1340	
KANSAS:		
Wichita 67213, 155 S. West St.	316-943-1271	
KENTUCKY:		
Louisville 40213, 5211 Preston Hwy.	502-968-7100	
LOUISIANA:		
Baton Rouge 70815, 11859 Florida Blvd.	504-272-8111	
Harvey 70058, 2500 Lapalco Blvd.	504-366-8676	
Metairie (New Orleans) 70002, 3504 N. Causeway Blvd.	504-837-2550	
Shreveport 71108, 7710-7714 Jewella Rd.	318-688-1553	
MARYLAND:		
Baltimore (East) 21205, 4712 Erdman Ave.	410-485-5550	
Baltimore (North) 21030, 29-31 Cranbrook Rd., Cockeysville	410-666-5966	
Baltimore (South) 21122, 8220 Ritchie Hwy., Pasadena	410-647-8456	
Colmar Manor 20722, 4153 Bladensburg Rd.	301-779-3808	
MASSACHUSETTS:		
Brighton (Boston) 02135, 12 Market St.	617-782-6264	
Seekonk 02771, 120 Highland Ave.	508-336-6510	
MICHIGAN:		
Grand Rapids 49512, 3040 28th St., S.E.	616-949-8331	
Lansing 48917, 3203 W. Saginaw Hwy	517-323-4181	
Warren 48093, 27035 Van Dyke Blvd.	313-756-6711	
Westland (Detroit) 48185, 8067 North Wayne Rd.	313-427-1520	
MINNESOTA:		
Bloomington (Minneapolis-St. Paul) 55420, 9517 Lyndale Ave., S.	612-884-9191	
MISSOURI:		
Kansas City 64111, 4324 Main St.	816-531-0629	
St. Ann (North St. Louis) 63074, 3637 North Lindbergh Blvd.	314-739-4661	
St. Louis 63131, 12852 Manchester Rd.	314-821-8740	
NEBRASKA:		
Omaha 68127, 4225 S. 84th St.	402-592-5666	
NEVADA:		
Las Vegas 89104, 3411 East Charleston Blvd.	702-641-6555	
NEW JERSEY:		
Cherry Hill 08034, 1444 E. Marlton Pike/Rte. 70	609-429-2822	
Little Falls 07424, 1189 U.S. Highway 46	201-256-9373	
Union (Scotch Plains) 07076, 2520 Route #22 East	908-233-5665	
NEW MEXICO:		
Albuquerque 87110, 5617 Menaul Blvd., N.E.	505-884-1002	
NEW YORK:		
Buffalo 14209, 881 W. Delavan Ave.	716-884-6220	
Centereach L.I. 11720, 2061-63 Middle Country Rd.	516-737-4706	
Elmhurst (New York) 11373, 77-20 Queens Blvd.	718-335-1042	
Latham (Albany) 12110, 836 Troy-Schenectady Rd.	518-785-1867	
Rochester 14623, 2969 W. Henrietta Rd.	716-424-1310	
Syracuse 13214, 3485 Erie Blvd., East	315-446-3086	
Westbury L.I. (New York) 11590, 1061 Old Country Rd.	516-997-6140	
NORTH CAROLINA:		
Charlotte 28205, 3007 E. Independence Blvd.	704-374-1779	
Greensboro 27407, 3716 High Point Rd.	910-852-1300	
Raleigh 27604, 2930 Capital Blvd.	919-878-0357	
OHIO:		
Cincinnati 45241, 2310 E. Sharon Rd.	513-772-3111	
Columbus 43227, 3975 E. Livingston Ave.	614-237-0461	
Dayton 45409, 2898 S. Dixie Dr.	513-298-1951	
Mayfield Heights (East Cleveland) 44124, 5881 Mayfield Rd.	216-449-2770	

OHIO (CONT'D):		
Parma Heights (Cleveland) 44130, 6483 Pearl Road.	216-842-9100	
Toledo 43607, 3231 Dorr St.	419-531-8921	
OKLAHOMA:		
Oklahoma City 73106, 1318 Linwood Blvd.	405-232-7515	
Tulsa 74145, 3120 S. Sheridan Rd.	918-622-5666	
OREGON:		
Portland 97209, 1640 N.W. Johnson St.	503-228-8631	
PENNSYLVANIA:		
Evans City 16033, 20808 Rt. 19 North	412-779-9600	
Harrisburg 17112, 6080 Allentown Blvd.	717-545-0651	
Lancaster 17601, 118 Keller Ave.	717-393-5251	
Philadelphia 19103, 333 N. 20th St.	215-564-5520	
Philadelphia (North) 19115, 9977-81 Bustleton Ave.	215-464-7771	
Pittsburgh 15232, 5437 Baum Blvd.	412-362-2700	
Whitehall (Allentown) 18052, 2242 MacArthur Rd.	610-435-9544	
Wilkes-Barre 18702, 759 Kidder Street	717-824-5704	
PUERTO RICO:		
Puerto Nuevo	809-783-3535	
RHODE ISLAND:		
See Seekonk, MA		
SOUTH CAROLINA:		
Greenville 29607, 1557 Laurens Rd.	803-232-3038	
TENNESSEE:		
Chattanooga 37421, 6231 Perimeter Drive, Space E	615-894-5957	
Knoxville 37917, 4118 N. Broadway	615-688-0921	
Memphis 38116, 1085 East Brooks Rd.	901-332-3444	
Nashville 37211, 4811 Nolensville Rd.	615-833-8277	
TEXAS:		
Amarillo 79106, 3008 West 6th Ave.	806-373-1531	
Austin 78757, 6549 Burnet Rd.	512-459-1133	
Dallas 75229, 2257 Royal Ln.	214-620-6655	
El Paso 79915, 6822 Gateway East	915-778-9769	
Fort Worth 76111, 721 North Beach St.	817-831-3828	
Garland 75043, 718 W. Centerville Rd.	214-686-9302	
Houston 77022, 536 E. Tidwell Rd.	713-692-7111	
Houston (S.W.) 77025, 9319 Stella Link Blvd.	713-664-3666	
San Antonio 78201, 500 Culebra Ave.	210-732-1221	
Webster 77598, 100 East Nasa Rd. One	713-338-4556	
UTAH:		
Salt Lake City 84115, 1541 S. Third West St.	801-486-5828	
VIRGINIA:		
Falls Church 22046, 344 W. Broad St.	703-533-7313	
Hampton 23666, 3416 W. Mercury Blvd.	804-826-9382	
Norfolk 23513, 7831 Sewells Point Rd.	804-480-3333	
Richmond 23222, 1424 Chamberlayne Ave.	804-649-9245	
WASHINGTON:		
Seattle 98108, 421 S. Michigan St.	206-763-2010	
Spokane 99208, N. 7011 Division St.	509-467-8190	
Tacoma 98409, 2602 S. 38th St.	206-473-6040	
WEST VIRGINIA:		
Charleston 25312, 1638 Sixth Ave.	304-343-0289	
WISCONSIN:		
Milwaukee (Wauwatosa) 53226, 10424 West Bluemound Rd.	414-453-4240	

Black & Decker (U.S.) Inc. • 701 East Joppa Road, Towson, Maryland 21286

Printed in U.S.A. (MAY95-CD-3) Form No. 159174-01 Copyright © 1994, 1995

159174-01